

# EURODESK SX2442FX

### EURODESK 24-Channel Analog Mixer With 16 XENYX Mic Preamps and 99 Digital Effect Presets

- Premium ultra-low noise, high-headroom analog mixer
- 16 state-of-the-art XENYX Mic Preamps comparable to stand-alone boutique preamps
- Neo-classic "British" 3-band EQs with semi-parametric mid band for warm and musical sound
- 2 independent studio-grade 24-bit stereo FX processors with 99 awesome presets including reverb, chorus, flanger, delay, pitch shifter and various multi-effects
- High-precision 9-band stereo graphic EQ allows precise frequency correction of monitor or main mixes
- Revolutionary FBQ Feedback Detection system instantly reveals critical frequencies
- Peak LEDs, Mute, Main mix and subgroup routing switches, Solo and PFL functions on all channels
- 2 fully featured stereo input channels with 4-band EQ plus 2 additional stereo input channels with Level and pre-fader Aux controls
- Inserts on each mono channel and main mix for flexible connection of outboard equipment
- 4 Subgroup outputs and additional Mono output with sweepable Low Pass filter for subwoofer application
- 4 Aux sends per channel: 2 pre/post fader switchable for monitoring/FX applications, 2 post fader (for internal FX or as external send)



If you want classic analog handling but can't skimp on superior digital effects and studio-grade mic preamps, the SX2442FX is your new best friend. This mixer's 16 mic inputs, 8 stereo inputs and 4 buses give you enough leeway to handle anything from a graduation speech to a small orchestra.

#### Classic control, state-of-the-art sound

Each of the SX2442FX's 16 mic inputs connects to our world-famous, studio-grade XENYX mic preamps. They are legendary for their high headroom, warm natural timbre and utter lack of background noise. Plug in a large-diaphragm condenser mic and track a vocal to hear XENYX's rich detail and spaciousness. Plug in a dynamic mic and stick it

inside a bass drum to appreciate the whopping headroom.

#### You may experience side-FX...

Whether you need to add a dab of reverb or delay to a live vocalist's mic or warp a hard day's studio session into psychedelic quicksand, the SX2442FX has you covered. We gave this mixer two independent studio-grade 24-bit stereo FX processors with 99 awesome presets to provide the perfect sonic garnish. "Sure they're great for live sound, but I have a lot of cool plug-ins for recording," we can hear some of you saying. Truth be told, you never have too many effects. And when you hear the quality of the SX2442FX's FX, you may want to give your overworked CPU a rest.

*Continued on next page*



# EURODESK SX2442FX

- Balanced Main mix outputs with ¼" jack and gold-plated XLR connectors, separate Control room, Headphone and stereo Tape outputs
- Solo-In-Place and Pre-Fader-Listen functions plus full-featured Talkback section
- Standby switch mutes all channels during breaks while background music is provided via CD/Tape inputs
- Long-wearing 60 mm logarithmic-taper faders and sealed rotary controls
- Internal autorange power supply for maximum flexibility (100 – 240 V~), noise-free audio, superior transient response plus low power consumption for energy saving
- High-quality components and exceptionally rugged construction ensure long life
- Conceived and designed by BEHRINGER Germany

Naturally we gave you a whole palette of creative effects like reverb, chorus, flanger, delay and pitch shifter tones, as well as mind-bending multi-effects to take your sound out of this world. But you also get problem solving workhorses like compression and gating plus final effects such as Ultramizer, Ultrabass and Exciter that can put a PA or studio mix over the top. And because there are two processors, you can cue two separate effects, then apply one or both to channels 1 through 20 — compression for the vocalist, reverb for the vocalist and snare drum, for example.

## What the heck is "British EQ"?

A good thing to have on your side when you start reaching for those channel equalization knobs. At a live concert or in the studio.

Think of it as kinder, gentler, more musical EQ like the type found on classic British consoles from the 60's and 70's. Single malt scotch instead of Everclear. Home-baked cherry cobbler instead of an artificial cherry lollipop.

British EQ's distinct configuration of wider curves/lower Q and harmonic phase characteristics allows you to add or subtract EQ more generously than you can with conventional EQ circuit designs. When you add low midrange, you get a firmer sound instead of a nasty bonk. When you back high frequencies off a bit, treble backs off just a hair instead of turning muffled.

All SX2442FX mono channels have low and high shelving plus a sweepable "midrange" you can move anywhere from 100 Hz to 8 kHz. Think of it as your roving English troubleshooter.

## Kill feedback before it maims your audience.

When it comes to suppressing feedback, the SX2442FX is like having a bloodhound trained to spot trouble frequencies a mile away.

The 9-band graphic EQ (which you can choose to apply to your main mix or monitor mix via the MAIN/AUX1 button) features the FBQ Feedback Detection system. It makes finding and adjusting critical frequencies a snap.

Just push FBQ IN, then watch as LEDs on the individual EQ sliders light up, indicating which frequency bands are causing feedback. Simply adjust until the LED goes dim.

## The Ins and Outs

Some manufacturers make what they call 24-input mixers that count stuff like CD/TAPE IN as an input. But the SX2442FX really gives you sixteen honest mono channels plus eight stereo channels, making it easy to accommodate a variety of live performance configurations. You can connect up to 16 microphones or other mono instruments and up to four stereo instruments (keyboards or tone modules, for example).

You can combine these input in four different sub-mixes (we call them buses). That allows you to blend multiple channels—say all the mics on a drum kit or all the backup singers' mics—to a single fader, which is easier to adjust for the overall mix that goes to the PA speakers. You can also use one or more of the sub-mix buses to create custom monitor mixes for picky members of your band ("More me! More me!").

## A zillion ways to change the channel

At the top of each mono channel, you'll find both a balanced XLR input with a XENYX mic preamp and a ¼" input. A phantom power switch located on the back near the main power switch accommodates condenser mics.

Next comes is an insert for connecting up individual signal processors or feeding a remote broadcast feed or multitrack recorder directly.

Trim control and level set LED let you adjust the channel's input level for maximum headroom and minimum noise — the huge range of this control can handle anything from a very timid vocalist to a close-miked guitar amp stack.

Each mono channel features a 3-band EQ with semi-parametric mids (giving you control of the Mid level and a sweepable frequency with a boost or cut of 15 dB) and a Trim control for adjusting input gain via a Level Set LED.

*Continued on next page*



# EURODESK SX2442FX

## EFFECTS

### PARALLEL EFFECTS:

|                                 |   |
|---------------------------------|---|
| Cathedral (01-02)               | Very dense and long reverberation of a large cathedral                                  |
| Plate (03-04)                   | Simulates early plate reverb  |
| Concert (05-06)                 | Simulates a small theater or large concert hall   |
| Stage (07-08)                   | Very dense reverb, especially for live applications                                     |
| Room (09-10)                    | Simulates room's wall reverb. This particular room has two windows and yellow wallpaper |
| Studio (11-12)                  | Adds spaciousness to the sound  |
| Small Hall (13-14)              | Simulates hallway reverberation   |
| Ambience (15-16)                | Simulates the reverb of a middle-sized room without late reflections                    |
| Early Reflections (17)          | Dense reverb with pronounced early reflections  |
| Spring Reverb (19-20)           | Simulates spring reverb   |
| Gated Reverb (21-22)            | Reverb that's synthetically cut off   |
| Reverse Reverb (23-24)          | Reverb that slowly gets louder  |
| Chorus (25-30)                  | Slight detuning of the original signal  |
| Flanger (31-35)                 | A delayed signal is added to the original signal, causing a phase shift                 |
| Phaser (36-39)                  | Another phase-shift effect  |
| Rotary Speaker (40-42)          | Simulation of a rotating electronic organ speaker                                       |
| Delay (43-52)                   | Delay of the input signal with repetitions  |
| Chorus & Reverb (53-54)         | Combination of chorus and reverb  |
| Flanger & Reverb (55-56)        | Flanger combined with reverb  |
| Phaser & Reverb (57-58)         | Phaser combined with reverb   |
| Rotary Speaker & Reverb (59-60) | Rotary Speaker effect combined with Reverb  |
| Delay & Reverb (61-63)          | Delay combined with Reverb  |
| Delay & Chorus (64-67)          | Widens the signals and produces repetition effects                                      |
| Delay & Flanger (68-70)         | Similar to Delay & Chorus, but with audible up/downward modulation                      |

### INSERT EFFECTS:

|                         |   |
|-------------------------|---|
| Compressor (71-73)      | Soft or loud passages are raised or lowered in level respectively                               |
| Expander (74-76)        | Noise and hum is reduced in level   |
| Gate (77-78)            | A gate opens for a specific period of time to make a specific signal pass, then closes abruptly |
| Ultramizer (79-80)      | Compression through automatic adaptation of compression parameters                              |
| Ultrabass (81-82)       | Combines sub-harmonics processor, bass exciter, and limiter                                     |
| Panner (83-85)          | The signal "wanders" between the sides of the stereo basis                                      |
| Exciter (86-88)         | Adds synthetic harmonics to the signal, resulting in increased presence and "loudness"          |
| Auto Filter (89-91)     | Level-dependent boost of a specific frequency band, similar to auto-wah or electric guitars     |
| Tube Distortion (92-93) | Simulates the tube distortion of classic guitar amplifiers                                      |
| Guitar Amp (94-97)      | Guitar amp simulation   |
| Vinylizer (98)          | Adds the clicks and noise of old vinyl records  |
| Test Tone (99)          | 1-kHz test tone. Virtually indistinguishable from some genres of techno.                        |

A Low Cut button eliminates the frequencies where unwanted infrasonics such as mic handling, P-pops or wind noise occur.

FX1 and FX 2 dials add a blend of up to two effects, and AUX 1 and AUX 2 dials help create your monitor mix. Press the PRE button to send a raw, EQ-free signal to the monitors.

Near every mono channel's fader you'll find a 1-2, 3-4 and MAIN button. By engaging the MAIN button, the signal is sent to the main mix. Or, if you engage the 1-2 button, the channel becomes part of a bus. Twist the PAN control all the way to the left to assign it to Sub 1, or all the way to the right for Sub 2. The same principle applies to the 3-4 button.

A Mute button with accompanying LED cuts the signal from the channel, and a Clip LED helps you dial in a distortion-free post-EQ signal. The Solo button on individual channels routes the subgroup signal to the solo bus or Pre-Fader Listen—depending on whether the signal has been included in a subgroup.

Instead of XLR inputs, stereo channels 17-24 have left and right balanced/unbalanced line level inputs. Channels 17-20 feature the same controls as the mono channels, but with a four-band EQ that gives you control of HIGH, HIGH MID, LOW MID and LOW. This is especially useful for EQ'ing the critical midrange frequency content found in keyboard signals.

Stereo channels 21 through 24, designed for signals that do not require EQ, have a simplified interface consisting of a Level, AUX 1 and AUX 2 dial. Can you say laptop backing track feeds, drum machines, tone modules, DJ mixers or CD players?

Finally, all four sub-mix buses feature an independent fader (naturally), Solo switch with bright LED, and assign buttons for routing them to Left or Right stereo channels.

## Packed with tasty details that make your creative life easier.

- We solved the problem of what to do when you want to play music during breaks but don't want to have to mute every channel or turn down every fader. Just push CD/Tape STANDBY button to A) mute all mixer channels and B) solo just your CD/Tape source. We didn't just give you a MONO output for subwoofers. We gave it a built-in variable low pass crossover, saving you money on outboard gear.
- We added a footswitch jack that you can use to control either internal or external effects.
- We gave you a complete Phones and Control Room assignment matrix so you can send mains, buses, CD/Tape or auxes out at the touch of a button.
- We added a routing button to Talkback so you can talk directly to either a monitor mix or the house mix for public announcements.
- We made the 9-band equalizer assignable to either AUX 1 or the main mix.

## Take On The World

Not every town on the planet uses the same voltage common in yours. Unfortunately, this sometimes doesn't occur to jet-setting sound technicians until they're 5,000 miles from home. With the SX2442FX, this is never an issue. The internal autorange power supply can run on anything from 100 to 240 V with noise-free audio, top-quality transient response and low power consumption.

## Buy it now. Teach your great grandkids how to run it.

BEHRINGER mixers last and last. We use top quality parts such as long-wear faders, sealed rotary controls and premium circuit boards. We have 20 years of experience figuring out how to compensate for clumsy load-ins, spilled drinks, crazed guitarists and millions of road miles. The result is a mixer you can count on day after day and night after night.

*Continued on next page*

# EURODESK SX2442FX

## Why do you need this mixer?

- Built-in pristine XENYX mic preamps
- Dual 24-bit FX processor with 99 presets including reverb, chorus, flanger, delay and pitch shifter tones


- British-style EQ dials give you the sound and control preferred by top studio engineers
- The built-in FBQ Feedback Detection system instantly reveals critical frequencies and the 9-band stereo graphic EQ allows precise correction of those frequencies in monitor or main mixes
- Awesomely complete I/O – everything from bus inserts to mono output

## Finally, “And now for something completely similar.”

If you’ve read this product sheet and loved everything about the SX2442FX except the number of input channels, we have good news for you. It has a big brother, the SX3242! Eight more mono channels. Eight more superb XENYX mic preamps.


And of course every other feature you’ve just read about. See both models at your BEHRINGER Dealer today.

## Studio Set-Up

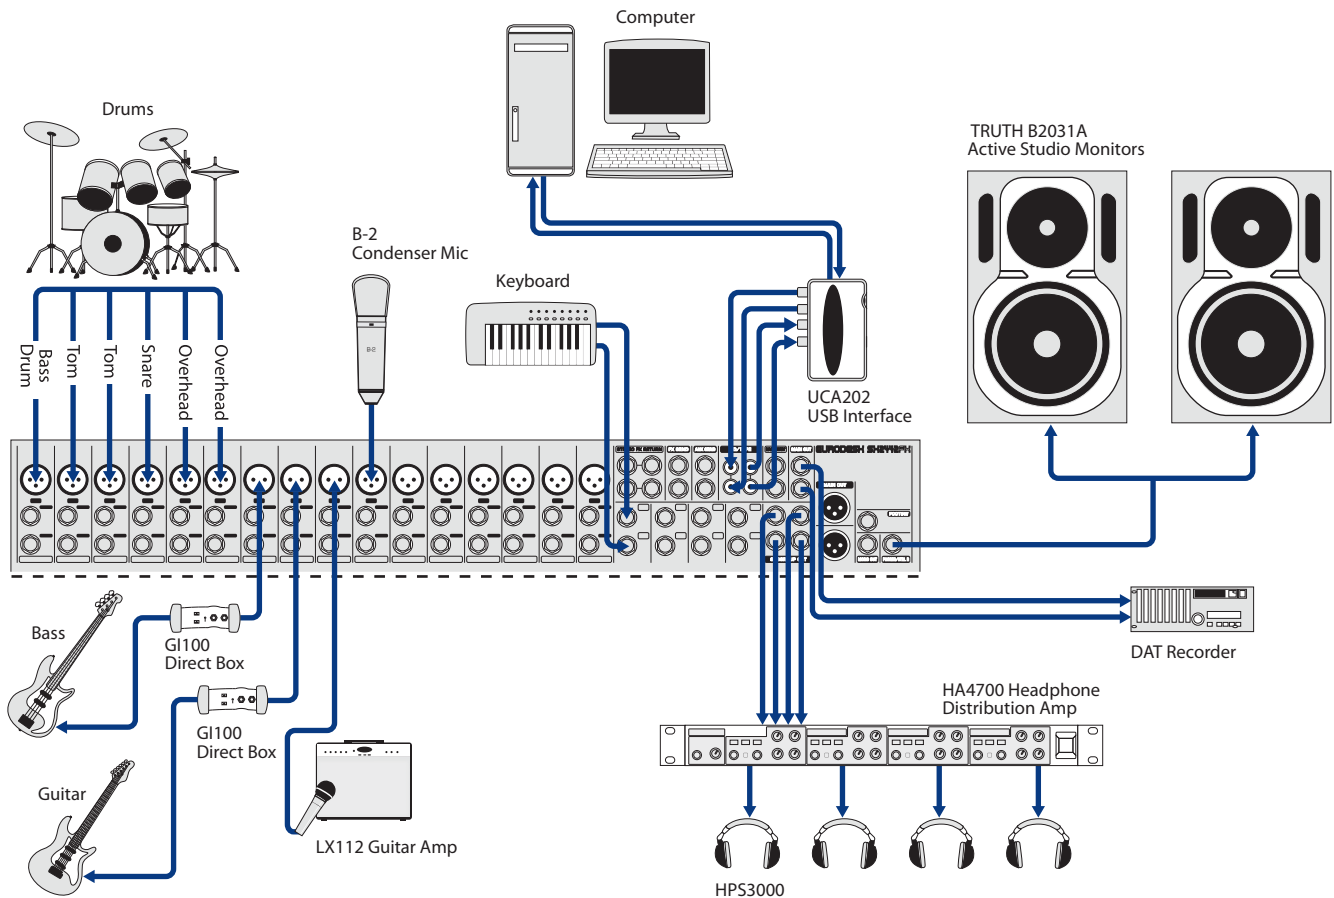

# EURODESK SX2442FX

## Live Set-Up

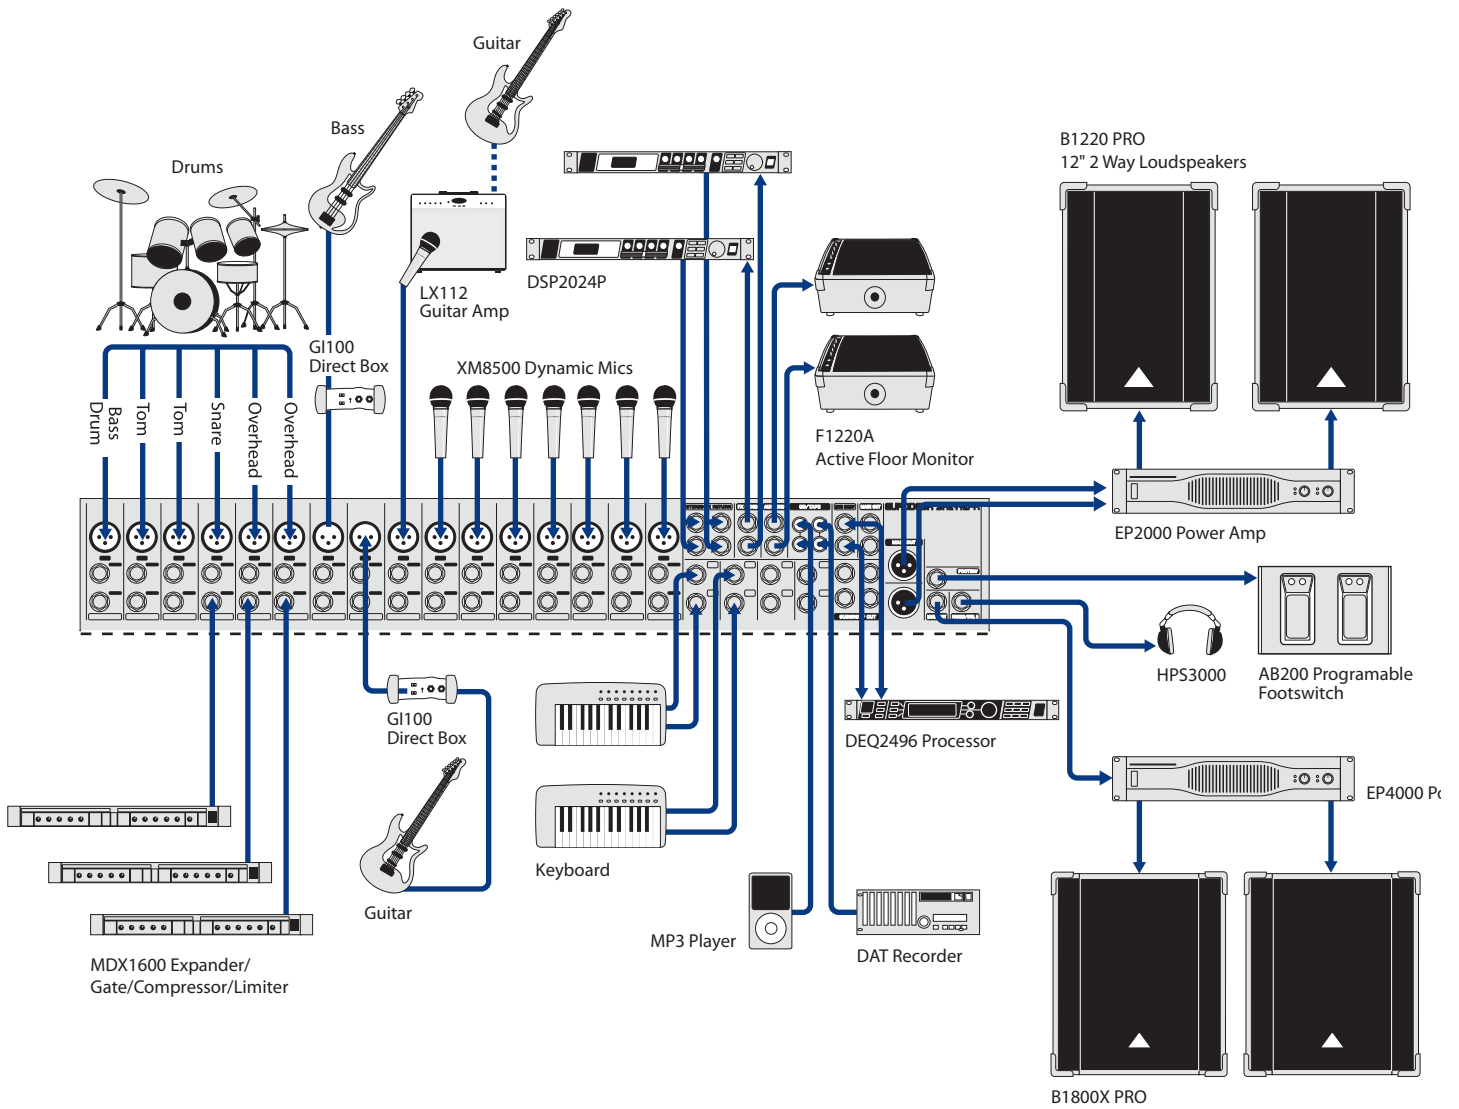

# EURODESK SX2442FX

SIXTEEN MONO channels, each with balanced XLR in with XENYX mic preamp and phantom power for condenser mics

1/4" TRS balanced/unbalanced input

Insert I/O for signal processing on individual channels (pre-fader, pre-EQ and pre-aux send)

LOW CUT filter (mono channels) eliminates unwanted infrasonics

Semi-parametric MID EQ is sweepable from 100Hz to 8KHz

AUX 1 & 2 level controls with PRE/post switch

FX1 and FX2 inject built-in FX into the channel or can be used to control an FX effects unit

MUTE switch (with bright LED) also mutes aux buses set to post-fader

SOLO routes the subgroup signal to the solo bus (Solo In Place) or PFL bus (Pre Fader Listen)

Silky-smooth 60 mm faders on all channels and buses

The Stereo FX RETURN inputs return effect signals from external effects processors

EIGHT LINE-IN-ONLY CHANNELS. Left and right balanced/unbalanced line level 1/4" TRS inputs (stereo channels 17-18, 19-20; dual mono channels 21/22 & 23/24)

TRIM control adjusts input gain via Level Set LED


12kHz shelving HIGH EQ

80 Hz shelving LOW EQ


PAN control sets position of the channel signal in the stereo mix

Channel CLIP LED

Routing switches for assigning channel to MAIN or Subgroups

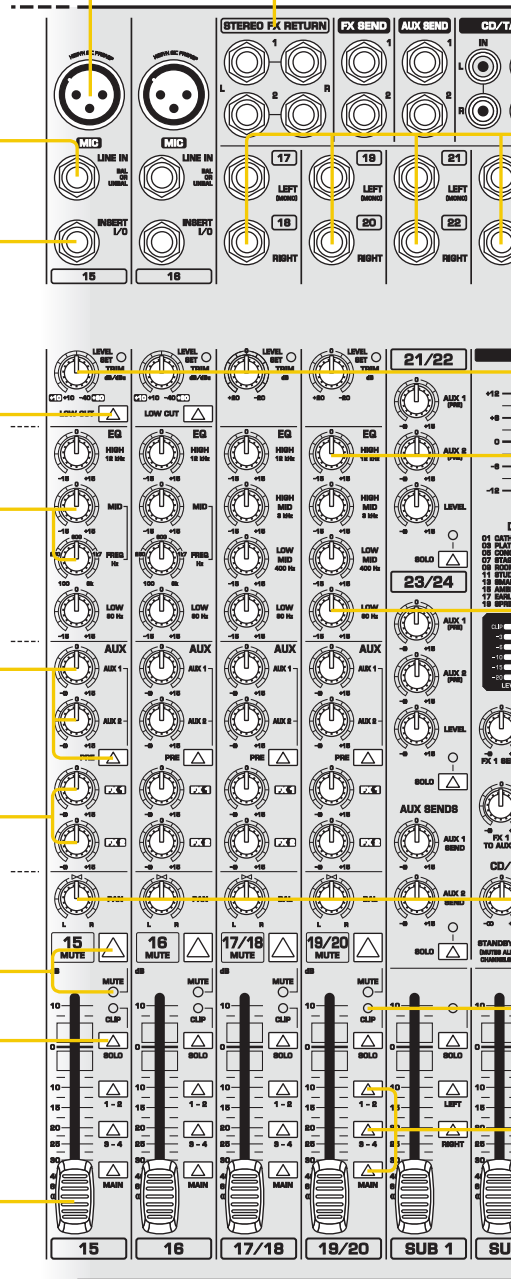

# EURODESK SX2442FX

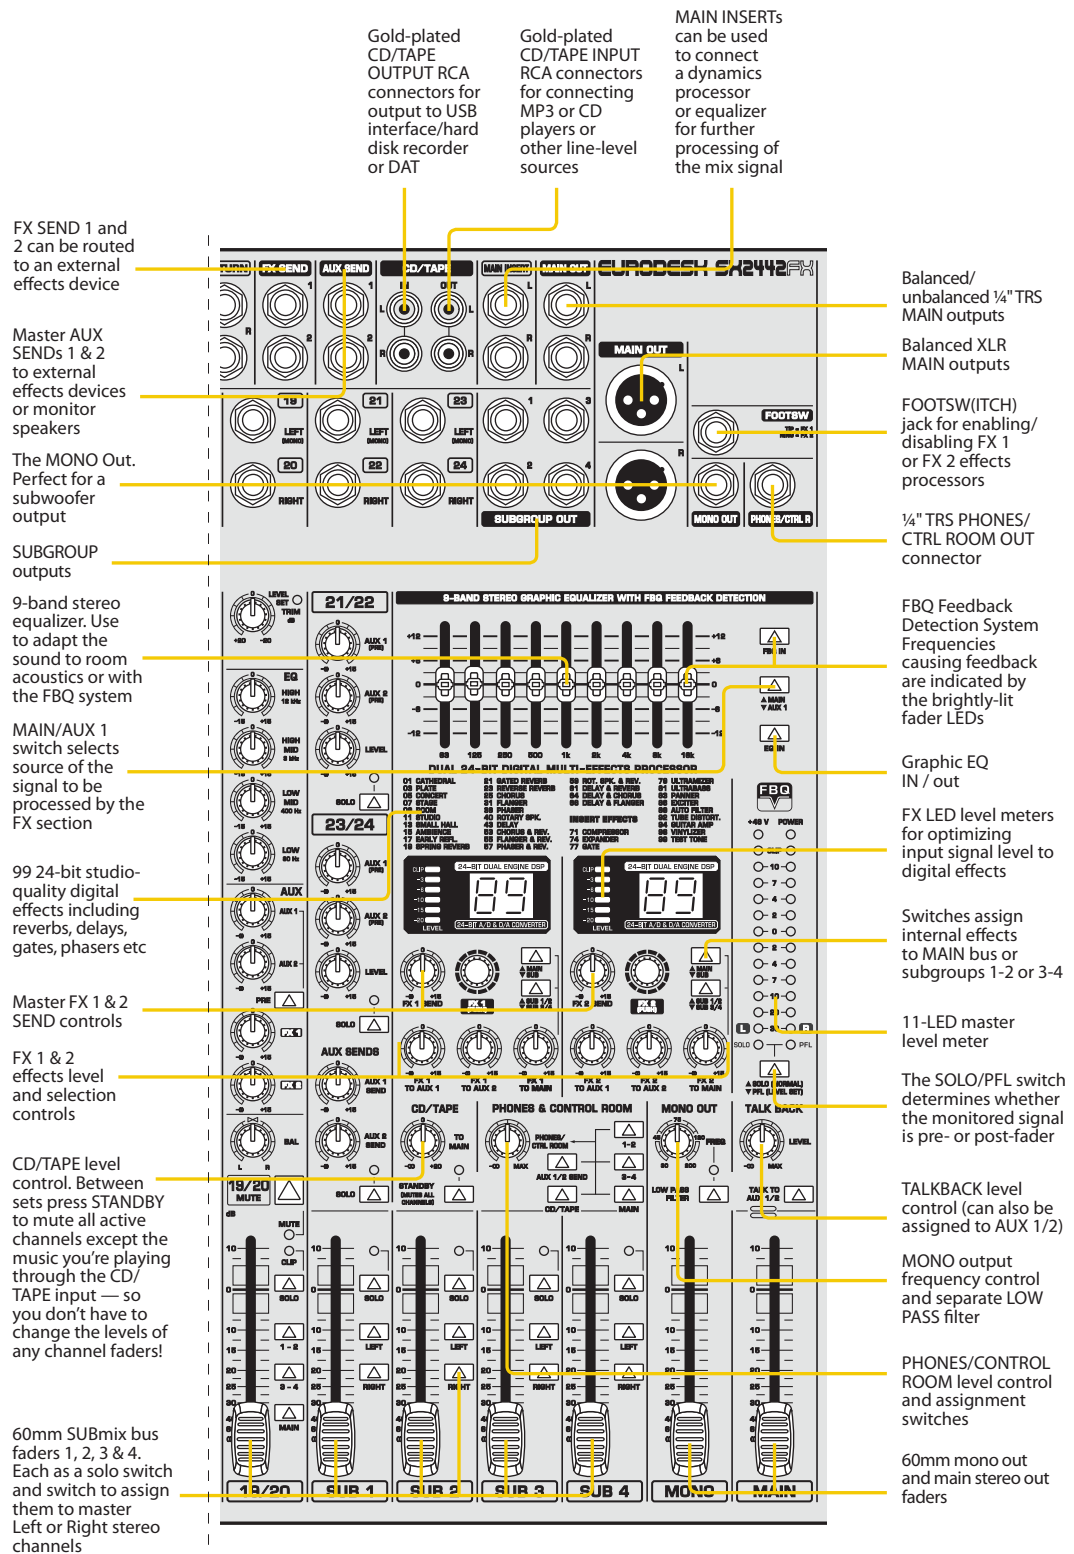

# EURODESK SX2442FX

## MONO INPUTS

### MICROPHONE INPUTS (XENYX MIC PREAMP)

|      |  |
|------|--|
| Type | XLR connector, electronically balanced, discrete input circuit |
|------|--|

### MIC E.I.N.<sup>1</sup> (20 HZ – 20 KHZ)

|                                  |                             |
|----------------------------------|-----------------------------|
| @ 0 $\Omega$ source resistance   | -134 dB/135.7 dB A-weighted |
| @ 50 $\Omega$ source resistance  | -131 dB/133.3 dB A-weighted |
| @ 150 $\Omega$ source resistance | -129 dB/130.5 dB A-weighted |

### FREQUENCY RESPONSE

|                       |   |
|-----------------------|---|
| <10 Hz-160 kHz        | -1 dB   |
| <10 Hz-200 kHz        | -3 dB   |
| Gain range            | +10 dB to +60 dB                                  |
| Max. input level      | +12 dBu @ +10 dB GAIN                             |
| Impedance             | approx. 2.6k $\Omega$ balanced                    |
| Signal-to-noise ratio | 110 dB/112 dB A-weighted (0 dBu In @ +22 dB GAIN) |
| Distortion (THD+N)    | 0.005%/0.004% A-weighted                          |

### LINE INPUT

|                  |  |
|------------------|--|
| Type             | ¼" TRS jack, electronically balanced                             |
| Impedance        | approx. 20 k $\Omega$ balanced, approx. 10 k $\Omega$ unbalanced |
| Gain range       | -10 dB to +40 dB   |
| Max. input level | +22 dBu @ 0 dB GAIN  |

### FADE-OUT ATTENUATION<sup>2</sup> (CROSSTALK ATTENUATION)

|                     |       |
|---------------------|-------|
| Main fader closed   | 90 dB |
| Channel muted       | 84 dB |
| Channel fader muted | 85 dB |

### FREQUENCY RESPONSE (MIC IN → MAIN OUT)

|                  |             |
|------------------|-------------|
| <10 Hz – 90 kHz  | 0 dB/-1 dB  |
| <10 Hz – 160 kHz | +0 dB/-3 dB |

### STEREO INPUTS

|                  |  |
|------------------|--|
| Type             | 2 x ¼" TRS jack, balanced                                |
| Impedance        | approx. 20 k $\Omega$ balanced, 10 k $\Omega$ Unbalanced |
| Gain range       | -20 dB to +20 dB   |
| Max. input level | +22 dBu @ 0 dB GAIN                                      |

### CD/TAPE IN

|                  |                       |
|------------------|-----------------------|
| Type             | RCA Connector         |
| Impedance        | approx. 10 k $\Omega$ |
| Max. input level | +22 dBu               |

## EQUALIZER

### EQ MONO CHANNELS

|         |                        |
|---------|------------------------|
| LOW     | 80 Hz/±15 dB           |
| MID     | 100 Hz to 8 kHz/±15 dB |
| HIGH    | 12 kHz/±15 dB          |
| LOW CUT | 80Hz, 18 dB/oct.       |

### EQ STEREO CHANNELS

|          |               |
|----------|---------------|
| LOW      | 80 Hz/±15 dB  |
| LOW MID  | 500 Hz/±15 dB |
| HIGH MID | 3 kHz/±15 dB  |
| HIGH     | 12kHz/±15 dB  |

### CHANNEL INSERTS

|                  |                         |
|------------------|-------------------------|
| Type             | ¼" TRS jack, unbalanced |
| Max. input level | +22 dBu                 |

### AUX/FX SEND

|                   |                          |
|-------------------|--------------------------|
| Type              | ¼" mono jack, unbalanced |
| Impedance         | approx. 120 $\Omega$     |
| Max. output level | +22 dBu                  |

### FX RETURNS

|                  |                          |
|------------------|--------------------------|
| Type             | ¼" mono jack, unbalanced |
| Impedance        | approx. 10 k $\Omega$    |
| Max. input level | +22 dBu                  |

### SUBGROUP OUTPUTS

|                   |                          |
|-------------------|--------------------------|
| Type              | ¼" mono jack, unbalanced |
| Impedance         | approx. 120 $\Omega$     |
| Max. output level | +22 dBu                  |

### MAIN OUTPUTS (XLR)

|                   |  |
|-------------------|--|
| Type              | XLR connector, electronically balanced                 |
| Impedance         | approx. 240 $\Omega$ balanced, 120 $\Omega$ unbalanced |
| Max. output level | +28 dBu  |

### MAIN OUTPUTS (¼")

|                   |  |
|-------------------|--|
| Type              | ¼" TRS jack, electronically balanced                   |
| Impedance         | approx. 240 $\Omega$ balanced, 120 $\Omega$ unbalanced |
| Max. output level | +28 dBu  |

### MAIN INSERTS

|                  |                         |
|------------------|-------------------------|
| Type             | ¼" TRS jack, unbalanced |
| Max. input level | +22 dBu                 |

## MONO OUTPUT

|                   |                                       |
|-------------------|---------------------------------------|
| Type              | ¼" mono jack, unbalanced              |
| Impedance         | approx. 120 $\Omega$                  |
| Max. output level | +22 dBu                               |
| Low pass          | variable, 30 Hz to 200 Hz, 18 dB/oct. |

### PHONES/CTRL ROOM OUTPUT

|                   |                                |
|-------------------|--------------------------------|
| Type              | ¼" TRS jack, unbalanced        |
| Max. output level | +19 dBu/150 $\Omega$ (+25 dBm) |

### CD/TAPE OUT

|                   |                      |
|-------------------|----------------------|
| Type              | RCA connector        |
| Impedance         | approx. 1 k $\Omega$ |
| Max. output level | +22 dBu              |

### DSP

|               |   |
|---------------|---|
| Type          | Texas Instruments                             |
| Converter     | 24-bit delta-sigma, 64/128-times oversampling |
| Sampling rate | 46 kHz  |

### MAIN MIX SYSTEM DATA<sup>3</sup> (NOISE)

|  |                              |
|--|------------------------------|
| Main mix @ - $\infty$ , channel fader @ - $\infty$ | -100 dB/-102.5 dB A-weighted |
| Main mix @ 0 dB, channel fader @ - $\infty$        | -82 dB/-85 dB A-weighted     |
| Main mix @ 0 dB, channel fader @ 0 dB              | -72 dB/-75 dB A-weighted     |

### POWER SUPPLY

|                   |                          |
|-------------------|--------------------------|
| Power consumption | 50W                      |
| Fuse              | (100 – 240 V~, 50/60 Hz) |
| T 2,0 A H 250 V   |                          |
| Mains connector   | Standard IEC receptacle  |

### PHYSICAL/WEIGHT

|                        |   |
|------------------------|---|
| Dimensions (H x W x D) | 3.9 x 26.9 x 16.1" / 100 x 682 x 410 mm |
| Weight (net)           | 19 lbs/8.6 kg                           |

<sup>1</sup> Equivalent Input Noise

<sup>2</sup> Measuring conditions: 1 kHz rel. to 0 dBu; 20 Hz – 20 kHz; line input; main output; unity gain

<sup>3</sup> 20 Hz – 20 kHz; measured at main output. Channels 1 – 4 unity gain; EQ flat; all channels on main mix; channels 1/3 as far left as possible; channels 2/4 as far right as possible; reference = +6 dBu.

Please note these specifications are preliminary and conceptual in nature, and as such are subject to change as product development progresses. This information is supplied for market research purposes only and is not to be made public in any manner. This document is solely the property of The MUSIC Group, or one of its subsidiaries, and must be surrendered upon request of the owner.

For service, support or more information contact the BEHRINGER location nearest you:

**Europe**  
MUSIC Group Services UK  
Tel: +44 156 273 2290  
Email: CARE@music-group.com

**USA/Canada**  
MUSIC Group Services NV Inc.  
Tel: +1 702 800 8290  
Email: CARE@music-group.com

**Japan**  
MUSIC Group Services JP K.K.  
Tel.: +81 3 6231 0454  
Email: CARE@music-group.com

Technical specifications and appearances are subject to change without notice and accuracy is not guaranteed. BEHRINGER is part of the MUSIC Group (music-group.com). All trademarks are the property of their respective owners. MUSIC Group accepts no liability for any loss which may be suffered by any person who relies either wholly or in part upon any description, photograph or statement contained herein. Colors and specifications may vary from actual product. MUSIC Group products are sold through authorized fulfillers and resellers only. Fulfillers and resellers are not agents of MUSIC Group and have absolutely no authority to bind MUSIC Group by any express or implied undertaking or representation. This manual is copyrighted. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording of any kind, for any purpose, without the express written permission of MUSIC Group IP Ltd. ALL RIGHTS RESERVED. © 2012 MUSIC Group IP Ltd. Trident Chambers, Wickhams Cay, P.O. Box 146, Road Town, Tortola, British Virgin Islands. 985-10000-00282

behringer.com

