



MuxStream Pro Single-Camera Live Streaming Kit 500786

User Manual

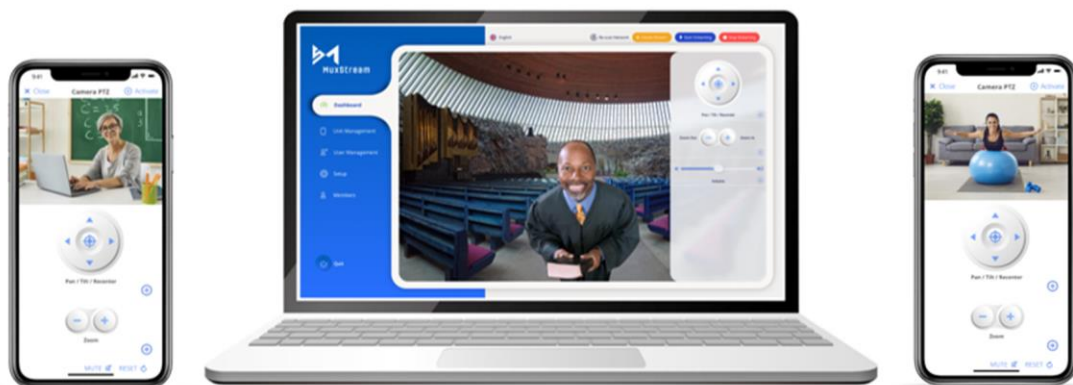


Table of Contents

1	Product Overview	3
2	Installation.....	4
3	Using the MuxStream App	6
3.1	Configuring the App	6
3.1.1	Creating an account.....	6
3.1.2	Auto discover and configure your kit.	7
3.2	Control interface	8
3.2.1	Broadcast tab.....	9
3.2.2	Settings tab.....	10
3.2.3	Create Stream tab	11
3.2.4	Start Streaming tab.....	15
3.2.5	Control interface for iOS and Android.	17
4	Troubleshooting	19

1 Product Overview


The MuxLab “MuxStream Pro Single-Camera Live Streaming Kit” (model 500786) includes the main components needed to broadcast live content to mass recipients spread out across the globe. The solution allows live presentations to effectively be streamed over the Internet at 1080p/60, and can work with industry standard broadcast streaming services such as YouTube, Facebook, Wowza, to name a few, and also works with popular Audio/Video content production software tools such as OBS, Wirecast, and others.

The kit comes complete with an AV over IP H.264/H.265 4K Streamer/Transmitter to stream content to Broadcasting Services, an HDMI/IP PTZ camera @ 1080p/60, a Wireless Lavalier Microphone, an intuitive control application (MuxStream App) to manage the system, and a 6.6ft (2m) Premium Certified HDMI 2.0 cable.


The MuxLab MuxStream Control App is free to download from the MuxLab website (for Windows PC), and from the iOS and Android App Stores (for tablet and smartphone). The Control App manages the system setup, configures the Transmitter to stream to various broadcast services such as YouTube, Facebook and Wowza, manages camera settings including pan/tilt/zoom (PTZ), and the wireless mic volume. The AV over IP H.264/H.265 4K Streamer/Transmitter supports up to 4K video @ 30Hz and may be located up to 330ft (100m) from an Ethernet network switch and supports PoE (but a PSU is included) and supports low bandwidth for streaming the HDMI camera video and mic audio over the Internet.

2 Installation


1. Please validate that you received all contents listed below.

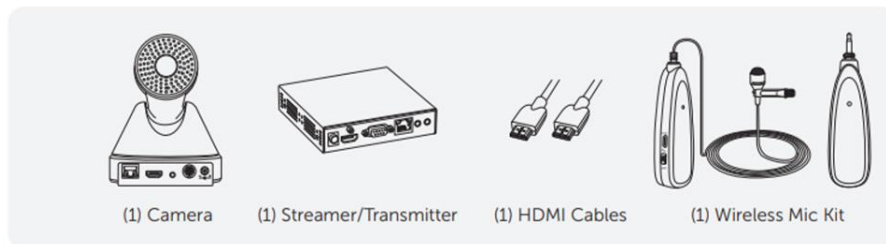


2. Download the MuxStream App.

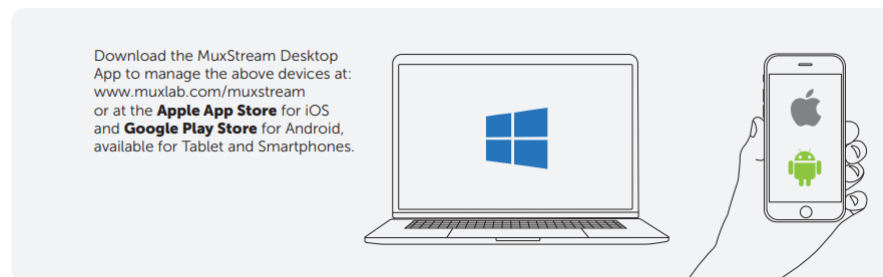

3. Make sure you have an internet connection.

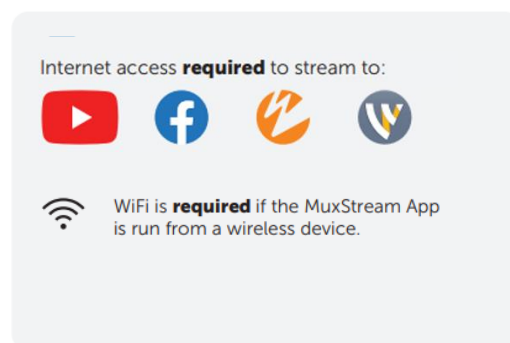

4. Connect the Camera to the Streamer/Transmitter.

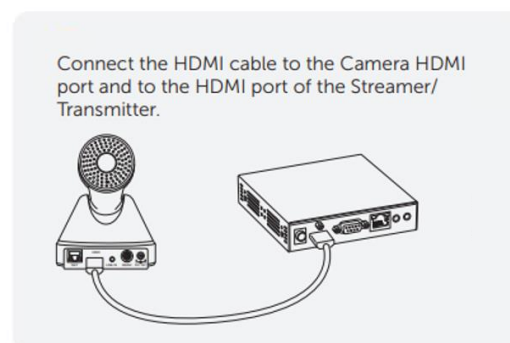


5. Connect the Mic Wireless Receiver to the Streamer/Transmitter.

Connect the Mic Wireless Receiver to the Streamer/Transmitter (Audio Input port).
Make sure the Mic and its Receiver are charged.




6. Connect the Camera to your Router.

Connect the Camera (Ethernet Port) to your Router via a Cat 6 (or better) Ethernet cable (not included).

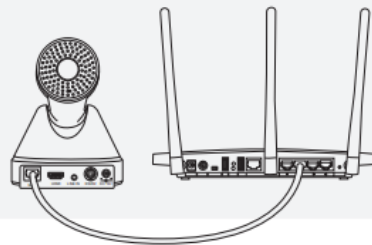

7. Connect the Streamer/Transmitter to your Router.

Connect the Streamer/Transmitter (Ethernet Port) to your Router via a Cat 6 (or better) Ethernet cable (not included).

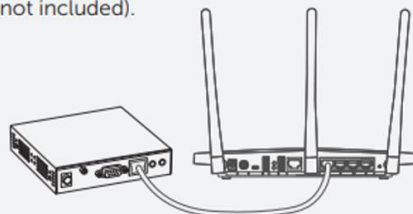


8. Power On all devices.

Power **all** the supplied devices above.
*Make sure to turn on the wireless Mic and its Receiver in close proximity for them to **pair**.*



9. Open the MuxStream App.

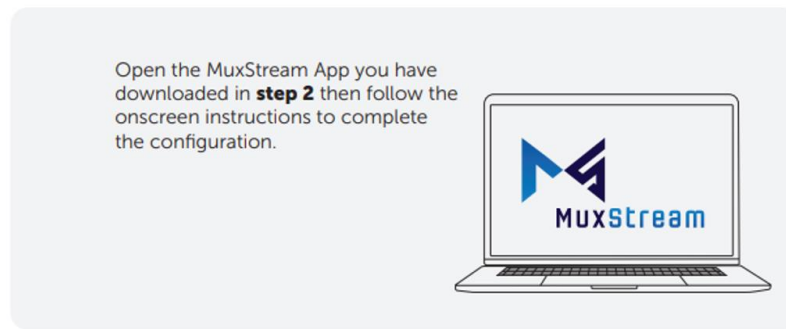

3 Using the MuxStream App


3.1 Configuring the App

3.1.1 Creating an account

If this is the first time you are running the MuxStream App, a new user must be created, see figure below.


To create a new user, following these steps:

1. Enter your email address.
2. Enter your password.
3. Confirm your password.
4. Press the “Next” button.

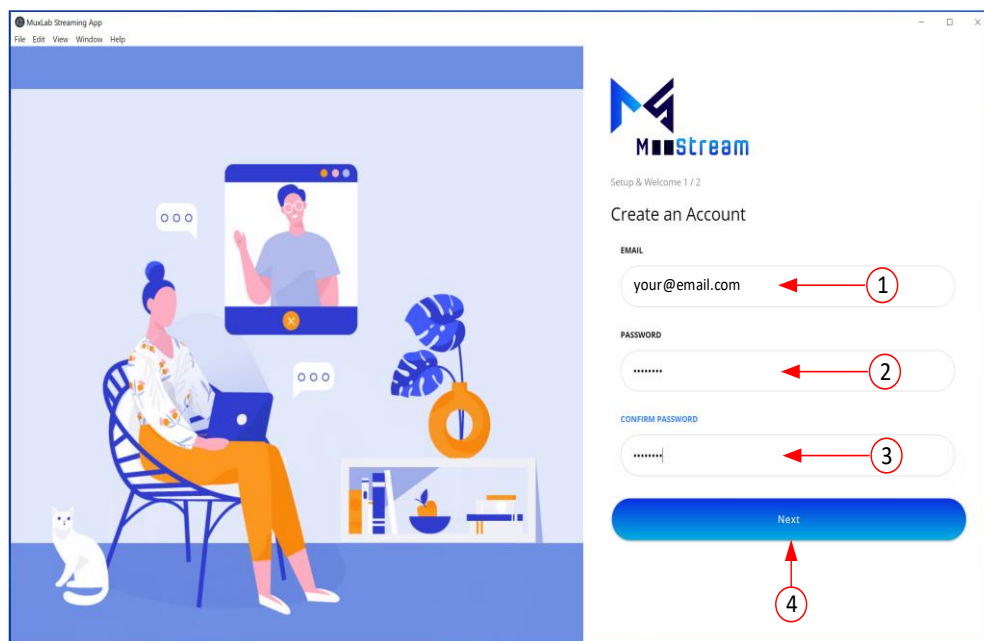


3.1.2 Auto discover and configure your kit.


After creating an account, the application will search for and discover the devices on the network (PTZ Camera and Streamer/Transmitter) and will configure them automatically.

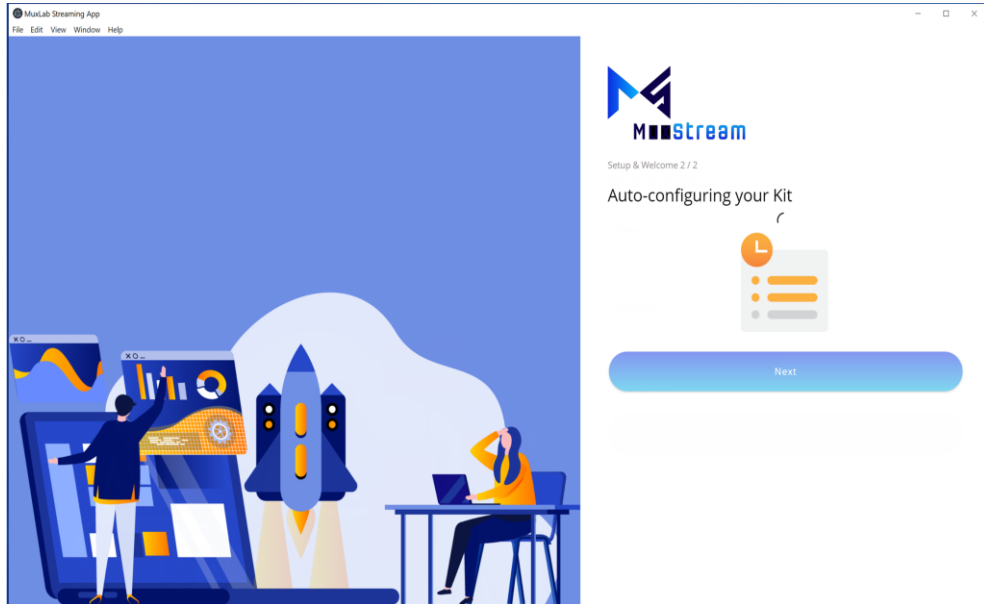

Once the application has configured the devices, click the "Next" button to begin (See figure below).

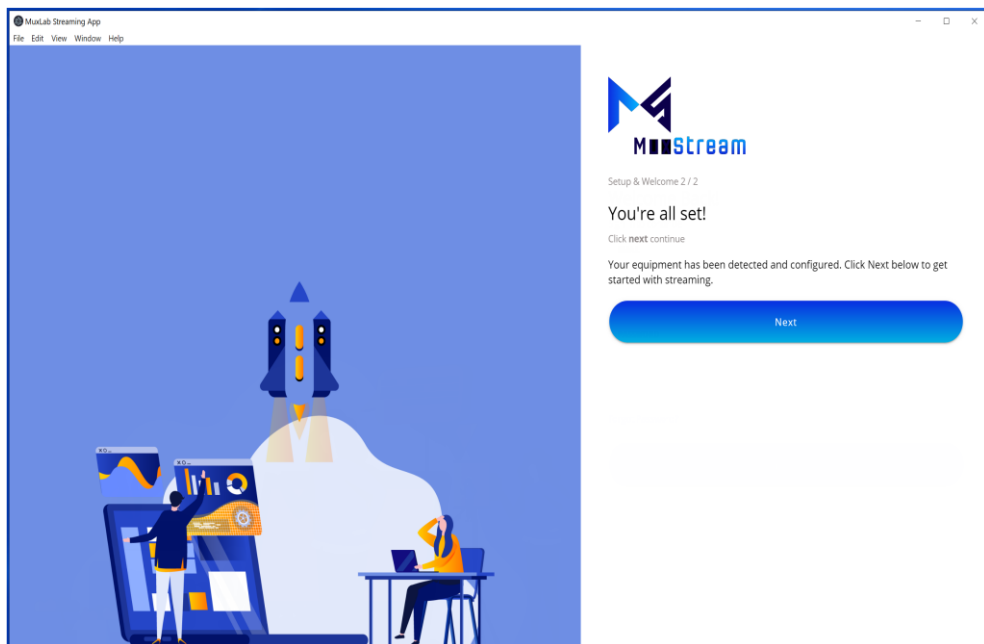


To start using the application, the user must enter their email address and password and then press the “Sign in” button.

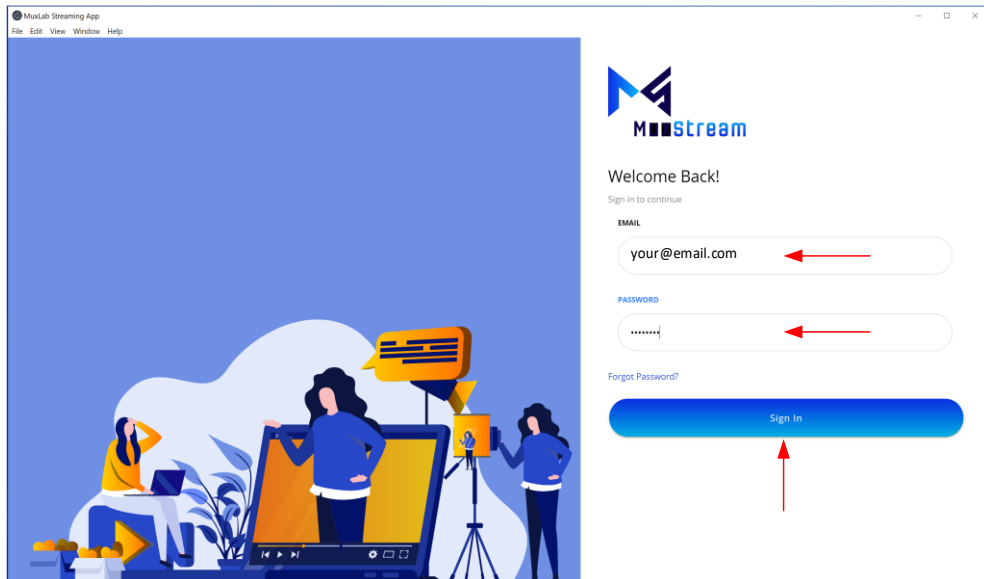

After pressing the "Sign in" button, the system control interface will start automatically.


3.2 Control interface

Once logged in, the User can see three main tabs: Broadcast, Create Stream and Settings.

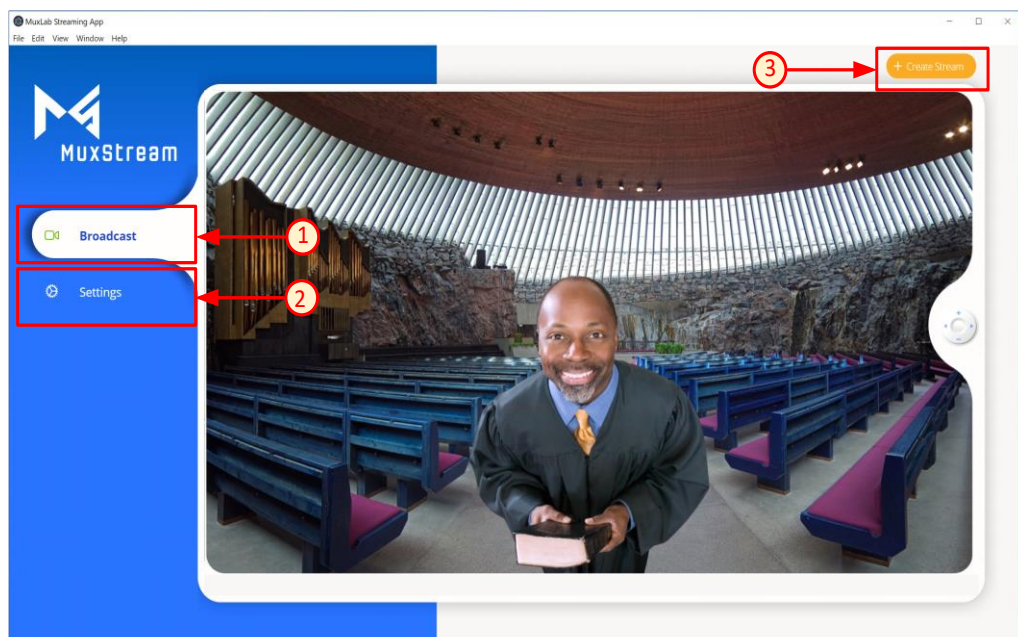


3.2.1 Broadcast tab

When the "Broadcast" tab is selected, the application displays the camera preview in the center of the window and allows you to control the different PTZ options for the camera, mic volume, and pre-sets by selecting the icon on the right-side of the window.

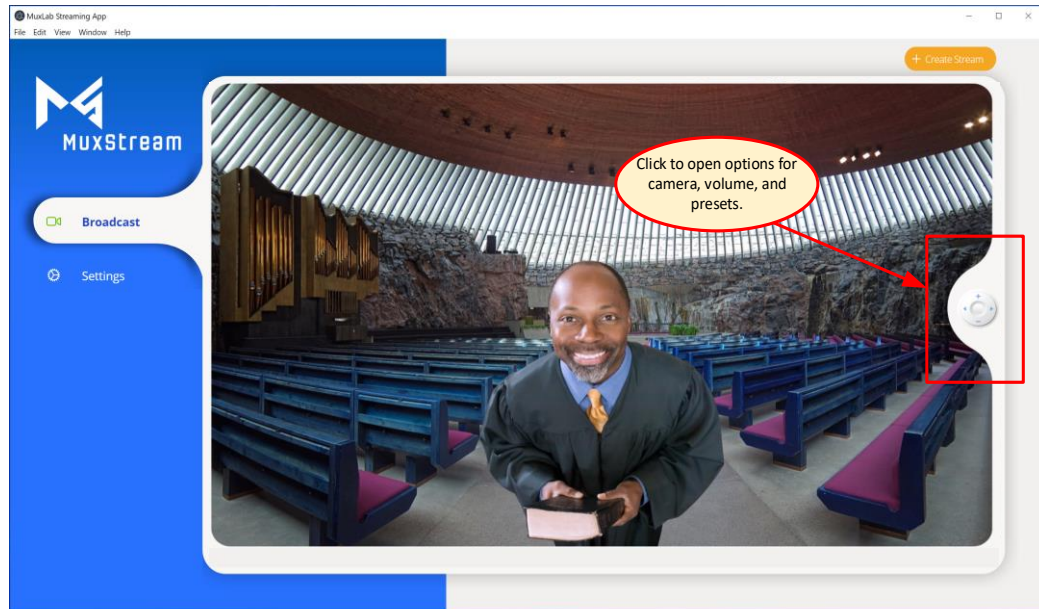

Pressing or hovering the cursor over the control icon will bring up a pop-up Window with different control options (Pan, Tilt, Recenter, Zoom, Volume, Preset, etc.) that can be adjusted using the mouse or keyboard.

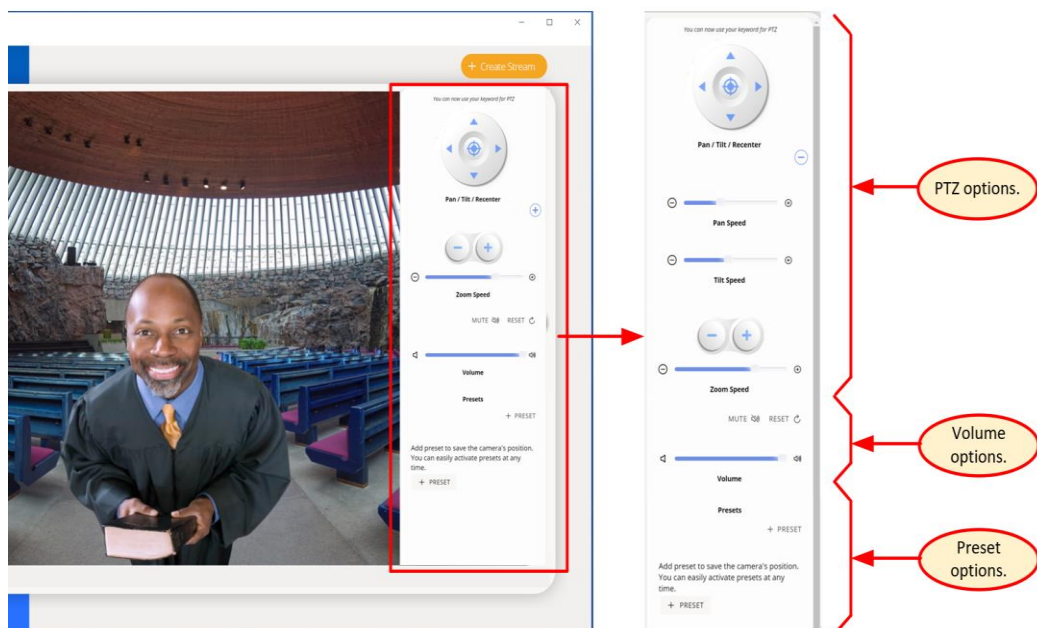


Multiple Presets may be created, each recording the current pan/tilt/zoom and mic volume settings at the time they are saved. Saved Presets may be recalled

by simply pressing on a given Preset button. To create a Preset, press on "+ PRESET" and a new pop-up window will appear to allow the user to enter the necessary data. The current pan/tilt/zoom and volume settings may be saved.

To create a new Preset, follow these steps:


1. Input the new "Preset" name. Any name may be given.
2. To include the mic volume level in the Preset, enable this option.
3. Input the mic volume level desired (if this option was enabled).
4. Press the "SAVE" button to confirm.

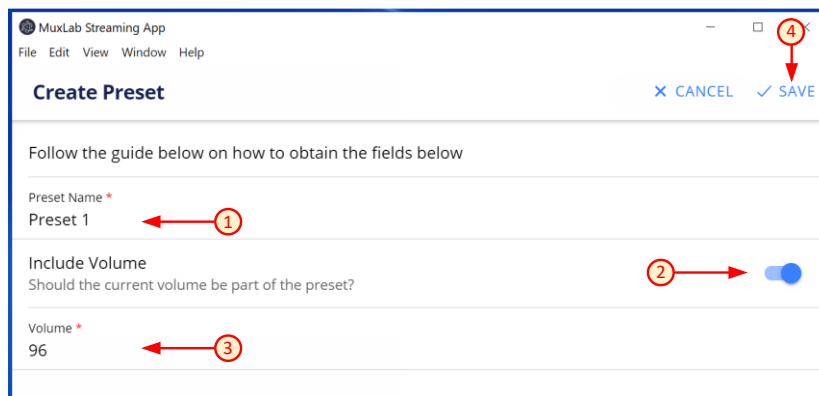

Saved Presets will show up as Preset buttons with their assigned name. To activate a Preset, simply press on its button.

3.2.2 Settings tab

In the "Settings" tab, the application shows three options: Language, App Version and Auto-Discover.

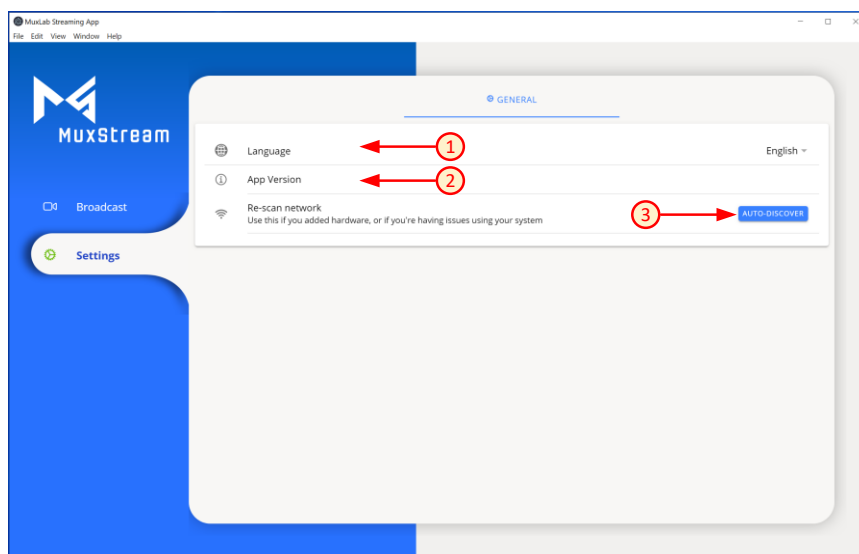


1. Language: The user can select the MuxStream language. Simply select the language from the list provided.

2. App Version: The user can see the current MuxStream App version.
3. Auto-Discover: By pressing the "AUTO-DISCOVER" button the App will automatically re-detect the Streamer/Transmitter and Camera that are connected in the network. If there is more than one Streamer/Transmitter or more than one Camera connected, the user will be requested to select the units to be used from a list provided.

3.2.3 Create Stream tab

To create a new stream, the user must press the "Create Stream" button. Once selected, a new pop-up window will appear in which we can see two main options: RTMP Streams and RTSP Streams.

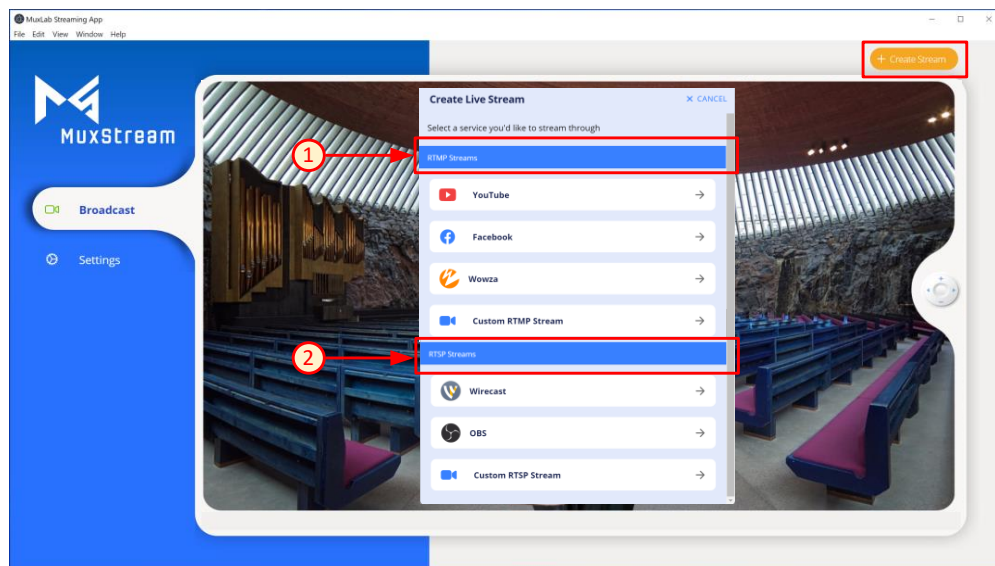


1. Creating an RTMP Stream; To do this, select the service from the list provided. If the service is not listed, select the "Custom RTMP Streaming" button.


To create a new RTMP Stream, following these steps:

- a. Input a user defined new Stream name.
- b. Input the Stream URL (from your streaming provider).
- c. Input the Stream Key (from your streaming provider).
- d. Press the "SAVE" button to confirm.


Note: For each RTMP Streaming service that is listed, the App displays a guide on how to find the "Stream URL" and the "Stream Key".

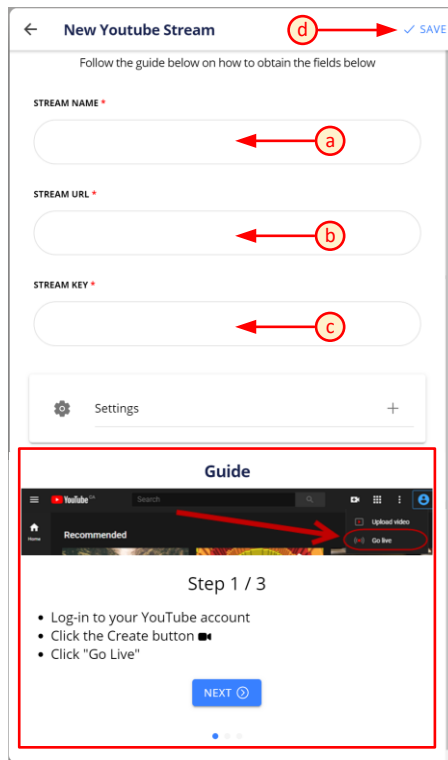


In the "Settings" section the user can modify different parameters such as: Resolution, Bitrate, FPS, GOP and Encoding method. It should be noted that the App for each service shown in the list will give default values for these parameters, these defaults are recommended values for the Streaming service selected, but the user can change them at any time according to their needs.

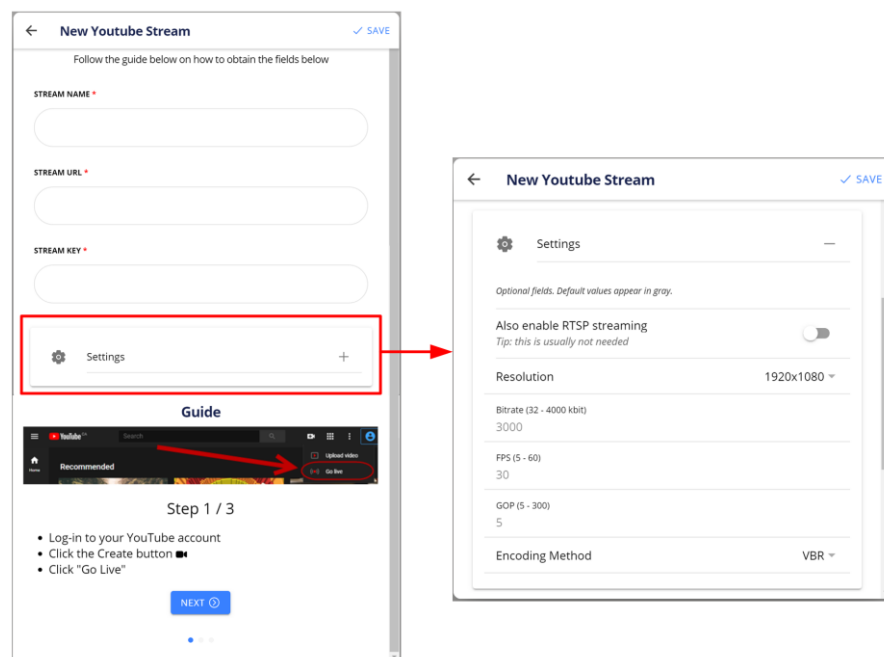

When the creation of an RTMP Stream is complete, a pop-up window will appear to confirm whether you want to start streaming now or later.

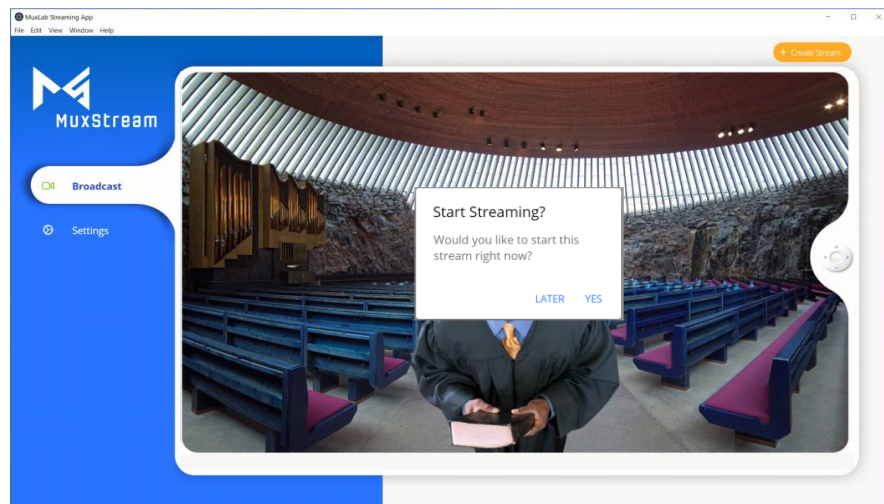

Once the creation of at least one RTMP Stream is complete, a "Start Stream" tab will appear.

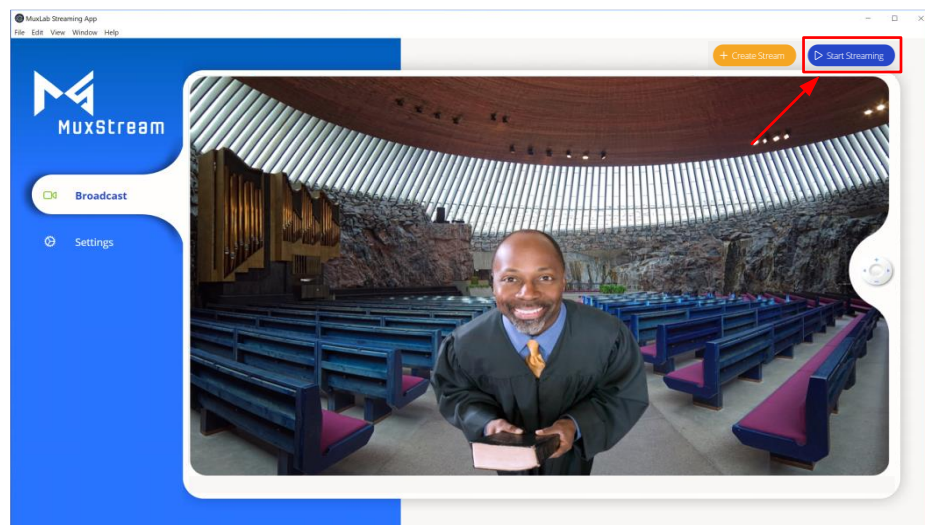

2. Creating an RTSP Stream; To do this, select the service from the list provided. If the service is not listed, select the "Custom RTSP Streaming" button.

To create a new RTSP Stream, following these steps:

- a. Input a user defined new Stream name.
- b. Copy the RTSP URL. This URL should be pasted into the appropriate box on your RTSP streaming service.
- c. Press the "SAVE" button to confirm.

Note: For each RTSP Streaming service that is listed, the App displays a guide on how to enter the "RTSP URL"

The screenshot shows the 'New WireCast Stream' app interface. At the top, there is a back arrow, the title 'New WireCast Stream', and a 'SAVE' button with a checkmark. Below the title, a message says 'Follow the guide below to set up WireCast'. The form has two main input fields: 'STREAM NAME' and 'RTSP URL'. The 'RTSP URL' field contains the text 'rtsp://192.168.25.185:38001/video1.rtsp'. Below these fields is a 'COPY' button and a 'Settings' button with a gear icon. A red box highlights the 'Settings' button and the 'Guide' section below it. The 'Guide' section shows a diagram of a document with a 'Clear Layer' button and a '+' button. Below the diagram, it says 'Step 1 / 3' and lists two steps: 'Create a new Wirecast Document' and 'Add a Layer'. A 'NEXT' button is at the bottom of the guide section. Red arrows and circles labeled 'a' and 'b' point to the 'STREAM NAME' and 'COPY' buttons respectively. A red circle labeled 'c' points to the 'SAVE' button at the top right.


In the "Settings" section the user can modify different parameters such as: Resolution, Bitrate, FPS, GOP and Encoding method.

It should be noted that the App for each service shown in the list will give default values for these parameters, these defaults are recommended values for the Streaming service selected, but the user can change them at any time according to their needs.


The image shows two screenshots of the 'New WireCast Stream' app. The left screenshot is the same as the one above, but with a red box around the 'Settings' button. A red arrow points from this box to the right screenshot. The right screenshot shows the 'Settings' section of the app. It has a title bar with a back arrow, 'New WireCast Stream', and a 'SAVE' button. Below the title bar, it says 'Optional fields: Default values appear in gray.' The settings are listed in a table-like format with labels and values, and some values are in gray. The settings are: Resolution (1920x1080), Bitrate (32 - 4000 kbit/s) (3000), FPS (5 - 60) (30), GOP (5 - 300) (5), and Encoding Method (VBR).

Label	Value
Resolution	1920x1080
Bitrate (32 - 4000 kbit/s)	3000
FPS (5 - 60)	30
GOP (5 - 300)	5
Encoding Method	VBR

When the creation of an RTSP Stream is complete, a pop-up window will appear to confirm whether you want to start streaming now or later.

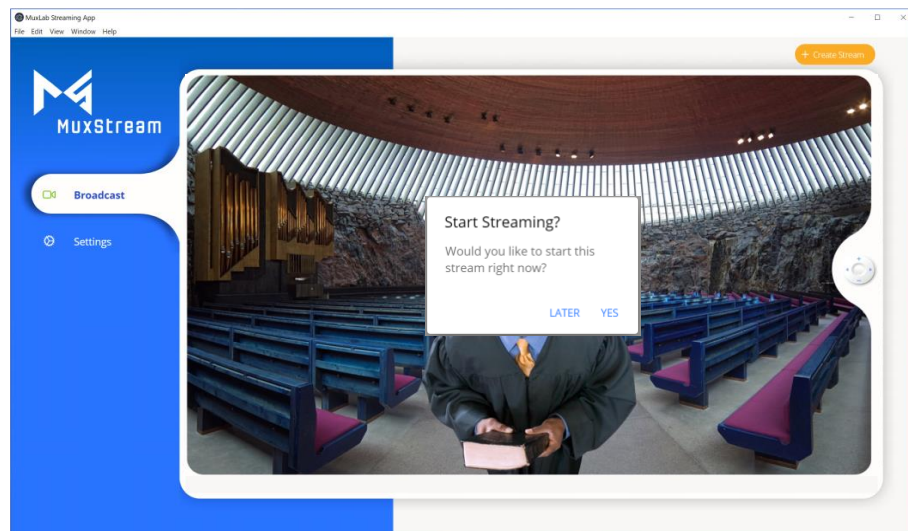


Once the creation of at least one RTSP Stream is complete, a "Start Stream" tab will appear.

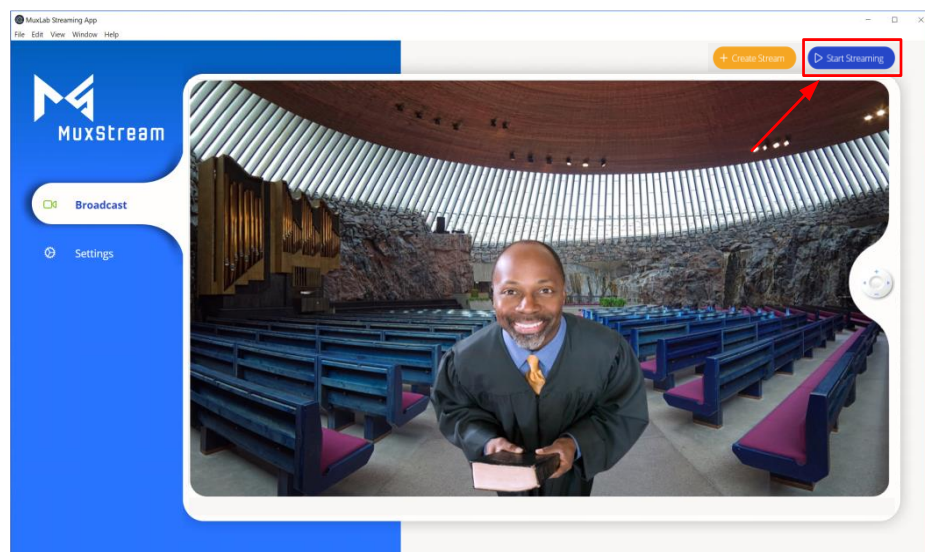


3.2.4 Start Streaming tab


By clicking on the 'Start Streaming' button, the application shows the list of streams created and allows the user to edit, delete or start a transmission. To start streaming, simply click on the arrow to the right of the Stream Name.

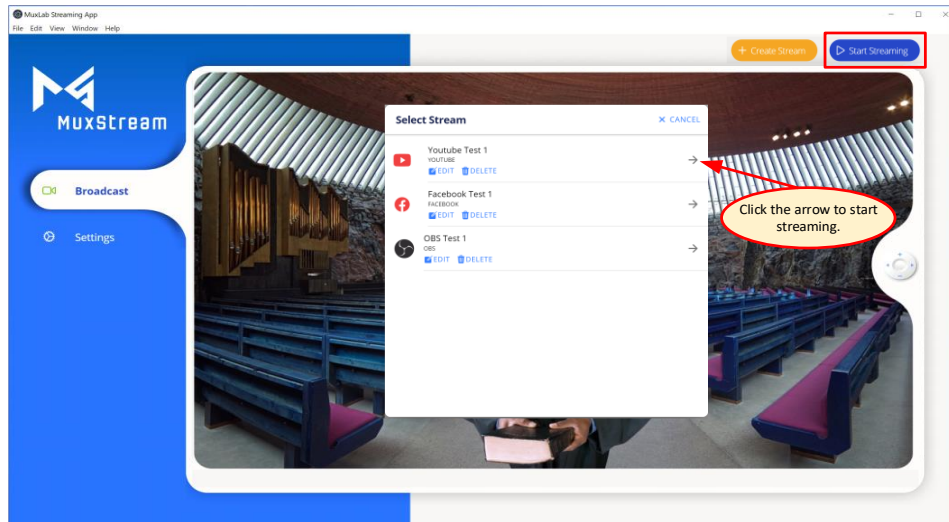

After clicking the arrow, a popup window reminds you to check if the broadcast service is transmitting. Click the "GOT IT" button if the transmission works fine.

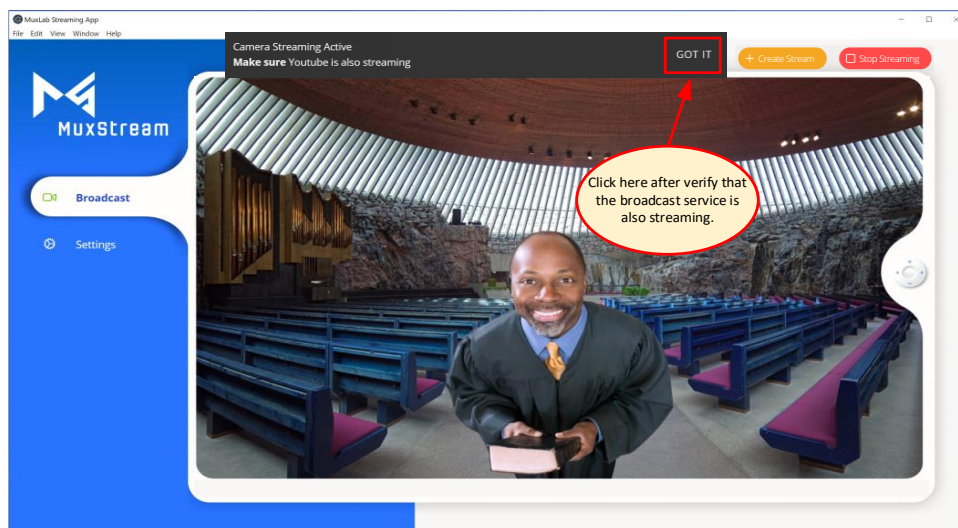

To end a transmission just click on the "Stop Streaming" button in this App and in your broadcasting service.


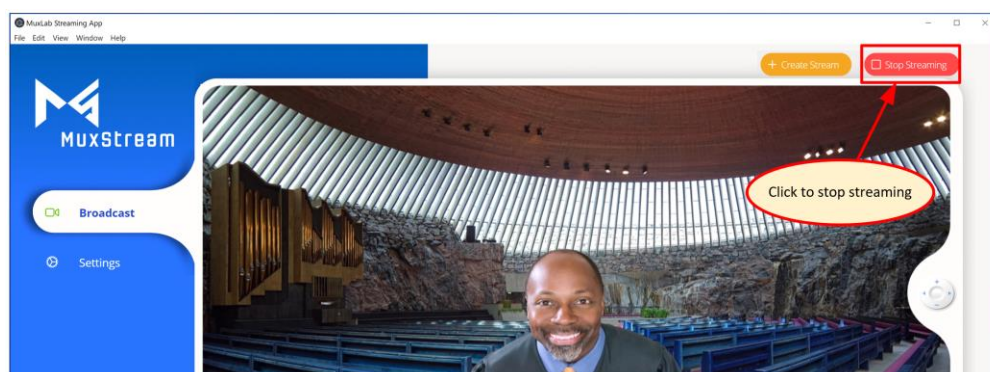


3.2.5 Control interface for iOS and Android.


For iOS and Android devices, for both tablets and smartphones, the MuxStream application will present the same options found in the Windows version for PC, changing only the arrangement of the tabs. See section 3.2 for a description of each option.

Below are screenshots of iOS and Android devices for reference only.


iOS iPad

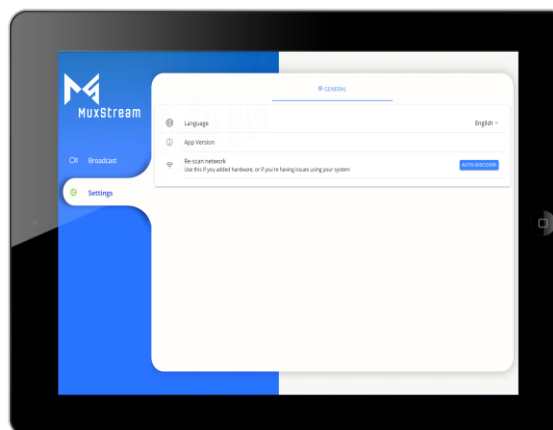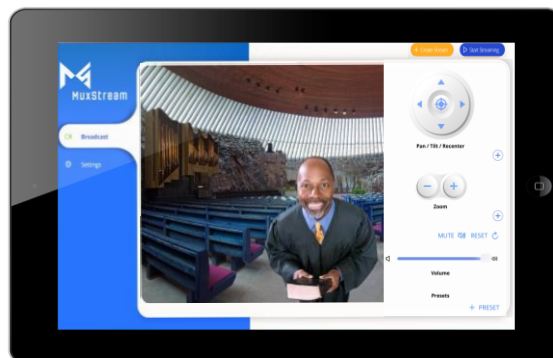

iOS iPhone

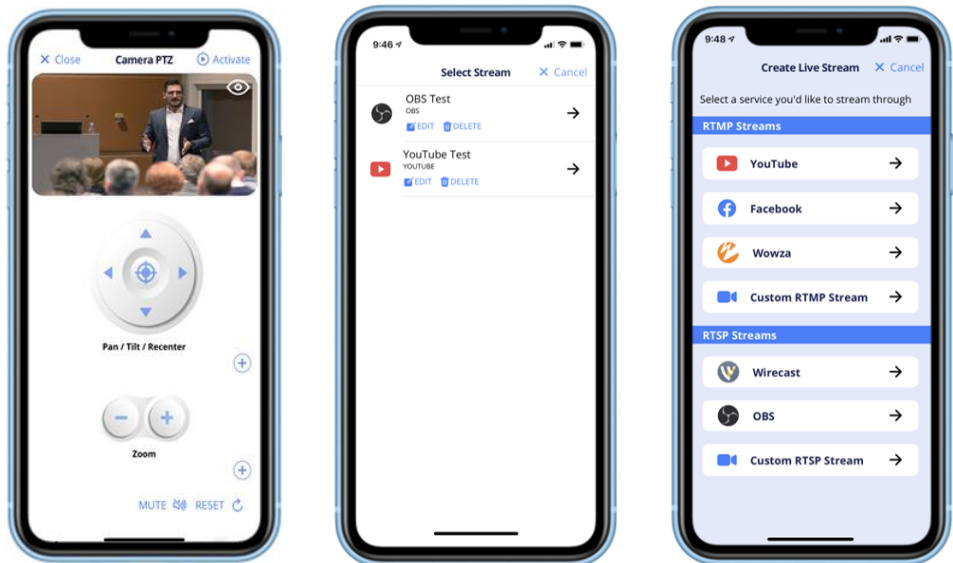

Android Tablet

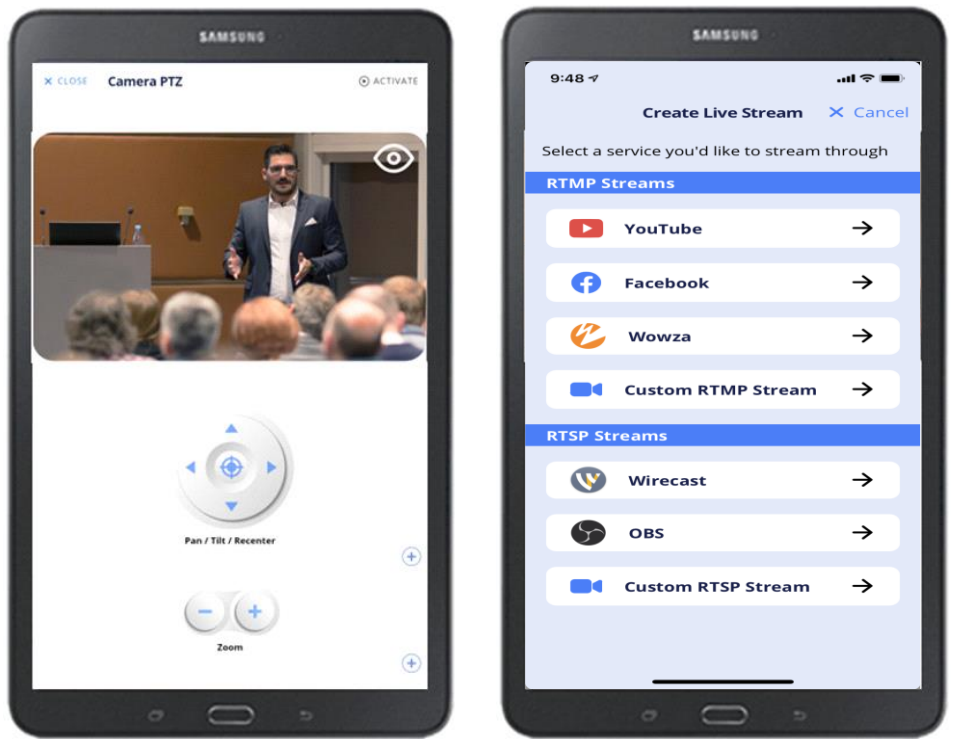

4 Troubleshooting

The following table describes some of the symptoms and possible solutions regarding the MuxStream App.

symptom	Probable cause	Possible solution
No Streamer/Transmitter found.	• The Transmitter is not connected to the network. • The Transmitter is not turned on. • The Transmitter is connected to a different Subnet.	Check that the network cable is properly connected to the Transmitter. Verify that the Transmitter is turned on. Make sure you are in the same subnet as your Transmitter and make sure DHCP mode is active.
No Camera found	• The Camera is not connected to the network. • The Camera is not turned on. • The Camera is connected to a different Subnet	Check that the network cable is properly connected to the Camera. Verify that the Camera is turned on. Make sure you are in the same subnet as your Camera and make sure DHCP mode is active.
Not able to Stream	• There is no internet connection. • The Streaming URL is not correct. • The Streaming key is not correct. • No Audio being sent.	Verify that you have a good quality Internet connection. Verify that you pasted the correct Streaming URL. Verify that you pasted the correct Streaming key. Some streaming services like YouTube and others require both audio and video signals to be present. Make sure the wireless mic is connected, charged and working correctly.



MuxLab Inc.
2321 Rue Cohen
Montreal, Quebec
Canada H4R 2N7
Tel.: +1 (514) 905-0588 Fax: +1 (514) 905-0589
Toll Free (North America): 877 689-5228
URL: www.muxlab.com
E-mail: info@muxlab.com