

**HD 6 CHANNEL
DIGITAL VIDEO SWITCHER
SE-1200MU
Instruction Manual**

www.datavideo.com

Table of Contents

FCC Compliance Statement	5
Warnings and Precautions	5
Warranty	6
Standard Warranty.....	6
Two Year Warranty	6
Disposal	6
Chapter 1 Introduction.....	7
1.1 Features.....	7
1.2 System Diagram.....	8
Chapter 2 Hardware Connections	9
2.1 Front Panel	9
2.2 Rear Panel	9
Chapter 3 Network Setup.....	11
3.1 Initial SE-1200 MU Setup with a Windows Computer	11
3.2 Installing the SE-1200 MU Controller Software to a Windows Computer	12
3.2.1 Router Based DHCP Setup	13
3.2.2 How to control the SE-1200 MU from another building or city	14
3.2.3 Setting the Target IP Address with the Controller Software	15
Chapter 4 SE-1200 MU Video Setup.....	17
4.1 SE-1200 MU Multi View Output.....	17
4.2 Setting the Video Outputs.....	18
4.3 Setting the Video Standard	18
4.4 SE-1200 MU Video Layers	19
Chapter 5 Video Connection Setup	21
5.1 Inputs – Setup	21
5.1.1 Crosspoint	21
5.1.2 Source Labels	21
5.2 Setting up the SE-1200 MU Video Stream Based Multi View	21
5.2.1 Preparing the SE-1200 MU Stream Output	22
5.2.2 VLC Media Player - Stream Caching.....	23
5.2.3 Port Forwarding for the SE-1200 MU	23
Chapter 6 PC Control Panel	24
6.1 Sources Panel	24

6.1.1	AUX BUS	24
6.1.2	PROGRAM	24
6.1.3	PRESET.....	24
6.2	TRANSITION CONTROLS Panel	24
6.2.1	Previewing a Selected Transition/Wipe	24
6.2.2	Rev and Nrm (NORM) / Rv (REV) Buttons	25
6.2.3	Key 1 & Key 2 PRIORITY Key Function	25
6.3	Transition Effects.....	25
6.3.1	CUTTING between Sources.....	25
6.3.2	Mixing between Sources	26
6.3.3	Wiping between Sources.....	27
6.3.4	Clip between Sources (Stinger Transition).....	28
6.4	FTB Key Function	30
6.4.1	Enable	30
6.4.2	FTB	30
6.5	DSK TRANS Panel.....	30
Chapter 7	Applications	32
7.1	Luma Key - Quick DSK 1 Setup	32
7.1.1	Keyer Control.....	33
7.1.2	Keyer Matte	34
7.2	Linear key - Quick DSK 2 Setup.....	34
7.3	Picture in Picture (PinP) Function	36
7.3.1	PIP Position	37
7.3.2	PIP Border	37
7.3.3	PIP Crop	38
7.4	Bus MATTE Setup	38
7.5	Clips – Quick Setup	40
Chapter 8	CHROMA Key Functions.....	42
8.1	Overview	42
8.2	Chroma Matte	43
8.3	Chroma Key Ctrl.....	44
8.4	Color Spill.....	44
8.5	Chroma Key - Setup.....	45
8.6	Key MASK Function	46

Chapter 9 Freezing a Video Input for Stills Capture	48
9.1 Stills – Grab and Save	48
9.2 Assigning a Saved Still Image to an Input Channel	49
9.3 Exporting and Importing Stills	50
Chapter 10 USER Memory Functions	52
10.1 Saving the Current Settings to a User Memory Slot	52
10.2 Labelling an Existing User Memory Slot.....	53
10.3 Loading a Previously Saved User Setup	54
10.4 Deleting a User Setup.....	55
10.5 Exporting and Importing User Setups	55
Chapter 11 Appendices.....	57
Appendix 1: Audio	57
Appendix 2: GPI Out	58
Appendix 3: Tally Outputs	59
Appendix 4: Firmware Upgrade	60
Appendix 5: How to Connect RMC-260 to SE-1200 MU	61
Appendix 6: Dimensions.....	63
Appendix 7: Specifications	64
Service and Support.....	66

Disclaimer of Product and Services

The information offered in this instruction manual is intended as a guide only. At all times, Datavideo Technologies will try to give correct, complete and suitable information. However, Datavideo Technologies cannot exclude that some information in this manual, from time to time, may not be correct or may be incomplete. This manual may contain typing errors, omissions or incorrect information. Datavideo Technologies always recommend that you double check the information in this document for accuracy before making any purchase decision or using the product. Datavideo Technologies is not responsible for any omissions or errors, or for any subsequent loss or damage caused by using the information contained within this manual. Further advice on the content of this manual or on the product can be obtained by contacting your local Datavideo Office or dealer.

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Warnings and Precautions



1. Read all of these warnings and save them for later reference.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit in or near water.
5. Do not place this unit on an unstable cart, stand, or table. The unit may fall, causing serious damage.
6. Slots and openings on the cabinet top, back, and bottom are provided for ventilation. To ensure safe and reliable operation of this unit, and to protect it from overheating, do not block or cover these openings. Do not place this unit on a bed, sofa, rug, or similar surface, as the ventilation openings on the bottom of the cabinet will be blocked. This unit should never be placed near or over a heat register or radiator. This unit should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should only be operated from the type of power source indicated on the marking label of the AC adapter. If you are not sure of the type of power available, consult your Datavideo dealer or your local power company.
8. Do not allow anything to rest on the power cord. Do not locate this unit where the power cord will be walked on, rolled over, or otherwise stressed.
9. If an extension cord must be used with this unit, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord rating.
10. Make sure that the total amperes of all the units that are plugged into a single wall outlet do not exceed 15 amperes.
11. Never push objects of any kind into this unit through the cabinet ventilation slots, as they may touch dangerous voltage points or short out parts that could result in risk of fire or electric shock. Never spill liquid of any kind onto or into this unit.
12. Except as specifically explained elsewhere in this manual, do not attempt to service this product yourself. Opening or removing covers that are marked "Do Not Remove" may expose you to dangerous voltage points or other risks, and will void your warranty. Refer all service issues to qualified service personnel.
13. Unplug this product from the wall outlet and refer to qualified service personnel under the following conditions:
 3. When the power cord is damaged or frayed;
 4. When liquid has spilled into the unit;
 5. When the product has been exposed to rain or water;
 6. When the product does not operate normally under normal operating conditions. Adjust only those controls that are covered by the operating instructions in this manual; improper adjustment of other

controls may result in damage to the unit and may often require extensive work by a qualified technician to restore the unit to normal operation;

7. When the product has been dropped or the cabinet has been damaged;
8. When the product exhibits a distinct change in performance, indicating a need for service.

Warranty

Standard Warranty

- Datavideo equipment is guaranteed against any manufacturing defects for one year from the date of purchase.
- The original purchase invoice or other documentary evidence should be supplied at the time of any request for repair under warranty.
- Damage caused by accident, misuse, unauthorized repairs, sand, grit or water is not covered by this warranty.
- All mail or transportation costs including insurance are at the expense of the owner.
- All other claims of any nature are not covered.
- Cables & batteries are not covered under warranty.
- Warranty only valid within the country or region of purchase.
- Your statutory rights are not affected.


Two Year Warranty

- All Datavideo products purchased after 01-Oct.-2008 qualify for a free one year extension to the standard Warranty, providing the product is registered with Datavideo within 30 days of purchase. For information on how to register please visit www.datavideo.com or contact your local Datavideo office or authorized Distributors
- Certain parts with limited lifetime expectancy such as LCD Panels, DVD Drives, Hard Drives are only covered for the first 10,000 hours, or 1 year (whichever comes first).



Any second year warranty claims must be made to your local Datavideo office or one of its authorized Distributors before the extended warranty expires.

Disposal

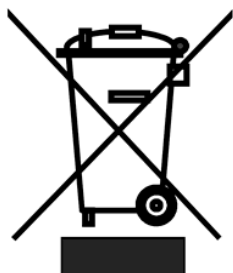

For EU Customers only - WEEE Marking

This symbol on the product indicates that it will not be treated as household waste. It must be handed over to the applicable take back scheme for the recycling of Waste Electrical and Electronic Equipment. For more detailed information about the recycling of this product, please contact your local Datavideo office.

Chapter 1 Introduction

The Datavideo SE-1200 MU is a small, cost-effective, HD digital video switcher with easy-to-use professional features. The SE-1200 MU can be controlled over a network and can even display a multi view over the same network connection. This allows the SE-1200 MU operator to have the option of working in a different room, or a different building, or even a different city!

The SE-1200 MU switcher offers four HD SDI and two HDMI inputs. Supported video formats include 1080i/50, 1080i/59.94, 1080i/60, 720p/50, 720p/59.94 and 720p/60. Output options include; two user assignable HD SDI and two HDMI outputs. These user defined output options can be set up to provide Clean Preview, Clean Program, Program with DSK overlay, Preview Out or Multi-view as well as Inputs 1~6. The SDI or HDMI outputs can be taken to other Datavideo products (separate purchase) such as the HDR-70 HD recorder, TLM-170G HD monitor and can also be streamed to web based viewers using the Datavideo NVS-25 Video Streaming Server.

The SE-1200 MU also features two analogue balanced XLR audio inputs for connecting an external audio mixer such as the Datavideo AM-100 or AD-200. Tally and RJ-45 connections allow the switcher to be connected to a Windows PC as well as providing tally light indications to crew and on screen talent via Datavideo's ITC-100 talkback system.

The SE-1200 MU is also capable of HD Chroma Key, Luma Key, Down Stream Key, Picture In Picture, up to 32 Wipe transitions and user defined still frame stores. In addition, it also allows the user to connect an external physical switcher keyboard controller such as Datavideo's RMC-260. It really is a small, powerful, HD video switcher!

1.1 Features

Video

- 6 video inputs (SDI x 4 + HDMI x 2)
- Flexible Mix/Effects Processor with
 - HD Chroma Key / Linear / Luma Key
 - Picture-In-Picture
 - Wipe Generator with 32 wipe patterns including circle and heart wipes plus Border & Softness Controls
 - Traditional Mix & Cut Transitions
 - User defined Down Stream Key for use with external CG text overlay
 - Full M/E Preview function
- Assignable Outputs (SDI & HDMI)
- Cross Point Assignment (XPT)


Audio

- 2 audio inputs (XLR x 2 for connecting external audio source to be embedded in SDI video signal)

Control

- PC control and setup available over a standard RJ-45 IP connection
- Tally output compatible with Datavideo ITC-100 talk back system
- GPI Output
- Supports physical switcher keyboard controller such as RMC-260

1.2 System Diagram

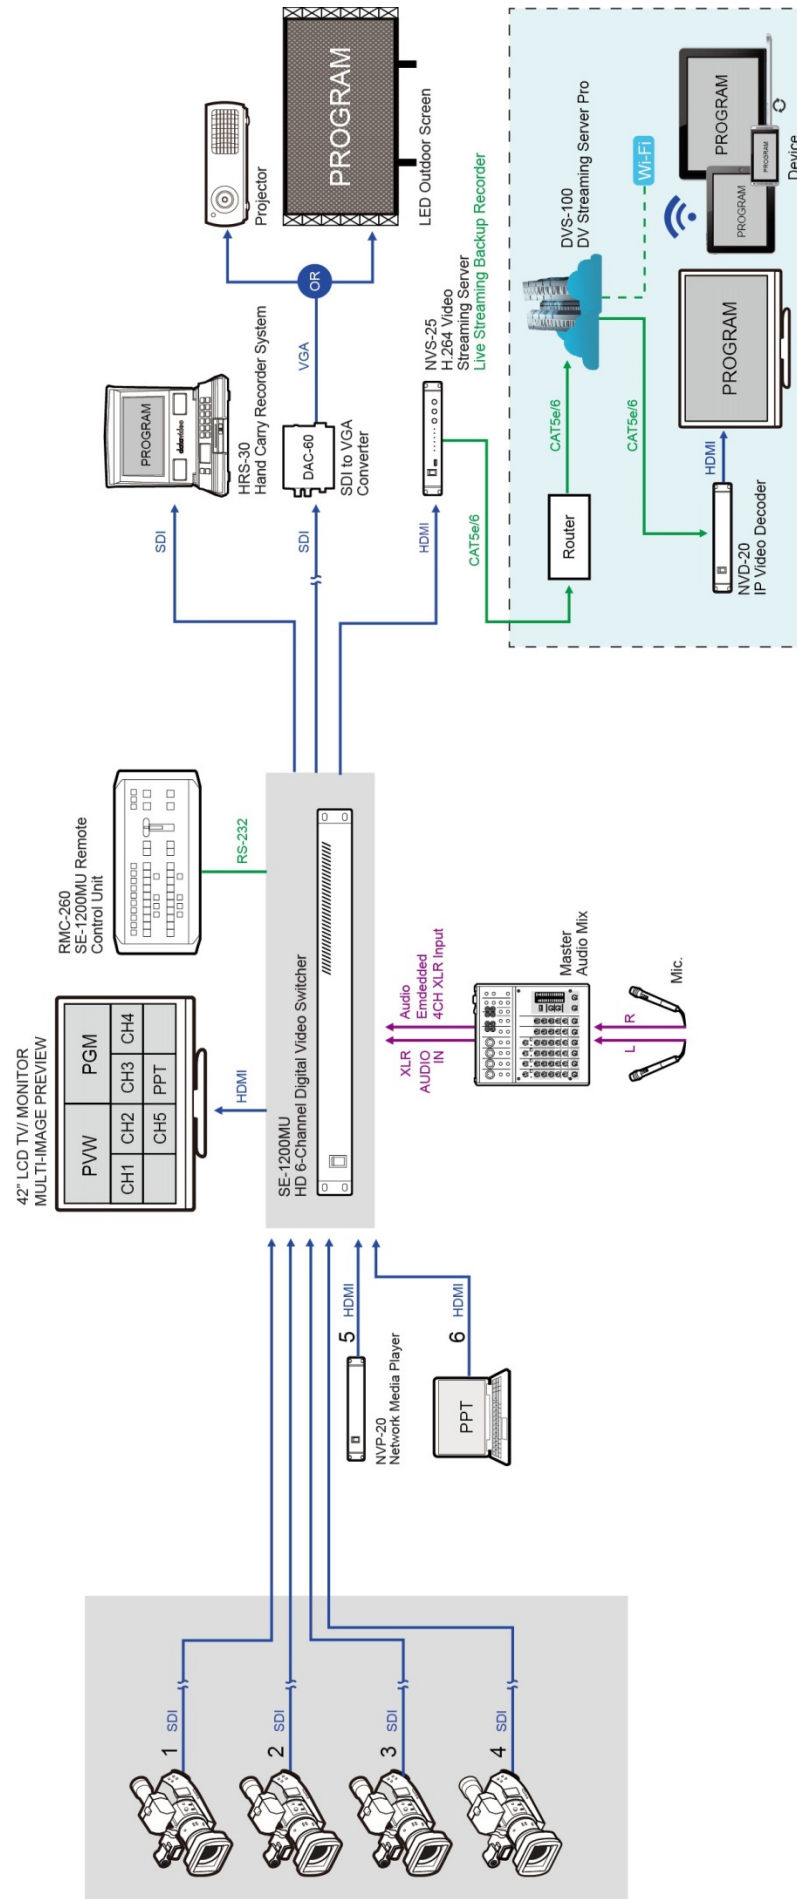



Chapter 2 Hardware Connections

2.1 Front Panel



Power ON /OFF switch


2.2 Rear Panel

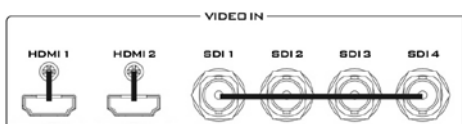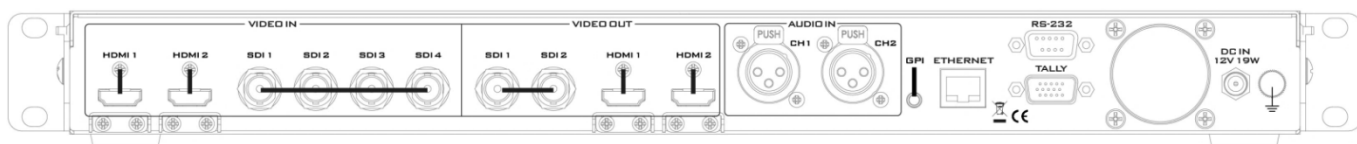

Video IN

The SE-1200 MU is equipped with six video input channels.

Video Input set is comprised of four SDI connectors and two HDMI ports.

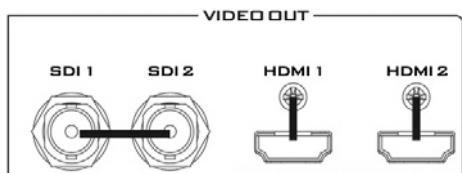


Video OUT

HDMI 1 and the two SDI outputs can be used for monitoring video in a number of different configurations including Program, Preview and or Multi-view. See [Section 4.2](#).

HDMI 2: Multi-view Output **ONLY**

*Note: Both HDMI output ports operate at **1080i**, 1080p or 720p depending on the chosen video standard.*

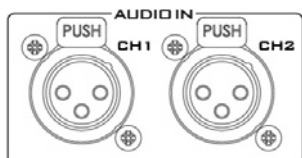


Audio Input

Supports two XLR Balanced Audio Input channels.




GPI


GPI output connection for basic control of other externally-connected devices.

ETHERNET**Ethernet Ports**

For connection of the Main Unit to the PC such that the SE-1200 MU can be remotely controlled on a graphical user interface.

RS-232**RS-232**

For remote control interface such as RMC-260.

TALLY**TALLY Output**

The SE-1200 MU Tally Output Port provides bi-colour tally information (Red and Amber); Red indicates On-Air and Amber indicates next camera source.

**DC IN
12V 19W****DC IN**

Connect the supplied 12V / 19W PSU to this socket. The connection can be secured by screwing the outer fastening ring of the DC In plug to the socket.

**Grounding Terminal**

When connecting this unit to any other component, make sure that it is properly grounded by connecting this terminal to an appropriate point. When connecting, use the socket and be sure to use wire with a cross-sectional area of at least 1.0 mm^2 .

Chapter 3 Network Setup

3.1 Initial SE-1200 MU Setup with a Windows Computer

The SE-1200 MU switcher is not supplied with a traditional hardware based control panel. Instead it is controlled using a software user interface installed on your Windows-based computer. **When new from the factory the unit will initially have a static IP address of 192.168.100.101.** The unit can be directly connected to a Windows-based computer using an RJ-45 ethernet cable. The following set up should allow you to initially configure the unit before moving it to an existing DHCP / LAN network.


- An RJ-45 ethernet cable.
- Windows 7/8/10 laptop or PC.
- The Datavideo SE-1200 MU controller software.



Instructions

1. First connect the SE-1200 MU and the Windows computer together using an RJ-45 ethernet cable.
2. Turn on the Windows computer and set it to **static IP set up** within the **Windows Network and Sharing Centre**.

In our example the computer is given the following IP settings so that the computer matches the same IP range as the switcher.

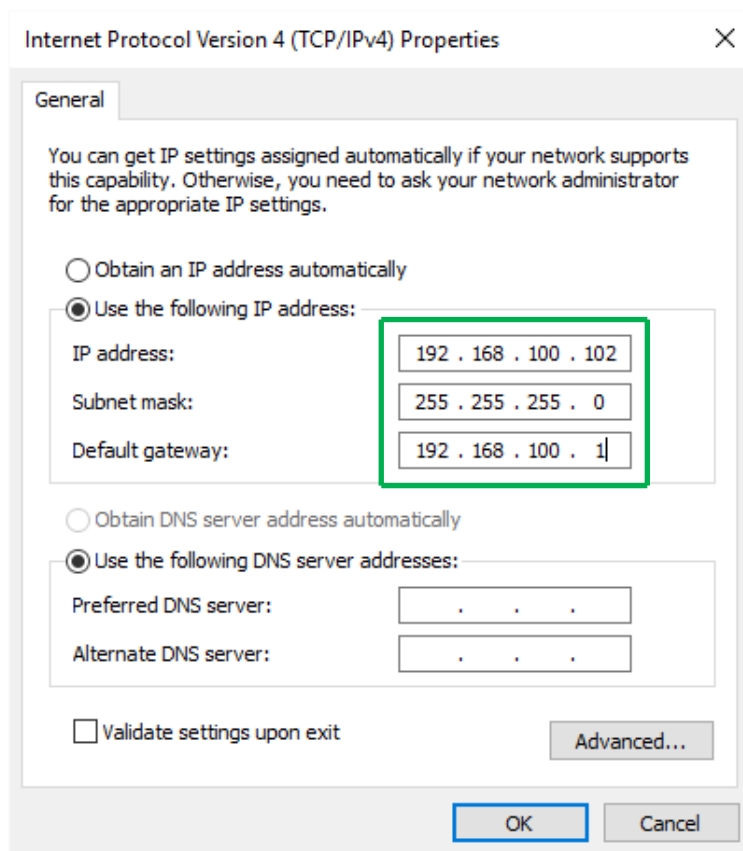

3. Now install the supplied SE-1200 MU controller software to the computer.

3.2 Installing the SE-1200 MU Controller Software to a Windows Computer

The SE-1200 MU can be connected to a simple IP network and controlled using Windows-based software. If you have not already set up the SE-1200 MU with a computer then please follow the instructions on the previous page.

The SE-1200 MU comes with an accessory software CD. If this CD has been lost or has not been supplied then please download the latest software from the Datavideo SE-1200 MU web page. See: www.datavideo.com




The install executable file [.exe] will be called **SE1200 Control v.x.x.x.x**
The v.x.x.x.x represents the latest version number.


Double click this .exe file then **follow the on screen install wizard prompts**.

Once installed launch the **SE-1200 MU controller software**.

The SE-1200 MU controller software has a built-in IP finder, which is designed for PC with multiple Ethernet cards or DHCP network environment. Please note IP finder can only find devices that are on the same network domain as the PC. If you cannot remember your device IP, please contact your local Datavideo distributor for assistance as there is currently no reset function for network settings. Upon launch of the SE-1200 MU controller software, you will be prompted to select one Ethernet Interface Card.

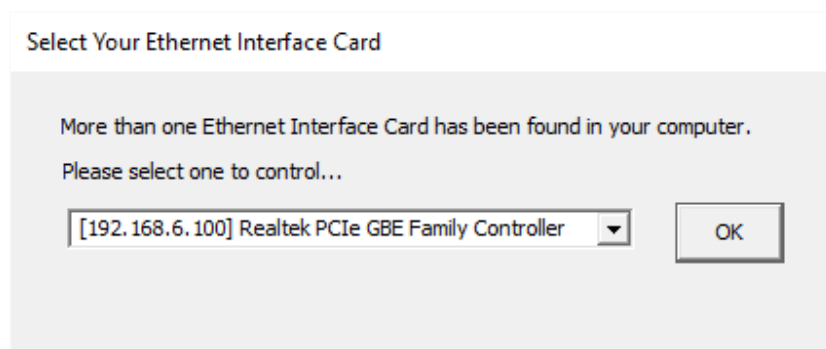

Once selected, click OK to start the scanning process.

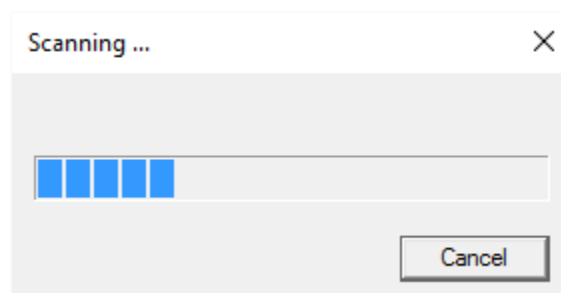

If the SE-1200 MU control software cannot find the SE-1200 MU device, the software will continuously prompt you for an appropriate interface card. Again, please make sure the selected interface card is on the same network domain as the SE-1200 MU device.

Once the SE-1200 MU device is found, the software will connect with the switcher hardware over the IP set up described on the previous page.

As the program buttons are clicked the SE-1200 MU program output and multi view output will show changes.




3.2.1 Router Based DHCP Setup

The computer software can also access and control the SE-1200 MU over an existing TCP/IP LAN type network. In order to initially set up the SE-1200 MU, you may need the assistance of your local I.T. specialist to help with the network settings. To help guide you, we have included a simplified network set up example below, further advice may be available through your dealer locally or your Datavideo regional office.

To create this simple dedicated SE-1200 MU IP network you will need:

- An IP router which can assign/give IP addresses.
- Two RJ-45 patch leads.
- Windows 7/8/10 laptop or PC.
- The IP router Administrator login and password.
- The Datavideo SE-1200 MU controller software.

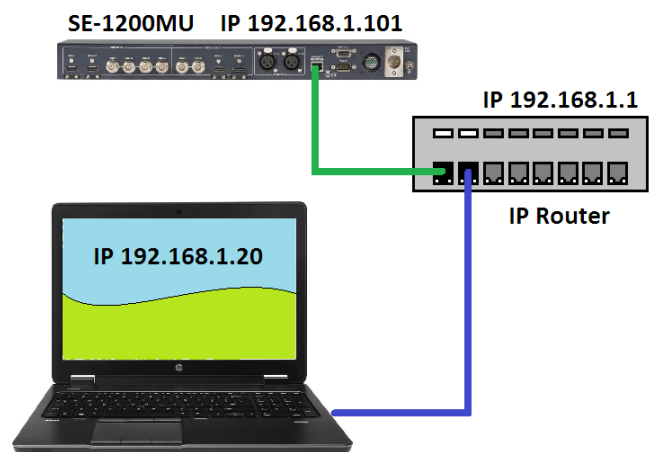

Instructions

1. First connect the router to the SE-1200 MU and the Windows computer using two RJ-45 patch leads.
2. Turn on the Windows computer and set it to **DHCP setup** within the **Windows Network and Sharing Centre**.
3. Now click the Windows start button and run the CMD prompt window.
4. At the command line > : _ type **IPCONFIG** and press enter.
5. The **DEFAULT GATEWAY** number displayed should be the router's current IP address.
6. Enter the **DEFAULT GATEWAY IP address** into the address bar of the computer's web browser.
7. The web browser should display the login window for the router. Enter the router's login and/or password.
The login details may be written on a sticker on the router itself or noted in the manual for the router.
8. Once logged into the router we need to change the router to supply IP addresses in the **192.168.100.xxx** range. Use the router's **LAN Setup** or **Configure LAN** option to set the router's IP address as **192.168.100.1** and click **save / apply**.
9. Now reboot the router and power ON the SE-1200 MU.
10. Log into the router again using the web browser and the router's new IP address **192.168.100.1**
11. Use the router's **LAN Setup** or **Configure LAN** option again, within this option there should be another option called **Address Reservation** or **Client List**.
12. The two devices connected to the router should be listed here, the computer and the SE-1200 MU.
13. The computer, because it is set for DHCP, will already have an IP address automatically assigned to it in this list.
14. The SE-1200 MU may only show its MAC address (**1E:ED:19:27:1A:B3**). Copy and Paste the SE-1200 MU's MAC address into the MAC address reservation box. Now enter the following IP address **192.168.100.101** into the reservation box next to the SE-1200 MU's MAC address.
15. The router should now give the IP address **192.168.100.101** to the SE-1200 MU when it is connected to the router.
16. Click **save / apply** then reboot the router again.
17. Close the web browser and CMD windows.
18. Now install the supplied SE-1200 MU control software to the computer.

3.2.2 How to control the SE-1200 MU from another building or city


Once you are familiar with the SE-1200 MU you may want to control the switcher from another building or even a different city. This requires certain internet and network access that may not already be present at both sites.

Note: It is best to discuss your planned SE-1200 MU set up beforehand with your local I.T. or network support manager as this process will involve 'opening' or 'forwarding' TCP/IP ports.

To create this dedicated SE-1200 MU IP set up you will need:

- **Two sites with internet access. We will call these site A and site B.**
- **Site A will have the same SE-1200 MU set up as [Section 3.1](#) but with no local computer connected.**
- **Site B will have a Windows 7/8/10 computer connected to the internet with VLC Player and the Controller software.**
- **Port 5000 will allow streaming of the SE-1200 MU multi view from site A to VLC Player at site B.**

- Incoming commands on Ports 5003 and 5004 at Site A will be port forwarded to the internal private IP address of Datavideo SE-1200 MU at site A to allow control from site B.
- The Public IP address for site A needs to be discovered, this will be used as the Target IP address for both VLC player and the SE-1200 MU Controller software at site B.

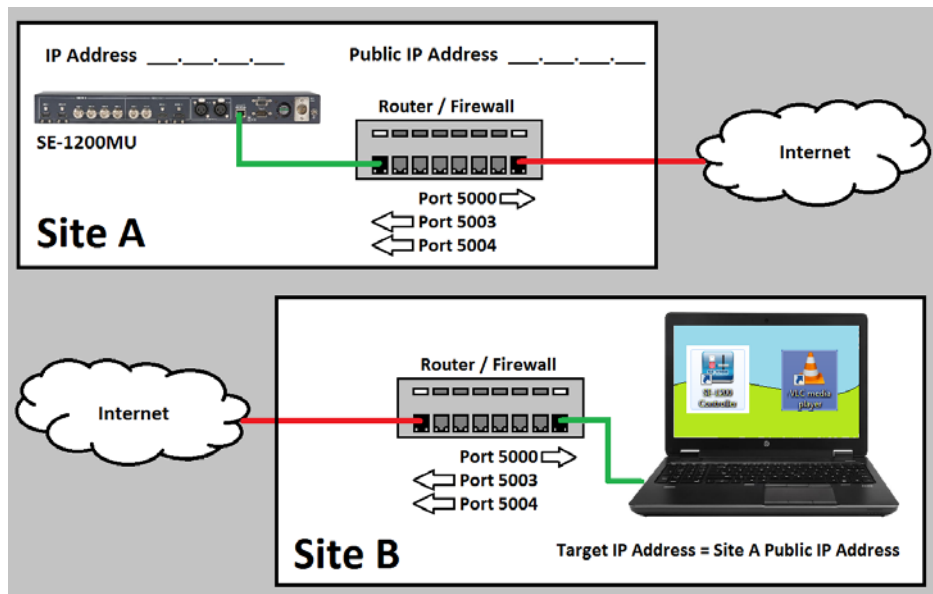

3.2.3 Setting the Target IP Address with the Controller Software

Click Setup in the **MENU SELECT** panel and the current IP Network settings are shown alongside the software version.



If the network settings are wrong then you may not be able to control the SE-1200 MU. Always keep a note of the last IP settings used and change these settings carefully to avoid problems.

Target IP address – This IP address is the location on the local network, or the internet, where the software can talk to the SE-1200 MU. By clicking on **Target IP address** you can enter a new address, once entered click **Save Setup**. The next time the software controller is opened, it will try to contact the switcher on this new Target IP address.

Network – This option in the yellow menu column allows you to change the network options on the SE-1200 MU. When delivered from the factory **the default static IP settings should be:**

Set up: Static (a manually set IP address that does not change even after power cycling the SE-1200 MU unit)

IP address: 192.168.100.101


Subnet Mask: 255.255.255.0

Gateway: 192.168.100.1

DHCP set up - If the IP set up method is changed to DHCP then each time the SE-1200 MU is started, it may be given a different IP address by the network. Only use this method if you know how to find the SE-1200 MU on the internal IP network. A device on the network (usually a router or server) will automatically give a spare or fixed IP address to the SE-1200 MU. The other settings such as IP address, Subnet Mask and Gateway may appear blank within the controller software as these would be automatically set by network router/DHCP server.

Chapter 4 SE-1200 MU Video Setup

4.1 SE-1200 MU Multi View Output

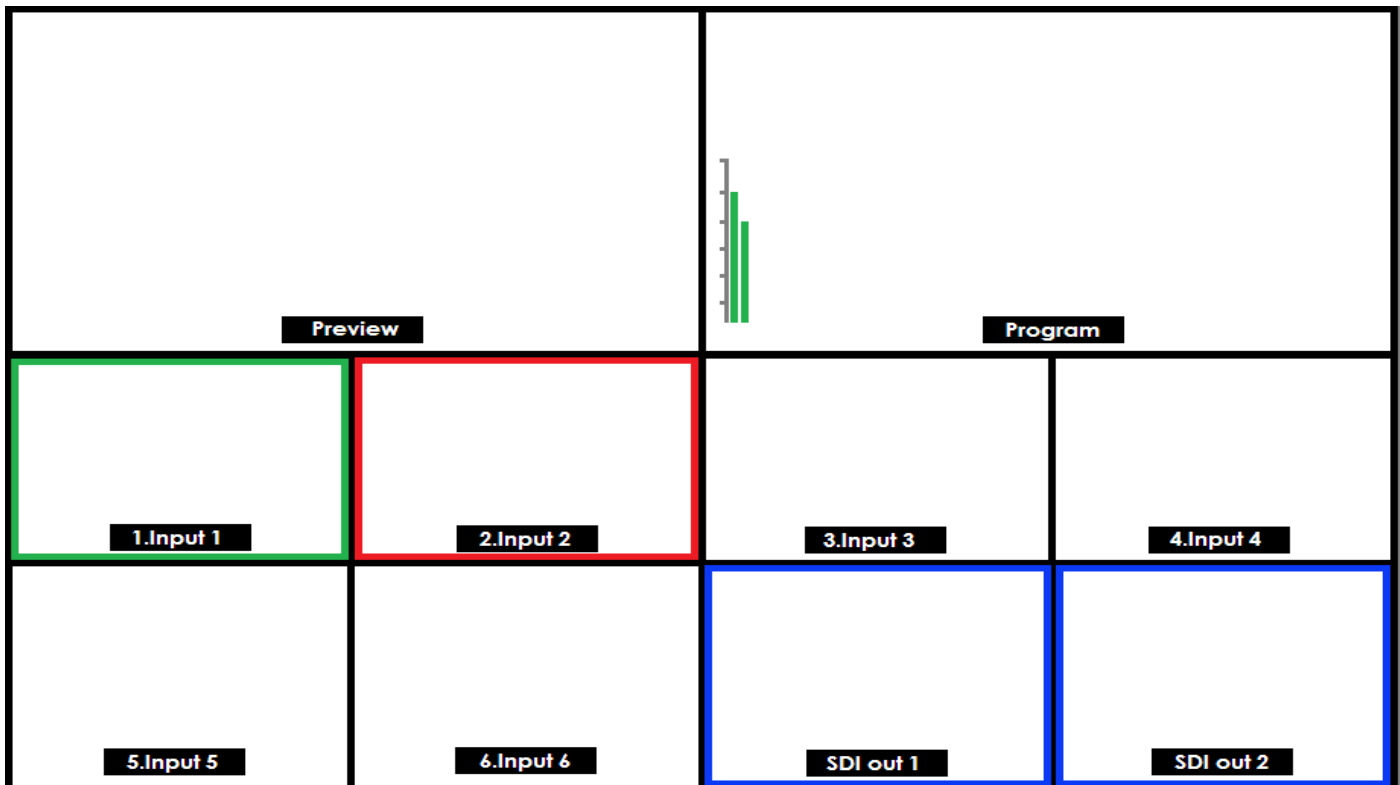

The SE-1200 MU multi view output can be supplied locally, from either the HDMI1 or SDI outputs 1 and 2 on the units rear panel, see [section 2.2](#) (Chapter 2). The multi view can also be streamed over a LAN/internet connection, see [section 3.2.2](#) (Chapter 3).

The default multi view output, when new, is from HDMI output 1. This HDMI output operates at 1080P, 720P or **1080i** depending on the video standard chosen, see [section 4.3](#) (Chapter 4).

The Multi view shows monitoring images for **Preview** (PVW), **Program** (PGM), **Inputs 1~6**, as well as **SDI outputs 1 and 2**.


The SE-1200 MU can also show **audio level bars** overlaid on the Program image within the multi view. This confirms if analogue XLR audio input is being received and embedded to the selected Program output(s).

A Red tally indication box is shown around the selected Program source(s). This video image is also seen at the switchers selected Program output(s). **A Green tally indication box** is shown around the selected Preview source. This will be the image source to be mixed to, wiped in, or cut to next depending on the user's preference.

Images **SDI out 1** and **SDI out 2** confirm what is being sent from those SDI outputs. These outputs can be configured differently by the user, see [section 5.2.1](#) (Chapter 5).

4.2 Setting the Video Outputs

These rear panel video outputs are initially set as follows when shipped from the factory.

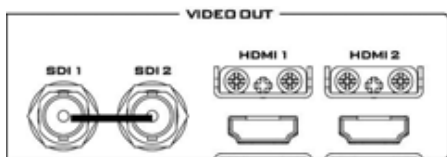

SDI 1 Factory default – Program out

SDI 2 Factory default – Program out

HDMI 1 Factory default – Multi view output

HDMI 2 Factory default – Multi view output

Each of the outputs can be reconfigured to one of the settings below by using the menu option **Outputs**

- 1: Multiview
- 2: PGM Out
- 3: PVW Out
- 4: PGM DSK1
- 5: PVW DSK1
- 6: Clean PGM
- 7: Clean PVW
- 8: Input 1
- 9: Input 2
- 10: Input 3
- 11: Input 4
- 12: Input 5
- 13: Input 6




Note: Ensure at least one output is left set as Multi View so the Main Menu can still be accessed.

4.3 Setting the Video Standard

The SE-1200 MU video standard can be changed by using the menu path **SETUP > STANDARD**.

The SE-1200 MU is initially set up for the 1920 x 1080 i50 or i60 video standard when shipped from the factory depending on your country's video standard.

As with most HD video switchers, the SE-1200 MU will expect all video inputs to be operating at the same video standard as the switcher itself. If a connected device is supplying a different video format/standard then the switcher may not display the video for that input. Change the source equipment settings to match the switcher's video standard or vice versa.

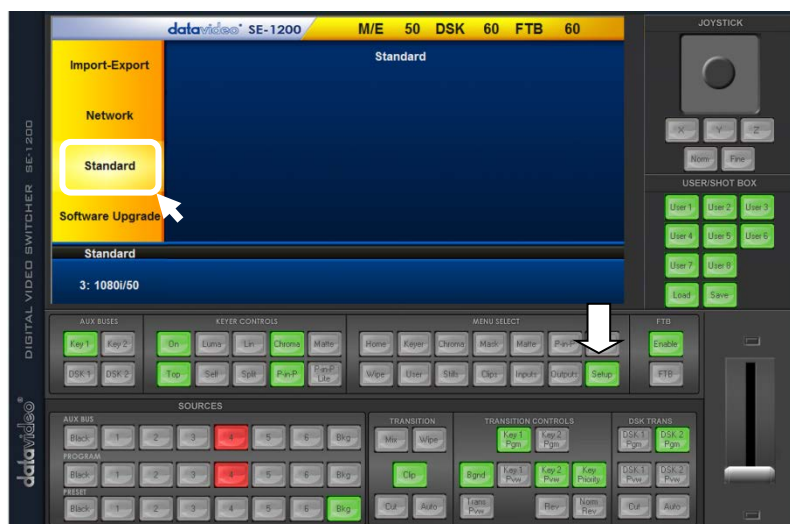


The SE-1200 MU can support the following HD video standards: 1080i/50, 1080i/59.94, 1080i/60 and 720p/50, 720p/59.94, 720p/60.

4.4 SE-1200 MU Video Layers

The SE-1200 MU is a High Definition Digital Video Switcher and as well as mixing video sources and embedding analogue audio, it has additional functions such as Picture in Picture (PiP), Chroma Key, Luma Key and Down Stream Key (DSK).

Before attempting to use the SE-1200 MU's PiP, Chroma, Luma and Down Stream Keying functions, it may help to first understand the order of the video layers at the SE-1200 MU Program outputs.

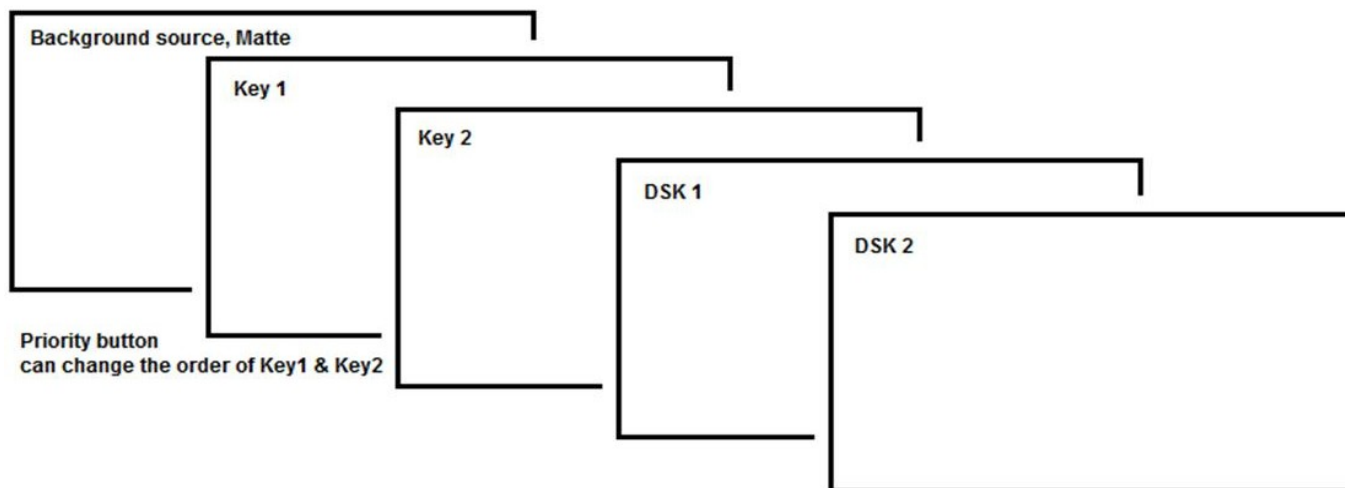

The **background video layer** is used for transitioning between Preview and Program sources. This layer also includes any selected wipe transitions. This layer can be hidden or partly hidden by the PiP, Keyer or DSK video layers in front of it.

The **Key 1** and **Key 2** layers can be used for **PiP**, **Chroma**, **Linear** or **Luma Key** applications. The KEY video signal (foreground) is shown in this layer and the FILL video signal is displayed in the background video layer. If set up incorrectly, these key layers can stop the video behind being displayed.

The **Picture in Picture (PiP)** feature of the **Key 1** & **Key 2** layers can be used for displaying a smaller secondary image in front of the background video layer. This smaller PiP image can be resized, cropped, repositioned and even keyed by the user to avoid an important part of the background video layer being covered by it.



The SE-1200 MU has four dedicated keyers, **Key1**, **Key2**, **DSK1** and **DSK2**. All four keyers can be active simultaneously. **Key 1** and **Key2** can be set as Upstream or Downstream keyers.

The Layer priority, or order, of **Key 1** and **Key 2** can also be changed by the user using the **Priority button** in the **Transitions Control** area. **DSK 1** & **DSK 2** can only be used as Downstream keyers. See the diagram above for an example of keyer layering with the SE-1200 MU.

The **Down Stream Key layers (DSK 1 & DSK 2)** are placed on top of all the previous layers. These layers are typically used with Character Generator inputs for displaying titles, graphics, lower thirds, clocks and logos. Datavideo offer several Character Generator products (additional purchase) such as TC-200, CG-250, CG-350 and CG-500. If set up incorrectly these DSK layers can also stop the video layers behind them being displayed properly.


Note: Where possible, prepare and position the upper video layers in advance of the live production starting to avoid appearing on the program output incorrectly. These can be saved as user setups in the shot box area of the software control interface for quick and easy recall.

Copyright: Most broadcast networks have guidelines and advice on the use of video, images, music, logos and on screen text so it is best to check beforehand when planning a production. Do not use copyright protected content until you have the relevant permissions. Information on royalty free video, images and music is widely available. Please speak with your local dealer or seek professional advice.

Chapter 5 Video Connection Setup

5.1 Inputs – Setup

5.1.1 Crosspoint

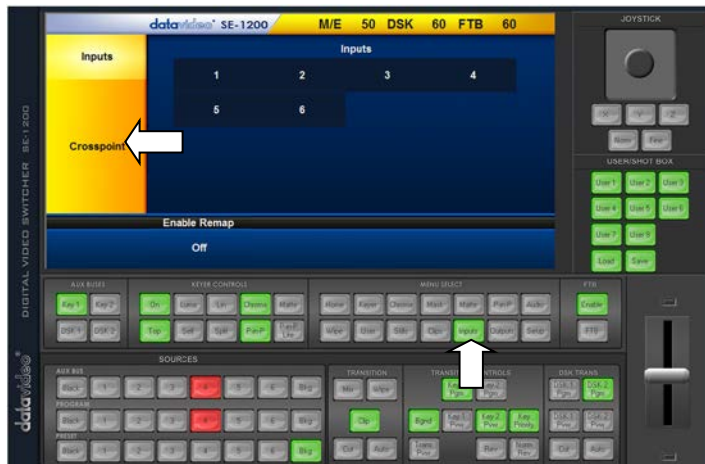

The physical input sources can be swapped around within the SE-1200 MU by using the **cross point** section of the **Inputs** menu.



Click a crosspoint (lower row) then click again on the required input (upper row) to link them. The example above shows inputs 2 and 3 swapped.

5.1.2 Source Labels

The multi view source labels can be changed. First **click Inputs** menu then **choose the input** you wish to **name**. Then use the pop up keyboard to edit the selected input name. Press **Enter** to store the change, the new Multi view label should now be displayed.



Note: The label will accept up to 16 characters but only the first 10 are displayed.

A **Freeze option** is provided for use when you wish to grab and save a still image from a selected input, see [Stills – Grab and Save section](#).

A **ProcAmp option** is provided for adjustment of an input's white, black or chroma level. It may be easier or better to adjust an incoming image at the source equipment, please seek advice before changing these settings.

5.2 Setting up the SE-1200 MU Video Stream Based Multi View

The SE-1200 MU is able to send, or stream, its multi view image over the same IP network connection used for controlling the switcher. This allows the user to see the multi view on the same computer that is remotely controlling the switcher.

This streamed multi view can then be viewed using a third party software application called VLC Media Player, version 2.1.5 or later is recommended. To download the latest free version of VLC Media Player please visit <http://www.videolan.org/>



5.2.1 Preparing the SE-1200 MU Stream Output

First click the **OUTPUTS** menu button in the SE-1200 MU software control interface. Then select the **STREAMER** option in the yellow menu panel on the left hand side. The user can now select the size of the multi view being streamed. Options are **Full**, **Half**, **Quarter** and **Sixth**.



By choosing HALF instead of FULL you are using less bandwidth to support the multi view stream being sent across the IP network.

Reducing the size of the multi view stream may also help overcome delay/latency issues over the network. Click **Stream Start** then **open VLC Media Player** on the computer. Click **Media** on the VLC menu bar and navigate to the **Open Network streaming** settings.

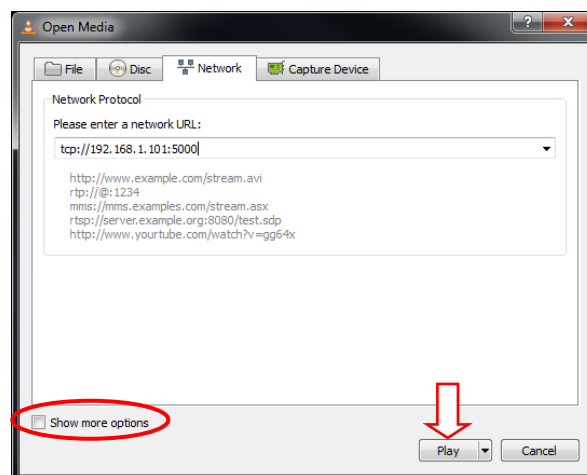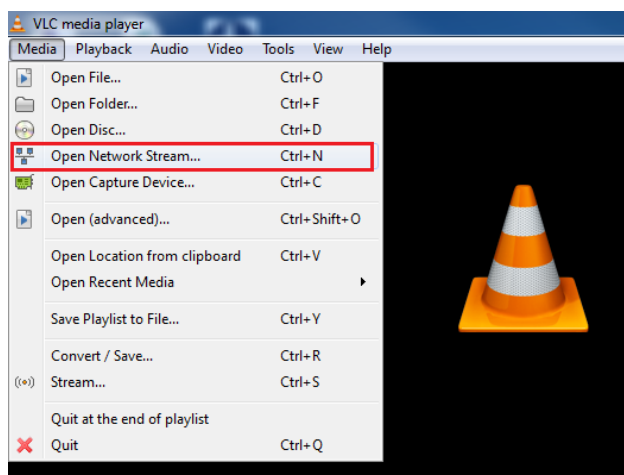

Enter the stream URL as **tcp://192.168.100.101:5000** and click **Play**. The Multi view stream will now be displayed in the VLC window.


Note: The streamed SE-1200 MU multi view is video only, no audio is sent over this IP connection.

5.2.2 VLC Media Player - Stream Caching

The stream caching feature within **VLC media player** is there to allow enough time for the data being received to be converted to a stable or smooth video feed.

The default caching value is a 1000ms (milliseconds) or 1 second. This delay behind the live performance may be unacceptable but this value can be changed and the delay reduced.

If sending the stream over an office network or LAN, this caching value can be reduced to around 50ms. If the video in the multi view is unstable then slowly increase this caching value in 50 or 100ms steps until you have a smooth video feed.

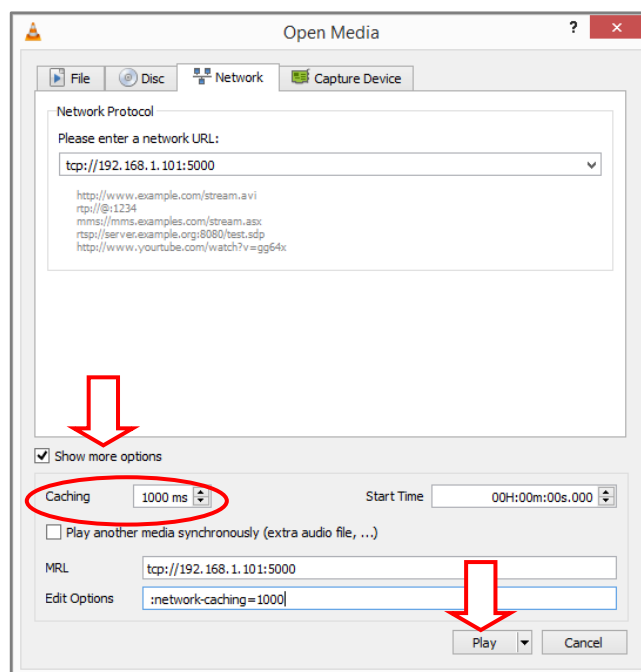


Note: The VLC caching value and multi view stream size are also related to latency. Reducing the SE-1200 MU streamer size may also help reduce the multi view delay or latency across the IP network. The quality of the multi view image will also be affected by these settings.

The VLC media player window (with SE-1200 MU multi view) can be displayed on a second computer monitor using the Windows extended desktop feature. The main computer screen can then be used for the SE-1200 MU control panel software.



PC monitor 1 – SE-1200 MU Control software

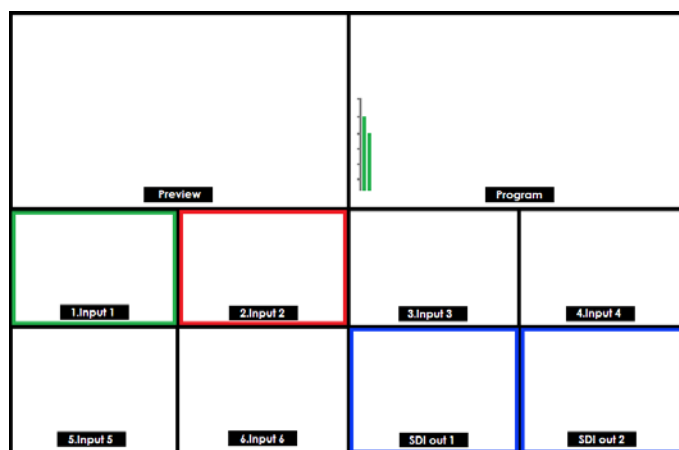

PC monitor 2 – Streamed Multi view on VLC

5.2.3 Port Forwarding for the SE-1200 MU

So that the SE-1200 MU Multi view stream can be seen and the unit can be controlled over the internet (or beyond the default gateway), certain 'ports' should be opened on your network firewall or gateway device.


TCP port 5000 is used for the VLC based multi view stream. Ports 5003 and 5004 are used for controlling the switcher. These three ports should be forwarded to the SE-1200 MU internal private IP address.

Your local network administrator or I.T. support should be able to help you with this. For further information please see Chapter 3 Network Setup.

Chapter 6 PC Control Panel

6.1 Sources Panel

This panel on the SE-1200 MU control software consists of three identical rows of buttons and is used to assign sources or select images for Program or Preset outputs. The buttons are labelled from left to right as **Black**, sources **1 to 6**, and **Bkg**.

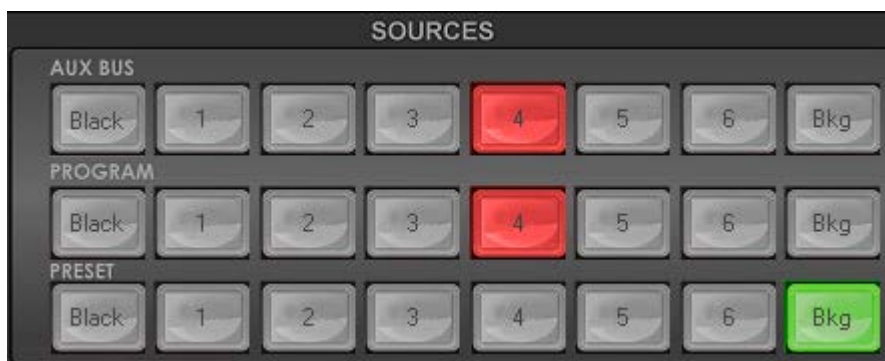

6.1.1 AUX BUS

This row of buttons is typically used to assign sources for the setup of the PIP, Linear, Chroma and Luma Keyer functions. If a keyer or PIP function is active/ON then the selected AUX button will be backlit red.

6.1.2 PROGRAM

This row of buttons is typically used to select sources or images for the SE-1200 MU main Program output. The currently selected source being sent to the Program output will be **backlit Red**. Simple cuts between sources can be performed on this row by clicking on the source number required for the next shot.


6.1.3 PRESET

This row of buttons is typically used to select sources or images for the SE-1200 MU Preview output. The currently selected source will be **backlit Green**. The selected button on the Preset row will change from Green to Yellow during Preview-Program transition using T-Bar.

6.2 TRANSITION CONTROLS Panel

6.2.1 Previewing a Selected Transition/Wipe

It is possible to see, or test the effect, of a selected transition in the Preview output before applying it to the Program output. In our example below we want to test a selected wipe. Input 1 is being sent to Program and Input 2 in Preview will be shown next.

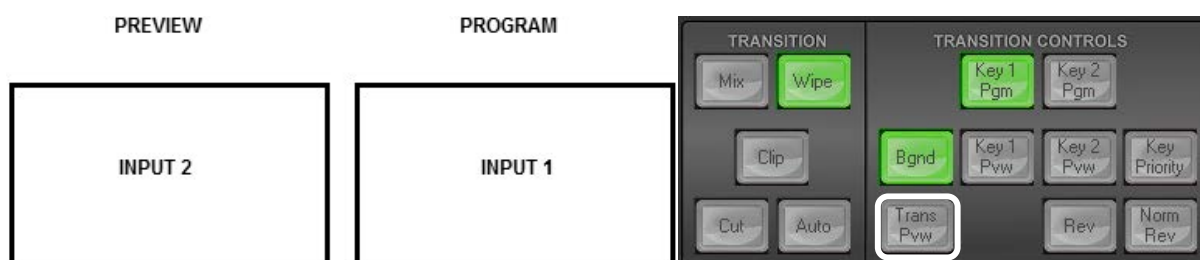


Using the **TRANSITION CONTROLS** panel click to select the **Trans Pvw button** (back lit green is ON). Next select and apply the transition or wipe that you would like to test on the Preview monitor.

You may also notice that the Preview Monitor changes to show the currently selected Program source (Input 1). Do not worry, the selected Preset source (Input 2) has not changed. Click the **Auto button** (TRANSITION panel) or move the **T-Bar** manually to preview the selected transition. You will now see the previewed transition between input 1 and input 2 using the selected wipe. Importantly this is only shown on the Multi view and Preview outputs but has not been shown on the Program output.

NOTE: Remember to disable the **Trans Pvw button** before attempting to use the selected transition on the live Program output.

6.2.2 Rev and Nrm (NORM) / Rv (REV) Buttons

When the **Rev** and **Nrm / Rv** buttons are both **OFF**, the selected WIPE transition will operate in its default direction only.

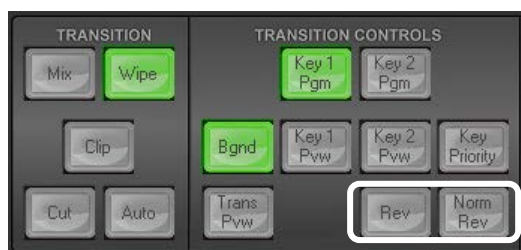


When the **Nrm / Rv** button is **ON**, the selected WIPE transition will automatically switch directions as each transition is completed. The **Rev** button will switch on and off automatically to indicate the direction of the next transition.

When the **Rev** button is **ON** then the selected transition will operate in the reverse direction only.

6.2.3 Key 1 & Key 2 PRIORITY Key Function

The PRIORITY button toggles the layer order or priority of **Key 1 & Key 2**.

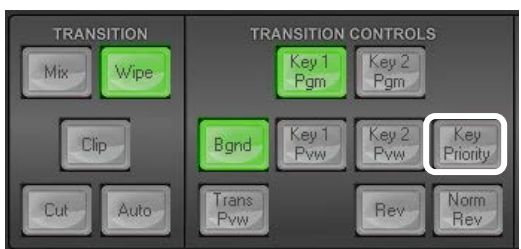

When Key 1 and Key 2 are both active in Preview (or Program), they may overlap each other on the screen. Using the Priority Button you can change the order of these keyers. The button acts in a toggle on/off way, i.e. Key1 over Key2 or Key2 over Key1.

NOTE: It is best to check and change the Priority of Key 1 and Key 2 when they are initially active on the Preview monitor/output.

6.3 Transition Effects

The SE-1200 MU allows the user options for cutting or transitioning between the selected preset and program video sources.

6.3.1 CUTTING between Sources

Cutting between sources is a clean switch from the current Program video to the next source image. This can be achieved in two ways:

1. Each button press on the **Program row** will cause an instant clean cut to the selected source.
(Active selection is backlit red)



2. Selecting the next source on the lower **Preset** row of buttons and then pressing the **Cut** button.

6.3.2 Mixing between Sources



In order to mix between two video sources, first ensure the Background Transition or **Bgnd** button is ON / backlit green in the **transition controls** area of the user interface.



Pressing **Mix** will select a mix transition to use when moving from the current video source on the Program row to the selected next source on the Preset row.


To change the rate of transition for the **Auto** button, press the **Home** menu button and change the **M/E Trans** duration value in frames.

If this **M/E Trans** value is small then the transition will happen quickly. If this value is larger, then the transition will take longer to complete.



The timing of a **Mix** transition can also be manually decided when moving the **T-Bar** or completed over a set duration when using the **AUTO** button.

6.3.3 Wiping between Sources

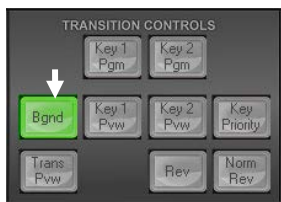


In order to wipe between two video sources first ensure the Background Transition or **Bgnd** button is ON / backlit green in the **transition controls** area of the user interface.



Clicking **Wipe** will select the current wipe transition in use when moving from the current video source on the Program row to the selected next source on the Preset row.

To change the rate of transition for the **Auto** button press the **Home** menu button and change the **M/E Trans** duration value in frames.

If this **M/E Trans** value is small then the transition will happen quickly. If this value is larger, then the transition will take longer to complete.

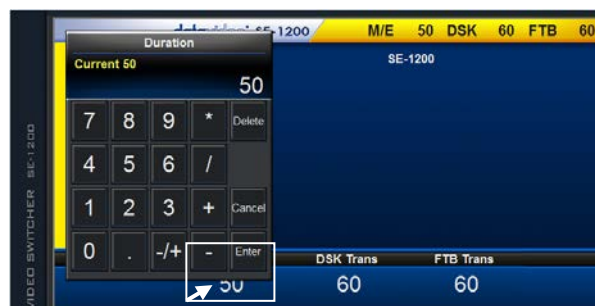

The timing of a **Wipe** transition can also be manually decided when moving the **T-Bar** or completed over a set duration when using the **AUTO** button.

6.3.3.1 Choosing a different wipe pattern

If the current wipe pattern needs to be changed first select **Wipe** from the **MENU SELECT** area and then click on the required wipe pattern or enter its wipe number.



Each wipe pattern consists of blue and white colours. The white represents the current Program image (A) and the blue represents the WIPE-IN image (B). There are a total of 32 WIPE presets offered by the SE-1200 MU as shown below.



6.3.3.2 Wipe border options

Options in the yellow menu column

Wipe allows a wipe pattern to be selected by clicking on the required wipe pattern in the selection pane.

Wipe Border allows the user to choose the colour of the border from a palette window.

Wipe Shade allows the user to choose the shadow colour of the border from a palette or assign a video source.

Wipe Position allows the user to adjust the centre position of some wipes (e.g Circle & Elipse).

Options in the lower blue row

Wipe allows a wipe pattern to be selected by entering the required wipe number.

Soft allows the user to blend the leading and trailing limits of the border to remove the hard edge. A low value results in a solid edge border and a high value gives a soft diffused border.

Wipe Border switches the border effect on or off.

Width changes the size of the border effect. A low value results in a thin border and a high value gives a wide border.

Level sets how far the wipe has travelled or where it is displayed in the video area.

6.3.4 Clip between Sources (Stinger Transition)




In order to enable clip transition between two video sources first ensure the Background Transition or **Bgnd** button is ON / backlit green in the **transition controls** area of the user interface.

Clicking on the **Clips** button on the **MENU SELECT** panel will open a menu screen (shown below) that allows the user to select the current clip transition to use when moving from the current video source on the Program row to the selected next source on the Preset row.



To load the clip, simply click on the **Clip** option and then select **Load Clip**. The clip is always loaded to input 6 so anything loaded to input 6 before will be replaced by the clip.

A Delete Clip function is available in the clip menu.

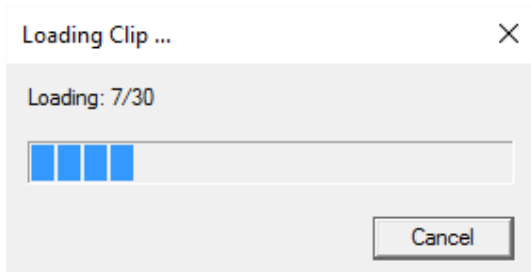

Progress Dialog on Clip Load gives the user an idea where the load is currently at. It can be cancelled at any stage even before the load is complete.



Clicking **Clip** will select the current wipe transition in use when moving from the current video source on the Program row to the selected next source on the Preset row.

To change the rate of transition for the **Auto** button press the **Home** menu button and change the **M/E Trans** duration value in frames.

If this **M/E Trans** value is small then the transition will happen quickly. If this value is larger, then the transition will take longer to complete.



The timing of a **Clip** transition can also be manually decided when moving the **T-Bar** or completed over a set duration when using the **AUTO** button.

6.4 FTB Key Function



6.4.1 Enable

Enable the Fade to Black function.

6.4.2 FTB

Fade to Black, this button fades the current video program source to black. When clicked again, it acts in reverse from complete black to the currently selected program video source.

6.5 DSK TRANS Panel



This panel is used to turn only the DownStream Keyers on or off. This can be done to show the chosen keyer in the Preview video output for configuration before live on-air use.



The labelled DSK 1 (Pgm/Pvw) or DSK 2 (Pgm/Pvw) buttons can be off or on. When a selected DSK button is green it is on and the active DSK result is seen in the multi view Preview video image.

Each DSK button has an LED above it. This LED can also be off or on (Green). When the selected DSK LED is on the active DSK settings are seen in the multi view Program video image and at the Program outputs.

With the selected DSK already active in the Preview output press either the Cut or Auto button. Using the Cut button will apply the current DSK settings to the live Program output immediately. Using the Auto button will bring in the current DSK with a gentle mix or fade type transition. If the DSK LED is on the program or preview outputs, clicking the AUTO button again will cancel the DSK with a fade out or mix transition.

To understand the relationship between the DSK button and the LED above, try the example set up with DSK 1 in [section 7.1](#), the subsequent chapter.

Chapter 7 Applications

7.1 Luma Key - Quick DSK 1 Setup

Note: The **DSK 1** and **DSK 2** keys can only be used for **Linear** or **Luma** keying. Chroma keying is not supported on DSK 1 and DSK 2.


In this example, we are supplying the SE-1200 MU with an HD-SDI live video signal to input 2, this is selected on the Program row. We have also assigned a STILL image, with white text on a black background, to input 6. This still image, selected on the Aux Bus row, will be used for Luma keying the static white text over the live video from input 2.



Step 1: Choose the Keyer Bus that you wish to use. In our example, we will click the **DSK 1** button on the **AUX BUSES** panel.



Step 2: Choose the type of Keyer you want to use. In our example, we will click the **Luma** button on the **KEYER CONTROLS** panel.

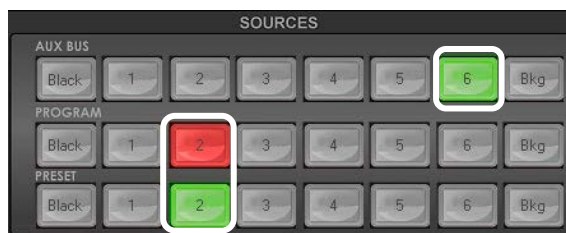

Step 3: Select the foreground video source to be keyed.

In our example, we want to use a **still source** on input 6. Click **input 6** on the **Aux Bus Row** so it is **backlit Green**.

We have also chosen button 2 on the Program and Preview rows as our live background video.



DSK OFF



PVW ACTIVE

Step 4: To see the current keying effect on the Multi view **Preview image only** click on the **DSK 1 PVW** button in the **DSK TRANS** panel so it becomes backlit green.



Step 5: To adjust the Luma key settings. Click the **Keyer button** in the **MENU SELECT** panel and the menu screen will appear as shown on the left here.



The options in the blue bar along the bottom of the Screen will allow you to calibrate for a white or black key using the **Lift, Gain, Opacity** and **Invert Functions**. The [Keyer Control section \(7.1.1\)](#) will explain the effects of **Lift, Gain, Opacity** and **Invert**.



AUTO TRANS



ACTIVE ON PGM

Step 6: Once you are happy with the settings of the key, you can take it to the program output with a fade transition. To do this, click the **Auto button** in the **DSK TRANS** panel.

7.1.1 Keyer Control



Lift: Adjusts the **dark/black areas** in the key image.

Gain: Adjusts the **light/white areas** in the key image.

Opacity: Adjusts how transparent the overall foreground key image is.

Invert: **Reverses the effect of the current Luma Key settings.** If you can see the background video through the dark areas of the key image, then enabling Invert would make the background video seen through only the light/white areas instead.

7.1.2 Keyer Matte



1. The **Colour Palette** allows selection of a colour for the **Keyer Matte**.
2. Click on the Colour Palette and the crosshair will move to display the currently selected colour where the mouse pointer was located. The selected colour RGB values will also be shown to the right.
3. The **Luma value** determines how bright or dark the selected colour or hue is. The **Luma** can be adjusted by clicking on the **Luma value** and using the **pop up keypad** to enter the new value.
4. The **Sat** or **Saturation value** moves the crosshair from the center of the colour palette to the outer edge. The **Sat** value can be adjusted by clicking on the **Sat value** and using the **pop up keypad**. If the **Hue** angle is set to 180 degrees then the **Sat** value determines how much Cyan is in the matte.
5. The **Hue parameter** moves the crosshair around the colour palette in the clockwise or anti-clockwise direction. The Hue value or angle can be adjusted by clicking on the **Hue value** and using the **pop up keypad**.

Certain colour hues can be found at certain angles on the colour palette. For example, Red is 0 degrees (12 o'clock position), Green is approximately 120 degrees (4 o'clock position) and Blue is approximately 240 degrees (8 o'clock position).

For Luma key purposes using zero values for Luma, Sat and Hue will allow a black keyer matte to be chosen as above.

A white keyer matte can be created from Luma 100%, Sat zero and Hue zero.

7.2 Linear key - Quick DSK 2 Setup

Note: The **DSK 1** and **DSK 2** keyers can only be used for **Linear** or **Luma** keying. Chroma keying is not supported on DSK 1 and DSK 2.

In this downstream keying example, we are supplying the SE-1200 MU with a live video signal on input 2, this is selected on the Program and Preview rows. We have also connected a CG-350 Character Generator (separate purchase) which is supplying separate KEY and FILL signals to inputs 5 and 6. These two CG-350 inputs will be used for Linear keying the CG- text and graphics over the live video from input 2.




Step 1: Choose the DSK Keyer channel that you wish to use. In our example, we clicked the **DSK 2 button** on the **AUX BUSES** panel.



Step 2: We then choose the **Lin** or **Linear and Split buttons** from the **KEYER CONTROLS** panel to select a linear key.

Note: If the DSK input only has one source (FILL) for keying, press **Self** key button. **In our example** the DSK input has two sources for **Fill** and **Key**, so we select the **Split button** instead.

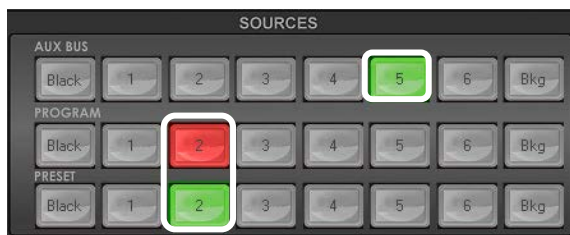

Step 3: The **Split button** is **backlit green**, select the **CG key source** on the **AUX BUS Row** (input 5).

Step 4: Click **Split button** again, now **backlit yellow**, this time select the **CG Fill source** on **AUX BUS Row** (input 6).



DSK OFF



PVW ACTIVE

Step 5: To see the current keying effect on the Multi view **Preview image only** click on the **DSK 2 PVW button** in the **DSK TRANS** panel so it becomes backlit green.



Step 6: To adjust the Luma key settings. Click the **Keyer button** in the **MENU SELECT** panel and the menu screen will appear as shown on the left here.



The options in the blue bar along the bottom of the Screen will allow you to calibrate for a white or black key using the **Lift**, **Gain**, **Opacity** and **Invert Functions**. The [Keyer Control section \(7.1.1\)](#) will explain the effects of **Lift**, **Gain**, **Opacity** and **Invert**.



AUTO TRANS



ACTIVE ON PGM

Step 7: Once you are happy with the settings of the key you can take it to the program output with a fade transition. To do this click the **Auto button** in the **DSK TRANS** panel.

7.3 Picture in Picture (PiP) Function


The SE-1200 MU has an optional PiP function which can be sized, rotated, positioned and cropped. The PiP window can also have a user-defined coloured border too. To configure a PiP window please follow the steps below.




Step 1: Choose the desired Keyer channel from **Key 1** or **Key 2** on the **Aux Bus** panel. For our example we will use the **Key 2** button for our PiP image.



Step 2: Select the Key 2 effect by clicking the **P-in-P** button (backlit green) in the **Keyer Controls** panel.

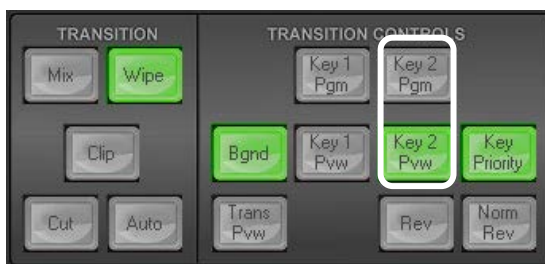

Step 3: Turn the Key 2 PIP effect on in the Multi view **Preview output** by clicking the **Key 2 PVW** button (backlit green) in the **Transition Controls** panel.

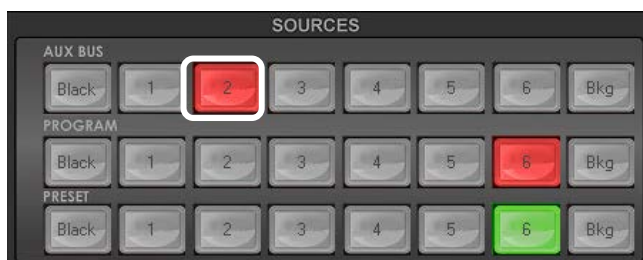

Step 4: Select the PiP image source on the **AUX BUS** row of the **SOURCES** panel. This will be shown over the chosen Preview image before being taken to Program/air with the next mix or wipe transition.



Step 5: Click the **P-in-P button** (backlit green) on the **MENU SELECT** panel to enter the Picture in Picture functions.



Step 6: PiP options displayed in the yellow menu area: **Position**, **Border** and **Crop**. The sections below will describe how Position, Border and Crop can be adjusted.

7.3.1 PIP Position

Values are shown along the bottom of the screen.

The **X and Y values** change the location of the PiP image.


- The **X value** moves the image left and right.
- The **Y value** moves the image up and down.
- The **Z value** adjusts the image size. Where the value 1.0 makes the PiP occupy the whole screen (100%), and 0.5 reduces the PiP size to half screen (50%).



- **Click and hold the joystick circle** then drag the joystick circle in the desired direction.
- Left-mouse button Joystick dragging allows the PiP to be moved in the X & Y directions.
- Right-mouse button Joystick dragging to the left and right resizes the PIP (Z value).
- Click the **FINE** button to enable/disable fine adjustment in smaller/slower steps.
- Click the **NORM** button to return the selected PIP image to the factory default position and size values as shown above. The **Norm** button default for Z value (size) is 0.40 or 40%.

7.3.2 PIP Border

The PIP Border options and values are currently shown along the bottom of the display below.

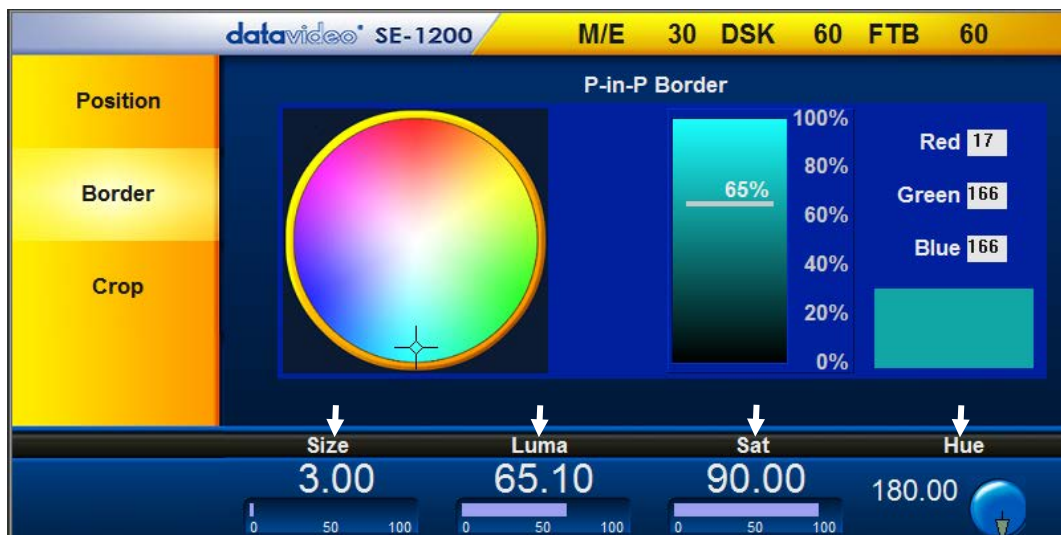

Luma, Sat, Hue and Size values define the PIP border.

1. **The Luma value** determines how bright or dark the selected colour or hue is. The **Luma** value can be adjusted by the **Luma Function keypad**.
2. **The Sat or Saturation value** moves the crosshair from the center of the colour palette to the outer edge. The **Sat** value can be adjusted using the **Sat Function keypad**.
3. **The Hue parameter** moves the crosshair around the colour palette in the clockwise or anti-clockwise direction. The **Hue** value/angle can be adjusted using the Hue Function dial.
4. **Size** defines the width or thickness of the colour border surrounding the selected PiP. The **Size** value can be adjusted using the **Size Function Keypad**. Increasing the value makes the border thicker but less of the selected PiP image will be seen.

7.3.3 PIP Crop

The PiP Crop values are displayed along the bottom of the screen as shown below.




The **Left, Right, Top** and **Bottom** edge values of the crop can be adjusted individually or together using the **Size value**. Click on a single value to adjust just that edge of the PIP.

Size value evenly crops all edges of the selected PIP at the same time and to the same value.

7.4 Bus MATTE Setup

Sometimes it is useful to be able to switch away from live video to a full screen, colour **Matte** rather than Black. For this reason a **Bkg button** is provided on the SE-1200 MU's **Aux, Program** and **Preset** bus rows.

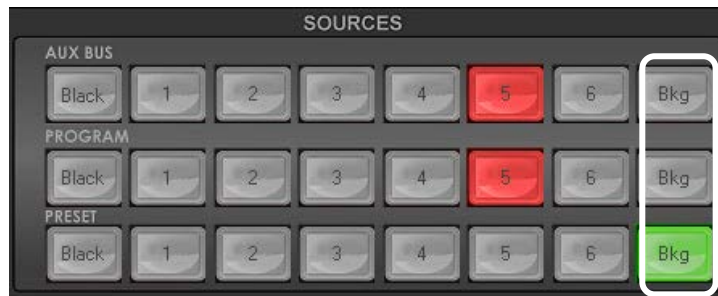

The **Matte** option on the **MENU SELECT** panel allows the user to configure the matte image.

1. Click the **Matte** button on the **MENU SELECT** panel.



2. The **Bus Matte** parameters are shown in a row at the bottom of the screen.



3. The circular **Colour Palette** allows selection of a colour for the **Bus Matte**.
4. Click anywhere on the Colour Palette to move the **crosshair** and display the currently selected Hue or colour. The RGB values for the selected colour are then shown on the right.
5. The **Luma value** determines how light or dark the selected colour or hue is. Click on the **Luma value** and enter a new value. A small percentage value will make the colour dark and a larger value will make the colour brighter.
6. The **Sat** or **Saturation value** moves the crosshair from the center of the colour palette to the outer edge of the circle. The **Sat** value can be finely adjusted by clicking on the **Sat value** and entering a new value. If the **Hue** angle is set to 180 degrees (6 o'clock position) then the **Sat** value determines how much Cyan is in the matte.
7. The **Hue value** moves the crosshair around the colour palette in a clockwise or anti-clockwise

direction. The Hue value/angle can be finely adjusted by clicking the **Hue value** and entering a new value.

Certain colour hues can be found at certain angles on the colour palette. For example, Red is 0 degrees (12 o'clock position), Green is approx. 120 degrees (4 o'clock position) and Blue is approx. 240 degrees (8 o'clock position).


7.5 Clips – Quick Setup

The Clip function allows the user of the SE-1200 MU to add a clip between sources. Before this can be done, the clip (a series of bmp/png files) has to be imported into the SE-1200 MU.

Click **Setup** from the **MENU SELECT** area and select **Import-Export** from the yellow menu options.



To import a clip from the computer into the SE-1200 MU select **Import Clip**.

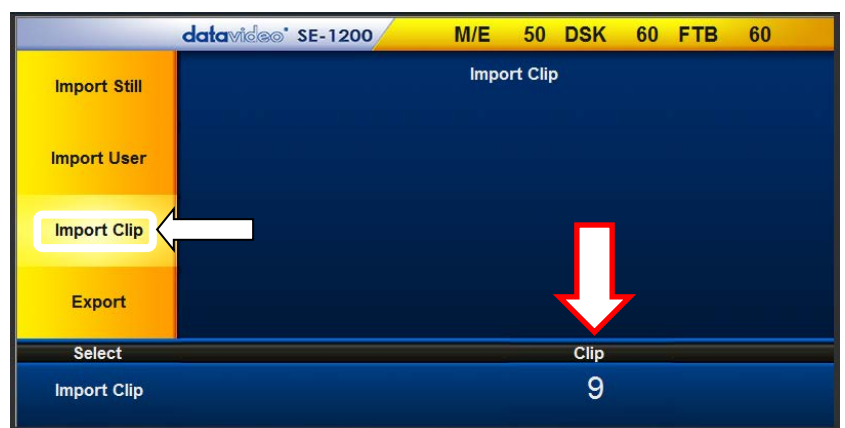


Caution: The PC Control App can now do the conversion from bmp/png/jpg to SE-1200 MU format .pic files. All you need is to give the PC control APP a starting file location and it will give the PC control APP an idea where to start linking all images up into a sequential animation file.

Importing Clips


Select “Import Clip” will open a file browser window. Browse to the directory where your clip files are saved and then select the file at the zeroth location, in our example on the right, the file name is AE-TEST_00000.png.



Click open to start the clip import. If your files are not the SE-1200 MU's .pic format, they will be automatically converted to .pic format by the SE-1200 MU PC Control APP first.

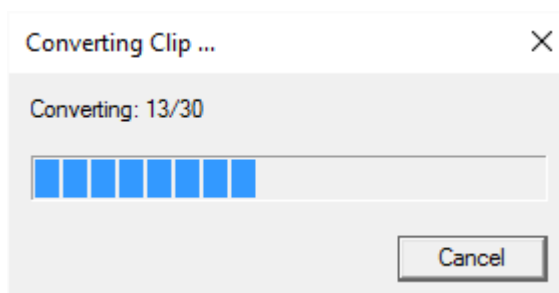

After the conversion, the clip import will then start. After the import is complete, the progress dialog will be automatically closed.

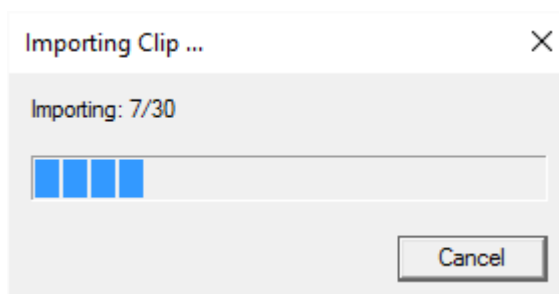

Note: The Clip Conversion and Clip Import have progress dialogs that show progress & number of frames done. These dialogs also have a cancel button which allows the user to cancel the import at any stage. If the import is cancelled, then the partially imported data will be deleted.

Chapter 8 CHROMA Key Functions

8.1 Overview

The Chroma Key feature of the SE-1200 MU is easy to use. Typical Blue and Green screen studios can be quickly incorporated into an SE-1200 MU production.

The following is a quick overview of Chroma Key basics.

The **camera**, **backdrop** and **lighting** all play an important role in producing the optimal Chroma Key result. Although the SE-1200 MU is equipped with excellent keying controls, it is best to start with a good keyable image.



A good foreground image helps produce a good key

Three chip/Three sensor camera

We strongly recommend the use of a three chip or three sensor camera for Chroma Key shooting. If the camera has three chips or sensors then this usually means good colour separation within the camera. The optics on these cameras are usually better too. The extra image clarity and the good colour separation help improve the quality of the subsequent keying with the camera's output.


White Balance the Camera

White Balance is extremely important after setting up a chroma key studio. The camera must be correctly white balanced to minimize the subject picking up any colour cast (green or blue) from the background. Of course the white balance settings will vary according to the type of lighting you are using, but neutral whites and good skin tone colour are the all-important targets.

To set the white balance you will need a white reference card (or a sheet of white paper). Focus the camera on the reference card and light it evenly using the main light. Set the camera's iris / aperture so that the card is correctly exposed. Use the Auto White Balance (AWB) function, or set the white balance manually so that the card appears white. If you are in any doubt about how to white balance your camera, **please refer to your Camera's instruction manual for more details.**

Lighting

Lighting of your chosen green or blue backdrop is extremely important; the more even the lighting on the backdrop the better the finished result. Lighting setups for the foreground subject will vary according to the effect that you want. For chroma keying backdrops, balanced even lighting, with no hotspots or shadow areas is the aim. The easiest way to achieve balanced Chroma key lighting is with a lighting setup that looks similar to this:

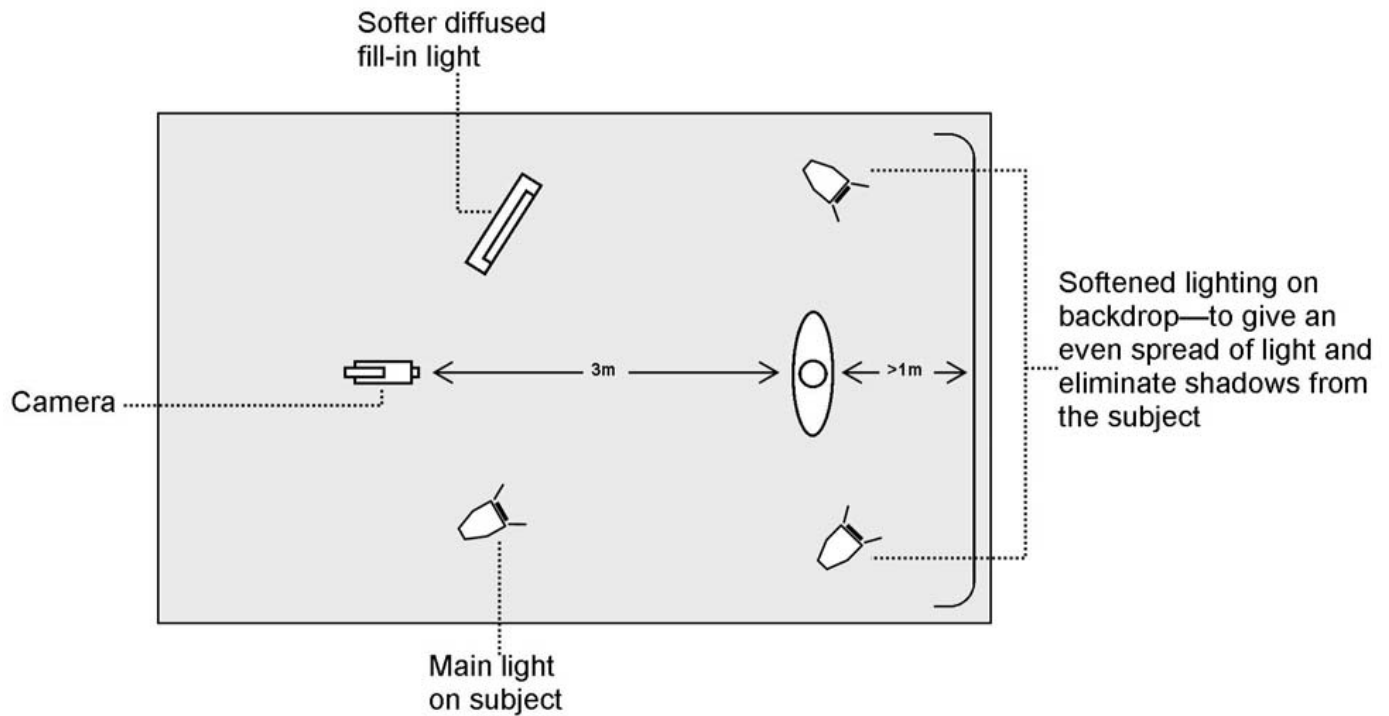

In the diagram, you will see that we recommend a **minimum** of four lights and we keep the subject **more than** 1m away from the backdrop. It is always easier to get more even lighting if the subject is farther away from the backdrop (no shadows). The foreground lighting on the subject will also vary according to the effect that you are looking for.

8.2 Chroma Matte



This matte sets the center of colour range that will be used for keying.

The **Chroma Matte** parameters and the values are shown along the bottom of the display below.

The **Hue** can be changed by clicking on and dragging the crosshair around the colour palette with the mouse pointer. The Hue value can also be finely adjusted

by clicking the **Hue degree value** in the lower bar and entering the required number.


Certain colour hues can be found at certain angles on the colour palette. For example, Red is 0 degrees (12 o'clock position), Green is around 120 degrees (4 o'clock position) and Blue is approx. 240 degrees (8 o'clock position). Secondary colours such as, Yellow at 60 degrees, Cyan at 180 degrees and Violet at 300 degrees.

The **Luma** value relates to how bright or dark the selected key colour or hue is. The **Luma** value can be adjusted by clicking the **Luma Function value** and entering a new value. The **Bgnd Suppress** or Background Suppress Control is used to remove the Luma (brightness) of the background from the final image. If the Chroma Key Output is showing Light Edges, then the **Bgnd suppress** can be used to suppress any

background Luma that is showing through on these edges.

The **Opacity** setting affects how transparent the foreground Chroma matte is.

8.3 Chroma Key Ctrl

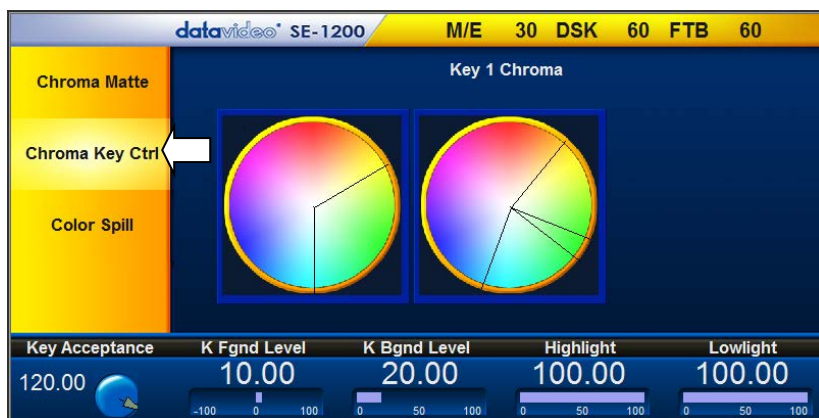

The **Chroma Key Ctrl** parameters and values are shown along the bottom of the display. Two colour palettes, **Main** and **Chroma**, are shown in the diagram.

The **Main** palette corresponds to values of **Key Acceptance** and **Key Lift**. The **Chroma** palette corresponds to the **Color Spill** settings.

Key Acceptance is represented on the **Main** Palette as a sector or area covering a range of hues or colours that closely match the background colour to be keyed as set in **Chroma Matte**. The user can start with a value of 120 degrees and this value can be fine-tuned up or down using the **Key Acceptance** depending on the setup of the green or blue screen studio.

Key Lift is represented on the **Main** Palette as a line extending from the center point in the direction of the **Key Acceptance** sector. This value affects the performance of the Chroma key in **dark or black areas**. If the dark areas of the video are becoming too transparent, then applying more **Key Lift** may help depending on the setup of the green or blue screen studio. This value can be fine-tuned up or down by changing the **Key Lift** value.

Key Gain affects the performance of the Chroma key in **light or white areas**. If the light areas of the video are becoming too transparent then applying more **Key Gain** may help depending on the setup of the green or blue screen studio. This value can be fine-tuned up or down by changing the **Key Gain** value.

8.4 Color Spill



The **Color Spill** parameters and values are shown along the bottom of the display below. These settings are used to control/remove any unwanted Chroma or colour Spill from the background onto the foreground subject. There are two sectors drawn on the **Chroma** palette, one represents the wider **Chroma Acceptance** range and the narrower **Chroma Suppress** range.

Chroma Acceptance sets the amount of the available colour range or space that should be **Chroma suppressed**. Usually starting with a large value of 120 degrees should produce reasonable results. This value can then be fine-tuned up or down using the **Chroma Acceptance** value depending on the setup of your green or blue screen studio.

Chroma Suppress, when set to 0%, removes the hues or colours that lie only on the same axis as the **Chroma Matte** Hue angle. This setting has the effect of removing Background colour spill, but keeping the underlying hue. When set to 100% then all the Chroma values that are 'captured' within the **Chroma Acceptance Angle** are suppressed to greyscale – i.e. they have their Chroma removed. Usually starting with a value of 50% should produce reasonable results. This value can then be fine-tuned up or down using the **Chroma Suppress value** depending on the setup of your green or blue screen studio.

Saving the Chroma Key Setup. Remember to **save your current user setup**. In this way, several Chroma Key setups can be saved to different user memory slots, thus allowing you to switch from a Blue screen setup to a Green screen setup instantly.

8.5 Chroma Key - Setup

The SE-1200 MU offers two Chroma key channels in the **Key 1** and **Key 2** Aux buses. In the example below we will show you the steps for setting up the Chroma key.




Step 1: Choose a Chroma Key channel (Key 1 or Key 2). In our example, we use **Key 1** button in the **AUX BUSES** panel area.



Step 2: Choose the type of Keyer you want to use in **KEYER CONTROLS** panel.


In our example, we have clicked the **Chroma button** on the **KEYER CONTROLS** panel.

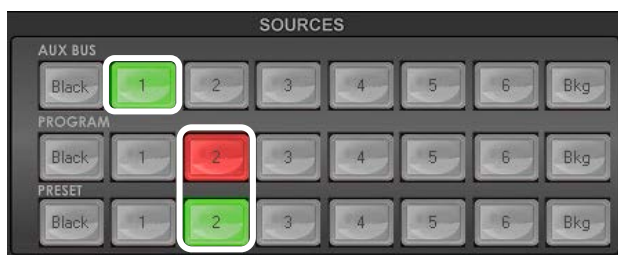

Step 3: Select the **foreground video** source with the subject or talent to be keyed. In our example, we want to use a green screen source connected to **Input 1** on the **Aux Bus Row**.

We have also chosen a **background video** source to key in to this, from **Input 2** on the **Program row**.

The **Preset source does not matter at this stage** but would eventually replace the background video if a transition or cut is completed.

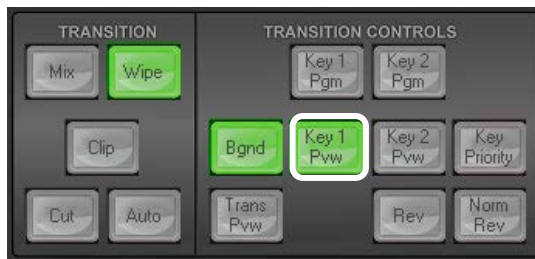

Step 4: The Chroma key effect with the current settings may already be shown in the **Preview output**. If it is not shown you can switch the preview on by clicking the **Key 1 PVW button** so it is back lit green in the **Transition Controls** panel.



Step 5: To quickly adjust the active Chroma key. Click **Chroma button** in the **MENU SELECT** panel. **Fine tune the key using Chroma Key Ctrl and Color Spill** options as described in previous sections ([8.3](#) and [8.4](#)).

Once you are happy with the Chroma key settings click the **Auto button** in the **Transition panel** to make the key active in the Program output.

8.6 Key MASK Function

A simple rectangular garbage mask can be quickly created within the SE-1200 MU. This Mask feature can be used when the Chroma key or Luma key modes are active.

Note: This mask's edges are fully transparent during the keying process. This can be helpful if the blue or green backdrop in a chroma key set up does not occupy the whole foreground shot. It is also helpful if only a small area of the foreground image is being Luma keyed, say a whiteboard or blackboard. Each mask value is based on a percentage of the screen width or height, thus 0% indicates no mask edge and 50% means masking to half of the screen area from the selected outside edge.



1. To configure the Mask function, click the **MASK button** on the **MENU SELECT** panel.



2. The Mask parameters are displayed along the bottom of the screen.
3. The **Left, Right, Top & Bottom** values allow the user to set the inside **Left, Right, Top & Bottom** edges of the keyer mask.

In our example, shown on the left, we have brought in the mask on the left, right and bottom edges only. These edges will be automatically keyed out leaving just the light centre area to be manually Luma or Chroma keyed.

Note: A mask reduces the foreground area that an on screen actor/presenter can work within.

Chapter 9 Freezing a Video Input for Stills Capture

This feature freezes a selected video Input (channels 1 to 6) in order for the user to capture a **Still image**. Usually a new SD card should allow 1000+ frames of available space. The input to be frozen is best displayed on the **Program monitor** by first selecting it on the Program source row. The video can then be displayed for the user to freeze the image at the right point.



1. Click the **Inputs** button on the **MENU SELECT** panel.



2. Six video input channel selection buttons will be displayed. **Click on the input channel button that you wish to Freeze.**



3. The Freeze parameters will then be displayed along the bottom row of the screen.

Click on the **Live Mode** option and then select the **Freeze** option from the pop up menu list. When Freeze is clicked here the video is immediately frozen at that point in time.

4. The Freeze Mode located at the bottom right of the screen can be set to a full **Frame** or one **Field**. In most cases **Frame** should be used.

Note: Once finished remember to turn the Freeze function off by selecting Live mode again.

9.1 Stills – Grab and Save

On the previous [page](#) we learned how to Freeze a video input so we are now ready to **Grab and Save** that frozen image.

1. The input that has been frozen ready for capture is best displayed on the **Program monitor** by selecting it on the **Program source row**. The video can then be displayed for the user to freeze the image at the right point.



- Click the **Stills** button in the **MENU SELECT** panel.



- Click **Grab and Save** from the yellow menu column on the left of the currently stored image matrix.

Up to 1000+ images can be stored within the SE-1200 MU.



- Click the **Still** value in the bottom row of options and enter the stills number for the new image you are about to capture.

Note: Make sure this is an empty memory position otherwise the existing saved still could be overwritten and lost.

- Click **Grab Still** to capture the freeze image from the SE-1200 MU's Program output into working memory.

- Now click **Save Still** to move the captured image into the chosen Stills matrix number. The stills matrix will update and display a small thumbnail of the captured image at the chosen stills number.

Note: Remember to turn the Freeze function off after you have finished using it. To do this change the frozen input channel from **Freeze** back to **Live**. See previous [page](#).

9.2 Assigning a Saved Still Image to an Input Channel

In the previous two [pages](#) we covered how to freeze a live input for capturing into the Stills matrix on the SE-1200 MU. Now we want to use that previously saved still image in our next production.

- Using the **Preset source row** select the input channel to be used for displaying the saved still image. This will also place that input channel onto the Preview window in the SE-1200 MU Multi view. Do not worry if at this stage it is still currently showing live or no images.
- Next click the **Stills** button on the **MENU SELECT** panel.



- Click **Still Load** in the yellow options area on the left.



- Change the **Still Buf** option in the lower row of options to match the desired bus channel that you wish to use to display the still image. In our example we have chosen **Input 1**.
- Now select the required saved still within the stills matrix.** Use the up and down triangle buttons on the right to scroll through the matrix if necessary. Empty memory points will appear as blue thumbnail boxes without a number. Alternatively enter the **Still value** and then click **Load Still**.
- The input channel will now display only the selected still image. To change the still to another follow step 5 again. To return the input channel to live video again see [Chapter 9](#).

9.3 Exporting and Importing Stills

A previously saved SE-1200 MU still image can be exported from the Switcher to the User's computer. This Still file can then be imported into another SE-1200 MU switcher or used in other ways such as event marketing or disc authoring. This can be useful if creatively branding productions the same way.

Click **Setup** from the **MENU SELECT** area and select **Import-Export** from the yellow menu options.



To import a Still picture file from the computer into the SE-1200 MU select **Import Still**.

To export an existing Still file from the SE-1200 MU to the computer select **Export** then **Export Still**.




Caution: When importing or exporting make sure the correct Still number is used.

Still picture files when exported from the switcher are stored on the computer within the following folders.

```
C: > Datavideo > se1200 >  
user_data > ...
```

Exported Still picture files can be found in the **export** based **stills** folder (see opposite).

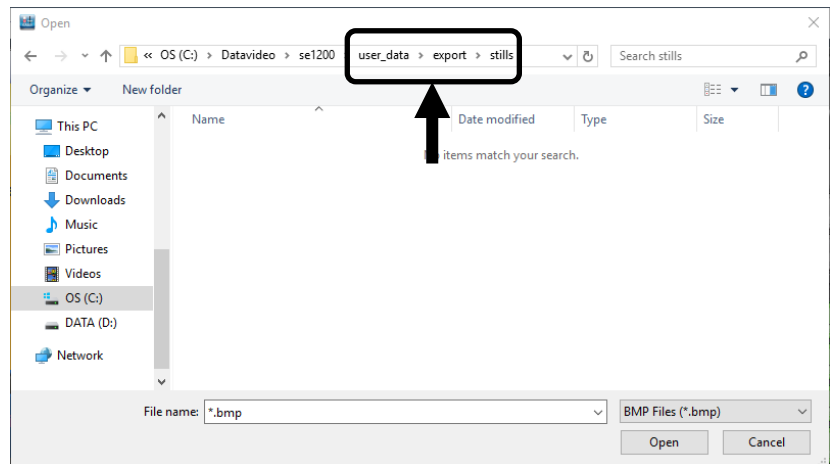

For each image exported, there will be two files, a thumbnail picture ending .mini and the full screen image ending .pic. These files can be then imported to another SE-1200 MU by pasting the files into the Import based stills folder on the second SE-1200 MU.

Importing Stills

For import type of bmp/png/jpg, the SE-1200 MU will do the conversion to .pic first, then import the .pic files.

Chapter 10 USER Memory Functions

The **USER** memory function allows you to **Save** and **Load** user setups within the SE-1200 MU. If you have standard configurations for your productions then this feature allows you to quickly re-configure the SE-1200 MU after someone else has used it. Up to 1000 User Setups can be stored within the SE-1200 MU, numbered from 0 to 999.

Note: User 0 is the **DEFAULT USER** preset. By changing User 0 you change the default start-up configuration of the SE-1200 MU.

10.1 Saving the Current Settings to a User Memory Slot

1. First set up and configure the SE-1200 MU with the settings that you would like to keep for future use.
2. Click the **User** button on the **MENU SELECT** panel.



3. Click **Save Memory** and the screen below will appear.



4. Click **User Memory** to set the user memory slot value to which the user setup will be saved. **Be careful** to choose a User number which is not already in use, otherwise an existing memory slot will be over written.
5. Click **Name** to label the current user memory slot.
Note: The label can accept up to 16 characters but only the first 10 are displayed.
6. Click **Save Memory** to store the setup to the assigned user memory slot.

10.2 Labelling an Existing User Memory Slot

In order to easily identify the stored User setup, the User memory slot can be labelled for future reference.

1. Click the **User** button on the **MENU SELECT** panel.



2. Select the required User memory slot that you wish to label.



3. Click **Name** in the lower row menu options an on-screen keyboard will be displayed. Enter a label name for the selected user memory slot. The label text can be up to 16 characters long but only the first 10 letters will be displayed.

Note: If there are more than 16 User Setups stored in the SE-1200 MU, then use the up/down arrows to browse through all user memory slots. The user memory slots are displayed in numerical order; empty positions will have no number.


10.3 Loading a Previously Saved User Setup

There are two ways to load a previously saved user setup.

1. USER/SHOT BOX Panel



To load a previously saved SE-1200 MU Setup, simply click the **LOAD** button on the **USER/SHOT BOX** panel and an on-screen number pad will open.

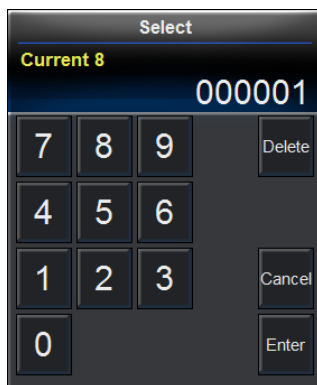

Enter the number of the required User setup and then click **Enter**.

Note: If the required user setup is one of the first 8 memory slots, then simply click the corresponding button on the **USER / SHOT BOX** panel.

2. A second way to do the same thing is to enter the “**USER**” option on the “**MENU SELECT**” panel.



The screen then displays up to 16 user memory slots at a time. Click on a user memory slot and the selected user slot will have a yellow border.

Note: **User 0** is the **DEFAULT USER** preset. By changing User 0 you change the default start-up configuration of the SE-1200 MU.



Click **Load Memory** in the lower options row to load the selected user memory slot.

10.4 Deleting a User Setup

Warning: Be careful, deleted user set ups cannot be restored.

1. Click on **Delete Memory** from the yellow menu column on the left of the **User** menu screen.




2. Select the User-defined setup to be deleted from User Memory slot matrix. **Be careful to select only the User memory slot to be deleted.**
3. To confirm deletion of the selected User Memory click **Delete Memory** located at the bottom of the screen.

10.5 Exporting and Importing User Setups

A previously saved SE-1200 MU User memory can be exported from the unit to the User's computer. This User file can then be imported into another SE-1200 MU switcher. In this way another SE-1200 MU can quickly be prepared for the same user with a known set up. A similar process can also be followed for importing and exporting still images with SE-1200 MU.

Click **Setup** from the **MENU SELECT** area and select **Import-Export** from the yellow menu options.

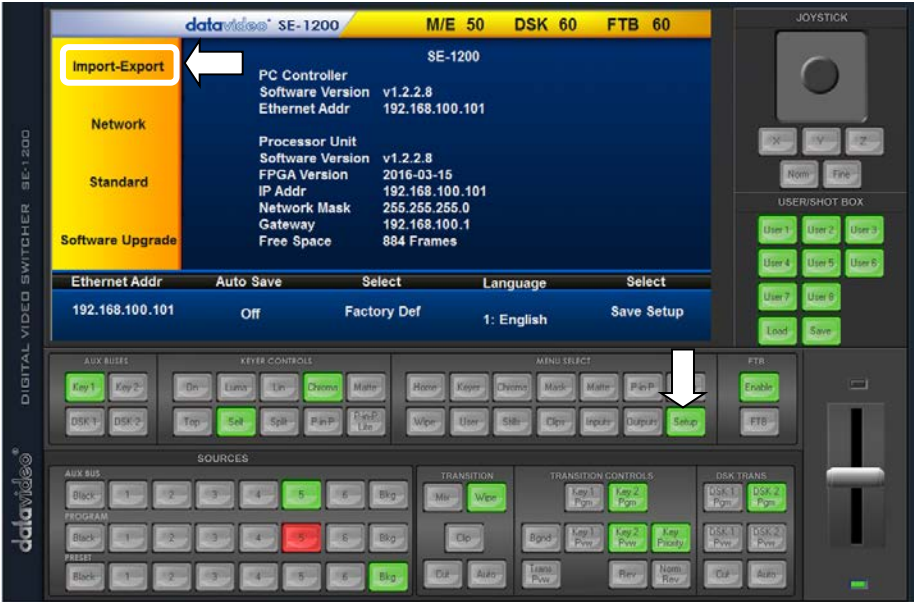

To import a User file from the computer to the SE-1200 MU select **Import User**.
To export an existing User file from the SE-1200 MU to the computer, select **Export** then **Export User**.




The User files when exported from the SE-1200 MU are stored on the computer in the following folders.

C: > Datavideo > se1200 > user_data > ...

Exported User files can be found in the **export** based **mems** folder (see opposite).

Prepared User files to be imported should be first copied and pasted into the **Import** based **mems** folder on the computer (see opposite). Then follow the **Import User** process within the SE-1200 MU Control software.

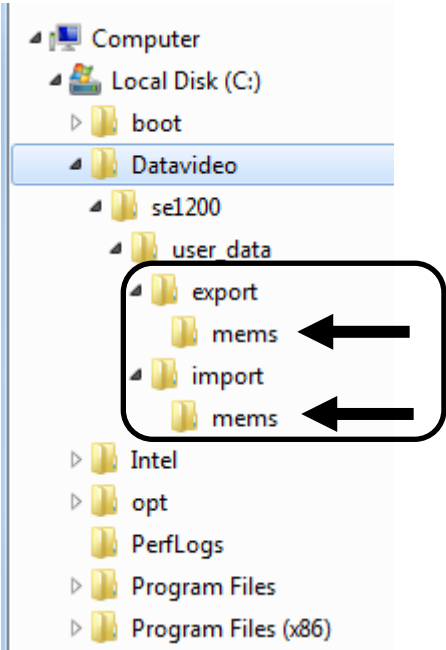

Chapter 11 Appendices

Appendix 1: Audio

The SE-1200 MU can only accept external audio using the analogue XLR inputs on the rear panel. Ideally a master audio mixer should be used alongside the SE-1200 MU. A Datavideo AM-100 audio mixer or AD-200 audio delay unit could be considered.

Changing the **Audio Mode** option from **Analog** to **OFF** will mute the incoming XLR audio from the external master audio mixer.

The Audio sub-options for SDI and HDMI allow the user to individually turn ON/OFF the audio at the **SDI 1**, **SDI 2** and **HDMI 1** outputs.




Audio Level relates to the preferred audio standard for the user. A choice of **SMPTE** or **EBU** is given.

Note: Audio is not supplied with the IP streamed multi view. Local SDI and HDMI outputs can provide the audio.

Appendix 2: GPI Out

The SE-1200 MU can control external recorder/playback devices via simple contact closure GPI switch.

The GPI interface is a 3.5mm Jack Socket which is situated on the rear panel of the SE-1200 MU. Contact closure between the Outer and Inner contacts on the jack plug will trigger a user selected event. Power is supplied by the SE-1200 MU and is less than 5V DC.

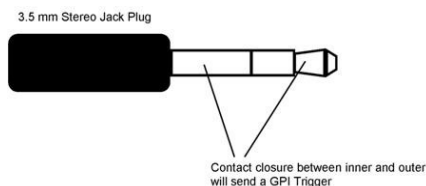

This GPI socket can also be used as a socket to trigger record or playback events with other equipment such as the Datavideo HDR-70 recorder.

SAFETY FIRST The cabling required needs to be designed specifically to connect the SE-1200 MU to the chosen record or playback device as they are not all the same. The cabling required can be made by yourself or a competent technician. Please speak with your Dealer or local Datavideo office to get further help and advice.

Outputs Menu

This allows the user to perform GPI configuration.


After turning **On** the GPI **Enable**, select the GPI **Mode**, which is either set as **Level** or **Pulse**. The GPI signal **Width** can also be configured by setting a value (1~9).

The GPI out can then be assigned to one of the inputs 1~4 under **Source**. When the selected channel/source is taken to the Program output the GPI signal is triggered. A GPI **Delay** can be set between 0 and 99.



This feature could be used to trigger playback from units such as the Datavideo **NVP-20** or **HRS-30** or **HDR-60/70**.

Appendix 3: Tally Outputs

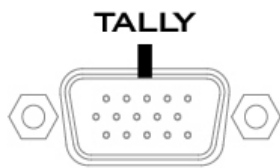

The SE-1200 MU has a D-sub 15 pin female tally output port. These connections provide bi-colour tally information to a number of other Datavideo products, such as the ITC-100 eight channel talkback system and the TLM range of LCD Monitors. The ports are open collector ports and as such do not provide power to tally light circuits.

The pin outputs are defined as follows:

Pin No.	Signal Name	Input/Output	Description of Signal
1	Program 1	Open collector output	Tally output of input video Program 1
2	Program 5	Open collector output	Tally output of input video Program 5
3	Preview 1	Open collector output	Tally output of input video Preview 1
4	RCOM (GND)	Ground	Ground
5	Program 4	Open collector output	Tally output of input video Program 4
6	Program 2	Open collector output	Tally output of input video Program 2
7	Program 6	Open collector output	Tally output of input video Program 6
8	Preview 2	Open collector output	Tally output of input video Preview 2
9	GND	Ground	Ground
10	Preview 5	Open collector output	Tally output of input video Preview 5
11	Program 3	Open collector output	Tally output of input video Program 3
12	Preview 6	Open collector output	Tally output of input video Preview 6
13	Preview 3	Open collector output	Tally output of input video Preview 3
14	YCOM (GND)	Ground	Ground
15	Preview 4	Open collector output	Tally output of input video Preview 4

Appendix 4: Firmware Upgrade

From time to time Datavideo may release new firmware to either add new SE-1200 MU features or to fix user reported bugs in the current switcher firmware. Customers can update the switcher firmware themselves if they wish, or they can contact their local supplier or Datavideo office for assistance, should they prefer this method.

This page describes the firmware update process, and it should take ***approximately 15 minutes total time to complete***.

Once started ***the update process should not be interrupted in any way*** as this could result in a non-responsive unit.

As well as a working SE-1200 MU switcher you may need:


- A Windows 7/8/10 PC/Laptop
- The latest Control Panel program for the mixer. This can be obtained from your local Datavideo office/supplier.
- A simple router IP network/Static IP set up, see example on [Section 3.2.1](#).

Firmware Update Procedure

1. Install the latest SE-1200 MU Control Panel program on the Windows PC/Laptop.
2. Locate the Ethernet port on the rear panel of the SE-1200 MU and connect the Ethernet port to the router.




3. Open the SE-1200 MU Control Panel program.
4. Locate and click the **Setup button** in the **MENU SELECT Panel**.
5. Click the **Software Upgrade option** in the yellow menu column.

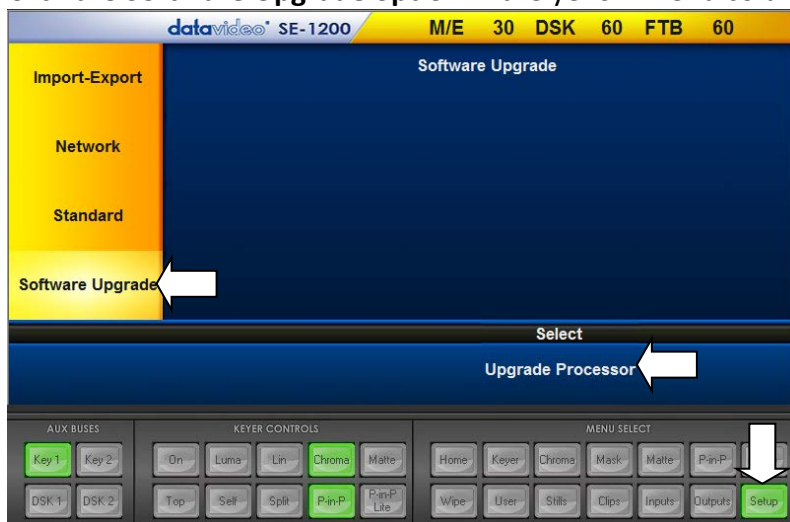

6. Click the **Upgrade Processor option** in the lower menu row, the upgrading notification will appear.
7. Wait for the SE-1200 MU to complete the upgrade process, the upgrade notification will disappear.
8. Restart the SE-1200 MU device. **Note:** The update may reset the IP address to the factory defaults, see [Section 3.2.1](#).
9. Restart the SE-1200 MU Control Panel program on the Windows PC/Laptop.
10. Go to the **Setup Menu** again to confirm the FW version has updated and that control is still working.
11. Once control is working, **load a USER memory** to quickly return to your preferred SE-1200 MU setup.

Appendix 5: How to Connect RMC-260 to SE-1200 MU

The user is allowed to connect a physical switcher controller keyboard to the SE-1200 MU. An example of the controller keyboard is the RMC-260, which communicates with the SE-1200 MU using RS-232 interface. The diagram below illustrates the physical connection between the two devices.

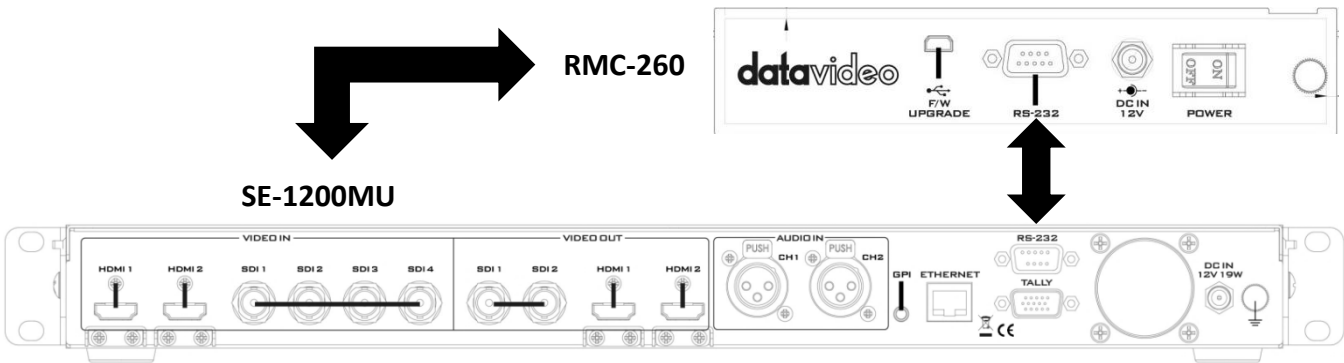


The table below provides details of RS-232 PIN definition on the device end, which is a female connector.

Pin 1	N/C
Pin 2	TXD
Pin 3	RXD
Pin 4	N/C
Pin 5	GND
Pin 6	N/C
Pin 7	N/C
Pin 8	N/C
Pin 9	N/C

**RS232 Pinout
(9PIN female)**


The diagram shows a 9-pin female RS-232 connector. The pins are arranged in two rows: pins 1 through 5 on the top and pins 6 through 9 on the bottom. The labels indicate the following pinout: Pin 1 (top right), Pin 5 (top left), Pin 6 (bottom right), and Pin 9 (bottom left).

The user may establish the RS-232 connection between RMC-260 and SE-1200 MU using a male-to-male cable with the wiring scheme as depicted in the diagram below.

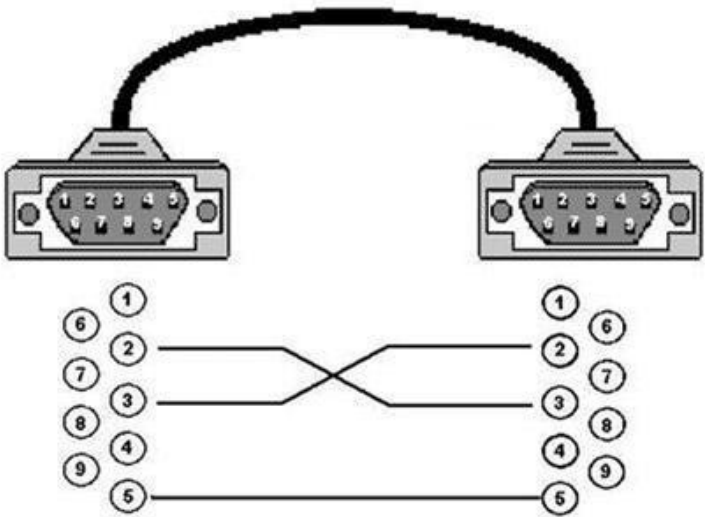

Note: All panel buttons will be backlit in white LED light after the RMC-260 is powered ON. As soon as the RS-232 connection is established, buttons will be backlit in its state color LED light. After the RS-232 connection is disconnected, it takes approximately 2-3 seconds for the RMC-260 panel buttons to return to white color.

Appendix 6: Dimensions

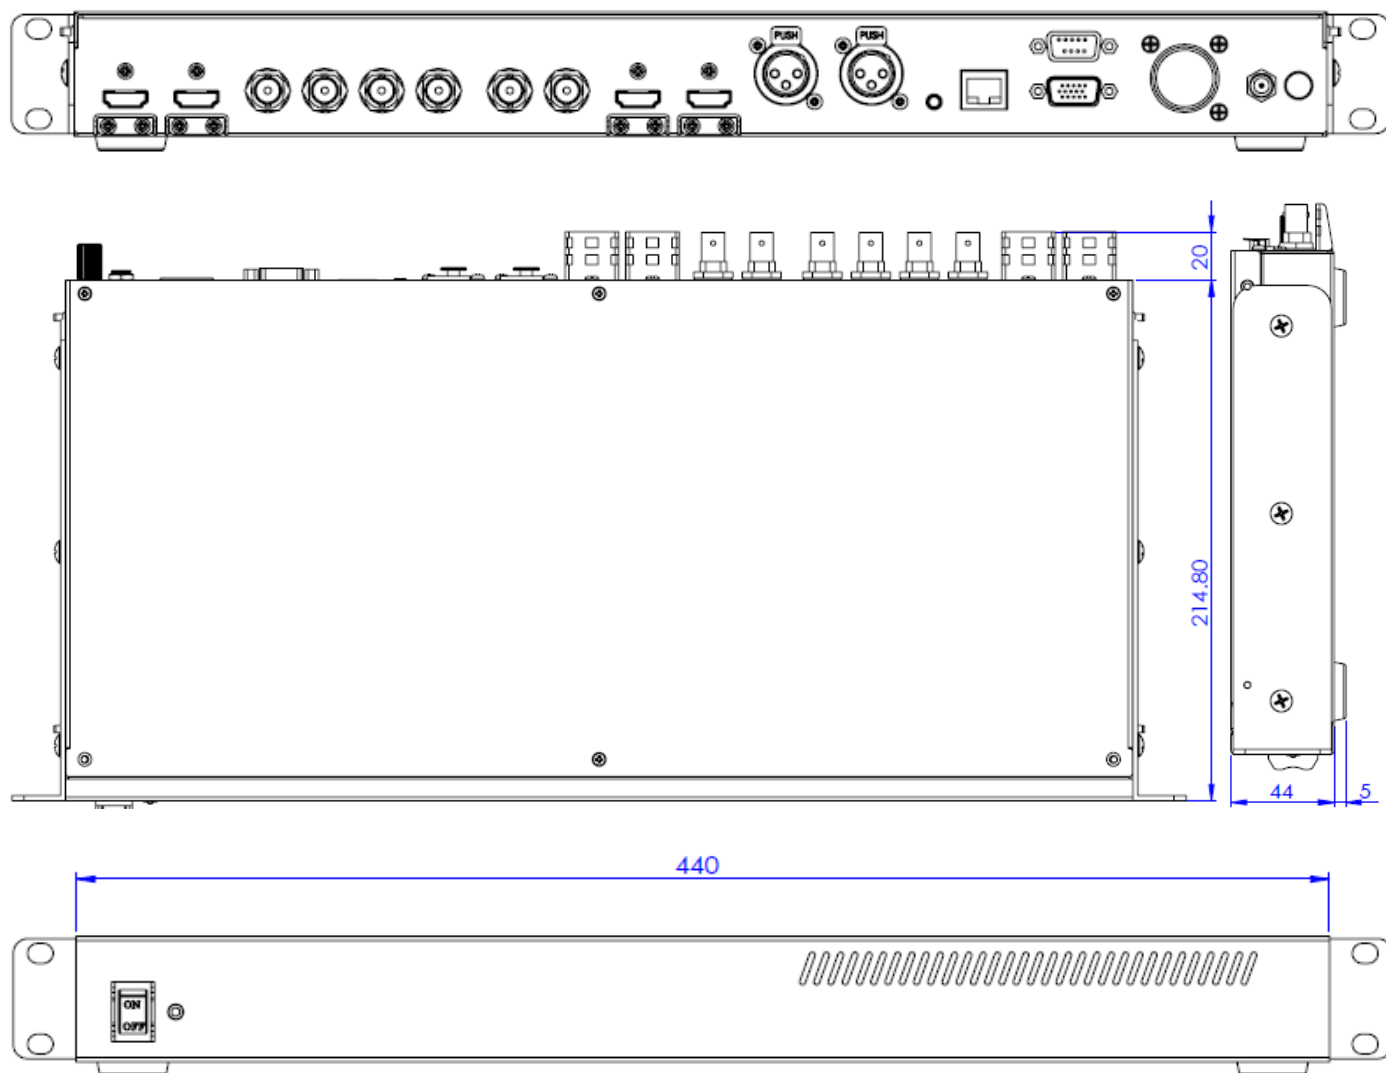

All measurements in millimetres (mm)

Appendix 7: Specifications

Connections	
Total Video Inputs	2 HDMI (Ver1.3a) + 4 SDI
Total Outputs	2 HDMI (Ver 1.3a) + 2 SDI
SDI Video Input	4 (1080i / 720p)
HDMI Video Input	2 x HDMI (RGB/YUV) 1080i / 720p
SDI Audio Output (PGM output)	2CH
Analog Audio Input	2CH XLR
Internal Frame Synchronizers	6 All Inputs
PGM Out	HDMI / SDI
Multi view Out	HDMI (720P -> 720P ; 1080i->1080i ; 1080P->1080P) SDI (720P -> 720P ; 1080i->1080i)
Output can select any of input source	PROGRAM (w/ DSK) Clean PROGRAM PREVIEW (w/o DSK) MULTISCREEN Input 1~4
Audio Indicator on Multi view	Y (output 2CH)
Tally Out	Y
GPI	Y (Level / Pulse Trigger selectable)
Software Updates	Ethernet
Standards	
HD Format Support	1080i/50, 1080i/59.94, 1080i/60 720p/50, 720p/59.94, 720p/60
SDI Compliance	SMPTE 292M (SDI output /PGM out)
Video Sampling	4:2:2 10 bit
Colour Precision	4:2:2 10 bit
Colour Space	4:2:2 YUV
HDMI Input Resolutions for Computers	1280 x 720 59.94Hz 50Hz (720P) 1920 x 1080 59.94Hz 50Hz (1080p & 1080i)
Processing	
Colourspace Conversion	Hardware based real time
Processing Delay	< 1 frame
Audio Mixer	selectable audio follow video master gain control
Extras	
Downstream Keyers	1
Linear/Luma Keyers	3 (M/E Keyer, PIP, DSK)
Chroma Keyers	2 (M/E Keyer & PIP)
Pattern Generators	Colour Bar
PIP	1

XPT	Y
Frame Store	Total 24 Stills on Internal SD Card One dedicated still buffer, one dedicated freeze buffer. Also, any Input can be used as Frame store. 3 Still frames stored in local frame buffers for instant access
Control Panel Compatibility	Use PC via Ethernet; Control panel
Input Voltage	12V
Power Consumption	23W
Control Protocol	DVIP
Operating Temperature	0°C to 50°C
Humidity	10% to 80%
Multi View Monitoring	
Number of Windows	2 (PGM, PVW) +6 (Inputs 1-4, Stills & Freeze) +2 Output windows (SDI1, SDI2)
Routable Windows	Y (Follow XPT)
Tally	Y
Windows Source Labels	Y

Service & Support

It is our goal to make owning and using Datavideo products a satisfying experience. Our support staff is available to assist you to set up and operate your system. Contact your local office for specific support requests. Plus, please visit www.datavideo.com to access our FAQ section.

Datavideo Taiwan

Datavideo Technologies Co. Ltd
10F. No. 176, Jian 1st Rd., Chung Ho
District, New Taipei City 235, Taiwan,
R.O.C.
Tel: +886-2-8227-2888
Fax: +886-2-8227-2777
E-mail: service@datavideo.com.tw

Datavideo USA

Datavideo Corporation
7048 Elmer Avenue.
Whittier, CA 90602,
U.S.A.
Tel: +1-562-696 2324
Fax: +1-562-698 6930
E-mail: sales@datavideo.us

Datavideo Hong Kong

Datavideo Hong Kong Ltd
G/F., 26 Cross Lane
Wanchai, Hong Kong
Tel: +852-2833-1981
Fax: +852-2833-9916
E-mail: info@datavideo.com.hk

Datavideo Europe

Datavideo Technologies Europe BV
Floridadreef 106
3565 AM Utrecht,
The Netherlands
Tel: +31-30-261-96-56
Fax: +31-30-261-96-57
E-mail: info@datavideo.nl

Datavideo China

Datavideo Technologies China Co
101, NO. 618, LiuYing Rd, Zhabei District,
Shanghai, China
Tel: +86 21-5603 6599
Fax: +86 21-5603 6770
E-mail: service@datavideo.cn

Datavideo France

Datavideo France s.a.r.l
Cité Descartes 1, rue Albert Einstein
Champs sur Marne
774477-Marne la Vallée cedex 2
Tel: +33-1-60370246
E-mail: info@datavideo.fr

Datavideo United Kingdom

Datavideo UK Limited
Units 1 & 2 Waterside Business Park
Hadfield, Glossop, Derbyshire
SK13 1BE, UK
Tel: +44-1457 851 000
Fax: +44-1457 850 964
E-mail: sales@datavideo.co.uk

Datavideo Singapore

Datavideo Technologies (S) PTE Ltd
No. 178 Paya Lebar Road #06-03
Singapore 409030
Tel: +65-6749 6866
Fax: +65-6749 3266
E-mail: sales@datavideo.sg

Datavideo India

Datavideo Technologies India Pvt Ltd
A-132, Sec-63, Noida-201307,
Uttar Pradesh (UP), India.
Tel: +91-0120-2427337
Fax: +91-0120-2427338
E-mail: sales@datavideo.in



Please refer to our website to update the latest version manual.
<http://www.datavideo.com/Mixer+-+Switchers/SE-1200MU>

datavideo
www.datavideo.com