
AV6201A

OPENGEAR ANALOG VIDEO DISTRIBUTION AMPLIFIER w/DIFFERENTIAL INPUT, CLAMPING AND CABLE EQUALIZATION

User Manual





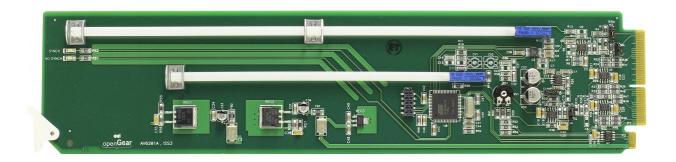



by Ward-Beck Systems

Rev:Jan.01 2015

Ward-Beck Part Number: AV6201A

- · Document Issue: 1
- · Printed in Canada

The information contained in this User Manual is subject to change without notice or obligation.

Copyright

©2015 Ward-Beck Systems Ltd. All rights reserved.

Contents of this publication may not be reproduced in any form without the written permission of Ward-Beck Systems Ltd. Reproduction or reverse engineering of copyrighted software is prohibited.

Notice

The material in this manual is furnished for informational use only. It is subject to change without notice and should not be construed as a commitment by Ward-Beck Systems Ltd. Ward-Beck Systems Ltd. assumes no responsibility or liability for errors or inaccuracies that may appear in this manual.

Trademark



is a registered trademark of Ross Video Limited.



is a registered trademark of Ward-Beck Systems Ltd.

All other product names and any registered and unregistered trademarks mentioned in this manual are used for identification purposes only and remain the exclusive property of their respective owners.

Important Regulatory and Safety Notices

Before using this product and any associated equipment, refer to the "Important Safety Instructions" listed below so as to avoid personnel injury and to prevent product damage. Products may require specific equipment, and /or installation procedures be carried out to satisfy certain regulatory compliance requirements. Notices have been included in this publication to call attention to these Specific requirements.

Symbols Meanings



This symbol on the equipment refers you to important operating and maintenance (servicing) instructions within the Product Manual Documentation. Failure to heed this information may present a major risk of damage or injury to persons or equipment.

The symbol with the word "Warning" within the equipment manual indicates a potentially

hazardous situation, which if not avoided, could result in death or serious injury.







The symbol with the word "Caution" within the equipment manual indicates a potentially hazardous situation, which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.



The symbol with the word "Notice" within the equipment manual indicates a situation, which if not avoided, may result in major or minor equipment damage or a situation which could place the equipment in a non-compliant operating state.



ESD Susceptibility

This symbol is used to alert the user that an electrical or electronic device or assembly is susceptible to damage from an ESD event.

Important Safety Instructions



Caution

This product is intended to be a component product of the openGear 8000 series frame. Refer to the openGear 8000 series frame User Manual for important safety instructions regarding the proper installation and safe operation of the frame as well as it's component products.



Certain parts of this equipment namely the power supply area still present a safety hazard, with the power switch in the OFF position. To avoid electrical shock, disconnect all A/C power cords from the chassis' rear appliance connectors before servicing this area.



Service barriers within this product are intended to protect the operator and service personnel from hazardous voltages. For continued safety, replace all barriers after any servicing.

This product contains safety critical parts, which if incorrectly replaced may present a risk of fire or electrical shock. Components contained within the product's power supplies and power supply area, are not intended to be customer serviced and should be returned to the factory for repair.

To reduce the risk of fire, replacement fuses must be the same type and rating.

Only use attachments/accessories specified by the manufacturer.

EMC Notices

US FCC Part 15

This equipment has been tested and found to comply with the limits for a class A Digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case users will be required to correct the interference at their own expense.



Changes or modifications to this equipment not expressly approved by Ward-Beck Systems Ltd. could void the user's authority to operate this equipment.

CANADA

This Class "A" digital apparatus complies with Canadian ICES-003.

Cet appareil numerique de classe "A" est conforme à la norme NMB-003 du Canada.

EUROPE

This equipment is in compliance with the essential requirements and other relevant provisions of **CE Directive 93/68/EEC**.

INTERNATIONAL

This equipment has been tested to CISPR 22:1997 along with amendments A1:2000 and A2:2002 and found to comply with the limits for a Class A Digital device.



This is a Class A product. In domestic environments this product may cause radio interference in which case the user may have to take adequate measures.

Maintenance/User Serviceable Parts

Routine maintenance to this openGear product is not required. This product contains no user serviceable parts. If the module does not appear to be working properly, please contact Technical Support using the numbers listed under the "Contact Us" section on the last page of this manual. All openGear products are covered by a generous 5-year warranty and will be repaired without charge for materials or labor within this period. See the "Warranty and Repair Policy" section in this manual for details.

Environmental Information

The equipment that you purchased required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment.

To avoid the potential release of those substances into the environment and to diminish the need for the extraction of natural resources, Ward-Beck Systems Ltd. encourages you to use the appropriate take-back systems. These systems will reuse or recycle most of the materials from your end-of-life equipment in an environmentally friendly and health conscious manner.

The crossed-out wheeled bin symbol invites you to use these systems.



If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration.

Introduction

Overview

The AV6201A is an analog video distribution amplifier with a differential input designed for broadcast use. It can provide up to eight outputs when used with a single card rear module, and up to four outputs when used with a double card rear module in an OG3-FR-C frame. The AV6201A can be addressed through Dashboard to report card status and activate features. The AV6201A is housed in the openGear OG3-FR-C series frames.

Functional Block Diagram

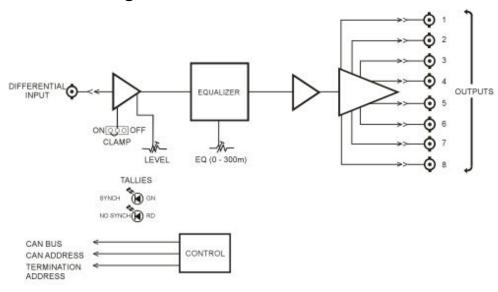


Figure 1. Simplified Block Diagram of the AV6201A Functions

Features

The following features make the AV6201A the best solution for analog video distribution.

- Equipped with a differential input
- · Offers input clamping
- Has a +/- 3 dB trim range to match levels
- Higher density with up to 20 cards in an OG3-FR-C frame
- Handles NTSC or PAL composite signals
- 5 year warranty
- Fits all openGear OG3-FR-C series frames

Documentation Terms

The following terms are used throughout this guide:

- "Frame" refers to the OG3-FR-C series frame that houses the AV6201A card.
- "Operator" and "User" refer to the person who uses the AV6201A.
- "Board", and "Card" refer to the AV6201A card itself, including all components and switches.

Installation and Setup

Static Discharge

Whenever handling the AV6201A and other related equipment, please observe all static discharge precautions as described in the following note:



Static discharge can cause serious damage to sensitive semiconductor devices. Avoid handling circuit boards in high static environments such as carpeted areas, and when wearing synthetic fiber clothing. Always exercise proper grounding precautions when working on circuit boards and related equipment.

Unpacking

Unpack each AV6201A you received from the shipping container, and check the contents against the packing list to ensure that all items are included. If any items are missing or damaged, contact your sales representative or Ward-Beck Systems Ltd. directly.

Rear Module Options

There are two rear module options available for the AV6201A Analog Video distribution amplifier.

On the 20 slot **OG3-FR-C** frame the T6301A rear module occupies two slots and provides I/O for one AV6201A card. For higher density applications, the T6401A occupies two slots and provides I/O for two AV6201A cards. All connections are made on BNC type 75 Ohm connectors.

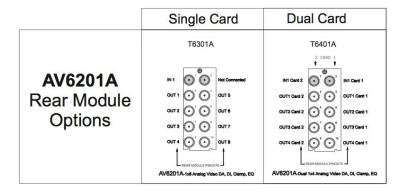


Figure 2. Rear Module Terminations

NOTE: The T6201A (obsolete) was designed for use exclusively with the 10 slot **DFR-8310** frame and has the same connection scheme as the T6301A.

Board Installation

Use the following procedure to install the AV6201A in an openGear OG3-FR-C Series frame.

- 1. Refer to the User Manual of the openGear OG3-FR-C series frame to ensure that the frame is properly installed according to instructions.
- 2. When using the AV6201A with the T6301A for maximum I/O, please note that the even numbered slots are to be used. Plug the AV6201A modules into slots 2,4,6,8,10,12,14,16,18, and 20 for a maximum of 10 cards. Slot 1 is the left most slot as you look into the frame from the front.
- 3. When using the AV6201A with the T6401A for maximum density, you may insert the card into any slot for up to 20 cards per frame.
- 4. After selecting the desired frame installation slot, hold the AV6201A card by the edges and carefully align the card edges with the slots in the frame. Then fully insert the card into the frame until the rear connection plugs are properly seated on the midplane and rear module.

This completes the procedure for installing the AV6201A in an openGear OG3-FR-C Series frame.

User Controls

User Control Diagram

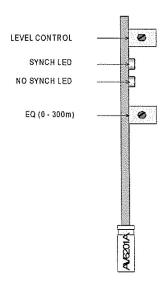


Figure 3. Card-Edge User Controls

Level

The level control is used to adjust the output levels of the AV6201A. This potentiometer gives precise control of the output signal over a \pm -3 dB range.

Equalizer (0-300m)

Provides continuously variable equalization for cable lengths from 0 to 300 metres.

LEDs

The front-edge of the card features LEDs that display the status of the input signals. Descriptions are provided in the following table:

LED	Color	Location	Display and Description
SYNCH	Green	Top of the card	When illuminated there is a valid analog signal at the input.
NO SYNCH	Green	Second from the top	When illuminated there is not a valid analog signal at the input.

Table 1. Status LED Descriptions

Jumper Settings



Selects the input termination, either high impedance or 75 Ohms.



Selects between a balanced and differential input configuration.



Turns clamping circuit on or off.

Remote Control

DashBoard Control

This card may be monitored by a remote computer through DashBoard the free configuration monitoring software available to openGear users. With DashBoard installed on your computer the following mvenus are available when interrogating an AV6201A card:

MENU	ITEM	DISPLAY	DESCRIPTION
Card Info (Read only)	Product	AV6201A	Product identification code
	Name	Analog Video Distribution Amplifier	Product functional description
	Supplier	Ward-Beck Systems Ltd.	Manufacturer of the card
	Software Rev.	##	Two digit software revision code
	Web site	www.ward-beck.com	Manufacturer's web address

MENU	ITEM	DISPLAY	DESCRIPTION
Card Status (Read only)	Card Status	Green Dot - Synch Detected	Card is functioning properly and appropriate signals are connected
		Red Dot - No Synch Detected	Video signal is not present

Technical Specifications

INPUT

Input Impedance 75 Ohm or Hi-Z
Input Level 1 Vp-p, nominal
Input Return Loss 46dB Typical, @ 3.58M

PERFORMANCE

Gain better than 0.05 dB @ 3.58M Differential Gain better than 0.15% @ 3.58M Differential phase better than 0.15 deg @ 3.58M better than 0.15 deg @ 3.58M better than 60dB, 5MHz B.W.

OUTPUT

Output Impedance (8 splits) 75 Ohm
Output Level ! Vp-p, terminated

GENERAL

 Power Requirements
 +12 V,120 mA, -7, 5V, 55mA

 Dimensions
 3.025" high x 12.800" deep

 Weight
 approx.0.115 kg (0.252 lbs)

NOTE: Ward-Beck Systems Ltd. reserves the right to change performance specifications without prior notice.

Warranty and Repair Policy

The openGear AV6201A is warranted to be free of any defect with respect to performance, quality, reliability, and workmanship for a period of FIVE (5) years from the date of shipment from our factory. In the event that your openGear AV6201A proves to be defective in any way during this warranty period, Ward-Beck Systems Ltd. reserves the right to repair or replace this piece of equipment with a unit of equal or superior performance characteristics.

Should you find that this openGear AV6201A has failed after your warranty period has expired, we will repair your defective product should suitable replacement components be available. You, the owner, will bear any labor and/or part costs incurred in the repair or refurbishment of said equipment beyond the FIVE (5) year warranty period.

In no event shall Ward-Beck Systems be liable for direct, indirect, special, incidental, or consequential damages (including loss of profits) incurred by the use of this product. Implied warranties are expressly limited to the duration of this warranty.

This openGear AV6201A User Manual provides all pertinent information for the safe installation and operation of your openGear Product. Ward-Beck policy dictates that all repairs to the openGear AV6201A are to be conducted only by an authorized Ward-Beck Systems factory representative. Therefore, any unauthorized attempt to repair this product, by anyone other than an authorized Ward-Beck Systems factory representative, will automatically void the warranty. Please contact Ward-Beck Technical Support for more information.

In Case of Problems

Should any problem arise with your openGear AV6201A, please contact the Ward-Beck Technical Support Department. (Contact information is supplied at the end of this publication.)

A Return Material Authorization number (RMA) will be issued to you, as well as specific shipping instructions, should you wish our factory to repair your openGear AV6201A. If required, a temporary replacement module will be made available at a nominal charge. Any shipping costs incurred will be the responsibility of you, the customer. All products shipped to you from Ward-Beck Systems Ltd. will be shipped collect.

The Ward-Beck Technical Support Department will continue to provide advice on any product manufactured by Ward-Beck Systems, beyond the warranty period without charge, for the life of the equipment.

WARD-BECK SYSTEMS LTD.

945 Middlefield Road, Unit 9, Toronto, Ontario M1V 5E1

V 416 335 5999 F 416 335 5202 Toll-Free 800 771 2556

Website: www.ward-beck.com E-Mail: sales@ward-beck.com

Ordering Information

Standard Equipment

 AV6201A Analog Video Distribution Amplifier w/Differential Input, Clamping and Cable Equalization Distribution Amplifier

Optional Equipment

- AV6201AUM Analog Video Distribution Amplifier User Manual (additional User Manual)
- T6301A Single Card Rear Module (for installation into OG3-FR-C frame for maximum I/O)
- T6401A Dual Card Rear Module (for installation into OG3-FR-C frame for maximum mono density)
- OG3-FR-C Digital Products Frame and Power Supply with Cooling Fans (2RU, holds up to 20 cards)

Your AV6201A Analog Video Distribution Amplifier is a part of the openGear family of products. Ward-Beck offers a full line of openGear terminal equipment including distribution, conversion, monitoring, muxing, demuxing and processing of AES/EBU and HD/SD-SDI as well as analog audio and video products.