


ASSEMBLY INSTRUCTION NC3FXCC | XLR Cable Connector

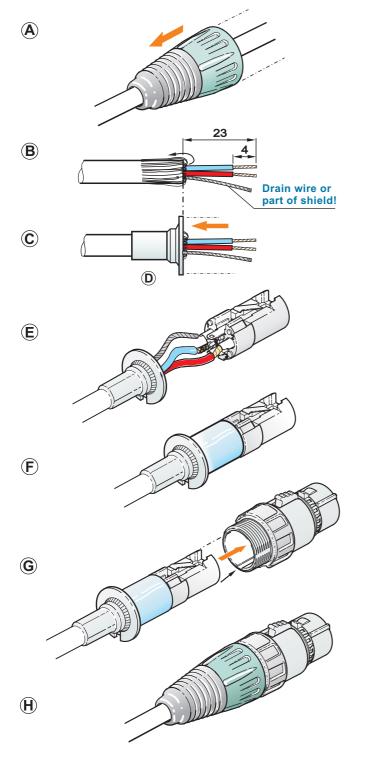

- Slide the boot onto the cable.
- (B) Prepare cable as shown. Fold back the shield. If the cable does not offer a drain wire, twist a part of the shield for contact #1 shield wiring.
- Slide the crimp strain relief onto the cable jacket to the position as indicated.
- (D) Crimp the strain relief by means of HEX crimp dies of width 6.5 mm (size "E" acc. to IEC 60803).
- Solder the wire ends to contacts #2 and #3 of insert.
- Position the distance sleeve between strain relief and insert.
- **G** Align the nose of the crimp strain relief and the recess of the distance sleeve with respect to one of the keyways. Slide the unit into the connector housing.
- Finish the installation by turning the bushing onto the connector.

NOTE: To keep the strain relief in the keyway, avoid rotation of the cable during assembly.

NEUTRIK AG NEUTRIK Zürich AG NEUTRIK USA Inc. **NEUTRIK (UK) Ltd.**

СН USA UK

T: +423/2372424 T: +41 44/736 5010 F: +41 44/736 5011

F: +423/232 53 93 T: +1732/9019488 F: +1732/9019608

NEUTRIK Vertriebs GmbH **NEUTRIK France NEUTRIK Tokyo Ltd.** NEUTRIK Hong Kong Ltd. HK

DE/NL/AT FR JP.

T: +49 8131/280 890 F: +49 8131/280 830 T: +33 1 / 4131 6750 F: +33 1 / 4131 0511 T: +81 3 / 3663 4733 F: +81 3 / 3663 4796 T: +852 / 2687 6055 F: +852 / 2687 6052

T: +44 1983 / 811 441 F: +44 1983 / 811 439 Draft. Nr.: BDA 094 / 3102M08511 | Update: 28.09.2009 | Data subject to change without prior notice. @2009 NEUTRIK* .ALL RIGHT'S RESERVED.

