



## **Instructions for VZ-LSP Professional Camera Support**

The VZ-LSP camera support is a lightweight, portable and durable piece of equipment, but like any precision-crafted instrument, it can be damaged through abuse. By following some simple guidelines, the LSP will provide years of high-quality support:


- When storing the LSP, do not place heavy objects on top of the unit.
- Do not use cameras heavier than 8 pounds on the LSP.
- Store the LSP in a cool, dry place.
- Do not run or jump while using the LSP to support your camera.
- Periodically wipe the LSP with a lint-free cloth to ensure crisp, trouble-free adjustments.

The LSP is designed to be adjustable at various points for maximum comfort and stability, so you may want spend some time discovering the optimal combination of adjustments for your individual needs.


1. The LSP comes to you in a compacted, folded position, and we recommend you store the unit this way.



2. Unfold the LSP by loosening the knob at point A. Place the curved shoulder rest on your shoulder and adjust the length of the abdominal support bar by loosening the knob at point B. Once you have the angle and length roughly adjusted, you can fine-tune the other adjustment points for comfort and stability.

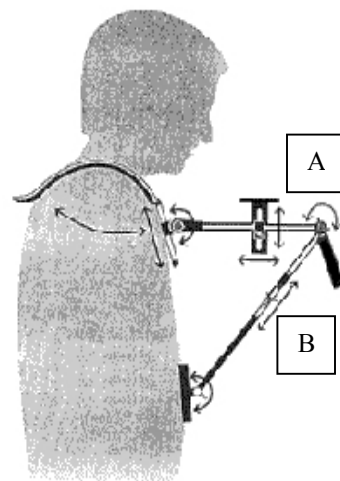

3. You can adjust the position of the curved shoulder rest by loosening the metal lever at point C. Adjust the angle of the abdominal support plate by loosening the metal lever at point D. Once you have the LSP generally adjusted to your body, you can mount the camera.

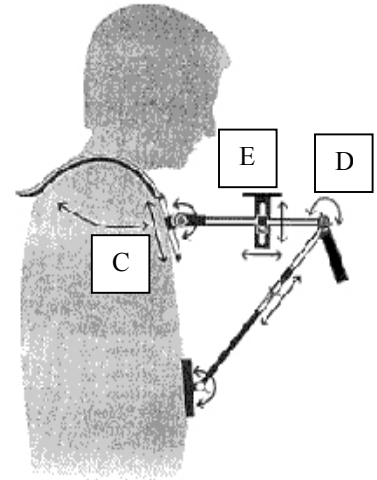

4. Mount the camera on the bracket at point E by inserting the screw into the threaded mount on the underside of your camera. You can adjust the elevation of your camera by loosening the knob on your left-hand side, and you can adjust the forward position by loosening the knob on your right-hand side.
5. These are only general suggestions for adjusting your LSP – you will probably want to experiment a bit to determine the best positioning of each pivot point. The adjustments are fairly intuitive, so don't worry about following any set guidelines – ***set up the LSP so it feels stable and comfortable and be sure to thoroughly tighten all knobs and levers.***

### **USING THE LSP WITH A LENS CONTROLLER**

When using the LSP with a Varizoom lens controller, you can clamp it onto the LSP handle. With the VZ-PG-L controller (only) you have the option of purchasing the Deluxe Swivel Clamp (VZ-DC), which enables you to remove the LSP handle and mate the VZ-PG-L directly LSP at the serrated clutch (as seen on right).



Toll-free assistance in US: 888-826-3399  
Elsewhere: 512-219-7722