
INSTALLATION INSTRUCTIONS



Extra Large Dual Column Ceiling Mount



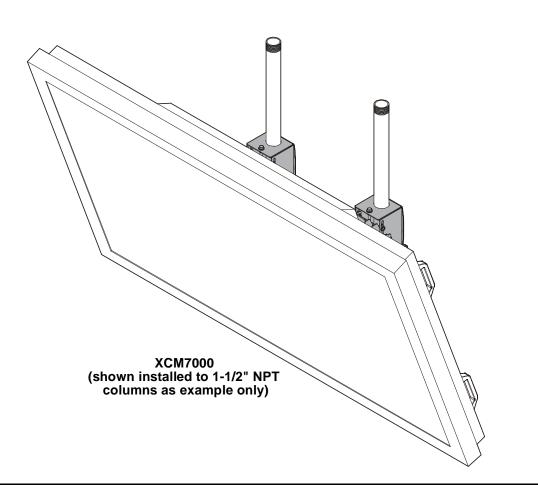

DISCLAIMER

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® is a registered trademark of Milestone AV Technologies. All rights reserved.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.

Λ CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.

Λ WARNING: Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.

WARNING: Failure to provide adequate structural strength for this component can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this component is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the component.

WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components located within the mounting system of the XCM7000 does not exceed a maximum weight capacity of 300 lbs (136.1 kg).

WARNING: Never operate this mounting system if it is damaged. Return the mounting system to a service center for examination and repair.




WARNING: Do not use this product outdoors.

NOTE: The XCM7000 dual column ceiling mounts are intended to be used with the UL Listed CPA extension columns and UL Listed CPA Ceiling Plates (not included): CPA330, CPA365, CPA395.

> The following UL Listed Chief ceiling plates WITHOUT swaged collars (not included) may also be used: CMA330, CMA345, CMA395.

--SAVE THESE INSTRUCTIONS--


DIMENSIONS

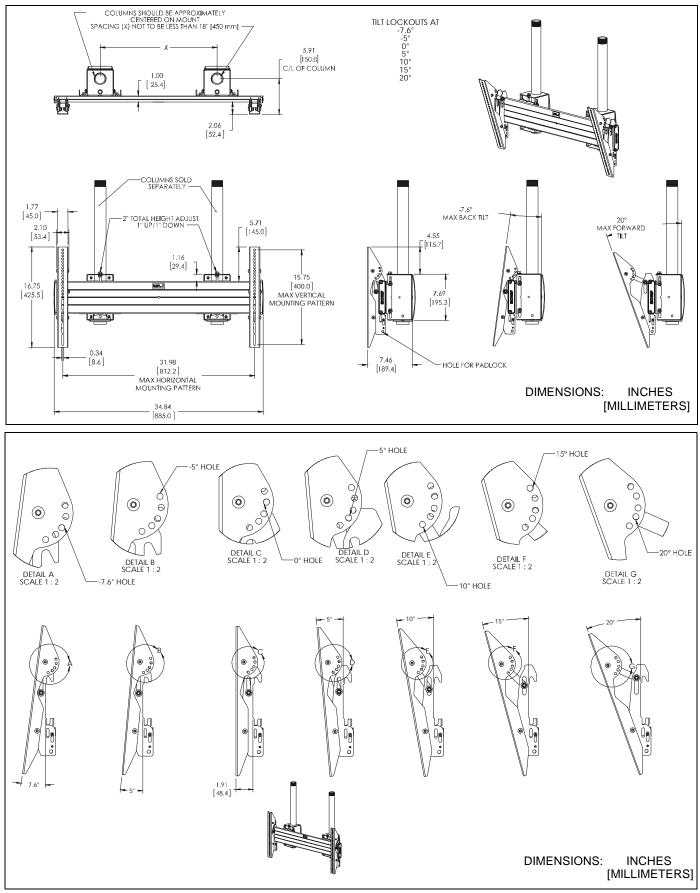


LEGEND

EGEND		
	Tighten Fastener	Pencil Mark
	Apretar elemento de fijación	Marcar con lápiz
	Befestigungsteil festziehen	Stiftmarkierung
	Apertar fixador	Marcar com lápis
	Serrare il fissaggio	Segno a matita
	Bevestiging vastdraaien	Potloodmerkteken
	Serrez les fixations	Marquage au crayon
	Loosen Fastener	Drill Hole
	Aflojar elemento de fijación	Perforar
	Befestigungsteil lösen	Bohrloch
•	Desapertar fixador	Fazer furo
	Allentare il fissaggio	Praticare un foro
	Bevestiging losdraaien	Gat boren
	Desserrez les fixations	Percez un trou
	Phillips Screwdriver	Adjust
	Destornillador Phillips	Ajustar
	Kreuzschlitzschraubendreher	Einstellen
	Chave de fendas Phillips	Ajustar
V	Cacciavite a stella	Regolare
Ð	Kruiskopschroevendraaier	Afstellen
	Tournevis à pointe cruciforme	Ajuster
	Open-Ended Wrench	Remove
	Llave de boca Gabelschlüssel	Quitar
	Chave de bocas	Remover
	Chiave a punte aperte	Rimuovere
	Steeksleutel	Verwijderen
	Clé à fourche	Retirez
	By Hand	Optional
	A mano	Opcional
61	Von Hond	Ontional
6 (Von Hand	Optional
FNS	Com a mão	Opcional
	Com a mão A mano Met de hand	Opcional
	Com a mão A mano	Opcional Opzionale
	Com a mão A mano Met de hand	Opcional Opzionale Optie
	Com a mão A mano Met de hand À la main	Opcional Opzionale Optie En option
	Com a mão A mano Met de hand À la main Hex-Head Wrench	Opcional Opzionale Optie En option Security Wrench
	Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal	Opcional Opzionale Optie En option Security Wrench Llave de seguridad
	Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel	Opcional Opzionale Optie En option Security Wrench Llave de seguridad Sicherheitsschlüssel
	Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada	Opcional Opzionale Optie En option Security Wrench Llave de seguridad Sicherheitsschlüssel Chave de segurança

TOOLS REQUIRED FOR INSTALLATION

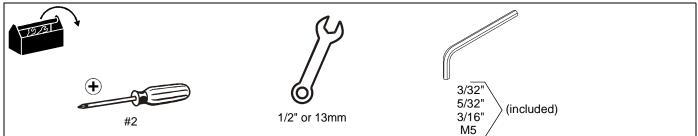



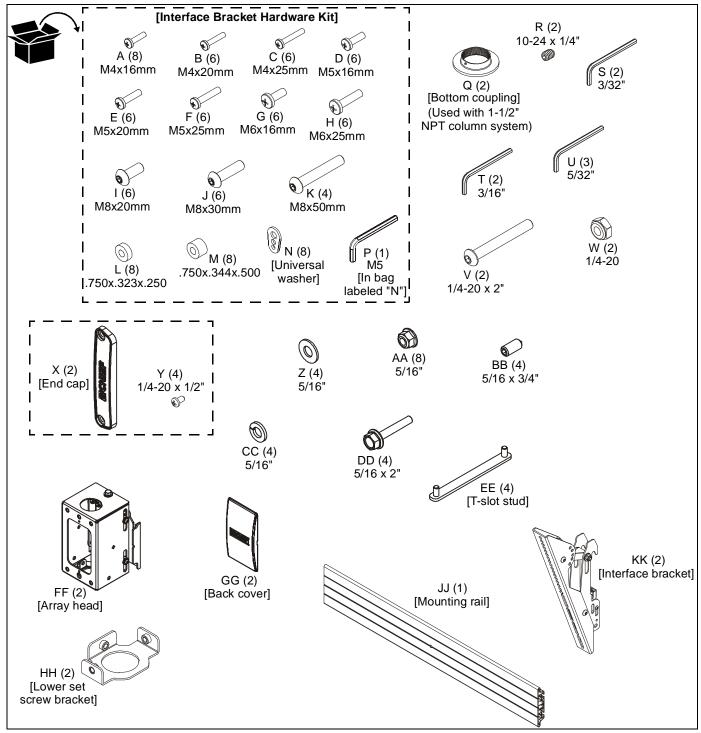

INSTALLATION

- **NOTE:** The following procedure assumes that 2 UL Listed CPA or CMA ceiling plates (not included) and 2 extension columns (not included) have been properly installed following instructions provided with ceiling plates and extension columns.
 - The ceiling plates and columns should be installed approximately centered on mount with spacing between columns to be NO LESS than 18". (See Dimensions drawings.)

IMPORTANT ! : The weight of the system should be evenly distributed across two ceiling plates.

NOTE: Proceed to Attaching Mount to 1-1/2" NPT Column section or Attaching Mount to CPA Extension Column section, as appropriate.

Attaching Mount to 1-1/2" NPT Column

- 1. Turn the array head (FF) upside down. (See Figure 1)
- 2. Remove **AND SAVE** two buttonhead screws from array head. (See Figure 1)
- 3. Remove and discard inner bracket from array head. (See Figure 1)

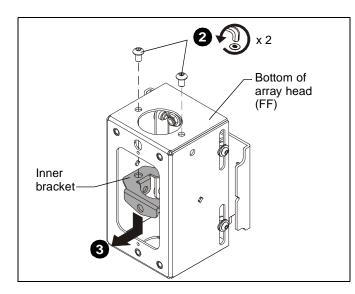


Figure 1



- 4. Turn array head upright. (See Figure 2)
- 5. Turn adjustment bolt on top of array head to slide plate up and enlarge opening on front of array head. (See Figure 2)
- 6. Insert lower set screw bracket (HH) into array head (FF) with three tabs towards sides and back. (See Figure 2)
- Fasten bracket (HH) into place in bottom of array head using buttonhead screws (removed in Step 2) through sides of array head and into side tabs of bracket (HH). (See Figure 2)
- 8. Slide plate (raised in Step 5) back into position by turning adjustment bolt on top of array head. (See Figure 2)

9. Repeat Steps 1 through 8 for remaining array head (FF).

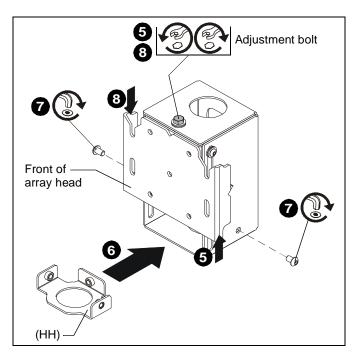


Figure 2

- 10. Slide array head (FF) up from below onto installed column (not included). (See Figure 3)
- 11. Thread bottom coupling (Q) onto installed column until tight, with a minimum of four threads engaged. (See Figure 3)
- 12. Install and tighten one 10-24 x 1/4" set screw (R) into bottom coupling (Q). (See Figure 3)

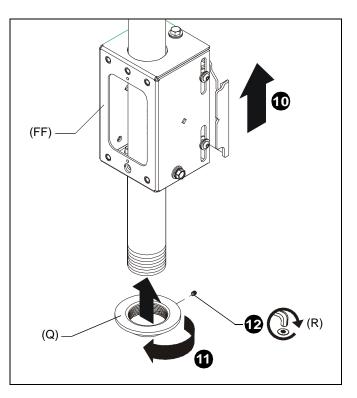


Figure 3

13. Repeat Steps 10 through 12 for remaining array head (FF), assuring that second array head is approximately level with first installed array head.

Attaching Mount to CPA Extension Column

CAUTION: WATCH FOR PINCH POINTS! Do not place fingers between moveable parts.

- 1. Slide array head (FF) up from below onto installed column (not included). (See Figure 4)
- 2. Line up holes in sides of array head (FF) with holes in column.


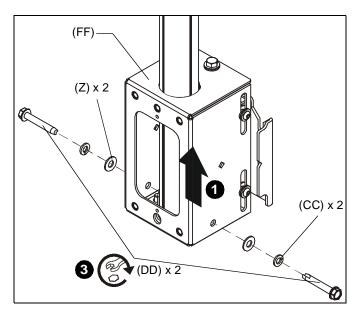


Figure 4

- Install two 5/16" x 2" self-tapping screws (DD) through two 5/16" split washers (CC), two 5/16" flat washers (Z), sides of array head (FF), and into installed column. (See Figure 4)
- 4. Repeat Steps 1 through 3 for remaining array head (FF), assuring that second array head is approximately level with first installed array head.

Adding Mounting Rail

1. Slide four T-slot studs (EE - two in top mounting rail slot and two in bottom) into end of mounting rail (JJ). (See Figure 5)

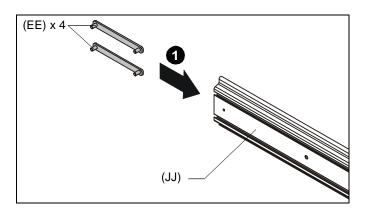

- 2. Partially fasten one 5/16" lock nut (AA) to each stud on **upper** T-slot studs.
- 3. Slide top T-slot studs (EE) with attached lock nuts (AA) down into top openings on array heads (FF). (See Figure 6)
- Slide studs on lower T-slot studs (EE) into lower slots on array head (FF) while bringing mounting rail against array head.
- Tighten array head to mounting rail by tightening lock nuts on upper T-slot studs and adding two 5/16" lock nuts (AA) to lower T-slot studs. (See Figure 6)

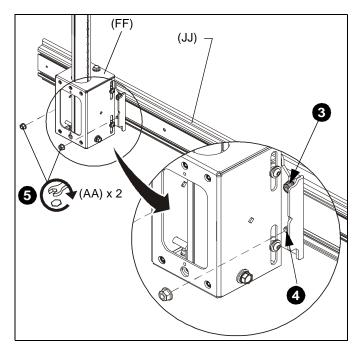


Figure 6

- 6. Repeat for remaining array head (FF).
- Add one end cap (X) to each end of mounting rail, and fasten in place using two 1/4-20 x 1/2" Phillips self-tapping screws (Y) for each end cap. (See Figure 7)

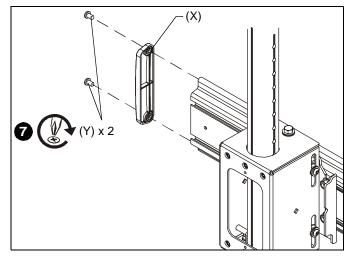


Figure 7

Figure 5

8. Tighten two 5/16" x 3/4" set screws (BB) against column. (See Figure 8)

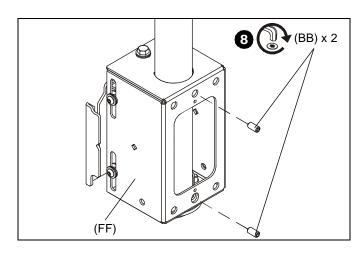


Figure 8

Attaching Interface Brackets to Displays

1. Lower the latch mechanism on each interface bracket (KK). (See Figure 9)

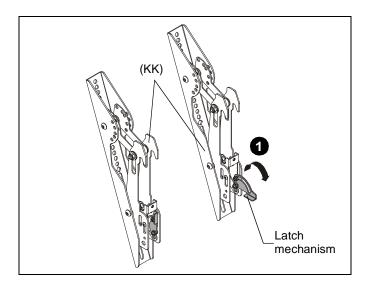


Figure 9

- 2. Align the center of the interface bracket (KK) with center of screen. (See Figure 10)
- **NOTE:** The diamond-shape hole in the bracket corresponds to the center of the mount.

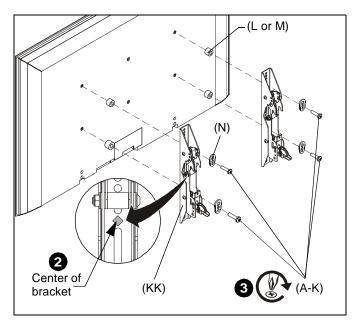


Figure 10

WARNING: IMPROPER INSTALLATION CAN LEAD TO DISPLAY FALLING CAUSING SERIOUS PERSONAL INJURY OR DAMAGE TO EQUIPMENT! Using screws of improper size may damage your display. Properly sized screws will easily and completely thread into display mounting holes. If spacers are required, be sure to use longer screws of the same diameter.

 Select correct screws, spacers (if necessary) and universal washers from the hardware bag (A-N) and attach brackets (KK) to back of screen. (See Figure 10)

Attaching Displays to Mounting Rail

WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components located within the mounting system of the XCM7000 does not exceed a maximum weight capacity of 300 lbs (136.1 kg).

CAUTION: BEFORE adding display to the mounting rail, ensure end caps are in place at BOTH ends of mounting rail!

IMPORTANT ! : The interface bracket tilt may be adjusted either before or after adding display to mounting rail. See **Adjustments** section.

1. Ensure that the latch mechanisms on interface brackets (KK) are already lowered. (See Figure 9)

- While supporting both sides of display, lower display onto center of ceiling mount, hooking top of interface brackets onto front of ceiling mount. (See Figure 11)
- 3. Raise the latch mechanism on both interface brackets to lock bracket in place. (See Figure 11)

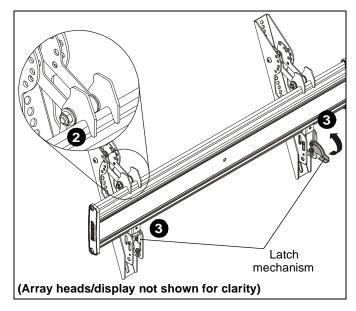


Figure 11


Adjustments

CAUTION: Watch for pinch points! Do not place fingers between moveable parts.

Height Adjustment and Leveling

The ceiling mounts allow up to 2 inches total adjustment.

- 1. Turn the adjustment bolt in the direction necessary to level or adjust height. (See Figure 12)
- 2. Stop adjusting when the desired setting is reached.

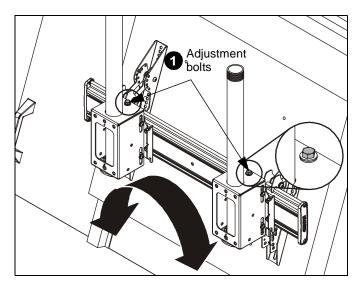

Tilt

NOTE: Two people will be required to adjust the tilt when the display is installed.

The interface brackets allow -7.6° to 20° tilt, and can be locked at -7.6°, -5°, 0°, 5°, 10°, 15° and 20° tilt.

- 1. Adjust tilt as required. (See Figure 13)
- The tilt may be locked using one 1/4-20 x 2" button head screw (V) and one 1/4-20 lock nut (W) per interface bracket. (See Figure 13)
- 3. Repeat for remaining interface bracket.

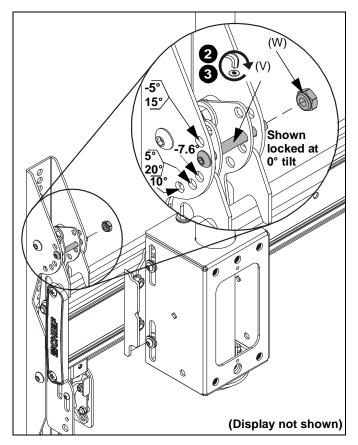


Figure 13

Figure 12

OPTIONAL: Security

1. **OPTIONAL**: Add padlock (not included) to each interface bracket to lock display to ceiling mount. (See Figure 14)

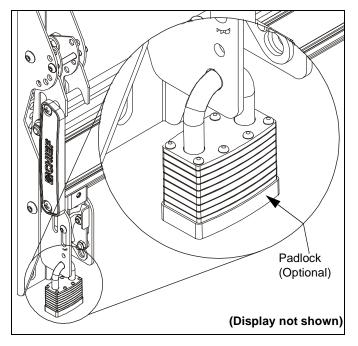


Figure 14

2. Install back cover (GG) into four holes on back of both array heads (FF). (See Figure 15)

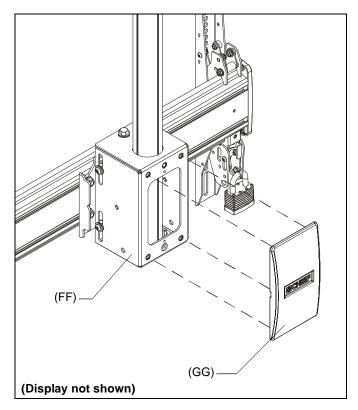


Figure 15



Chief, a products division of Milestone AV Technologies

8800-002455 Rev00 ©2014 Milestone AV Technologies www.chiefmfg.com 01/14

USA/International

Europe

Asia Pacific

- A 6436 City West Parkway, Eden Prairie, MN 55344
- **P** 800.582.6480 / 952.225.6000
- **F** 877.894.6918 / 952.894.6918
- A Franklinstraat 14, 6003 DK Weert, Netherlands
- **P** +31 (0) 495 580 852
- **F** +31 (0) 495 580 845
- A Office No. 1 on 12/F, Shatin Galleria 18-24 Shan Mei Street Fotan, Shatin, Hong Kong
- P 852 2145 4099
- F 852 2145 4477

