KRAMER





KT-107-OWLK Quick Start Guide

This guide helps you install and use your KT-107-OWLK for the first time.

Go to <u>www.kramerav.com/downloads/KT-107-OWLK</u> to download the latest user manual and check if firmware upgrades are available.

Step 1: Check what's in the box

KT-107-OWLK On-Wall Lock

☑ 2 Installation screws ☑ 3 washers

I Quick start guide

Kramer screwdriver


Step 2: Get to know your KT-107-OWLK

The KT-107-OWLK On-Wall Lock secures KT-107, KT-107RB and KT-107S touch panels safely to a wall.


Step 3: Secure KT-107-OWLK to a wall:

The following diagrams illustrate attaching the On-Wall Lock mechanism with the short part above and the long part below. You can also attach the other way around.

 Insert the 2 screws (supplied) into the screw openings and insert the washers from below.




- 2. Place the short part (together with the screws) over the installed on-wall mount unit.
- From below, slide the long frame part towards the short frame part.

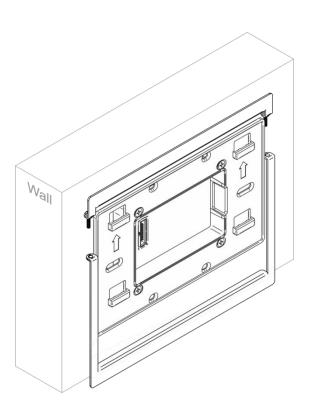



4. Loosely screw the top frame part to the lower frame part (do not tighten the screws).

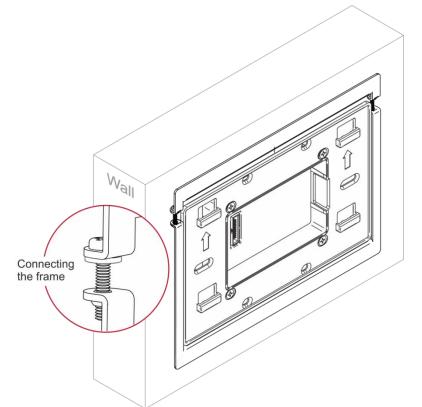

 After hanging the KT-107 on the wall, tighten the two screws until the KT-107 is securely fixed in place.

