

Package Contents:

- B120-000-SL DVI Single Link Active Extender
- External Power Supply (Input: 100-240V, 50/60Hz, 0.5A Output: 5V, 2A)
- Screwdriver for Equalization Adjustment
- · Owner's Manual

Product Features:Supports a maximum video resolution of 1920 x 1080 @ 60Hz


• Extend a DVI-D video signal up to 150 ft. from the source

www.tripplite.com/support

- · Built-in Equalization control to adjust the video image
- HDCP compliant

Installation

Note: Test to make sure that the entire installation works properly before pulling cables through ceilings/walls.

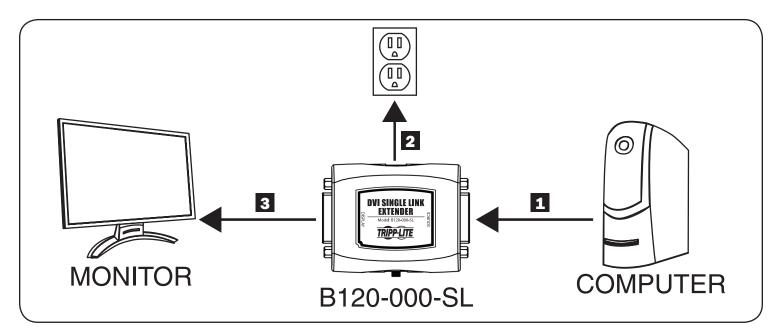

Connect the longer DVI-D Single Link cable between the source and the connector on the B120-000-SL labeled "Source."

Note: For extension distances over 75ft., use 24Awg DVI-D Single Link cable.

- Connect the external power supply to the B120-000-SL, and then plug it into a Tripp Lite Surge Suppressor, Uninterruptible Power Supply (UPS), or Power Distribution Unit (PDU). The Green LED will illuminate to indicate that the unit is receiving power.
- 3 Connect the shorter DVI-D Single Link cable between the monitor and the connector on the B120-000-SL labeled "Display." The Orange LED will illuminate to indicate that there is an active signal between the source and the monitor.

Note: The DVI-D Single Link cable connecting the monitor to the B120-000-SL must be no longer than 16 ft. (5 m.).

4 If necessary, use the equalization control to adjust the video image.

Note: An improper Equalization setting can result in no image being displayed at all. If no image is displayed on your monitor, try adjusting the equalization until an acceptable image is displayed.

Copyright © 2012 Tripp Lite. All rights reserved.

Warranty & Warranty Registration

1-Year Limited Warranty

TRIPP LITE warrants its products to be free from defects in materials and workmanship for a period of one (1) year from the date of initial purchase. TRIPP LITE's obligation under this warranty is limited to repairing or replacing (at its sole option) any such defective products. To obtain service under this warranty, you must obtain a Returned Material Authorization (RMA) number from TRIPP LITE or an authorized TRIPP LITE service center. Products must be returned to TRIPP LITE or an authorized TRIPP LITE service center with transportation charges prepaid and must be accompanied by a brief description of the problem encountered and proof of date and place of purchase. This warranty does not apply to equipment which has been damaged by accident, negligence or misapplication or has been altered or modified in any way.

EXCEPT AS PROVIDED HEREIN, TRIPP LITE MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

EXCEPT AS PROVIDED ABOVE, IN NO EVENT WILL TRIPP LITE BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THIS PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. Specifically, TRIPP LITE is not liable for any costs, such as lost profits or revenue, loss of equipment, loss of use of equipment, loss of software, loss of data, costs of substitutes, claims by third parties, or otherwise.

WARRANTY REGISTRATION

Visit www.tripplite.com/warranty today to register the warranty for your new Tripp Lite product. You'll be automatically entered into a drawing for a chance to win a FREE Tripp Lite product!*

* No purchase necessary. Void where prohibited. Some restrictions apply. See website for details.

🖌 WEEE Compliance Information for Tripp Lite Customers and Recyclers (European Union)



Under the Waste Electrical and Electronic Equipment (WEEE) Directive and implementing regulations, when customers buy new electrical and electronic equipment from Tripp Lite they are entitled to:

· Send old equipment for recycling on a one-for-one, like-for-like basis (this varies depending on the country)

Send the new equipment back for recycling when this ultimately becomes waste

WARNING

Use of this equipment in life support applications where failure of this equipment can reasonably be expected to cause the failure of the life support equipment or to significantly affect its safety or effectiveness is not recommended. Do not use this equipment in the presence of a flammable anesthetic mixture with air, oxygen or nitrous oxide.

Tripp Lite follows a policy of continuous improvement. Product specifications are subject to change without notice.



1111 W. 35th Street, Chicago, IL 60609 USA www.tripplite.com/support

201203198 93-3128