



FiberLink 3350 Series



**3G/HD/SD-SDI Transmission over one
single mode or multimode fiber**

**Installation and Operations
Manual**

Contents

Welcome 3

Features 3

Package Contents..... 3

Technical Specifications

 Model Part Number Specifications 4

 General Specifications..... 4

 Transmitter Specifications 4

 Receiver Specifications 5

 Operating Loss Budgets 6

 Maximum Useable Distance 6

Installation Instructions 7

Alarm Switch Settings & Options 8

Indicator LEDs 9

Operating Pointers..... 10

Troubleshooting 10

Maintenance and Repairs 11

Certifications 11

Warranty 12

Accessories and Related Products 13

Welcome

Thank you for purchasing Artel Video Systems' FiberLink 3350 Series. The 3350 Series is used to transmit 3G/HD/SD-SDI with or without embedded audio and data over a single fiber optic core. The Fiberlink 3350 Series is compatible with single mode or multimode fiber. The 3350 is also compliant with SMPTE 297-2006 for seamless interoperability with other SMPTE 297-2006 devices. The system delivers noise-free transmission that retains all of the signals' initial parameters, regardless of fiber optic cable attenuation. The 3350 Series also provides immunity to video pathological signals over the entire link budget and operating temperature range.

Features

- Signal is equalized and re-clocked prior to fiber optic transmission
- Transmitter features an equalized and re-clocked SDI loop through
- Receiver features two equalized and re-clocked SDI outputs
- Designed for fiber optic interoperability with other SMPTE 297-2006 fiber optic compliant devices up to 2.97 Gbps
- Immunity to pathological signals over entire link budget and operating temperature range
- Compliant with SMPTE 424M-2006, 259M-2006, 292-2006, 297-2006
- Supports transmission of SMPTE 305M-2005, 310M-2004, 344M-2000, DVB-ASI
- Supports both Single Mode and Multimode (62.5u & 50u) fiber types
- Supports 3G/HD/SD-SDI inputs with embedded audio and data and DVB-ASI.
- 14db Optical Link Budget - 2.97 Gbps
- Wide operating temperature range: -10° C to +50° C
- Available in Box and Card versions
- Card version compatible with the FiberLink 6000A Rack Card Cage
- Designed and Manufactured in the USA by Artel

Package Contents

- One FiberLink 3350 or 3351
- This User's Manual

Technical Specifications

Model Part Number Specification

Unit Type	Part Number
Transmitter Box	3350-B7L (LC) 3350-B7S (ST)
Transmitter Rack Card	3350-C7L (LC) 3350-C7S (ST)
Receiver Box	3351-B7L (LC) 3351-B7S (ST)
Receiver Rack Card	3351-C7L (LC) 3351-C7S (ST)

General Specifications

Indicators	Power, 3G data rate lock, HD data rate lock, SD/DVB-ASI data rate lock, Alarm (Card version)
Box Version Dimensions	5.21x3.50x1.15 (in) 133x89x30 (mm)
Weight	6.9 ounces, 196 grams
Number of slots in 6000A card cage	1
Power	9-24 Volts AC or DC 3350 - 1.6 Watts; 3351 - 1.4 Watts 3350 - 5.46 BTU/Hr; 3351 - 4.78 BTU/Hr
Operating Temperature	-10°C to +50°C

3350 Transmitter Specifications:

Serial Video BNC Input

Number of Inputs	1 BNC, 75 Ohms
Data Rate Range	19.4 Mbps to 2.97 Gbps
Standards Supported	SMPTE 424M-2006, 259M, 292, 297-2006, 305M, 344M, DVB-ASI
Re-clocked Data Rates	270 Mbps (SMPTE 259M, DVB-ASI-270) 1.485 Gbps (SMPTE 292) 2.97 Gbps (SMPTE 424M-2006)
Equalization	Automatic up to 100m of Belden 1694A at 2.97Gbps, 200m at 1.485 Gbps and 350m at 270 Mbps
Return Loss	>10dB up to 2.97 Gbps

Technical Specifications

3350 Transmitter Specifications (cont.)

Serial Video BNC Loop Through Output

Number of outputs	1 BNC, 75 Ohms, non-inverting
Signal Level	800mv \pm 10%
DC Offset	0V \pm 0.5V
Rise/Fall Time	<135 ps at 2.97 Gbps per SMPTE 424M; <270ps at 1.485 Gbps per SMPTE 292; 0.4 to 1.5ns at 270 Mbps per SMPTE 259M
Overshoot	<10% of Amplitude
Timing Jitter	<0.2 UI at 270Mbps; <1.0 UI at 1.485 Gbps; <2.0 UI at 2.97 Gbps with color bar signal applied
Alignment Jitter	<0.2UI at 270Mbps, <0.2UI at 1.485 Gbps; <0.3 UI at 2.97 Gbps with color bar signal applied
Re-clocking	At 270 Mbps, 1.485 Gbps & 2.97 Gbps

Optical Output

SMPTE 297-2006 Labeling	L-PC-ABCD-1310
Connector	LC or ST receptacle, PC polish
Wavelength	1310nm (nominal)
Emitter Type	FP Laser
Output Power	-3.5 dBm (nominal)
Re-clocking	At 270 Mbps, 1.485 Gbps & 2.97 Gbps

3351 Receiver Specifications

Optical Input

SMPTE 297-2006 Labeling	PC-ABCD-1310-1550
Connector	LC or ST receptacle, PC polish
Wavelength	1100-1620nm
Minimum Input Power	-17 dBm at 2.97 Gbps, -20 dBm at 1.485 Gbps, -23 dBm at 270 Mbps
Maximum Input Power	0 dBm

Technical Specifications

3351 Receiver Specifications (cont.)

Serial Video BNC Outputs

Number of Outputs	2 BNC, 75 Ohms, both non-inverting
Signal Level	800mv \pm 10%
DC Offset	0V \pm 0.5V
Rise/Fall Time	<135ps at 2.97 Gbps per SMPTE 424M; <270ps at 1.485 Gbps per SMPTE 292; 0.4 to 1.5ns at 270 Mbps per SMPTE 259M
Overshoot	<10% of Amplitude
Timing Jitter	<0.2UI at 270Mbps, <1.0UI at 1.485 Gbps; <2.0UI at 2.97 Gbps with color bar signal applied
Alignment Jitter	<0.2UI at 270Mbps, <0.2UI at 1.485 Gbps; <0.3UI at 2.97 Gbps with color bar signal applied
Re-clocking	At 270 Mbps, 1.485 Gbps and 2.97 Gbps

3350 Transmitter - 3351 Receiver System Specifications

Operating Loss Budget

Single Mode Fiber	0-14 dB at 2.97 Gbps 0-20 dB at 270 Mbps	0-17 dB at 1.485 Gbps
Multimode Fiber (62.5u)	0-14 dB at 2.97 Gbps 0-20 dB at 270 Mbps	0-17 dB at 1.485 Gbps
Multimode Fiber (50u)	0-14 dB at 2.97 Gbps 0-20 dB at 270 Mbps	0-17 dB at 1.485 Gbps

Maximum Useable Distance*

Single Mode Fiber	30 km at 2.97 Gbps 50 km at 270 Mbps	48 km at 1.485 Gbps
Multimode Fiber (62.5u)	0.8 km at 2.97 Gbps 2.5 km at 270 Mbps	1 km at 1.485 Gbps
Multimode Fiber (50u)	1 km at 2.97 Gbps 3 km at 270 Mbps	1.3 km at 1.485 Gbps

*Distance specifications are approximate, based upon connecting a 3350 Transmitter to a 3350 Receiver, and are not guaranteed. Artel cannot estimate or guarantee operating loss budgets when the 3350 Series is used with other, non-Fiberlink devices. Operating loss budget must not be exceeded.

Installation Instructions


The FiberLink 3350 Series of fiber optic transmission systems are ready for immediate use and do not require any special tools or equipment. However, an Optical Power Meter, such as the FiberLink 6615, can be useful in determining optical loss budgets during your systems design and maintenance.

The following instructions describe the typical installation procedure:

- 1) Connect the video source to the video input BNC connector on the transmitter unit.
- 2) Connect the video output cable to one of the two video output BNC connectors on the receiver unit.
- 3) Terminate any unused BNC output connector at 75 Ohms.
- 4) Connect the fiber optic cable to the transmitter and receiver units.
- 5) Connect the Universal Power Supply to the transmitter and receiver units.
For box versions using DC power, please refer to figure 1.
- 6) When power is applied, the green POWER LED should illuminate, indicating the presence of operating power. The 3G/HD/SD RATE LED will give an indication as described in the Indicator LED's and Alarm Circuitry section of this manual.
- 7) The system should now be operational.

Note: The Rack Card version has an additional red LED for indicating the presence of an alarm condition (loss of signal). Refer to Indicator LED's and Alarm Circuitry sections of this manual.

Figure 1:
Power Connector
DC Input Polarity

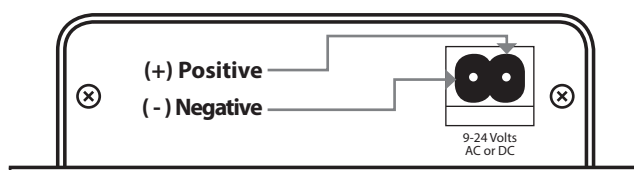

DANGER!

The transmitting element in the FiberLink 3350 transmitter unit contains a solid state Laser Diode located in the optical connector. This device emits invisible infrared electromagnetic radiation which can be harmful to human eyes. The radiation from this optical connector, if viewed at close range with no fiber optic cable connected to the optical connector, may be sufficient intensity to cause instantaneous damage to the retina of the eye. Direct viewing of this radiation should be avoided at all times!

Alarm Switch Settings & Options

The Rack Card version of this product has an additional red indicator LED that illuminates when an alarm condition exists.

The rack card unit also provides an output to drive a model 6020A Alarm Sensing Module which provides an audible tone and activates a set of contacts for external signaling purposes.

Alarm Switch Settings for the Transmitter Card			
Switch Position	Alarm Indication	On	Off
1	Loss of Input Video	Enabled	Disabled
2	N/A	N/A	N/A
Alarm Switch Settings for the Receiver Card			
Switch Position	Alarm Indication	On	Off
1	Loss of Optical Signal	Enabled	Disabled
2	N/A	N/A	N/A

Indicator LEDs

The FiberLink 3350 Series has four integral indicator LEDs that are used to monitor the state of the unit. Card versions have an additional Alarm LED.

Transmitter LEDs

LED	Status	Definition
Power	On	Indicates that correct power has been applied.
3G Rate	Off On	Indicates no 3G-SDI data rate lock Indicates 3G-SDI data rate lock at 2.97 Gbps or 2.97/1.001 Gbps
HD Rate	Off On	Indicates no HD-SDI data rate lock Indicates HD-SDI data rate lock at 1.485 Gbps or 1.485/1.001 Gbps
SD Rate	Off On	Indicates no SD-SDI or DVB-ASI data rate lock Indicates SD-SDI or DVB-ASI data rate lock at 270 Mbps
Alarm	On	Loss of input video (card version only)

Note: The 3G, HD and SD LEDs indicators are off when a non-standard signal is applied.

Receiver LEDs

LED	Status	Definition
Power	On	Indicates that correct power has been applied.
3G Rate	Off On	Indicates no 3G-SDI data rate lock Indicates 3G-SDI data rate lock and re-clocked video available on outputs
HD Rate	Off On	Indicates no HD-SDI data rate lock Indicates HD-SDI data rate lock and re-clocked video available on outputs
SD Rate	Off On	Indicates no SD-SDI or DVB-ASI data rate lock Indicates SD-SDI or DVB-ASI data rate lock and re-clocked video available on outputs
Alarm	On	Loss of optical signal (card version only)

Note: The 3G, HD and SD LEDs indicators are off when a non-standard signal is applied.

Operating Pointers

Remember to check attenuation of the fiber optic cable. The system will only operate properly if these specifications fall within the range of the system's loss budget.

Note: If no signal is applied to the 3350 Transmitter, no optical power will be present on the 3350 Transmitter's output.

Troubleshooting

Multimode fiber optic cable contains an optical fiber with a light carrying "core" that is only .0025 inches (62.5 microns) in diameter. Single mode fiber optic cable has an even smaller "core," only .00032 to .0004 inches (8-10 microns). This is smaller than a human hair! Therefore, any minute particles of dirt or dust can easily block the fiber from accepting or radiating light. To prevent this from happening, always use the provided dust caps when ever optical connectors are exposed to air. It is also a good idea to gently clean the tip of an optical connector with a lint-free cloth moistened with alcohol whenever dust is suspected.

The status of the LEDs should provide the first clue as to the origin of any operational failure. If these are off, it usually means that the fiber is broken or has too much attenuation. Next, be certain that the input and output signal connections are correct.

An optical power meter, such as the FiberLink 6615, a visible light source, such as the FiberLink 6610, and a Three Wavelength Light Source, such as the FiberLink 6620, can greatly assist and expedite troubleshooting of fiber optic transmission systems and are recommended tools all installers should have available.

Finally, although multimode and single mode devices may look the same, they will not operate properly together. Using the wrong device or fiber can easily add more attenuation than specified, resulting in poor overall performance. It should be noted that some of our fiber optic products support both single mode and multimode fiber in the same unit.

If, after reviewing the above possibilities, the system is still not operating, please contact the Customer Service Department for further assistance. If you suspect your problem is caused by the optics or the fiber optic cable, and you have an optical power meter, please take the appropriate measurements prior to contacting support.

Maintenance and Repairs

The FiberLink 3350 Series has been manufactured using the latest semiconductor devices and techniques that electronic technology has to offer. They have been designed for long, reliable and trouble-free service and are not normally field repairable.

Should difficulty be encountered, Artel Video Systems maintains a complete service facility to render accurate, timely and reliable service of all products.

The only maintenance that can be provided by the user is to ascertain that optical connectors are free of dust or dirt that could interfere with light transmission and that electrical connections are secure and accurate. Please see the Troubleshooting section of this manual for additional information.

An optical power meter, such as the FiberLink 6615, a visible light source, such as the FiberLink 6610, and a Three Wavelength Light Source, such as the FiberLink 6620, can greatly assist and expedite troubleshooting of fiber optic transmission systems and are recommended tools all installers should have available.

All other questions or comments should be directed to our Customer Service Department. It should be noted that many "problems" can easily be solved by a simple telephone call.

If you suspect your problem is caused by the optics or the fiber optic cable, and you have an optical power meter, please take the appropriate measurements prior to contacting support.

Certifications



Proven Products, Unrivaled Service, and Great Support



- High performance plug and play products
- Stand alone and card cage versions available
- Solutions for most video, audio, and data formats
- Multimode and single mode versions
- Designed and manufactured in the USA
- Training and installation support available
- 24x7x365 technical support available



Artel Video Systems Corp.
5B Lyberty Way,
Westford, MA 01886 USA
T: 978-263-5775
F: 978-263-9755
sales@artel.com
customercare@artel.com
www.artel.com

All specifications subject to
change without notice. ©2016
Updated 02/16/2016
CS200-128060-00_F