

LBO-DVI Series

DIRECTLY PLUGGABLE LINK BRIDGE™
FIBER OPTIC DVI
TRANSMISSION SYSTEM



BCI reserves the right to make changes to the products described herein without prior notice or consent. No liability is assumed as a result of their use or application. All rights reserved.

©2012 Broadata Communications, Inc.



SAFETY INSTRUCTIONS AND COMPLIANCE DECLARATIONS

PLEASE OBSERVE THE FOLLOWING SAFETY
PRECAUTIONS AS OUR PRODUCTS CONTAIN

CLASS I LASER PRODUCTS

WARNING


Do not disconnect the fiber optic connector while the unit is powered up. Exposure to laser radiation is possible when the laser fiber optic connector is disconnected while the unit is powered up.

Although the fiber optic connectors in this product emit only Class 1 energy that is below the levels considered to be hazardous, one should never stare directly into a fiber optic connector or an unconnected fiber end unless one can be certain that no exposure to laser energy could occur.



This manual is intended for use by trained service personnel. The use of controls, making adjustments, or performing operations other than those specified may result in hazardous radiation exposure.

The following label or equivalent is located on the surface of laser products. This label indicates that the product is classified as a CLASS 1 LASER PRODUCT.

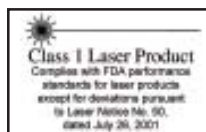

SURGE PROTECTION DEVICE RECOMMENDED

This product contains sensitive electrical components that may be damaged by electrical spikes, surges, electric shock, lightning strikes, etc. Use of surge protection systems is highly recommended in order to protect and extend the life of your equipment.

TABLE OF CONTENTS

1.0	PRODUCT DESCRIPTION	5
2.0	SETUP	7
2.1	MOUNTING	7
2.2	CABLING AND CONNECTORS	7
2.2.1	DVI VIDEO INTERFACE	8
2.2.2	OPTICAL FIBER CONNECTION	8
2.3	DC POWER CONNECTION	10
3.0	OPERATION	11
4.0	MAINTENANCE AND TROUBLESHOOTING	12
4.1	MAINTENANCE	12
4.2	TROUBLESHOOTING	12
5.0	SPECIFICATIONS	13
6.0	SERVICE PROCEDURE	14
6.1	REPLACEMENT POLICY	14
6.2	RETURN AND REPAIR SERVICE	14
7.0	LIMITED WARRANTY	15

1.0 PRODUCT DESCRIPTION

The LBO-DVI Series is a high performance, low cost, miniature, directly pluggable Link Bridge™ Fiber Optic DVI Transmission System. It carries one (1) unidirectional DVI video, together with DDC/EDID, through one (1) multimode fiber. This unique fiber optic transmission system lets your digital flat panel display extend up to 400m at WUXGA (1920x1200 @ 60Hz) resolution. Thumb screws are designed in the rear for convenient installation in tight spaces.

No user adjustment is required for the LBO-DVI system due to the use of advanced digital fiber optic transmission system technology with zero compression and zero bit reduction. This allows for a quick and easy setup, offering trouble-free operation for many years to come. The LBO-DVI supports video resolution up to WUXGA (1920 x 1200 @ 60 Hz) or 1080p @ 60Hz HDTV video resolution, with 12-bit deep color capability.

Figure 1-1 illustrates the TX and RX view of the LBO-DVI model.



Figure 1-1
LBO-DVI TX and RX View

2.0 SETUP

The BCI LBO-DVI Series units are used in pairs. One LBO-DVI-T transmitter unit is located at the near-end (source) and connected through one optical fiber, to the LBO-DVI-R receiver located at the far-end (sink) of the link. Figure 2-1 depicts a typical installation for the LBO-DVI-T/R.



Figure 2-1
LBO-DVI Setup

2.1 Mounting

Before installing the units into your housing, make sure there is enough space to pull and connect both the electrical and optical cables without stressing them beyond the manufacturer's limitations (also known as the minimum bend radius).

2.2 Cabling and Connectors

In order to setup the BCI LBO-DVI properly, make sure to observe the following instructions when installing the proper cables. The LBO-DVI requires two parts to the cabling setup, the electrical and the optical.

2.2.1 DVI Video Interface

Use the following instructions to properly connect your component video as illustrated in Figure 2-2.

1. Directly connect the LBO-DVI-T (Transmitter) unit to the user's DVI video source output.
2. For the receive unit, directly connect the LBO-DVI-R (Receiver) unit to the user's DVI video sink input.



Figure 2-2
Electrical Connection

2.2.2 Optical Fiber Connection

Most cable manufacturers identify individual fibers in the fiber cable. Select an appropriate terminated fiber. Each unit's optical ports in the system are specified for use with SC-connectorized Multimode (50u or 62.5um/125 micron) fiber. Follow the ensuing instructions on installing and connecting the fiber optic links:

1. Ensure the power is off before proceeding with the fiber optic cable installation.
2. Prior to connecting the fiber optic cables, remove and save the dust caps from the optical port of both the LBO-DVI units. Clean the fiber optic connector and use a lint-free cloth to thoroughly wipe the side and end of the ferrule.
3. Connect the fiber from one unit to the other connecting the near end LBO-DVI-T unit's optical port to the far end of the LBO-DVI-R unit's optical RX port as illustrated in Figure 2-3.



Figure 2-3
Fiber Optic Connection

2.3 DC Power Connection

Congratulations! You are now ready to power up the LBO-DVI and set up your network connection. In order to make sure that you have a proper installation, please observe the following:

1. Your AC jack has power.
2. The 5VDC power supply is working.
3. Your electrical system has proper grounding (this ensures that your power supply does not suffer from voltage variations).
4. **Power Surge Protection. This is optional**, but highly recommended. A UPS system provides voltage regularity as well as prevents spikes from occurring, thus protecting your LBO-DVI from sensitive voltage conditions.

The LBO-DVI derives power from an external 5VDC power supply. This power supply is a wall mounted AC/DC adapter, 100-240 VAC, 50-60 Hz, at 1.0A. This power supply comes standard for the LBO-DVI unless otherwise specified.

To provide power to the LBO-DVI, simply connect the power cord, already provided with the units, and connect it to the wall jack. (You will find one power cord per unit). Once the power cord has been connected to the wall jack, connect 5VDC to the unit and the unit should power up immediately.

If you have any problems or concerns, regarding the installation, make sure that you have taken the proper steps to ensure a proper power connection. Otherwise, feel free to contact us for any questions you may have.

3.0 OPERATION

After the installation procedure is completed, the units are ready for operation. To operate the BCI LBO-DVI units, simply apply power as indicated in the previous step. The following table describes the LED activity.

LED Indicator	Description
PWR/LINK	RED when +5VDC is applied to the unit, but no optical link. GREEN when +5VDC is applied to the unit and optical link is established

Table 1
LED Indicator

4.0 MAINTENANCE AND TROUBLESHOOTING

4.1 Maintenance

There is no operator maintenance other than keeping the units clean.

4.2 Troubleshooting

If the BCI LBO-DVI units do not operate properly after installation, check for: possible cable breaks, loose connections, and incorrect cable connections. If a problem exists on the fiber link, please check your fiber connectors for improperly cleaned fiber cables and connectors. If problems persist that may be fiber related, contact BCI at 1-800-214-0222 for further assistance.

For electrical problems, perform the following troubleshooting procedures:

1. **If the POWER indicator is OFF, check for the following:**
 - a. The line cord is plugged into the unit and your outlet has power.
2. **If the POWER indicator is ON, but the units are not working, check for the following:**
 - a. Make sure the appropriate (Multimode) fibers are being used.
 - b. Fiber and fiber connectors are not broken.
 - c. For each unit, the transmit (TX) fiber is connected to the other unit's receiver (RX).

5.0 SPECIFICATIONS

Video

Resolution	Up to 1080p @ 60Hz or 1920x1200 @ 60Hz
Connector	DVI Male Plug
Protocol	DDC/EDID/HDCP Compatible

Optical

Fiber Type	Multimode
Number of Fibers	1
Connector	SC

Physical

Dimension (H x W x D)	0.64" x 1.58" x 3.12"
Power Level (max.)	+5VDC @ 1.0A
LED Indicator	Power/Link
Operating Temperature	0 to +50°C
Humidity	0 to 95% RH, non-condensing

6.0 SERVICE PROCEDURE

6.1 Replacement Policy

Standard products found defective on arrival (DOA) will be replaced, based on availability, within 24 to 48 hours anywhere in the U.S. Please call Customer Service at **800-214-0222** for information.

6.2 Return/Repair Service

The BCI LBO-DVI System contains no user serviceable components. If you have a problem with your unit, please contact the Customer Service Department. To facilitate our return/repair processing please contact Broadata Communications, Inc. to obtain a Return Material Authorization (RMA). Please include the following information:

- Product model number
- Serial Number
- Complete description of problem
- Hardware installation description

Broadata Communications, Inc.
2545 West 237th Street, Suite K
Torrance, CA 90505
1-800-214-0222
(310) 530-1416
(310) 530-5958 (Facsimile)
e-mail: CustomerService@Broadatacom.com
Website: www.broadatacom.com

7.0 LIMITED WARRANTY

Broaddata Communications, Inc. (BCI) warrants, for a period of one year from date of shipment, each product sold shall be free from defects in material and workmanship. BCI will correct, either by repair, or at BCI's election, by replacement, any said products that in our sole discretion prove to be defective and are returned to the manufacturing location within 30 days after such defect is ascertained. All warranties are limited to defects arising under normal use and do not include malfunctions or failure resulting from misuse, abuse, neglect, alterations, electrical power problems, usage not in accordance with product instructions, improper installation, or damage determined by BCI to have been caused by the Buyer or repair made by a third party. Limited warranties granted on products are to the initial customer end-user and are not transferable. OUR LIABILITY UNDER THIS WARRANTY SHALL IN ANY CASE BE LIMITED TO THE INVOICE VALUE OF THE PRODUCT SOLD AND BCI SHALL NOT BE LIABLE TO ANYONE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM THE USE OF ITS PRODUCTS OR THE SALE THEREOF. We make NO WARRANTY AS TO THE MERCHANTABILITY OF ANY GOODS, OR THAT THEY ARE FIT FOR ANY PARTICULAR PURPOSE OR END APPLICATION NOR DO WE MAKE ANY WARRANTY, EXPRESSED OR IMPLIED OTHER THAN AS STATED ABOVE.

Broadata Communications, Inc.
2545 West 237th Street, Suite K
Torrance, CA 90505
1-800-214-0222
(310) 530-1416
(310) 530-5958 (Facsimile)
e-mail: CustomerService@Broadatacom.com
Website: www.broadatacom.com



60000-LBODVI