

CONTENTS *(in order of appearance)*

Important Safety Instructions
 AM2 Manual
 AM1 & AM2 Data Sheet
 Sound System Interconnection
 Warranty
 Declaration of Conformity

22271



IMPORTANT SAFETY INSTRUCTIONS



1. Read these instructions.
 2. Keep these instructions.
 3. Heed all warnings.
 4. Follow all instructions.
 5. Do not use this apparatus near water.
 6. Clean only with a dry cloth.
 7. Do not block any ventilation openings. Install in accordance with manufacturer's instructions.
 8. Do not install near any heat sources such as radiators, registers, stoves, or other apparatus (including amplifiers) that produce heat.
 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 10. Protect the power cord and plug from being walked on or pinched particularly at plugs, convenience receptacles, and the point where it exits from the apparatus.
 11. Only use attachments and accessories specified by Rane.
 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 15. The plug on the power cord is the AC mains disconnect device and must remain readily operable. To completely disconnect this apparatus from the AC mains, disconnect the power supply cord plug from the AC receptacle.
 16. This apparatus shall be connected to a mains socket outlet with a protective earthing connection.
 17. When permanently connected, an all-pole mains switch with a contact separation of at least 3 mm in each pole shall be incorporated in the electrical installation of the building.
 18. If rackmounting, provide adequate ventilation. Equipment may be located above or below this apparatus, but some equipment (like large power amplifiers) may cause an unacceptable amount of hum or may generate too much heat and degrade the performance of this apparatus.
 19. This apparatus may be installed in an industry standard equipment rack. Use screws through all mounting holes to provide the best support.
- WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

WARNING



To reduce the risk of electrical shock, do not open the unit. No user serviceable parts inside. Refer servicing to qualified service personnel.

The symbols shown below are internationally accepted symbols that warn of potential hazards with electrical products.



This symbol indicates that a dangerous voltage constituting a risk of electric shock is present within this unit.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

WARNING: This product may contain chemicals known to the State of California to cause cancer, or birth defects or other reproductive harm.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by Rane Corporation could void the user's authority to operate the equipment.

CAN ICES-3 (B)/NMB-3(B)

Shielded CAT5e or better cables are required in order to comply with the FCC Rules part 15 limits for a Class B digital device.

INSTRUCTIONS DE SÉCURITÉ



1. Lisez ces instructions.
2. Gardez précieusement ces instructions.
3. Respectez les avertissements.
4. Suivez toutes les instructions.
5. Ne pas utiliser près d'une source d'eau.
6. Ne nettoyer qu'avec un chiffon doux.
7. N'obstruer aucune évacuation d'air. Effectuez l'installation en suivant les instructions du fabricant.
8. Ne pas disposer près d'une source de chaleur, c-à-d tout appareil produisant de la chaleur sans exception.
9. Ne pas modifier le cordon d'alimentation. Un cordon polarisé possède 2 lames, l'une plus large que l'autre. Un cordon avec tresse de masse possède 2 lames plus une 3^e pour la terre. La lame large ou la tresse de masse assurent votre sécurité. Si le cordon fourni ne correspond pas à votre prise, contactez votre électricien.
10. Faites en sorte que le cordon ne soit pas piétiné, ni au niveau du fil, ni au niveau de ses broches, ni au niveau des connecteurs de vos appareils.
11. N'utilisez que des accessoires recommandés par Rane.
12. N'utilisez que les éléments de transport, stands, pieds ou tables spécifiés par le fabricant ou vendu avec l'appareil. Quand vous utilisez une valise de transport, prenez soin de vous déplacer avec cet équipement avec prudence afin d'éviter tout risque de blessure.
13. Débranchez cet appareil pendant un orage ou si vous ne l'utilisez pas pendant un certain temps.
14. Adressez-vous à du personnel qualifié pour tout service après vente. Celui-ci est nécessaire dans n'importe quel cas où l'appareil est abîmé : si le cordon ou les fiches sont endommagés, si du liquide a été renversé ou si des objets sont tombés sur l'appareil, si celui-ci a été exposé à la pluie ou l'humidité, s'il ne fonctionne pas correctement ou est tombé.
15. La fiche du cordon d'alimentation sert à brancher le courant alternatif AC et doit absolument rester accessible. Pour déconnecter totalement l'appareil du secteur, débranchez le câble d'alimentation de la prise secteur.
16. Cet appareil doit être branché à une prise terre avec protection.
17. Quand il est branché de manière permanente, un disjoncteur tripolaire normalisé doit être incorporé dans l'installation électrique de l'immeuble.
18. En cas de montage en rack, laissez un espace suffisant pour la ventilation. Vous pouvez disposer d'autres appareils au-dessus ou en-dessous de celui-ci, mais certains (tels que des gros amplificateurs) peuvent provoquer un buzz ou générer trop de chaleur au risque d'endommager votre appareil et dégrader ses performances.
19. Cet appareil peut-être installé dans une baie standard ou un chassis normalisé pour un montage en rack. Visser chaque trou de chaque oreille de rack pour une meilleure fixation et sécurité.

ATTENTION: afin d'éviter tout risque de feu ou de choc électrique, gardez cet appareil éloigné de toute source d'humidité et d'éclaboussures quelles qu'elles soient. L'appareil doit également être éloigné de tout objet possédant du liquide (boisson en bouteilles, vases,...).

ATTENTION



Afin d'éviter tout risque de choc électrique, ne pas ouvrir l'appareil. Aucune pièce ne peut être changée par l'utilisateur. Contactez un SAV qualifié pour toute intervention.

Les symboles ci-dessous sont reconnus internationalement comme prévenant tout risque électrique.



Ce symbole indique que cette unité utilise un voltage élevé constituant un risque de choc électrique.



Ce symbole indique la présence d'instructions d'utilisation et de maintenance importantes dans le document fourni.

REMARQUE: Cet équipement a été testé et approuvé conforme aux limites pour un appareil numérique de classe B, conformément au chapitre 15 des règles de la FCC. Ces limites sont établis pour fournir une protection raisonnable contre tout risque d'interférences et peuvent provoquer une énergie de radiofréquence s'il n'est pas installé et utilisé conformément aux instructions, peut également provoquer des interférences aux niveaux des équipements de communication. Cependant, il n'existe aucune garantie que de telles interférences ne se produiront pas dans une installation particulière. Si cet équipement provoque des interférences en réception radio ou télévision, ceci peut être détecté en mettant l'équipement sous/hors tension, l'utilisateur est encouragé à essayer de corriger cette interférence par une ou plusieurs des mesures suivantes:

- Réorienter ou déplacer l'antenne de réception.
- Augmenter la distance entre l'équipement et le récepteur.
- Connecter l'équipement à une sortie sur un circuit différent de celui sur lequel le récepteur est branché.
- Consulter un revendeur ou un technicien radio / TV expérimenté.


ATTENTION: Les changements ou modifications non expressément approuvés par Rane Corporation peuvent annuler l'autorité de l'utilisateur à manipuler cet équipement et rendre ainsi nulles toutes les conditions de garantie.

CAN ICES-3 (B)/NMB-3(B)

Un câble blindé de CAT5 ou de qualité équivalente voir meilleure sont nécessaires afin de se conformer à la réglementation de la FCC chapitre 15 sur les limites concernant les appareils numériques de classe B.



Cartons et papier à recycler.

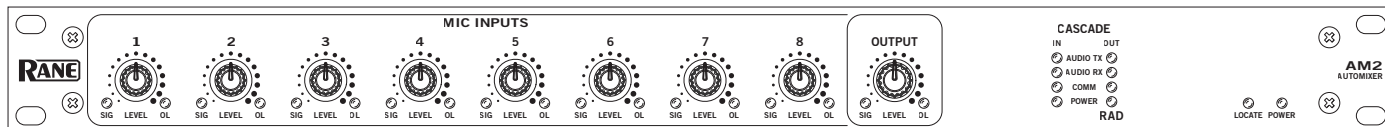

QUICK START

If you're setting up the AM2 automixer, then this Quick Start is for you. It's intended to get your audio working quickly in just 422 words.

Plug microphones into the Mic Inputs using standard XLR mic cables. Condenser mics need the MIC +48V switch position. Use the MIC +0V middle position for dynamic mics. Use the WIRELESS MIC position when connecting a wireless receiver output.

Connect the Main Output XLR to your amplifier or powered loudspeaker and select the LINE switch position. If the Main Output feeds a microphone input, select the MIC position.

Start with the gray OUTPUT LEVEL knob turned all the way down – fully counterclockwise. One at a time for each mic, talk very loudly with a microphone at an appropriate distance for the application and adjust the corresponding black LEVEL control so the loudest speech just barely flickers the red overload (OL) indicators. Once the input gains are set, the AM2 automatically controls the mic mix to avoid feedback. (You won't need to ride these controls.)

Turn on the amplifier/loudspeaker and turn it up about half way. Also turn the OUTPUT LEVEL knob up until the volume is appropriate for your application.


If the system feeds back (that horrible squeal), your mics are hearing too much from your loudspeakers. First try moving the mics farther from the loudspeaker and/or pointing the mics and loudspeakers away from each other. Next, try turning down the gain on the amplifier or loudspeaker. If this does not reduce feedback, don't reach for the black Mic Input knobs, instead turn down the OUTPUT LEVEL.

Daisy-chain up to eight AM2s together by connecting CASCADE IN to CASCADE OUT. The Main Output on each AM2 delivers a gain-sharing automix of it's Mic Inputs and all upstream Inputs. This means the mix of all Mic Inputs is on the Main Output of the last AM2 in the daisy-chain. Though each AM2's OUTPUT LEVEL control always adjusts the volume of it's respective XLR OUTPUT, the last OUTPUT LEVEL affects *all* Mic Inputs to it's Main Output including the RAD PORT.

If your AM2(s) connect to a Rane Mongoose or HAL, the last AM2 in the cascade needs its RAD PORT connected with a shielded CAT 5e cable (or better) to one of the Mongoose or HAL's rear panel Remote Audio Device ports. Some systems may provide a RADX wall plate to connect the RAD Port cable.


If you have line sources such as iPods® or CD/DVD players you would like to mix with these mics, or would like USB audio playback or recording, look at the Rane AM1.

FRONT PANEL DESCRIPTION

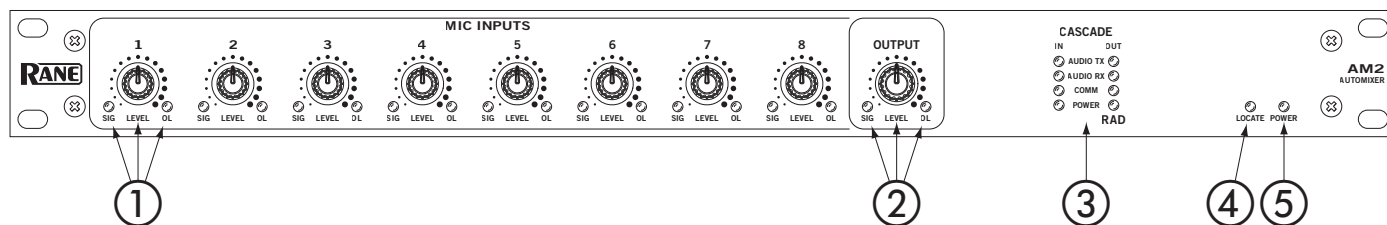

- ① **MIC INPUT LEVEL controls** adjust the mic input gain. The green Signal indicators inform of audio presence. Overload indicators warn of excessive signal levels.
- ② **Main OUTPUT LEVEL control** adjusts the level of the mix exiting the XLR output and the RAD Port output. When connected to an AM1 or AM2 CASCADE IN port, the AM2 OUTPUT LEVEL only affects the XLR Output.
- ③ **CASCADE IN, CASCADE OUT and RAD status indicators** prove that proper cable termination and device configuring has occurred when all four indicators illuminate, when the AM2 is connected to an AM1 or other AM2s. If any of these are off or flashing, a configuration or wiring error is the culprit.
- ④ **LOCATE indicator** helps system installers identify a specific AM2 Automixer when using Rane's Mongoose Tracker or Halogen software.
- ⑤ **POWER indicator** lights whenever adequate power is applied to the unit.

REAR PANEL DESCRIPTION

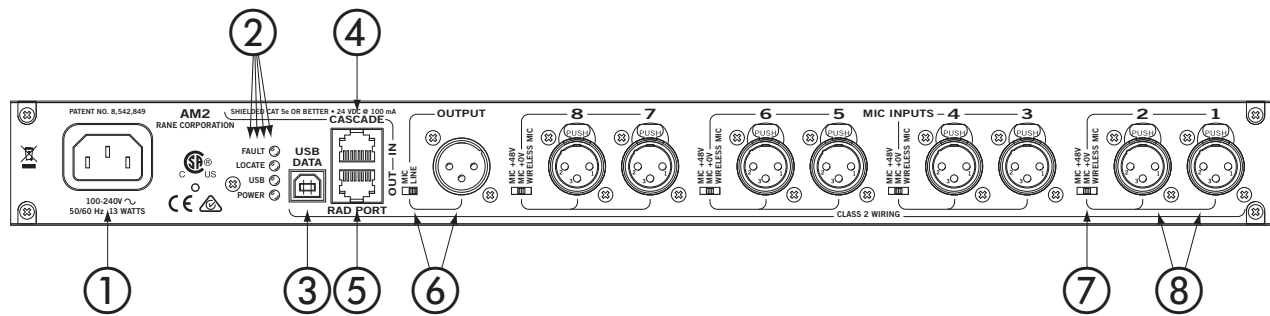

- ① **AC Power IEC input** accepts electrons to power up the AM2. Though it is first in this list, it's best to connect it last.
- ② **FAULT indicator** lights when something goes awry.
LOCATE indicator flashes when toggled from the Mongoose Tracker or Halogen software. When using multiple AM2 devices in a Rane Mongoose or HAL System, this uniquely identifies a specific AM2.
USB indicator lights when a Windows or Apple operating system recognizes the AM2 for firmware updating.
POWER indicator glows when flowing electrons pass in and out of the AC Power IEC input.
- ③ **USB DATA connector** allows updating the AM2 firmware should a future need arise. Firmware updates are made available on the AM2 page at www.rane.com/am2.html.
- ④ **CASCADE IN port** permits adding up to 56 more microphones to the AM2's eight mic inputs using up to seven Rane AM2 automixers, sold separately. Use shielded Ethernet CAT 5e cable (or better) connected from the AM2's CASCADE OUT. See the Connection section for details.
- ⑤ **One jack, two functions:** The **CASCADE OUT** connects to an AM1 or another AM2's CASCADE IN when combining units for more gain-sharing mics. The **RAD PORT** connects to either a Rane Mongoose or HAL's Remote Audio Device port to transport the single-channel, Main Mix of the AM2 to a Rane HAL Multiprocessor, or a Rane Mongoose.
- ⑥ **MAIN OUTPUT XLR connector** contains the main mix of all mics from this AM2, and all mics from preceding AM2s, if they are connected using the CASCADE ports. The front panel OUTPUT LEVEL control adjusts the level exiting this jack.
MIC/LINE Output switch changes this Main XLR Output to mic-level, for feeding the output mix to a mic input device; or line-level for feeding line-level input devices.
- ⑦ **3-position switches** support:
MIC +48V phantom power Mic position for condenser mics.
MIC +0V Mic position for dynamic mics.
WIRELESS MIC position intended for wireless mic receiver outputs.
 Each switch controls a pair of mic inputs, as indicated by the rear panel grouping of two jacks for one switch.
- ⑧ **MIC INPUTS 1 thru 8** accept dynamic or condenser microphones, or the output of a wireless microphone receiver. These inputs are optimized for speech and have a fixed 80 Hz low-cut and 7 kHz high-cut filter. Both filters are 2nd-order Butterworth filters.

CONNECTION

Connect the AC power cord *last* to avoid loudspeakers hurting your sensitive ears.

MIC INPUTS

The eight mic jacks are balanced XLR inputs. Unbalanced mics or wiring can also be used with their inherent lower quality and higher potential for hum and noise. Standard microphone cable with a two-conductor twisted pair plus a shield is best. Rane follows the AES recommended practice of pin 2 positive (hot), pin 3 negative, and pin 1 to shield. If your microphone is unbalanced (only two conductors), see the Sound System Interconnection RaneNote elsewhere in this manual or on Rane's website for the proper cable to use. Or better yet, get a balanced mic.

For condenser microphones which require phantom power, use the MIC +48V switch position. Dynamic mics use the center, MIC +0V position. When using a wireless microphone receiver, use the WIRELESS MIC position.

MAIN OUTPUT

The Main Output is a mono balanced XLR jack. Connect the Main Output XLR using mic cable to your amplifier or powered loudspeaker and select the LINE position on the adjacent switch. If the Main Output feeds a microphone snake or mic input, select the MIC switch position.

USB DATA PORT

Check the AM2 page on Rane's website for potential firmware updates at www.rane.com/am2.html

If there is an update, follow the instructions on our website.

When using the AM2 with Mongoose Tracker or Halogen software, AM2 firmware is always kept up to date via the AM2's RAD PORT.


RAD PORT

If your audio system delivers the AM2's Main Output audio mix using Rane's digital audio transport technology exiting the RAD Port, connect a shielded Ethernet patch cable to the RAD Port. When the Rane HAL or Mongoose at the other end of this connection recognizes the AM2's RAD Port, audio nirvana is achieved and all four adjacent RAD Port Status indicators illuminate.

CASCADE IN / OUT PORTS

Connect a shielded Ethernet patch cable from the CASCADE IN port to another AM2's CASCADE OUT port to add more mics to the mix of this AM2. All four CASCADE IN Status Indicators illuminate when the two devices recognize each other. Connect up to seven more Rane AM2 Automixers for a total of 64 gain-sharing mics. Be certain to connect CASCADE OUT to CASCADE IN throughout – otherwise, nirvana won't be achieved.

HAL Multiprocessor

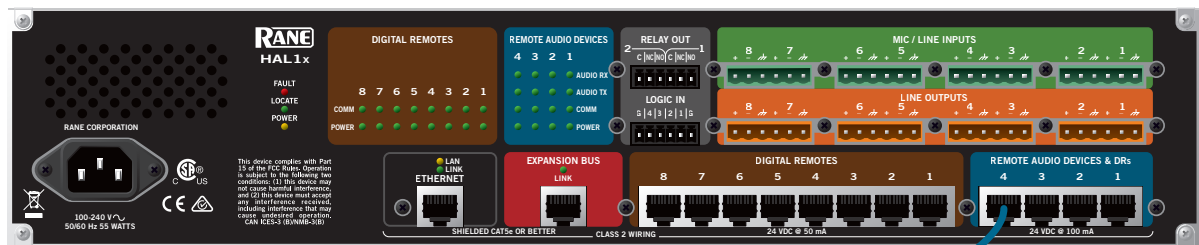

AM1 Automixer




AM2 Automixer



AM2 Automixer



OPERATION

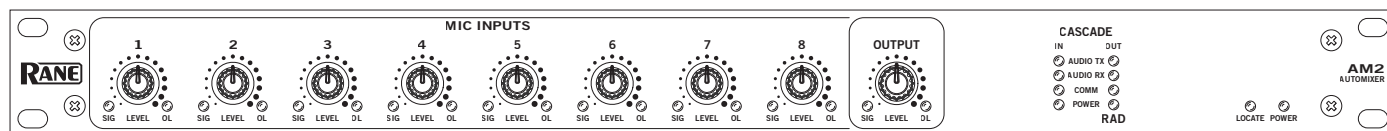

MIC INPUTS

The rear panel, three position switch sets the appropriate gain for condenser, dynamic and wireless microphones as well as selecting phantom power for condenser microphones. The Mic Inputs are automatically mixed using a gain-sharing algorithm. Set the inputs using the black knobs so they do not (or rarely) clip. Then, sit back and relax. If you've already set up the inputs and someone starts talking louder/closer than you expected, feel free to turn them down a little.

The green Signal indicators should easily light for soft talkers even at relatively low Level settings. The Overload indicator should light only occasionally for only the loudest talkers.

Since these Mic Inputs and their underlying gain-sharing automix algorithm are designed and optimized for speech signals, do not use these Inputs with non-speech audio signals such as those from musical instruments or CD/DVD players.

MAIN OUTPUT

The Main Output of an AM2 delivers the gain-sharing automix of it's Mic Inputs and all upstream inputs. The gray OUTPUT LEVEL control knob always adjusts the level of the Main Output. Remember, if mulitple AM2s are daisy-chained together (using CASCADE IN / OUT ports), the automatic mix of all microphones in the system is present at the Main Output of the last AM2 in the daisy-chain.

CASCADE IN PORT

The Cascade Input allows more mics to be added to the gain-sharing mic mix algorithm of the AM2's eight Mic Inputs. When a shielded Ethernet patch cable fed from another AM2's CASCADE OUT port is connected to the next AM2's CASCADE IN port, all cascaded AM2 microphones are automatically added to the automatic Mic Mix of the last AM2 in the chain. (US Patent Pending.)

Cascade audio is 24-bit, 48 kHz, fixed-point for the curious audio nerd.

When all four Cascade Status indicators light, this means the cable is wired properly. If any of the Status indicators are flashing, the cable is not wired properly or damaged. In this case, perhaps an Ethernet crossover cable was accidentally connected, or the cable crimp has an error.

We recommend using shielded twisted-pair for the best EMI performance.


CASCADE IN Status indicators are defined below:

AUDIO TX LED – lights when the AM2's audio is successfully transmitted to, and received by, the AM2. If this is off, check the cable.

AUDIO RX LED – lights when the connected AM2 successfully sends audio which also proves this twist in the cable is correct.

COMM LED – lights green when the AM2's CASCADE OUT is properly communicating with the other AM2 and proves that the twisted pair for Comm in the cable is good. If this indicator is off, the cable is not a happy camper.

POWER LED – is always on when the AM2 is powered. If the AM2 is powered and this is off, make sure the power twisted pair in the connected cable is not shorted.

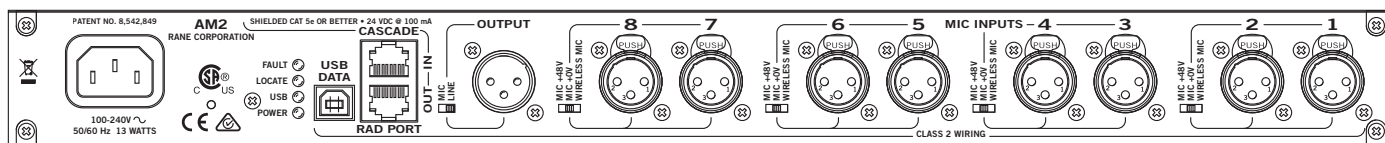

CASCADE OUT / RAD PORT

This port functions as a CASCADE OUT port when connected to the CASCADE IN port of a Rane AM1 or AM2 (sold separately). Connect the CASCADE OUT port of an AM2 to the CASCADE IN port of another automixer, to add its Mic Inputs and all upstream inputs into the automatic gain-sharing mix of the downstream mixer. When cascaded, the signal on the CASCADE OUT port is *unaffected* by the gray OUTPUT LEVEL control.

This port functions as a RAD Port when connected to a Rane Mongoose or HAL (sold separately). The RAD port contains a Rane-specific digital audio transport protocol allowing audio delivery to a HAL Multiprocessor or Mongoose (CobraNet™). The audio exiting the RAD port contains the Main Mix and is *attenuated* by the gray OUTPUT LEVEL control.

For inquisitive technophiles, RAD Port audio is 24-bit, 48 kHz, fixed-point.

RAD PORT Status indicator definitions:

AUDIO TX LED – lights green when audio is received by a Mongoose, HAL or AM2. If this indicator is off, either the cable is bad, or there is a communications error between the devices (see COMM LED below).

AUDIO RX LED – lights green when the RAD Port successfully receives audio from the Mongoose, HAL or cascaded AM2. If this indicator is off, you may have a bad cable, or the device at the other end of the cable is not powered or connected.

COMM LED – lights green when communication is established between the Mongoose, HAL or a cascaded AM1 or AM2. This indicator turns off if the RAD Port cannot communicate with the other device for some reason – likely due to a faulty cable.

POWER LED – lights green when the RAD Port is receiving 24 volt power from the Mongoose, HAL or cascaded device. This also indicates that the twisted pair for power within the cable is wired and crimped properly. If the Power LED is off and the other end of the cable is plugged into a powered device, there is a problem with the cable.

CobraNet is a trademark of Cirrus Logic Inc.

©Rane Corporation 10802 47th Ave. W., Mukilteo WA 98275-5000 TEL 425-355-6000 FAX 425-347-7757 WEB rane.com



AM1 Features

INPUTS:

- Gain-Sharing Automatic Mic Mixing:
 - 4 XLR Inputs with Level controls & Sig/OL indicators.
 - Select Mic, Mic with 48V phantom, or Line-level.
- Manually Mix:
 - Overall Mic Mix.
 - Two Aux Inputs: dual RCA & 3.5 mm, independently monoed.
 - USB Audio Input (16-bit, 48 kHz).

OUTPUTS (all mono):

- XLR Main with Mic/Line switch, Level control & Sig/OL.
- Dual RCA Record.
- Headphone 1/4" and 3.5 mm Outputs with Level control:
 - Source select cues Mics, Aux 1, Aux 2, USB Input or Output.
- USB Audio Output (16-bit, 48 kHz).
- USB Charge Port for iPod® or other USB-powered devices.
- Rane RAD and Cascade IN RJ-45 Ports:
 - Cascade In Port connects up to seven Rane AM2 Automixers.
 - RAD Port sends Output to Rane HAL or Mongoose Systems.


AM2 Features

INPUTS:

- Gain-Sharing Automatic Mic Mixing:
 - 8 XLR Inputs with Level controls & Sig/OL indicators.
 - Select Mic, Mic with 48V phantom, or Line level.

OUTPUTS (all mono):

- XLR Main with Mic/Line switch, Level control & Sig/OL.
- Rane RAD and Cascade IN RJ-45 Ports:
 - Cascade In Port connects up to seven Rane AM2 Automixers.
 - RAD Port may send Output to Mongoose (CobraNet).
 - RAD Port may send Output to HAL (DSP/control). It is possible to cascade the AM2 mix into Halogen's Gain-Sharing Auto Mixer or Room Combine Processor DSP, so that all mics connected to HAL may gain-share (does not work with the AM1).

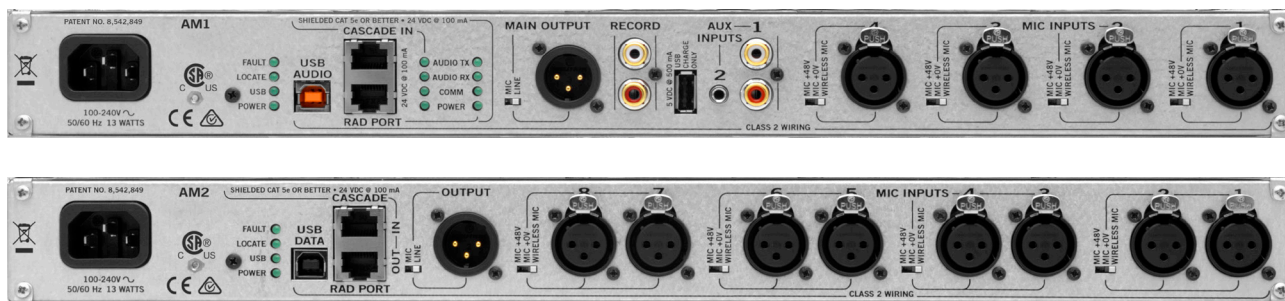

AM1 and AM2 Common Features

The Rane AM1 and AM2 may be each be used on their own as a standalone mixer, or add more gain-shared mics using up to seven AM2 Automixers.

Each of the XLR Mic Inputs offers front panel input Level controls feeding a gain-sharing automatic mixer. The AM1 has four Mic Inputs, the AM2 has eight. Rear panel, 3-position switches for each Mic Input support dynamic mics (no phantom power), condenser mics (48 V), or wireless receiver outputs (+12 dBV max). A front panel Mic Mix Level control adjusts the volume of all automixed mics.

The Mic Inputs are optimized for automixing speech. They have a fixed 80 Hz to 7 kHz bandpass filter (2nd-order Butterworth) to provide the best voice-only automatic mixing using a gain-sharing algorithm.

Signal and Overload indicators monitor every Input Level control and the Output Mix Level. Indicators flank each corresponding Level control.

The XLR Main Output can be set to Mic- or Line-level to feed a mic snake or a +20 dBu max balanced input. The front panel Output Level control affects the XLR Output and the RAD Port output.

AM2 mixers may be cascaded, but only one AM1 may be used, and it must be the final unit in a chain of no more than eight AMs. Simply connect Cascade OUT ports to Cascade IN ports and the final Output level on the last AM controls the main mono output mix.

Use the RAD Port to transport the main output mix digitally via shielded CAT 5e to either a Rane HAL's RAD Port for further signal processing and control, or to a Mongoose for potential routing to a CobraNet network.

Both the RAD and the Cascade IN port have status indicators to aid setup and troubleshooting. Rear panel Fault, Locate, USB and Power indicators inform head-scratchers of device errors, the AM's physical location, positive USB audio device OS registration and AC power status. Duplicate Locate and Power indicators are on the front and rear.

Universal IEC power on the rear supports 100 to 240 VAC and 50/60 Hz.

AM1 Unique Features

The Rane AM1 is part gain-sharing automatic mic mixer, part manual line mixer, part USB audio I/O device, and simultaneously a Rane RAD. Use it as a standalone mic/line mixer with up to four mics, or add more gain-shared mics using up to seven AM2 Automixers for up to 60 gain-shared mics.

Three manually-mixed audio inputs provide a simple user interface and installation. The Aux 1 Input dual RCA and Aux 2 3.5 mm jacks are independently mono'ed, each with a front panel Level control. A dedicated USB Charge port adjacent to Aux 2 provides power to USB devices such as iPods® or other USB-powered devices. The separate orange USB Audio Input also offers a front panel Level control for the 16-bit, 48 kHz digital audio that is mono'ed immediately upon entry.

The AM1 appears in Windows and Apple OS X computers as a standard USB Audio Device, immediately compatible with dozens of audio recording and playback audio applications. The AM1 registers with the OS as a 16-bit 48 kHz device for both incoming and outgoing audio. The USB Audio port doubles as a firmware update port if future updates become available.

The front panel Output Level control affects the XLR Output and the RAD Port output. The analog RECORD RCA Outputs and the digital USB Audio output are both mono, pre-Output Level, containing the same mix as the Main Output.

A front panel pre-Output Selector permits headphone cueing so users can verify input and output operation before bringing new sources into the live Output mix. Both ¼" & 3.5 mm headphone jacks with a Level control are provided.


AM2 Unique Features

The Rane AM2 is both an 8 channel, gain-sharing automatic mic mixer and simultaneously a Rane RAD. Use it as a standalone mic-only mixer, or add more gain-shared mics using up to seven additional AM2 Automixers for up to 64 gain-shared mics.

When an AM2 is used standalone, both the XLR Output and the RAD Port output audio are affected by the front panel Output Level control. When the AM2's Cascade Output feeds a downstream Rane AM1 or AM2, the front panel Output Level control only affects the XLR Output.

The USB port is solely used as a firmware update port if future updates are needed.


Cascaded AM System Example

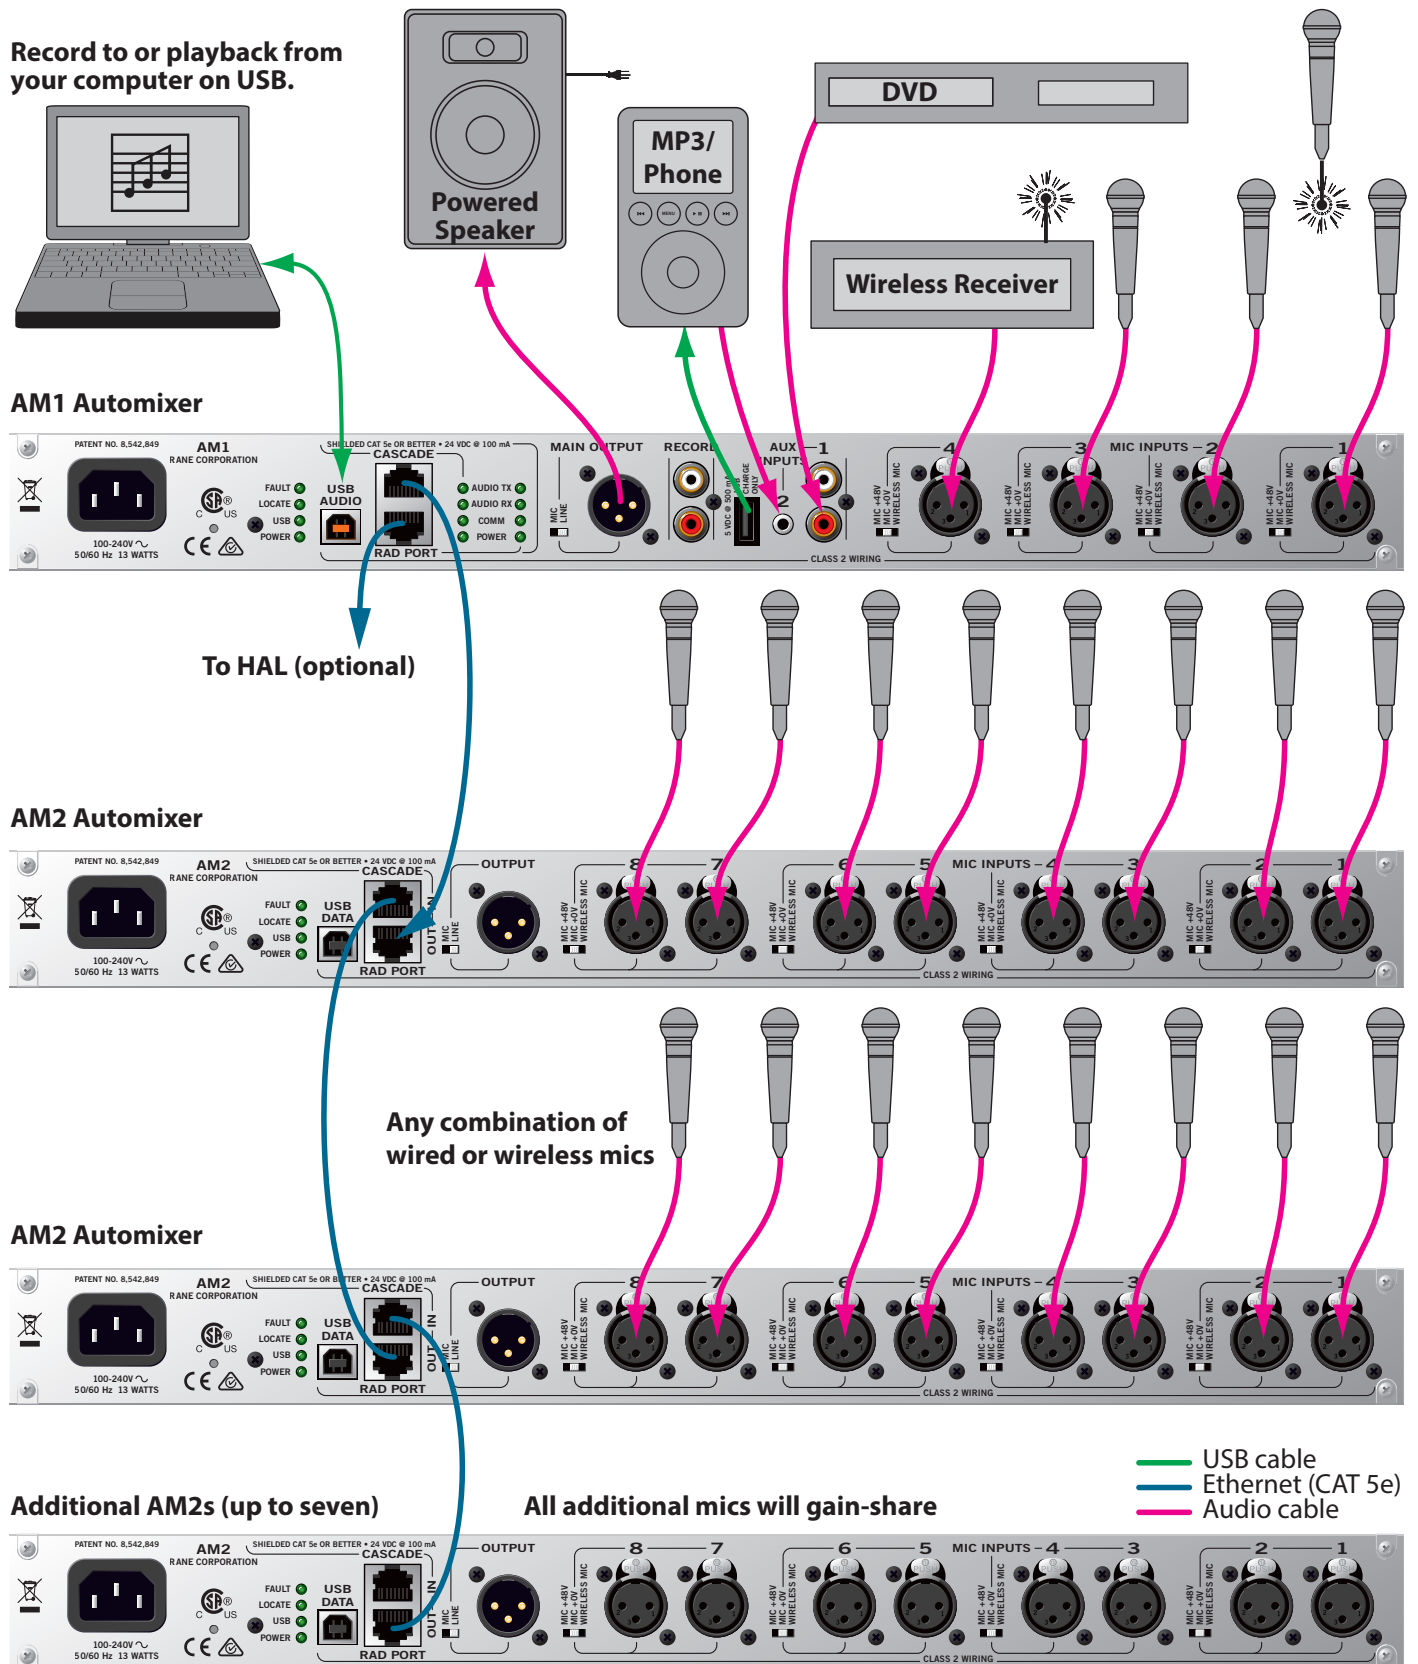

AM1 and AM2 as RADs with Mongoose or HAL



**Mongoose
Tracker**

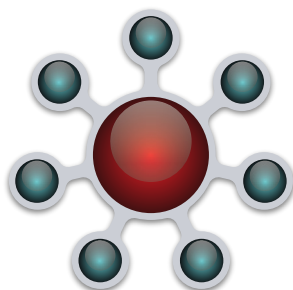

HALOGEN

RADs

An entire family of RAD models interface with HAL or Mongoose Systems for digital conversion at the wall. Each converts analog audio to and/or from 24-bit, 48 kHz digital audio. Shielded CAT 5e (or better) cable and termination transport four digital audio channels – two channels each direction – as well as power, ground and a communications channel, with status indicators at each RAD, host unit, and host software. All RADs are both “location-aware” and hot-swappable with 500-foot homerun connections (66% farther than Ethernet). Most RADs mount in standard US electrical boxes, and are available in white, ivory, or black, with a matched Decora™ plate cover included.

Mongoose

Mongoose can replace the analog mic and line level portions of an audio system with digitized audio over shielded CAT 5e cable (or better). Mongoose can be used with or without CobraNet.

The Mongoose's 32-by-32 digital audio matrix router receives its first 16 audio channels from up to eight RADs via the eight rear panel 8P8C (RJ-45) Remote Audio Device ports. The second 16 matrix input channels come from two eight-channel CobraNet receive (Rx) Bundles via standard CobraNet Primary and Secondary/backup ports. The 32 matrix router outputs transmit 16 channels to eight RADs and 16 more channels to two CobraNet transmit (Tx) Bundles. Mic inputs can be greatly increased by connecting a RAD output from an AM1 and/or cascaded AM2s.

Find out more at rane.com/mongoose

HAL1

Meet HAL, an expert in room combining, paging and distributed audio systems. This groundbreaking architecture is dimensions beyond any other solution. HAL easily guides even novice users through what used to be complex tasks in just minutes. No intricate matrix mixing or presets are required for room combining and paging. No virtual wiring required to distribute pages and background music to multiple zones.

Seamlessly interface HAL to your facility with a broad variety of peripheral devices including smart Digital Remotes, RADs, portable and in-rack automixers, audio I/O and control logic expansion devices, wall sensors, ambient sensing mics, small remote amplifiers, and an advanced Paging Station.

The HAL and Halogen software check the status, location, CAT 5 wiring integrity, and that audio is flowing in all peripheral devices, so you know your system is properly connected and ready to go. HAL is more than just another DSP drag-and-drop system — it has revolutionized system design and installation.

Three HAL Multiprocessors provide various audio I/O and control options for both large and small installations, with expandable systems capable of hundreds of mics (HAL1) or economical and adaptable 4 in x 8 out (HAL3).

Find out more at rane.com/hal

AM Automixers with HAL

An AM1 is a RAD, and an AM2 is a RAD, and the final output of cascaded AM mixers is a RAD. Any of these allow the manually created mono mix to be sent digitally to a Rane HAL's RAD port via a shielded CAT 5e cable (or better). The Rane RADX supports doing so portably – with the AM mixer(s) in a padded rack or on a portable AV cart, for example. Once the AM mix is in the HAL, additional signal processing such as EQ and compression can be added. Control of the mix's level using Rane's DR1 or DR3 Digital Remotes is a breeze.

AM1 use with HAL

The AM1 does not have a Cascade Out Port, therefore it is not possible to cascade the AM1 mix into Halogen's Gain-Sharing Auto Mixer or Room Combine Processor. You must use the AM2 mixer for cascading with these DSP blocks.

AM2 use with HAL

The AM2 mixer digitally cascades into Halogen's Gain-Sharing Auto Mixer or Room Combine Processor. This means the gain-sharing algorithm automatically treats AM2 microphones and any other microphone wired into these DSP blocks as being part of the same gain-share. This provides superior gain before feedback since all mics in the room, regardless of where and how they are plugged in to the audio system, all work as one. This maintains your feedback stability margin.

To maintain PAG & NAG like you never have before, connect the AM2's Cascade Out jack with a shielded CAT 5e (or better) cable into any HAL's RAD port. In Halogen software, in the Processing Workspace, drag the AM2 onto the Cascade In on either a Gain-Sharing Auto Mixer or a Room Combine Processor.

You can cascade as many AM2 mixers into these two DSP blocks as you have RAD Ports available. With a maximum of 36 total RAD ports in a HAL1 full with EXP1s, and a maximum of 8 AM2s cascaded externally, over two thousand possible channels are possible!



Features and Specifications

XLR Inputs	Mono, Balanced, Mic/Line Selectable
Phantom Power	+48V per IEC 60268-15, Selectable in Mic mode
Maximum Input	-18 dBV / -6 dBV / +12 dBV (Dynamic / Condenser / Wireless)
Input Impedance	2.01k, 1%
Input Gain Range (Mic/Wireless)	-80 to +34 dB / -80 to +26 dB
Frequency Response	80 Hz to 7 kHz, 2nd-order Butterworth, +0/-3 dB, -20 dBFS, Extended vocal range
AM1 Aux Inputs 1 / 2	Dual Mono, Unbalanced, RCA / 3.5 mm TRS
Maximum Input	+8 dBu
Input Impedance	18.8 k Ω , 1%
Gain Range	-80 to +12 dB
Frequency Response	20 Hz to 20 kHz, +0/-0.25 dB
Main Output	Mono, Balanced, XLR
Maximum Output (Mic/Line)	-20 / +20 dBu, 10 k Ω load
Output Impedance (Mic/Line)	51 / 300 Ω , 1%
Output Gain Range	-80 to 0 dB
Dynamic Range (Line)	101 dB re +20 dBu, 20 kHz BW, A-weighted, 0 dB gain, 10 k Ω load
AM1 Frequency Response	23 Hz to 20.5 kHz, +0/-3 dB
AM2 Frequency Response	80 Hz to 7 kHz, +0/-3 dB, -20 dBFS
AM1 THD+N	< 0.01%, 22 Hz to 20 kHz, A-weighted, +4 dBu, 0 dB gain, 10 k Ω load
AM2 THD+N	< 0.02%, 100 Hz to 7 kHz, A-weighted, +4 dBu, 0 dB gain, 10 k Ω load
AM1 Record Output	Dual Mono, Unbalanced, RCA
Maximum Output	+12 dBu, 10 k Ω load
Output Impedance	602 Ω , 1%
Frequency Response	23 Hz to 20.5 kHz, +0/-3 dB
Dynamic Range	101 dB re +12 dBu, 20 kHz BW, A-weighted, 0 dB gain, 10 k Ω load
THD+N	< 0.01%, 22 Hz to 20 kHz, A-weighted, +4 dBu, 0 dB gain, 10 k Ω load
AM1 Headphone Output	Dual Mono, Unbalanced, 1/4" and 3.5mm TRS
Maximum Output	+9 dBu, 150 Ω load
Maximum Output Power	30 mW into 150 Ω
Output Gain Range	-63 to +16 dB
Frequency Response	23 Hz to 20.5 kHz, +0/-3 dB
Dynamic Range	101 dB re +9 dBu, 20Hz to 20 kHz BW, A-weighted, 0 dB Gain, 150 Ω load
THD+N	< 0.06%, 22 Hz to 20 kHz, A-weighted, +4 dBu, 0 dB gain, 150 Ω load
LED Meters	Mono, peak detecting
Signal	-50 dBFS, Green LED, Peak-Reading
Overload	-0.5 dBFS, Red LED, Peak-Reading
RAD / Cascade In / Out	8P8C (RJ-45) Connector. The AM2 has a Cascade Output, the AM1 does not.
Sample Rate and Resolution	48 kHz @ 24 bits, fixed-point
AM1 USB Digital Audio	Dual Mono In/Out, USB-B connector
Sample Rate and Resolution	48 kHz @ 16 bits
AM1 USB Charge Only Port	USB-A Connector
Output Voltage and Current	+5 V max @ +500 mA max
Unit	All Steel Construction
Universal Line Voltage	100 to 240 VAC, 50/60 Hz, 13 W
Conformity	CE, FCC, cCSAus
U.S. Patent No. 8,542,849	
Size	1U 1.75"H x 19"W x 8.5"D (4.4 cm x 48.3 cm x 21.6 cm)
Weight	5 lb 4 oz (2.4 kg)
Shipping Size	4.5" x 20.3" x 13.75" (11.5 cm x 52 cm x 35 cm)
Shipping Weight	9 lb (4.1 kg)
	<i>Note: 0 dBu = 0.775 Vrms</i>

Applications

Facilities and rental agencies are called upon to provide either equipment, or equipment and operators, for meetings or conferences needing A/V support. The equipment providers must ensure audio quality throughout the event to get repeat business. However, the provided equipment may be operated by presenters who have no audio experience. If an operator is sent with the equipment to set up and manage the system during the presentation, that operator may have little audio experience. Pitfalls abound when interconnecting the system, and managing multi-microphone gain before feedback, mixing and volume. Handling iPod and laptop playback and/or recording adds even more complexity. Enter the Rane AM Automixer.

The AM1 makes it easy for an inexperienced operator to quickly set up and manage audio for a multimedia presentation involving up to four participants with microphones (wired or wireless) and several program audio sources (e.g., DVD, Laptop, MP3 player).

The AM2 easily handles an eight-person discussion panel or board meeting. Additional AM2 mixers easily handle more mics when needed, all gain-sharing, making operation simple.

The AM1 provides line audio sources, manually mixed since there is no acoustic feedback potential. The AM1's flexible line input combination of RCA, 3.5 mm and separate USB Charge and Audio I/O ports makes integration and cabling easy. And since the USB Audio port can simultaneously playback audio and record the AM1's output, the same laptop can be a source and a recording device to document AV meetings, presentations, trainings, and family karaoke nights for AV contractor employees.

The AM Automixer offers a professional integrated solution that provides superior automatic gain before feedback while eliminating operator error with simple controls. The microphone gain-sharing algorithm automatically and appropriately attenuates mics not in use while maintaining the 3 dB per doubling of mics for different (noncoherent) talkers, and 6 dB per doubling for the same (coherent) talker who is directly between two mics. Think of the person wearing a live lavalier or headset, while approaching a live podium mic...no problem!



- AV Rental Systems
- Auditoriums
- Conference Centers
- Houses of Worship
- Hotels
- School AV Nerds
- Panel Discussions
- Podcasting

AM1 Architectural Specifications

The 1U audio device shall provide 4 rear-mounted XLR inputs automatically mixed using a gain-sharing algorithm. Each input shall permit independently selectable mic, mic with 48 volt phantom power, or line input level intended for wireless receiver output. Front panel mic input level controls for each input shall indicate signal and overload and an overall mic mix level control with signal and overload shall be provided.

Three manually-mixed inputs shall include dual RCA inputs, a 3.5 mm stereo jack and dedicated USB charge port, and an independent USB audio input; all three shall be monoed before mixing. Front panel mix level controls for all three inputs shall supply signal and overload indication.

Accommodation for two, post-level audio outputs shall be provided. One on a single XLR male balanced analog output with mic/line selector switch and the second via a Rane RAD Port on RJ-45 providing 24-bit, 48 kHz PCM digital audio transport. A mono, pre-output level mix shall be provided on dual-mono RCA jacks and via a USB Audio port providing 16-bit, 48 kHz PCM audio.

The USB Audio I/O port shall be recognized by Windows and Apple OS X devices as a standard USB audio device permitting simultaneous playback and recording to and from the device.


A cascade input RJ-45 shall permit gain-sharing mic mix expansion in groups of 8 channels from external automixer devices. Up to 60 gain-shared mics shall be supported.

A front panel pre-level selector shall provide headphone cueing with level control of either the mic mix, the RCA input, 3.5 mm input, the USB audio input, or the main output mix. Headphone outputs shall be provided on both ¼" and 3.5 mm jacks.


Universal 100 to 240 volt AC, 50 or 60 Hz operation shall be provided via an IEC rear panel plug.

The unit shall be a Rane AM1.

AM1 Block Diagram

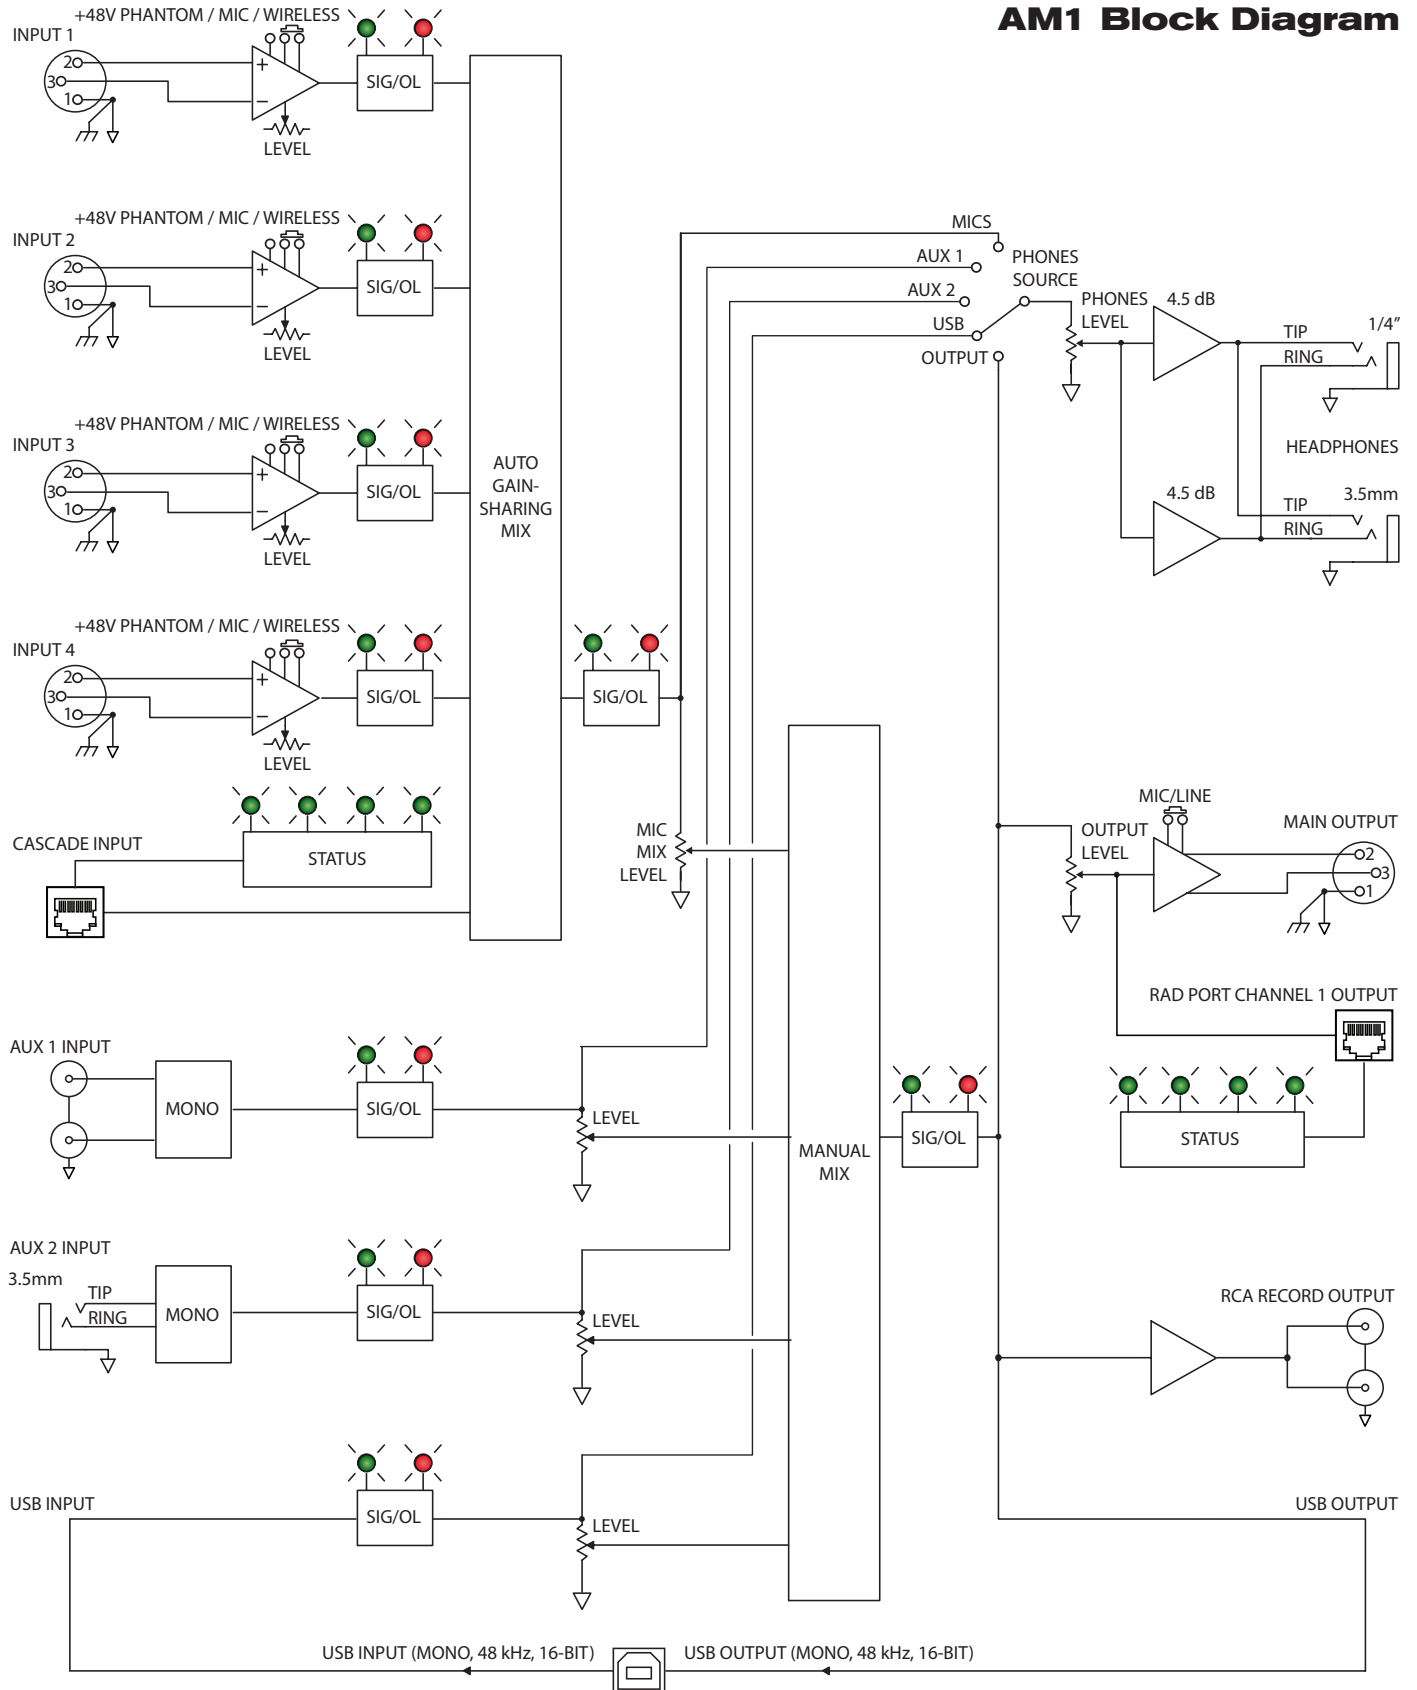

AM2 Block Diagram

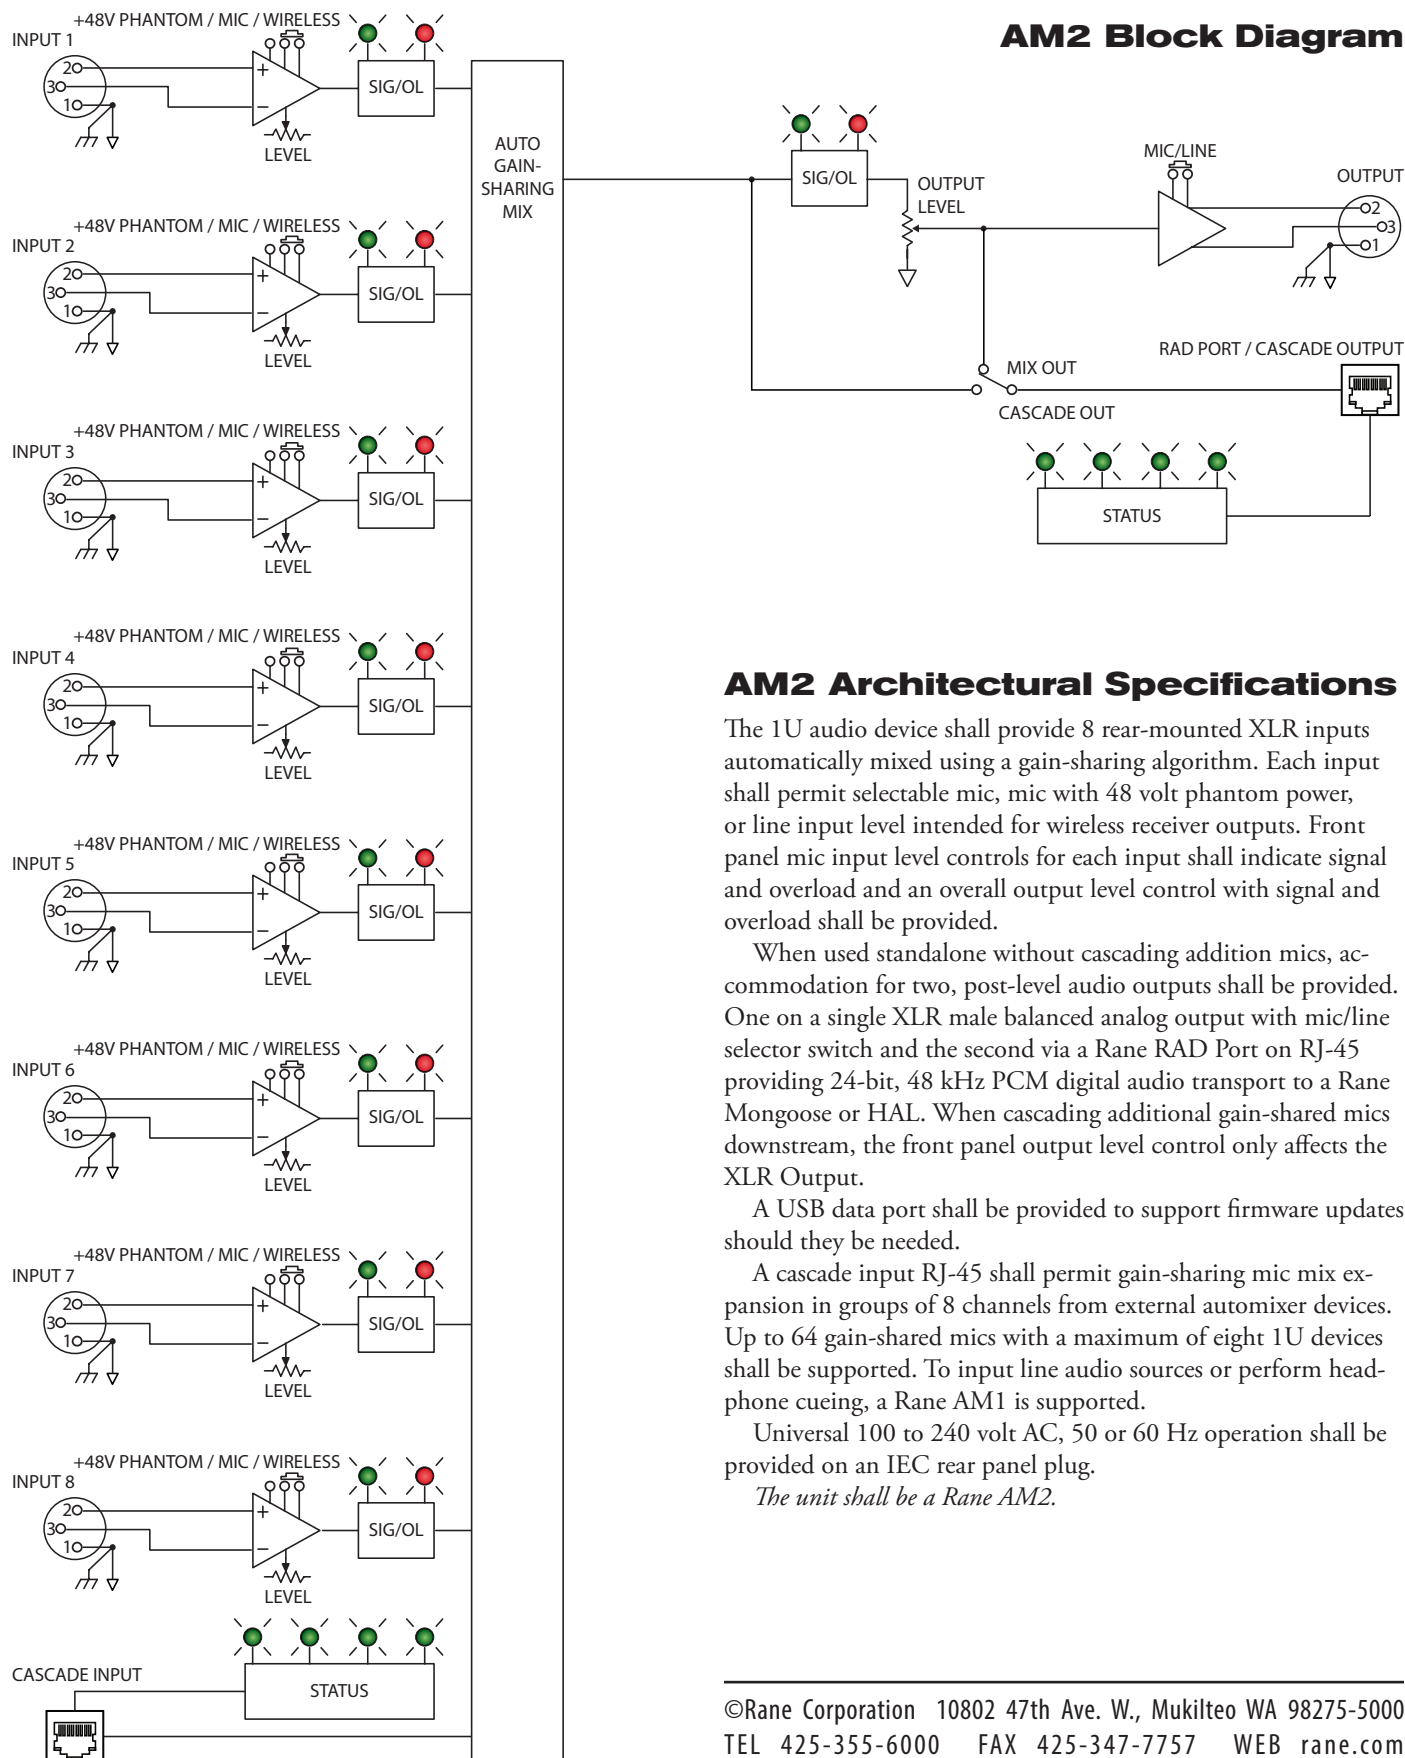

AM2 Architectural Specifications

The 1U audio device shall provide 8 rear-mounted XLR inputs automatically mixed using a gain-sharing algorithm. Each input shall permit selectable mic, mic with 48 volt phantom power, or line input level intended for wireless receiver outputs. Front panel mic input level controls for each input shall indicate signal and overload and an overall output level control with signal and overload shall be provided.

When used standalone without cascading addition mics, accommodation for two, post-level audio outputs shall be provided. One on a single XLR male balanced analog output with mic/line selector switch and the second via a Rane RAD Port on RJ-45 providing 24-bit, 48 kHz PCM digital audio transport to a Rane Mongoose or HAL. When cascading additional gain-shared mics downstream, the front panel output level control only affects the XLR Output.

A USB data port shall be provided to support firmware updates should they be needed.

A cascade input RJ-45 shall permit gain-sharing mic mix expansion in groups of 8 channels from external automixer devices. Up to 64 gain-shared mics with a maximum of eight 1U devices shall be supported. To input line audio sources or perform headphone cueing, a Rane AM1 is supported.

Universal 100 to 240 volt AC, 50 or 60 Hz operation shall be provided on an IEC rear panel plug.

The unit shall be a Rane AM2.

Sound System Interconnection

- Cause & prevention of ground loops
- Interfacing balanced & unbalanced
- Proper pin connections and wiring
- Chassis ground vs. signal ground
- Ground lift switches

Rane Technical Staff

RaneNote 110

© 1985, 1995, 2006, 2007, 2011, 2015 Rane Corporation

Introduction

This note, originally written in 1985, continues to be one of our most useful references. It's popularity stems from the continual and perpetual difficulty of hooking up audio equipment without suffering through all sorts of bizarre noises, hums, buzzes, whistles, etc.— not to mention the extreme financial, physical and psychological price. As technology progresses it is inevitable that electronic equipment and its wiring should be subject to constant improvement. Many things *have* improved in the audio industry since 1985, but unfortunately wiring isn't one of them. However, finally the Audio Engineering Society (AES) has issued a standards document for interconnection of pro audio equipment. It is AES48, titled "AES48-2005: AES standard on interconnections —Grounding and EMC practices — Shields of connectors in audio equipment containing active circuitry."

Rane's policy is to accommodate rather than dictate. However, this document contains suggestions for external wiring changes that should ideally only be implemented by trained technical personnel. Safety regulations require that all original grounding means provided from the factory be left intact for safe operation. No guarantee of responsibility for incidental or consequential damages can be provided. *(In other words, don't modify cables, or try your own version of grounding unless you really understand exactly what type of output and input you have to connect.)*

Ground Loops

Almost all cases of noise can be traced directly to ground loops, grounding or lack thereof. It is important to understand the mechanism that causes grounding noise in order to effectively eliminate it. Each component of a sound system produces its own ground internally. This ground is usually called the audio *signal* ground. Connecting devices together with the interconnecting cables can tie the signal grounds of the two units together in one place through the conductors in the cable. Ground loops occur when the grounds of the two units are also tied together in another place: via the third wire in the line cord, by tying the metal chassis together through the rack rails, etc. These situations create a circuit through which current may flow in a closed “loop” from one unit’s ground out to a second unit and back to the first. It is not simply the presence of this current that creates the hum—it is when this current flows through a unit’s audio signal ground that creates the hum. In fact, even without a ground loop, a little noise current always flows through every interconnecting cable (i.e., it is impossible to eliminate these currents entirely). The mere presence of this ground loop current is no cause for alarm if your system uses properly implemented and *completely* balanced interconnects, which are excellent at rejecting ground loop and other noise currents. Balanced interconnect was developed to be immune to these noise currents, which can never be entirely eliminated. What makes a ground loop current annoying is when the audio signal is affected. Unfortunately, many manufacturers of balanced audio equipment design the internal grounding system improperly, thus creating balanced equipment that is not immune to the cabling’s noise currents. This is one reason for the bad reputation sometimes given to balanced interconnect.

A second reason for balanced interconnect’s bad reputation comes from those who think connecting unbalanced equipment into “superior” balanced equipment should improve things. Sorry. Balanced interconnect is not compat-

ible with unbalanced. The small physical nature and short cable runs of completely unbalanced systems (home audio) also contain these ground loop noise currents. However, the currents in unbalanced systems never get large enough to affect the audio to the point where it is a nuisance. Mixing balanced and unbalanced equipment, however, is an entirely different story, since balanced and unbalanced interconnect are truly *not compatible*. The rest of this note shows several recommended implementations for all of these interconnection schemes.

The potential or voltage which pushes these noise currents through the circuit is developed between the independent grounds of the two or more units in the system. The impedance of this circuit is low, and even though the voltage is low, the current is high, thanks to Mr. Ohm, without whose help we wouldn’t have these problems. It would take a very high resolution ohm meter to measure the impedance of the steel chassis or the rack rails. We’re talking thousandths of an ohm. So trying to measure this stuff won’t necessarily help you. We just thought we’d warn you.

The Absolute Best Right Way To Do It

The method specified by AES48 is to use balanced lines and *tie the cable shield to the metal chassis (right where it enters the chassis) at both ends of the cable*.

A balanced line requires three separate conductors, two of which are signal (+ and –) and one shield (see Figure 1a). The shield serves to guard the sensitive audio lines from interference. Only by using balanced line interconnects can you *guarantee* (yes, *guarantee*) hum-free results. Always use twisted pair cable. Chassis tying the shield at each end also *guarantees* the best possible protection from RFI [radio frequency interference] and other noises [neon signs, lighting dimmers].

Neil Muncy¹, an electroacoustic consultant and seasoned veteran of years of successful system design, chairs the AES

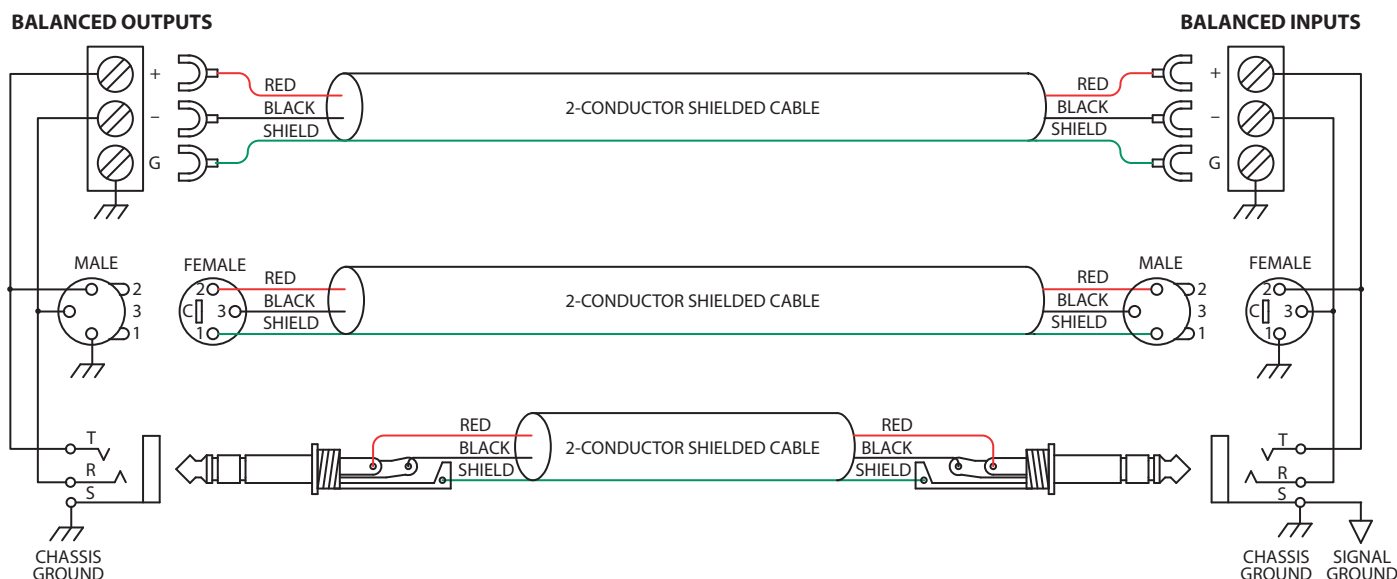


Figure 1a. The right way to do it.

Standards Committee (SC-05-05) working on this subject. He tirelessly tours the world giving seminars and dispensing information on how to successfully hook-up pro audio equipment². He makes the simple point that it is absurd that you cannot go out and buy pro audio equipment from several different manufacturers, buy standard off-the-shelf cable assemblies, come home, hook it all up and have it work hum and noise free. *Plug and play*. Sadly, almost never is this the case, despite the science and rules of noise-free interconnect known and documented for over 60 years (see References for complete information).

It all boils down to using balanced lines, only balanced lines, and nothing but balanced lines. This is why they were developed. Further, that you *tie the shield to the chassis, at the point it enters the chassis, and at both ends of the cable* (more on 'both ends' later).


Since standard XLR cables come with their shields tied to pin 1 at each end (the shells are not tied, nor need be), this means equipment using 3-pin, XLR-type connectors *must tie pin 1 to the chassis* (usually called chassis ground) — not the audio signal ground as is most common.

Not using *signal ground* is the most radical departure from common pro-audio practice. Not that there is any argument about its validity. There isn't. **This is the right way to do it.** So why doesn't audio equipment come wired this way? Well, some does, and since 1993, more of it does. That's when Rane started manufacturing some of its products with balanced inputs and outputs tying pin 1 to chassis. So why doesn't everyone do it this way? Because life is messy, some things are hard to change, and there will always be equipment in use that was made before proper grounding practices were in effect.

Unbalanced equipment is another problem: it is everywhere, easily available and inexpensive. All those RCA and 1/4" TS connectors found on consumer equipment; effect-loops and insert-points on consoles; signal processing boxes; semi-pro digital and analog tape recorders; computer cards; mixing consoles; et cetera.

The next several pages give tips on how to successfully address hooking up unbalanced equipment. Unbalanced equipment when "blindly" connected with fully balanced units starts a pattern of hum and undesirable operation, requiring extra measures to correct the situation.

COMMON (WRONG) PRACTICE

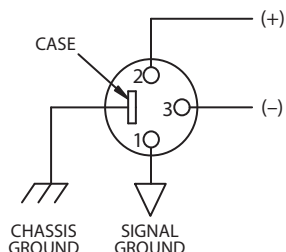

RECOMMENDED PRACTICE

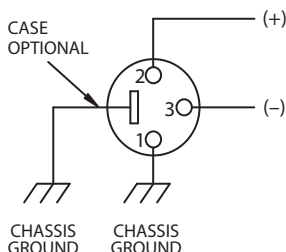


Figure 1b. Recommended practice.

The Next Best Right Way To Do It

The quickest, quietest and most foolproof method to connect balanced and unbalanced is to **transformer isolate all unbalanced connections**. See Figure 2.

Many manufacturers provide several tools for this task, including Rane. Consult your audio dealer to explore the options available.

The goal of these adaptors is to allow the use of *standard cables*. With these transformer isolation boxes, modification of cable assemblies is unnecessary. Virtually any two pieces of audio equipment can be successfully interfaced without risk of unwanted hum and noise.

Another way to create the necessary isolation is to use a *direct box*. Originally named for its use to convert the high impedance, high level output of an electric guitar to the low impedance, low level input of a recording console, it allowed the player to plug "directly" into the console. Now this term is commonly used to describe any box used to convert unbalanced lines to balanced lines.

The Last Best Right Way To Do It

If transformer isolation is not an option, special cable assemblies are a last resort. The key here is to prevent the shield currents from flowing into a unit whose grounding scheme creates ground loops (hum) in the audio path (i.e., most audio equipment).

It is true that connecting both ends of the shield is theoretically the best way to interconnect equipment — though this assumes the interconnected equipment is internally grounded properly. Since most equipment is *not* internally grounded properly, connecting both ends of the shield is not often practiced, since doing so usually creates noisy interconnections.

A common solution to these noisy hum and buzz problems involves disconnecting one end of the shield, even though one can not buy off-the-shelf cables with the shield disconnected at one end. The best end to disconnect is the receiving end. If one end of the shield is disconnected, the noisy hum current stops flowing and away goes the hum — but only at low frequencies. A ground-sending-end-only shield connection minimizes the possibility of high frequency (radio) interference since it prevents the shield from acting as an antenna to the next input. Many reduce this potential RF interference by providing an RF path through

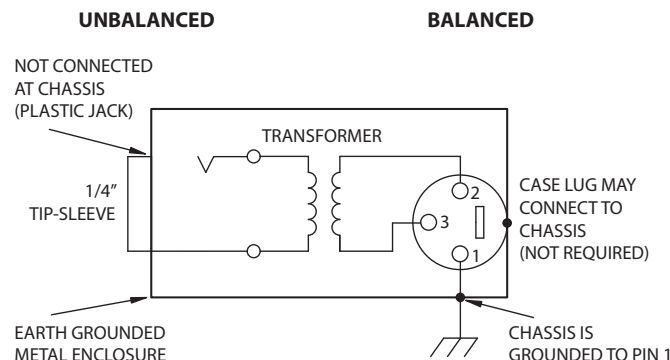


Figure 2. Transformer Isolation

a small capacitor (0.1 or 0.01 microfarad ceramic disc) connected from the lifted end of the shield to the chassis. (This is referred to as the “hybrid shield termination” where the sending end is bonded to the chassis and the receiving end is capacitively coupled. See Neutrik’s EMC-XLR for example.) The fact that many modern day installers still follow this one-end-only rule with consistent success indicates this and other acceptable solutions to RF issues exist, though the increasing use of digital and wireless technology greatly increases the possibility of future RF problems.

If you’ve truly isolated your hum problem to a specific unit, chances are, even though the documentation indicates proper chassis grounded shields, the suspect unit is not internally grounded properly. Here is where special test cable assemblies, shown in Figure 3, really come in handy. These assemblies allow you to connect the shield to chassis ground *at the point of entry*, or to pin 1, or to lift one end of the shield. The task becomes more difficult when the unit you’ve isolated has multiple inputs and outputs. On a suspect unit with multiple cables, try various configurations on each connection to find out if special cable assemblies are needed at more than one point.

See Figure 4 for suggested cable assemblies for your particular interconnection needs. Find the appropriate output configuration (down the left side) and then match this with the correct input configuration (across the top of the page.) Then refer to the following pages for a recommended wiring diagram.

Ground Lifts

Many units come equipped with ground lift switches. In only a few cases can it be shown that a ground lift switch improves ground related noise. (Has a ground lift switch ever *really* worked for you?) In reality, the presence of a ground lift switch greatly reduces a unit’s ability to be “properly” grounded and therefore immune to ground loop hums and buzzes. Ground lifts are simply another Band-Aid to try in case of grounding problems. It is true that an entire system of properly grounded equipment, without ground lift switches, is guaranteed (yes *guaranteed*) to be hum free. The problem is most equipment is *not* (both internally and externally, AC system wise) grounded properly.

Most units with ground lifts are shipped so the unit is “grounded” — meaning the chassis is connected to audio signal ground. (This should be the best and is the “safest” position for a ground lift switch.) If after hooking up your system it exhibits excessive hum or buzzing, there is an incompatibility somewhere in the system’s grounding configuration. In addition to these special cable assemblies that may help, here are some more things to try:

1. Try combinations of lifting grounds on units supplied with lift switches (or links). It is wise to do this with the power off!
2. If you have an entirely balanced system, verify all chassis are tied to a good earth ground, for safety’s sake and hum protection. Completely unbalanced systems never earth ground anything (except cable TV, often a ground loop source). If you have a mixed balanced and unbalanced system, do yourself a favor and use isolation transformers or, if you can’t do that, try the special cable assemblies described here and expect it to take many hours to get things quiet. May the Force be with you.
3. Balanced units with outboard power supplies (wall warts or “bumps” in the line cord) do *not* ground the chassis through the line cord. Make sure such units are solidly grounded by tying the chassis to an earth ground using a star washer for a reliable contact. (Rane always provides this chassis point as an external screw with a toothed washer.) Any device with a 3-prong AC plug, such as an amplifier, may serve as an earth ground point. Rack rails may or may not serve this purpose depending on screw locations and paint jobs.

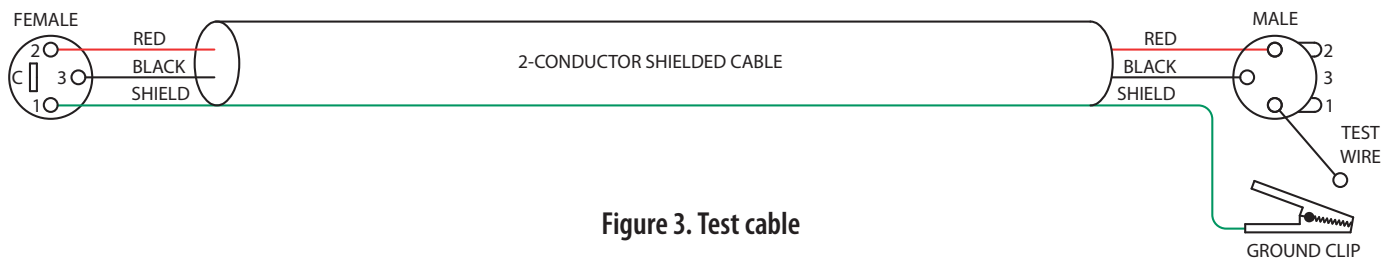


Figure 3. Test cable

Floating, Pseudo, and Quasi-Balancing

During inspection, you may run across a ¼" output called floating unbalanced, sometimes also called pseudo-balanced or quasi-balanced. In this configuration, the sleeve of the output stage is not connected inside the unit and the ring is connected (usually through a small resistor) to the audio signal ground. This allows the tip and ring to “appear” as an equal impedance, not-quite balanced output stage, even though the output circuitry is unbalanced.

Floating unbalanced often works to drive either a balanced or unbalanced input, depending if a TS or TRS standard cable is plugged into it. When it hums, a special cable is required. See drawings #11 and #12, and do not make the cross-coupled modification of tying the ring and sleeve together.

Winning the Wiring Wars

- Use balanced connections whenever possible, with the shield bonded to the metal chassis at both ends.
- Transformer isolate all unbalanced connections from balanced connections.
- Use special cable assemblies when unbalanced lines cannot be transformer isolated.
- Any unbalanced cable must be kept under 10 feet (3 m) in length. Lengths longer than this will amplify all the nasty side effects of unbalanced circuitry's ground loops.

Summary

If you are unable to do things correctly (i.e. use fully balanced wiring with shields tied to the *chassis* at both ends, or transformer isolate all unbalanced signals from balanced signals) then there is no guarantee that a hum-free interconnect can be achieved, nor is there a definite scheme that will assure noise-free operation in all configurations.

References

1. Neil A. Muncy, “Noise Susceptibility in Analog and Digital Signal Processing Systems,” presented at the 97th AES Convention of Audio Engineering Society in San Francisco, CA, Nov. 1994.
 2. *Grounding, Shielding, and Interconnections in Analog & Digital Signal Processing Systems: Understanding the Basics*; Workshops designed and presented by Neil Muncy and Cal Perkins, at the 97th AES Convention of Audio Engineering Society in San Francisco, CA, Nov. 1994.
 3. The entire June 1995 AES Journal, Vol. 43, No. 6, available \$6 members, \$11 nonmembers from the Audio Engineering Society, 60 E. 42nd St., New York, NY, 10165-2520.
 4. Phillip Giddings, *Audio System Design and Installation* (SAMS, Indiana, 1990).
 5. Ralph Morrison, *Noise and Other Interfering Signals* (Wiley, New York, 1992).
 6. Henry W. Ott, *Noise Reduction Techniques in Electronic Systems*, 2nd Edition (Wiley, New York, 1988).
 7. Cal Perkins, “Measurement Techniques for Debugging Electronic Systems and Their Instrumentation,” *The Proceedings of the 11th International AES Conference: Audio Test & Measurement*, Portland, OR, May 1992, pp. 82-92 (Audio Engineering Society, New York, 1992).
 8. Macatee, *RaneNote*: “Grounding and Shielding Audio Devices,” Rane Corporation, 1994.
 9. Philip Giddings, “Grounding and Shielding for Sound and Video,” *S&VC*, Sept. 20th, 1995.
 10. AES48-2005: *AES standard on interconnections — Grounding and EMC practices — Shields of connectors in audio equipment containing active circuitry* (Audio Engineering Society, New York, 2005).
- Band-Aid* is a registered trademark of Johnson & Johnson

To Input














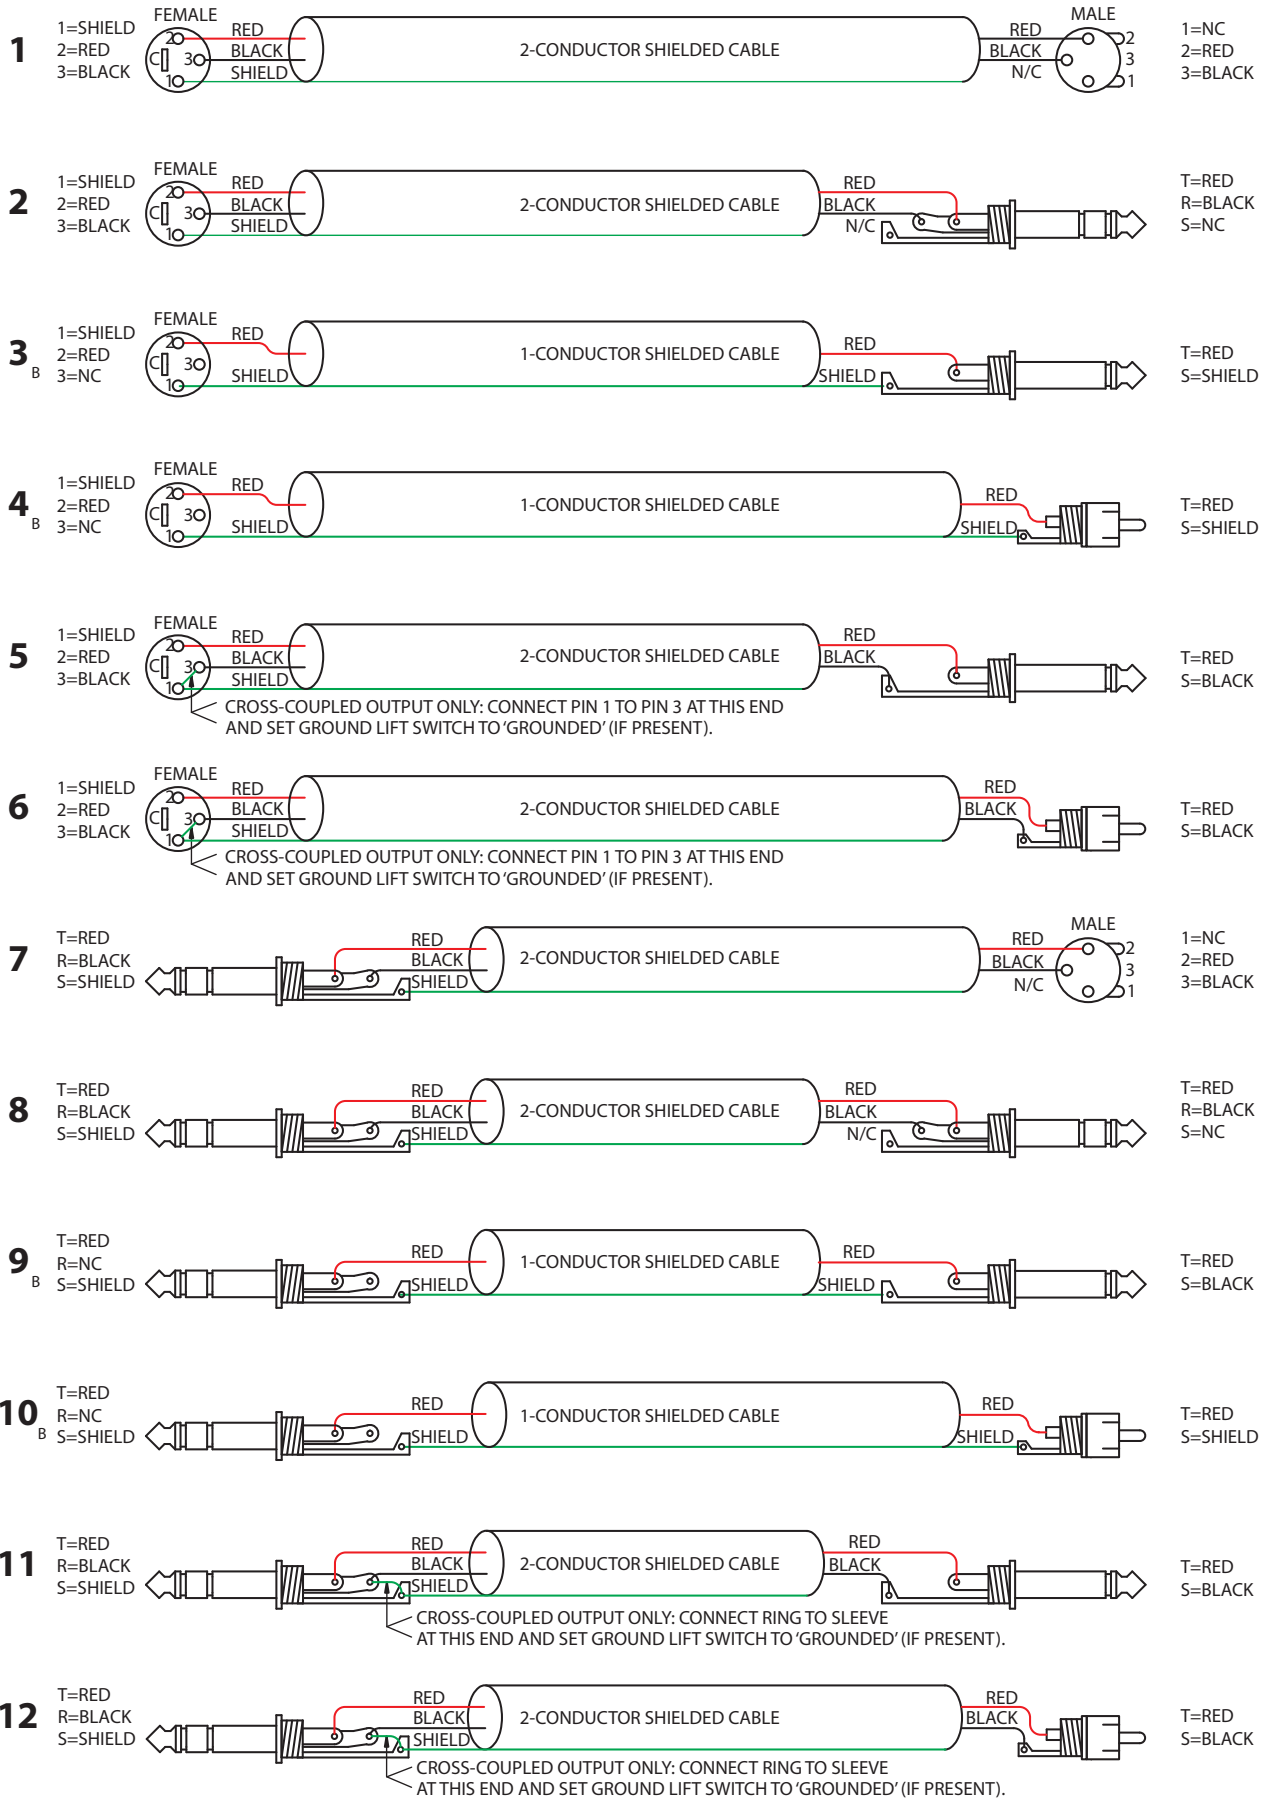
From Output	CABLE CONNECTORS	 MALE BALANCED XLR	 1/4" BALANCED TRS (TIP-RING-SLEEVE)	 1/4" OR 3.5mm UNBALANCED TS (TIP-SLEEVE)	 UNBALANCED RCA	 BALANCED EUROBLOCK
	 FEMALE BALANCED XLR (NOT A TRANSFORMER, NOR A CROSS-COUPLED OUTPUT STAGE)	1	2	3_B	4_B	+ to + - to - SHIELD NC
	 FEMALE BALANCED XLR (EITHER A TRANSFORMER OR A CROSS-COUPLED OUTPUT STAGE)	1	2	5	6	+ to + - to - SHIELD NC
	 1/4" BALANCED TRS (NOT A TRANSFORMER, NOR A CROSS-COUPLED OUTPUT STAGE)	7	8	9_B	10_B	+ to + - to - SHIELD ONLY TO EUROBLOCK
	 1/4" BALANCED TRS (EITHER A TRANSFORMER OR A CROSS-COUPLED OUTPUT STAGE)	7	8	11	12	+ to + - to - SHIELD NC
	 1/4" FLOATING UNBALANCED TRS (TIP-RING-SLEEVE) (SLEEVE IN UNIT = NC)	21_A	22_A	11	12	+ to + - to - GROUND to GROUND
	 1/4" OR 3.5 mm UNBALANCED TS (TIP-SLEEVE)	13	14	15_A	16_A	23
	 UNBALANCED RCA (TIP-SLEEVE)	17	18	19_A	20_A	23
	 BALANCED EUROBLOCK	+ to + - to - SHIELD ONLY TO XLR PIN 1	+ to + - to - SHIELD ONLY TO TRS SLEEVE	24	24	+ to + - to - GROUND to GROUND

Figure 4. Interconnect chart for locating correct cable assemblies on the following pages.


Note: (A) This configuration uses an "off-the-shelf" cable.

Note: (B) This configuration causes a 6 dB signal loss. Compensate by "turning the system up" 6 dB.



From Output

To Input

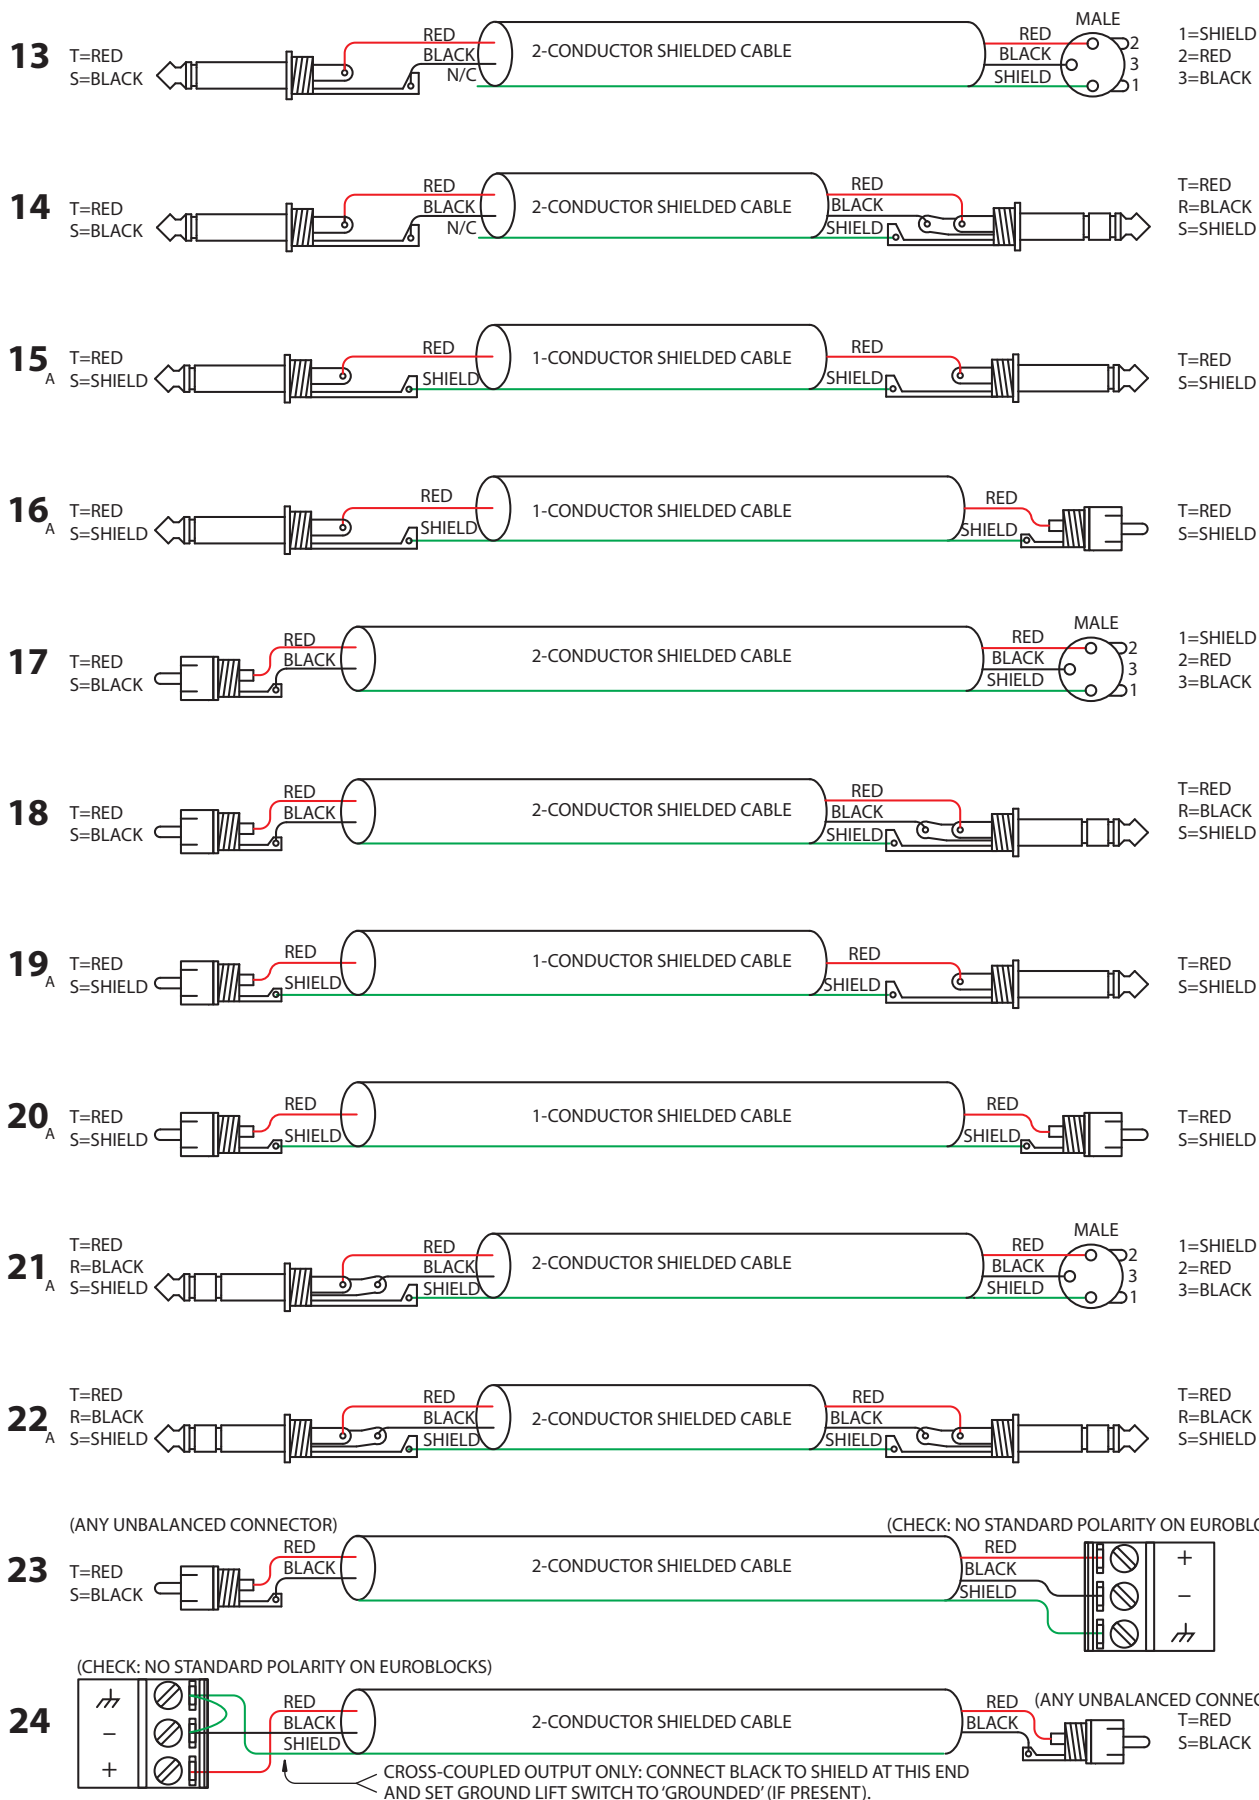



FACTORY AUTHORIZED SERVICE

Your unit may someday need to be serviced by the Rane Factory if you live in the USA. International customers should contact your dealer or distributor for service. You must call the Rane factory before shipping. Please do not return your unit to Rane without prior authorization.

Rane Corporation

To obtain service or a Return Authorization in the USA, please phone 425-355-6000

or Fax 425-347-7757

LIMITED DOMESTIC WARRANTY

RANE CORPORATION WARRANTS ALL RANE PRODUCTS (EXCEPT THOSE ITEMS CLASSIFIED AS *WEAR PARTS*, AND LISTED ON THE MANUAL-1 PAGE OF EACH OPERATORS MANUAL) PURCHASED IN THE U.S. AGAINST DEFECTS IN MATERIAL OR WORKMANSHIP FOR A PERIOD OF TWO (2) YEARS. *WEAR PARTS* ARE LIMITED TO A PERIOD OF NINETY (90) DAYS FROM THE INITIAL DATE OF RETAIL PURCHASE FROM AN AUTHORIZED RANE DEALER—WEAR PARTS REQUIRE PROOF OF PURCHASE DATE. This limited warranty extends to all purchasers or owners of the product during the warranty period beginning with the original retail purchase. Rane Corporation does not, however, warrant its products against any and all defects: 1) arising out of material or workmanship not provided or furnished by Rane, or 2) resulting from abnormal use of the product or use in violation of instructions, or 3) in products repaired or serviced by other than the Rane Factory, or 4) in products with removed or defaced serial numbers, or 5) in components or parts or products expressly warranted by another manufacturer. Rane agrees to supply all parts and labor to repair or replace defects covered by this limited warranty with parts or products of original or improved design, at its option in each respect, if the defective product is shipped prior to the end of the warranty period to the Rane Factory in the original packaging or a replacement supplied by Rane, with all transportation costs and full insurance paid each way by the purchaser or owner.

LIMITED WARRANTY OUTSIDE THE U.S.A.

RANE PRODUCTS ARE WARRANTED ONLY IN THE COUNTRY WHERE PURCHASED, THROUGH THE AUTHORIZED RANE DISTRIBUTOR IN THAT COUNTRY, AGAINST DEFECTS IN MATERIAL OR WORKMANSHIP, THE SPECIFIC PERIOD OF THIS LIMITED WARRANTY SHALL BE THAT WHICH IS DESCRIBED TO THE ORIGINAL RETAIL PURCHASER BY THE AUTHORIZED RANE DEALER OR DISTRIBUTOR AT THE TIME OF PURCHASE. Rane Corporation does not, however, warrant its products against any and all defects: 1) arising out of materials or workmanship not provided or furnished by Rane, or 2) resulting from abnormal use of the product or use in violation of instructions, or 3) in products repaired or serviced by other than authorized Rane repair facilities, or 4) in products with removed or defaced serial numbers, or 5) in components or parts or products expressly warranted by another manufacturer. Rane agrees, through the applicable authorized distributor, to repair or replace defects covered by this limited warranty with parts or products of original or improved design, at its option in each respect, if the defective product is shipped prior to the end of the warranty period to the designated authorized Rane warranty repair facility in the country where purchased, or to the Rane factory in the U.S., in the original packaging or a replacement supplied by Rane, with all transportation costs and full insurance paid each way by the purchaser or owner.

ALL REMEDIES AND THE MEASURE OF DAMAGES ARE LIMITED TO THE ABOVE SERVICES, IT IS POSSIBLE THAT ECONOMIC LOSS OR INJURY TO PERSON OR PROPERTY MAY RESULT FROM THE FAILURE OF THE PRODUCT; HOWEVER, EVEN IF RANE HAS BEEN ADVISED OF THIS POSSIBILITY, THIS LIMITED WARRANTY DOES NOT COVER ANY SUCH CONSEQUENTIAL OR INCIDENTAL DAMAGES. SOME STATES OR COUNTRIES DO NOT ALLOW THE LIMITATIONS OR EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, ARISING BY LAW, COURSE OF DEALING, COURSE OF PERFORMANCE, USAGE OF TRADE, OR OTHERWISE, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO A PERIOD OF TWO (2) YEARS FROM EITHER THE DATE OF ORIGINAL RETAIL PURCHASE OR, IN THE EVENT NO PROOF OF PURCHASE DATE IS AVAILABLE, THE DATE OF MANUFACTURE, SOME STATES OR COUNTRIES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE, COUNTRY TO COUNTRY.

WARRANTY PROCEDURE - Valid in USA only

NOTICE! You must complete and return the warranty card or register your product online to extend the Warranty from 2 years to 3 years!

TO VALIDATE YOUR EXTENDED WARRANTY: Use the postcard that came in the box with your unit, or go to www.rane.com and click on **New Product Registration**. Fill out the warranty completely, being sure to include the model and serial number of the unit since this is how warranties are tracked. If your Rane product was purchased in the U.S.A., mail the completed card or register online with to Rane Corporation within 10 days from the date of purchase. **If you purchased the product outside the U.S.A. you must file your warranty registration with the Rane Distributor in that country.** It is advised that you keep your bill of sale as proof of purchase, should any difficulties arise concerning the registration of the warranty card. **NOTICE: IT IS NOT NECESSARY TO REGISTER IN ORDER TO RECEIVE RANE CORPORATION'S STANDARD TWO YEAR LIMITED WARRANTY.**

WARRANTY REGISTRATION is made and tracked by MODEL AND SERIAL NUMBERS ONLY, not by the purchaser's or owner's name. Therefore any warranty correspondence or inquires **MUST** include the model and serial number of the product in question. Be sure to fill in the model and serial number in the space provided below and keep this in a safe place for future reference.

WARRANTY SERVICE MUST BE PERFORMED ONLY BY AN AUTHORIZED RANE SERVICE FACILITY LOCATED IN THE COUNTRY WHERE THE UNIT WAS PURCHASED, OR (if product was purchased in the U.S.) AT THE RANE FACTORY IN THE U.S.. If the product is being sent to Rane for repair, please call the factory for a Return Authorization number. We recommend advance notice be given to the repair facility to avoid possible needless shipment in case the problem can be solved over the phone. **UNAUTHORIZED SERVICE PERFORMED ON ANY RANE PRODUCT WILL VOID ITS EXISTING FACTORY WARRANTY.**

FACTORY SERVICE: If you wish your Rane product to be serviced at the factory, it must be shipped **FULLY INSURED, IN THE ORIGINAL PACKING OR EQUIVALENT**. This warranty will **NOT** cover repairs on products damaged through improper packaging. If possible, avoid sending products through the mail. Be sure to include in the package:

1. Complete return street shipping address (P.O. Box numbers are **NOT** acceptable).
2. A detailed description of any problems experienced, including the make and model numbers of any other system equipment.
3. Remote power supply, if applicable.

Repaired products purchased in the U.S. will be returned prepaid freight via the same method they were sent to Rane. Products purchased in the U.S., but sent to the factory from outside the U.S. **MUST** include return freight funds, and the sender is fully responsible for all customs procedures, duties, tariffs and deposits.

In order to qualify for Rane's one year extended warranty (for a total of 3 years parts and labor), the warranty must be completely filled out and sent to us immediately. Valid in USA only.

We recommend you write your serial number here in your owners manual and on your sales receipt for your records.

SERIAL NUMBER: _____ **PURCHASE DATE:** _____

Declaration of Conformity

Application of Council Directive(s):

2001/95/EC
2012/19/EU
2004/108/EC
2006/95/EC
2011/65/EU

Standard(s) to which conformity is declared:

EN60065: 2002/A1:2006/A11:2008/A2:2010/A12:2011
EN55103-1:2009
EN55103-2:2009
EN50581:2012
ENVIRONMENT E2
CE MARK FIRST AFFIXED IN 2010
SERIAL NUMBERS 900000 - 999999

Manufacturer:

Rane Corporation
10802 47th Avenue West
Mukilteo WA 98275-5000 USA

This equipment has been tested and found to be in compliance with all applicable standards and regulations applying to the EU's Low Voltage (LV) directive 2006/95/EC, and Electromagnetic Compatibility (EMC) directive 2004/108/EC. In order for the customer to maintain compliance with this regulation, high quality shielded cable must be used for interconnection to other equipment. Modification of the equipment, other than that expressly outlined by the manufacturer, is not allowed under this directive. The user of this equipment shall accept full responsibility for compliance with the LV directive and EMC directive in the event that the equipment is modified without written consent of the manufacturer. This declaration of conformity is issued under the sole responsibility of Rane Corporation.

Type of Equipment: Professional Audio Signal Processing

Brand: Rane

Model: AM2

Immunity Results:

Test Description

RF Electromagnetic Fields Immunity

80 MHz - 1000 MHz, 1 kHz AM, 80% depth, 3V/m

THD+N: 4 dBu, 400 Hz, BW = 20 Hz - 20 kHz

Measurement

Conditions

<-55 dB

Conducted RF Disturbances Immunity

150 kHz - 80 MHz, 1 kHz AM, 80% depth, 3V rms

<-55 dB

Magnetic Fields Immunity

50 Hz - 10 kHz, 3.0 - 0.3 A/m

<-71 dB

Common Mode Immunity (Signal Ports)

50 Hz - 10 kHz, -20 dBu

Bandpass re: 4 dBu, 1/3-octave

<-69 dB

Common Mode Immunity (Data Ports)

50 Hz - 10 kHz, 0.2 A

Bandpass re: 4 dBu, 1/3-octave

<-53 dB

I, the undersigned, hereby declare that the equipment specified above conforms to the Directive(s) and Standard(s) shown above.


(Signature)

Greg Frederick

(Full Name)

Compliance Engineer

(Position)

March 1, 2010

(Date)

Mukilteo WA USA

(Place)



AM2

AUTOMIXER

