



# Genie STL IP / ISDN / POTS Codec User Manual

Software Version: 2.14.88  
Manual Version: 1.6\_20150923  
September, 2015

# Table of Contents

<b>Part I Warnings &amp; Safety Information</b>	<b>6</b>
<b>Part II How to Use the Documentation</b>	<b>7</b>
<b>Part III Glossary of Terms</b>	<b>8</b>
<b>Part IV Getting to know Genie STL</b>	<b>10</b>
<b>Part V Rear Panel Connections</b>	<b>12</b>
<b>Part VI Genie Front Panel Controls</b>	<b>14</b>
<b>Part VII Navigating Menus</b>	<b>16</b>
<b>Part VIII Genie STL Input Levels and PPMs</b>	<b>23</b>
<b>Part IX Configuring AES3 Audio</b>	<b>27</b>
<b>Part X Genie STL Headphone/Aux Output</b>	<b>29</b>
<b>Part XI Inserting Hardware Modules</b>	<b>31</b>
<b>Part XII About ISDN Modules</b>	<b>32</b>
1 ISDN Module Settings .....	33
2 ISDN Answering Configuration .....	36
<b>Part XIII About POTS Modules</b>	<b>39</b>
1 POTS Module Settings .....	40
2 POTS Answering Configuration .....	43
<b>Part XIV Language Selection</b>	<b>45</b>
<b>Part XV About Program Dialing</b>	<b>46</b>
<b>Part XVI Getting Connected Quickly</b>	<b>48</b>
1 Steps to Connect over IP .....	48
2 Monitoring IP Connections .....	51
3 Steps to Connect over ISDN .....	53
4 Monitoring ISDN Connections .....	56
5 Steps to Connect over POTS .....	57
6 Monitoring POTS Connections .....	59
7 Load and Dial Custom Programs .....	60

8	Disconnecting a Connection .....	60
9	Redialing a Connection .....	61
10	Configuring Auto Reconnect .....	61
11	Speed Dialing Connections .....	61
12	Dial/Disconnect Multiple Audio Stream Programs .....	62
13	Dialing SIP Peer-to-Peer .....	63
14	Dialing SIP Addresses .....	64
15	Creating a Multicast Client Program .....	64
16	Deleting Programs .....	67
17	Selecting Algorithm Profiles .....	68
18	Genie STL Algorithm Profiles .....	70
19	Genie STL Backup Options .....	70
20	USB File Playback .....	73
21	Lock or Unlock a Program in the Codec .....	74
22	Locking the Front Panel .....	75

## **Part XVII Connecting to the ToolBox**

### **Web-GUI**

**76**

1	Opening the Java or HTML5 Web-GUI & Login .....	77
2	Changing the Default Password .....	80

## **Part XVIII Using the Java Toolbox Web-GUI**

**81**

1	Configuring IP Settings .....	89
2	Configuring ISDN .....	93
3	Configuring POTS .....	100
4	Configuring Input/Output Settings .....	106
5	Configure Mono or Stereo Peer-to-Peer Programs .....	109
6	Configure Multicast Client Programs .....	118
7	Configure SIP Settings .....	121
8	Configure Peer-to-Peer SIP Programs .....	123
9	Dial and Disconnect a Program .....	126
10	View/Edit/Delete Programs .....	126
11	Edit File Playback Settings .....	128
12	Reset Factory Default Settings .....	128
13	Backup and Restore Functions .....	129
14	Lock or Unlock Programs .....	131
15	Configuring SNMP in the Codec .....	132
16	Download Logs .....	133
17	Configuring Alarms .....	134
18	RS232 Data Configuration .....	140
19	Creating Rules .....	141
20	Upgrading Codec Firmware .....	144

<b>Part XIX Using the HTML5 Toolbox Web-GUI</b>	<b>146</b>
1 Using the HTML5 Toolbox Quick Connect Web-GUI .....	159
2 Configuring IP Settings .....	166
3 Configuring ISDN .....	170
4 Configuring POTS .....	177
5 Configuring Input/Output Settings .....	183
6 Configure SIP Settings .....	185
7 Load, Unload and Dial a Program .....	188
8 Reset Factory Default Settings .....	191
9 Backup and Restore Functions .....	192
10 Lock or Unlock Programs .....	194
11 Configuring SNMP in the Codec .....	195
12 Download Logs .....	197
13 Configuring Alarms .....	198
14 RS232 Data Configuration .....	204
15 Creating Rules .....	205
16 Upgrading Codec Firmware .....	209
<b>Part XX Front Panel Configuration Tasks</b>	<b>210</b>
1 Configuring IP via the Front Panel .....	210
2 Selecting an Algorithm .....	213
3 Configuring the Jitter Buffer .....	220
4 Configuring Forward Error Correction .....	224
5 Configuring Encode/Decode Direction .....	226
6 Enabling Relays & RS232 Data .....	226
7 Configuring TCP/UDP Ports .....	227
8 Configuring QoS for IP Packets .....	229
9 Reset and Restore Factory Default Settings .....	230
10 Configuring SNMP Settings .....	231
11 Test Mode .....	231
<b>Part XXI Reference</b>	<b>232</b>
1 Regular Maintenance .....	232
2 Installing the Codec at the Studio .....	233
3 Understanding IP Networks .....	239
4 Tips for Creating Reliable IP Connections .....	241
5 Testing IP Network Connections .....	242
6 Testing ISDN Connections .....	244
7 Connecting Tieline ISDN to other Codecs .....	244
8 Using Answer Routes for Sessionless ISDN Calls .....	258
9 POTS Connection Tips & Precautions .....	261

---

10	Genie Compliances and Certifications .....	263
11	FCC Compliance Statements .....	263
12	Software Licences .....	265
13	Trademarks and Credit Notices .....	275
<b>Part XXII</b>	<b>Genie STL Specifications</b>	<b>276</b>
<b>Part XXIII</b>	<b>Appendix A: RS232 and Control Port Wiring</b>	<b>278</b>
	<b>Index</b>	<b>280</b>

# 1 Warnings & Safety Information



1. Both appliance power cables must be removed from the device for Power Disconnection.
2. Remove the phone cable from the POTS interface before servicing.

## **THUNDERSTORM AND LIGHTNING WARNING:**

DO NOT USE Tieline codecs during thunderstorms and lightning. You may suffer an injury using a phone, Tieline codec, or any device connected to a phone during a thunderstorm. This can lead to personal injury and in extreme cases may be fatal. Protective devices can be fitted to the line, however, due to the extremely high voltages and energy levels involved in lightning strikes, these devices may not offer protection to the users, or the Tieline codec and equipment connected to the codec.

Secondary strikes can occur. These secondary strikes are induced by lightning strikes and also produce dangerously high currents and energy levels. You only need to be near an object struck by lightning to lead to personal injury or damage to equipment. e.g. if you are located near a lighting tower at a sports facility, water features and drains on golf courses, you may be affected by these secondary strikes.

Damage to personnel and Tieline codecs may occur during thunderstorm, even if the codec is turned off but remains connected to the phone or ISDN system, LAN or the power.

ANY DAMAGE TO A TIELINE PRODUCT CAUSED BY LIGHTNING or an ELECTRICAL STORM WILL VOID THE WARRANTY. Use of this product is subject to Tieline's SOFTWARE LICENSE and WARRANTY conditions, which should be viewed at [www.tieline.com/support](http://www.tieline.com/support) before using this product.

## **DIGITAL PHONE SYSTEM WARNING:**

DO NOT CONNECT YOUR TIELINE CODEC TO A DIGITAL PHONE SYSTEM. PERMANENT DAMAGE MAY OCCUR! If you are unfamiliar with any facility, check that the line you are using is NOT a digital line. If the Tieline codec becomes faulty due to the use of a digital phone system, the WARRANTY WILL BE VOID.




## **WARNING:**

HIGH LEAKAGE CURRENT. EARTH CONNECTION ESSENTIAL BEFORE CONNECTING SUPPLY.

If the total leakage current exceeds 3.5 mA, or if the leakage current of the connected loads is unknown, connect the supplementary ground terminal to a reliable ground connection in your facility.

## **Supplementary ground connection**

A supplementary ground terminal is provided on the codec to connect the unit to a ground connection. The ground terminal has an M4 stud with M4 retaining nuts and is compatible with all grounding wires. Remove only **NUT 2** to connect your ground wire. The ground wire must have a suitable lug. When refitting **NUT 2** ensure that both **NUT 1** & **NUT 2** are correctly tightened to establish and maintain a proper earth connection.

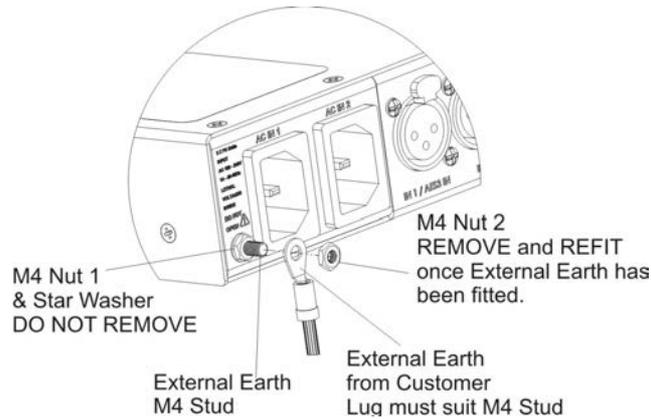

## Disclaimer

Whilst every effort has been made to ensure the accuracy of this manual we are not responsible for any errors or omissions within it. The product specifications and descriptions within this manual will be subject to improvements and modifications over time without notice, as changes to software and hardware are implemented.

## 2 How to Use the Documentation

### Manual Conventions



**Warnings:** Instructions that, if ignored, could result in death or serious personal injury caused by dangerous voltages or incorrect operation of the equipment. These must be observed for safe operation.



**Cautions:** Instructions warning against potential hazards, or to detail practices that must be observed for safe operation and to prevent damage to equipment or personnel.



**Important Note:** Information you should know to connect and operate your codec successfully.



Information specific to IP connections.



Information specific to ISDN connections.



Information specific to POTS connections.

### Typographic Conventions

- Codec software elements are in Arial bold, e.g. **Contacts**
- Codec hardware elements are in bold Capitals, e.g. **KEYPAD**

### Help Button

Press the  (information/help) button when navigating codec menus to display a dialog suggesting the actions which can be performed from within the current menu.

### 3 Glossary of Terms

<b>AES/EBU</b>	Digital audio standard used to carry digital audio signals between devices
<b>AES3</b>	Official term for the audio standard referred to often as AES/EBU
<b>BRI</b>	Basic Rate Interface for ISDN services
<b>DN</b>	Directory Number for ISDN
<b>DNS</b>	The Domain Name System (DNS) is used to assign domain names to IP addresses over the World-Wide Web
<b>Domain</b>	A group of computers or devices on a network which are administered with common rules and procedures. Devices sharing a common part of the IP address are said to be in the same domain
<b>DSCP</b>	The Differentiated Services Code Point is a field in an IP packet header for prioritizing data when traversing IP networks
<b>Failover</b>	Method of switching to an alternative backup audio stream if the primary connection is lost.
<b>GUI</b>	Graphical User Interface
<b>IFB</b>	Interrupted Foldback/Interruptible Foldback: an intercom circuit consisting of a mix-minus program feed sent to talent, which can be interrupted and replaced by a producer's or director's intercom microphone
<b>ISDN</b>	Integrated Services Digital Network
<b>ISP</b>	Internet Service Providers (ISPs) are companies that offer customers access to the internet
<b>IP</b>	Internet Protocol; used for sending data across packet-switched networks
<b>LAN</b>	Local Area Network; a group of computers and associated devices sharing a common communications link
<b>Latency</b>	Delay associated with IP networks and caused by algorithmic, transport and buffering delays
<b>MIB</b>	A management information base (MIB) is a database used for managing the entities in a communications network. This term is associated with the Simple Network Management Protocol (SNMP).
<b>Multicast</b>	Efficient one to many streaming of IP audio using multicast IP addressing
<b>Multi-unicast</b>	A multi-unicast program (also known as multiple unicast) can transmit a single audio stream with common connection settings to a number of different destinations.
<b>MSN</b>	Multiple Subscriber Number for ISDN
<b>Network Address Translation (NAT)</b>	A system for forwarding data packets to different private IP network addresses that reside behind a single public IP address.
<b>Packet</b>	A formatted unit of data carried over packet-switched networks.
<b>Port Address Translation (PAT)</b>	Related to NAT; a feature of a network device that allows IP packets to be routed to specific ports of devices communicating between public and private IP networks
<b>POTS</b>	Plain old telephone system: copper phone network infrastructure
<b>PSU</b>	Power Supply Unit
<b>QoS (Quality of Service)</b>	Priority given to different users or data flows across managed IP networks. This generally requires a Service Level Agreement (SLA) with a Telco or ISP
<b>RTP</b>	A standardized packet format for sending audio and video data streams and ensures consistency in the delivery order of voice data packets
<b>SDP</b>	SDP defines the type of audio coding used within an RTP media stream. It works with a number of other protocols to establishes a device's location, determines its availability, negotiates call features and participants and adjusts

	session management features
<b>SIP</b>	SIP is a common protocol which works with a myriad of other protocols to establish connections with other devices to provide interoperability
<b>SLA</b>	Service Level Agreements (SLAs) a contractual agreement between an ISP and a customer defining expected performance levels over a network
<b>SNMP</b>	Simple Network Management Protocol: Simple Network Management Protocol: a protocol used mostly in network management systems to monitor devices for conditions that warrant administrative attention.
<b>SPID</b>	Service Profile ID for identifying devices over ISDN networks
<b>STL</b>	Studio-to-transmitter link for program audio feeds
<b>STS</b>	Studio-to-studio audio link
<b>TCP</b>	TCP protocol ensures reliable in-order delivery of data packets between a sender and a receiver
<b>TTL</b>	Time-to-Live is the setting used in multicast servers to ensure data packets have a finite life and don't cause congestion over networks.
<b>UDP</b>	User Datagram Protocol: the most commonly used protocol for sending internet audio and video streams. UDP packets include information which allows them to travel independently of previous or future packets in a data stream
<b>Unicast</b>	Broadcasting of a single stream of data between two points
<b>VLAN</b>	Virtual Local Area Network: partitioning of a single layer-2 network to create multiple distinct broadcast domains
<b>WAN</b>	Wide Area Network; a computer network spanning regions and/or countries to connect separate LANs

## 4 Getting to know Genie STL

Tieline's Genie STL is the world's most powerful DSP-based audio codec for mission critical point-to-point connections and studio-to-transmitter links, with multiple levels of power, audio and network redundancy.

Designed for the latest digital IP broadcast networks, you can connect to IP codecs, as well as ISDN and POTS codecs via optional plug-in transport modules.



### Overview of this User Manual

Use this manual to learn how to:

- Configure codec 'programs' (please read [About Program Dialing](#) for more info).
- Adjust audio and connection settings within the codec.

Please read [Getting Connected Quickly](#) for an overview of how to adjust and store audio and connection settings in your codec using 'programs'.

### Applications

Genie STL delivers superior quality IP audio over the full range of managed and unmanaged wired and wireless IP data networks, such as LANs, WANs and the internet. It is specifically designed for continuous operation over mission critical audio paths throughout broadcast IP networks and is ideal for:

- Stereo Studio-to-Transmitter Links (STLs)
- Stereo Studio-to-Studio Links.
- Other mission-critical point-to-point connections.


### Codec Features

- DSP-based architecture designed for continuous operation.
- 24 Bit 96kHz audio sampling (32kHz audio quality).
- Dual Gigabit (10/100/1000) Ethernet ports with automatic switching for redundancy.
- Auto switching, dual redundant AC power supplies.
- Uncompressed PCM audio plus the low-delay, cascade resilient aptX® Enhanced algorithm.
- Other popular algorithms including LC-AAC, HE-AAC v1 and v2, AAC-LD, AAC-ELD, AAC-ELDv2, Opus, MPEG-1 Layer II and III, Tieline Music and MusicPLUS, G.722 and G.711.
- SmartStream PLUS redundant streaming for high reliability over IP networks without Quality of Service.
- IPv4 & IPv6 compatible and ready.
- Supports ISDN and POTS connections via optional interface modules.
- Asymmetric algorithmic encode/decode\*
- SNMP and integrated alarm management including automatic silence detection.
- Java or HTML5 Toolbox GUI enables remote codec control over WANs.
- Low latency in-band RS-232 auxiliary data channel.
- Programmable software rules engine via a GUI for Control Port functions.
- Streamlined codec wizards and GUI for configuration and control.

- Support for multiple languages: English, Spanish, Portuguese, French and Chinese.
- Connect to all Tieline IP codecs and Report-IT Live Enterprise Edition.

\* Supported in later releases.

## 5 Rear Panel Connections

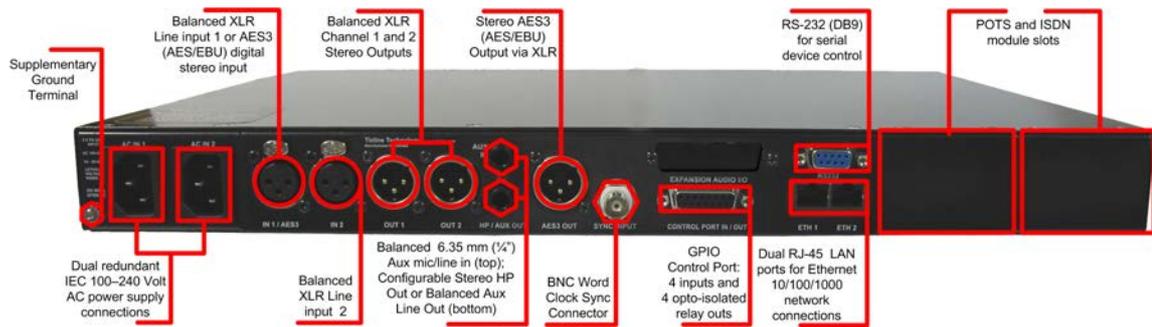

### XLR Analog and AES3 Inputs

XLR **IN1/AES3** and **IN 2** are balanced line inputs.

Input 1 can also be used as an AES3 (AES/EBU) digital input. This input accepts both mono and stereo digital AES3 signals.

### XLR Analog and AES3 Outputs

XLR **OUT 1** and **2** are balanced analog audio line outputs.

**AES3 OUT** is an AES/EBU digital audio output. Both the analog and digital outputs can be used simultaneously and the AES3 output can send both mono and stereo signals via the single XLR output.

### Dual Gigabit Ethernet Ports

The codec features two Gigabit (10/100/1000) RJ-45 Ethernet ports for IP connections. By default, the codec assumes **ETH1** is the primary LAN connection and **ETH2** is the backup LAN connection when in use. If you are only using one Ethernet port, always use **ETH1**.

### Aux Mic/Line Input

**AUX IN** 6.35mm (1/4") balanced auxiliary mic or line input.

### Headphone Out/Aux Line Out

**HP/AUX OUT** 6.35mm (1/4") software configurable stereo headphone output, or balanced auxiliary line output. The front panel **HEADPHONE** output and rear panel **HP/AUX OUT** share the same hardware output. This means both are switched and configured together. I.e. both outputs are either a stereo headphone output (default setting), or a balanced mono auxiliary output.

### Sync Input

BNC type **SYNC INPUT** for attaching Word Clock sync to the codec.

### Command & Control Interfaces

1. Four relay inputs and four opto-isolated outputs for machine control via the DB15 **CONTROL PORT IN/OUT** connector.
2. A nine pin female **RS-232** serial connection for local and remote control of equipment at either

---

end of the link.

### **Dual Redundant AC Power Inputs**

---

The codec is powered by dual 100-240 volt redundant AC power supplies, which use standard IEC connectors.

### **Dual Module Slots**

---

Two additional module slots for inserting optional POTS or ISDN modules.


### **Supplementary Ground Terminal**

---

Supplementary ground terminal for connecting the unit to a ground connection. See [Warnings and Safety Information](#) for more details.

## 6 Genie Front Panel Controls

The hardware front panel interface features menu navigation buttons, an LCD display with PPM metering and a dialing keypad.

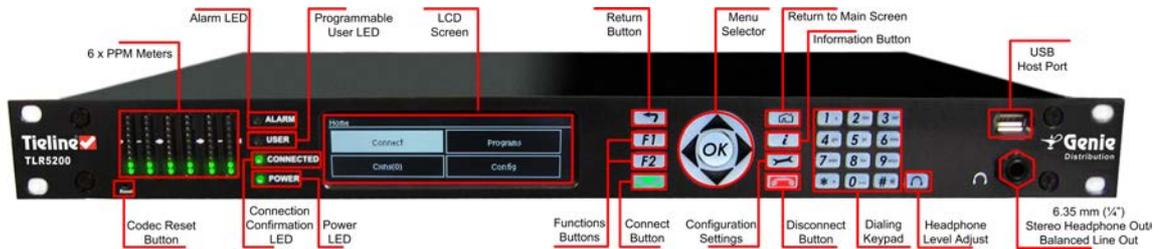

### Navigation Buttons

The codec has four arrow shaped navigation buttons for navigating codec menus and adjusting levels, and an **OK** button for selecting menu items.



### Dialing Keypad

The keypad has alpha-numeric buttons, plus star and hatch (pound) buttons, which can be used to enter contact and program information into the codec.



### Operation Button Descriptions

	Features	Operation Button Descriptions
	Return Button	Press to move back through menus & delete characters
	Function Button 1	Press to activate codec user functions
	Function Button 2	Press to activate codec user functions
	Connect Button	Press to create an IP connection
	Home Button	Press to return to home screen
	Information Button	Press to view a help menu onscreen
	Settings Button	Press to adjust codec settings
	Disconnect Button	Press to end a connection
	Headphone Button	Press to adjust headphone audio levels
	Reset Button	Press to reboot the codec

### Adjusting LCD Screen Contrast Levels

1. Press and hold the **F1** button and then press and release the arrow up button to display the **Contrast** adjustment screen.
2. Use the left and right arrow buttons to adjust the LCD screen contrast until viewing is optimized.



3. Press  when you have finished.

Contrast can also be adjusted by pressing the **HOME**  button, selecting **Settings**, then **System**, and using the down  button to navigate to **Contrast**.

## Stereo RTS Headphone Output

The codec has a 6.35mm (1/4") RTS stereo **HEADPHONE** output for audio monitoring and this can also be switched to a balanced mono auxiliary line output. The front panel **HEADPHONE** output and rear panel **HP/AUX OUT** share the same hardware output. This means both are switched and configured together. I.e. both outputs are either a stereo headphone output (default setting), or a balanced mono auxiliary output.

## USB 2.0 Host Port

USB 2.0 host port, which can be used for playback of backup audio files and firmware upgrades.

## 7 Navigating Menus


All main codec menus can be launched from the **Home** screen which includes:



	Features	Codec Home Screen Elements
1	Screen Name	The name of the current screen
2	Connect	Select to connect and adjust connection settings
3	Cxns	Displays the number of current connections and connection details
4	Programs	View and edit Program configurations
5	Settings	Select to configure codec settings

Press the **RETURN**  button to navigate backwards through menus, or press the **HOME**  button to return to the **Home** screen from any menu.


If a complete menu cannot be viewed on a single codec screen, arrows on the right hand side of the screen indicate that the current menu has options below and/or above the visible items. Use the navigation arrows to scroll up and down.

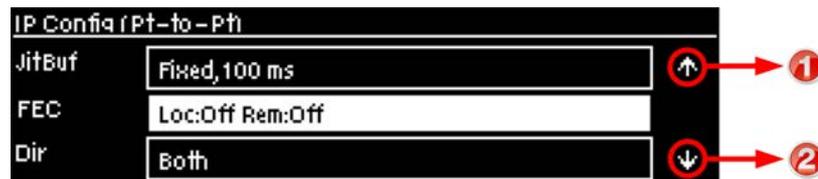


	Features	Codec Home Screen Elements
1	Up Arrow	Arrow indicating menus can scroll upwards
2	Down Arrow	Arrow indicating menus can scroll downwards

## Codec Menu Overview

Following is an overview of the codec menus from the **Home** screen. Note: file playback may not be supported in all codecs.

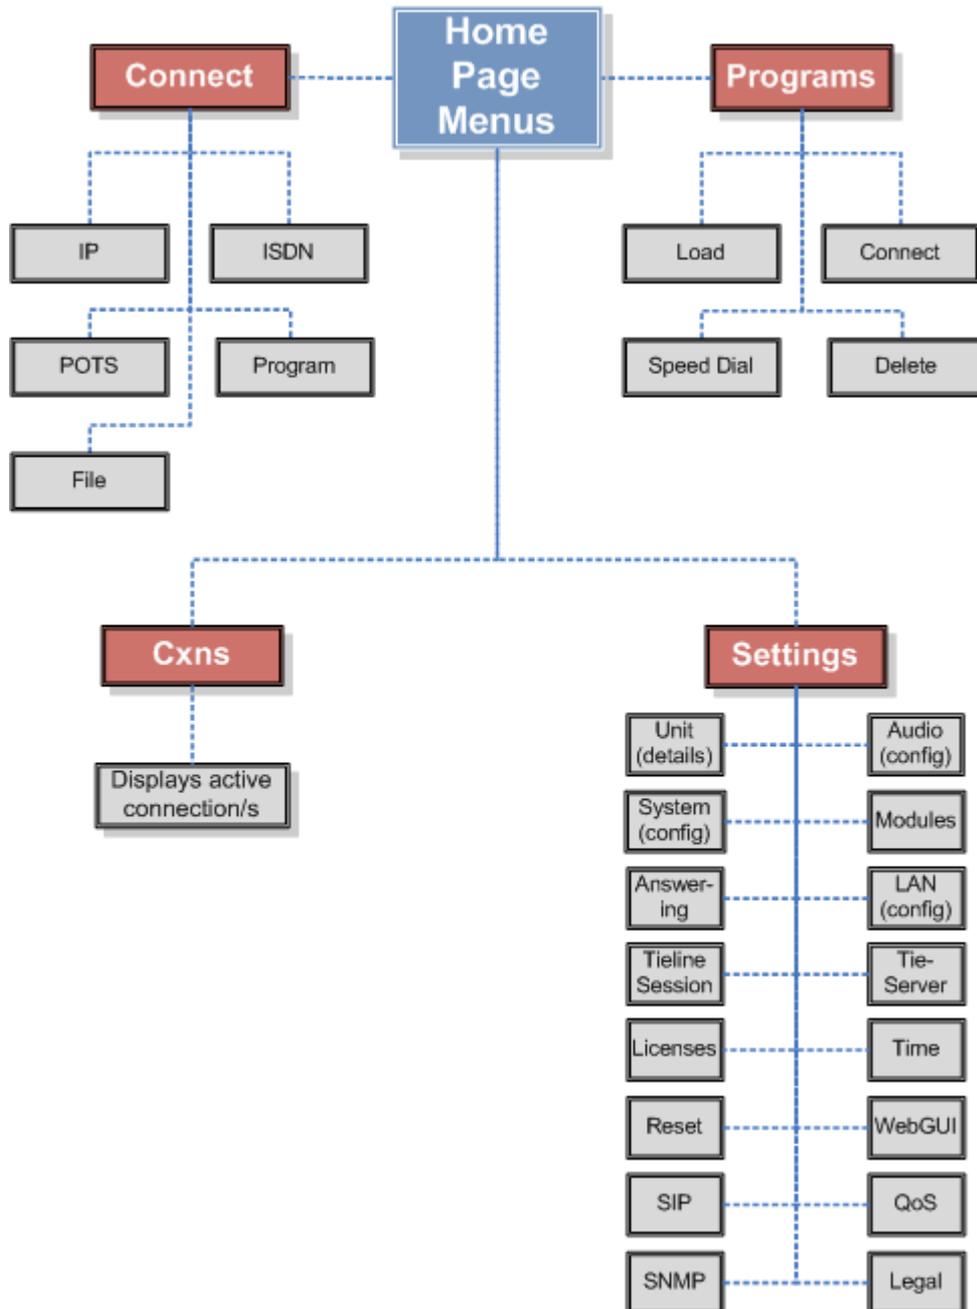


## Connect Menu

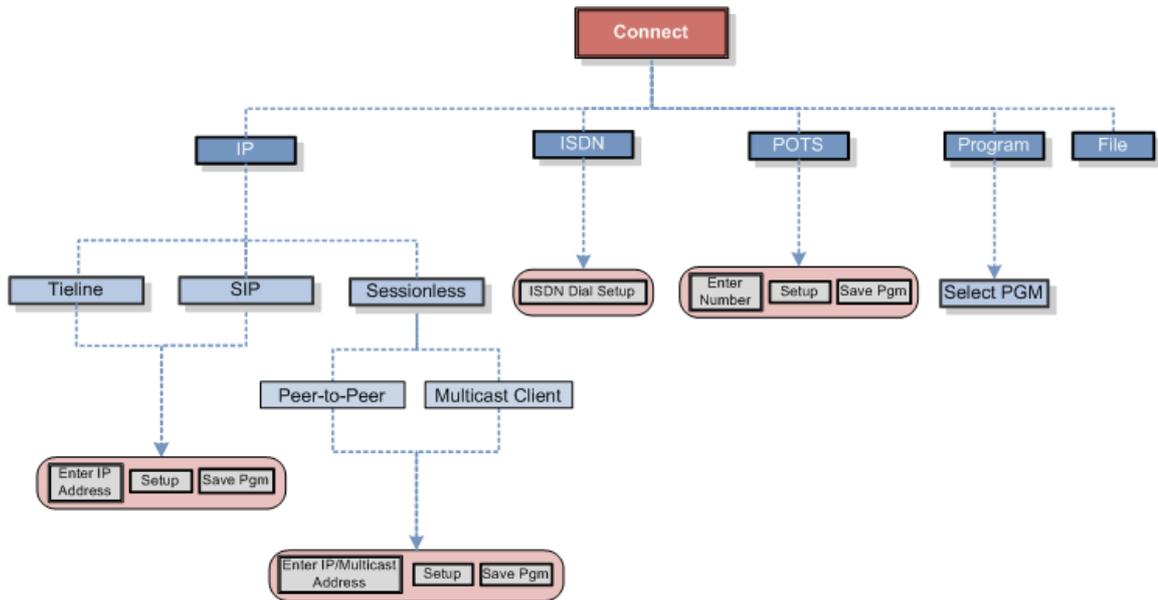

## IP Setup Menu Navigation

After selecting **IP** and a connection mode use **Setup** to adjust connection settings.

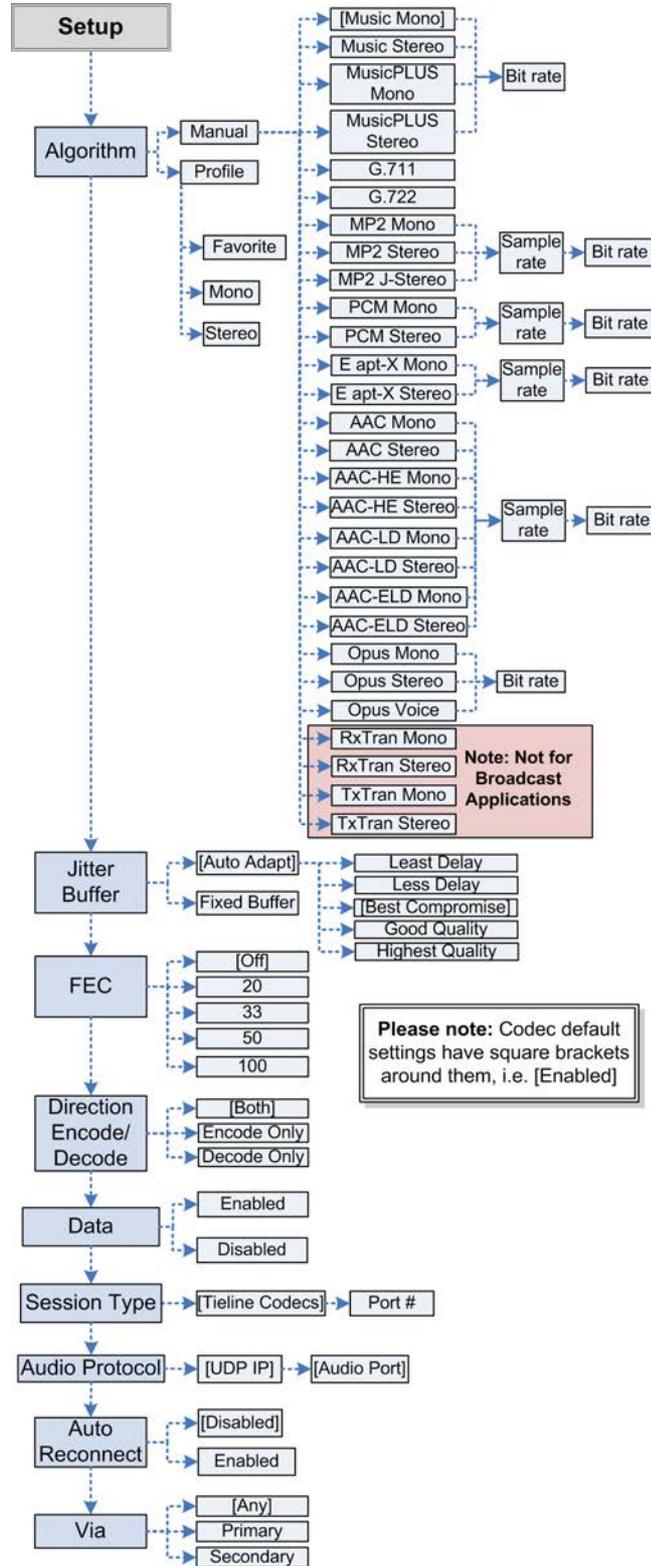

### Important Notes:


- Depending on the session type selected in the codec, not all options are displayed.

E.g. **Session Type** and **Data** are not displayed when configuring **Sessionless** IP connections.

- Default settings may also change depending on the session type selected, e.g. **Tieline Session** versus **SIP** or **Sessionless**.


## ISDN Menu Navigation

Select **Connect > ISDN** to configure ISDN dialing settings using the codec front panel.

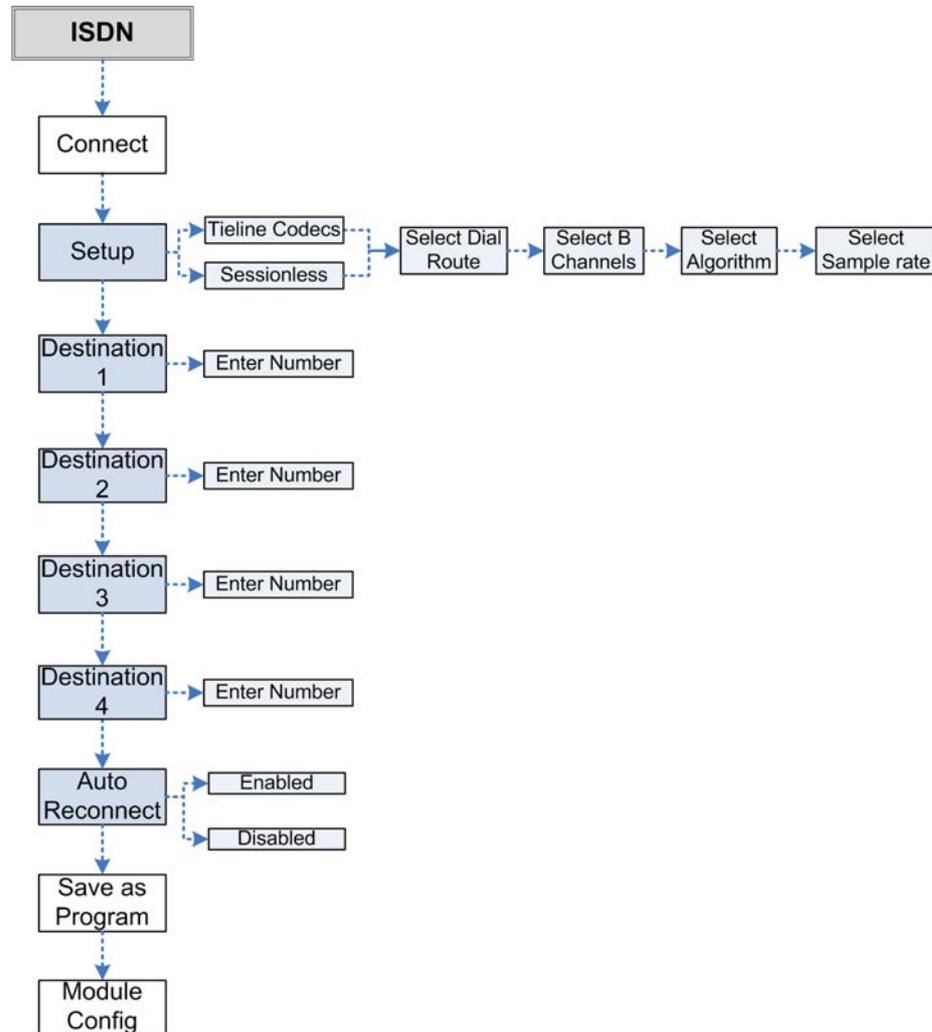


## POTS Menu Navigation

Select **Connect > POTS** to configure POTS dialing settings using the codec front panel. Note: default settings are surrounded by square brackets.

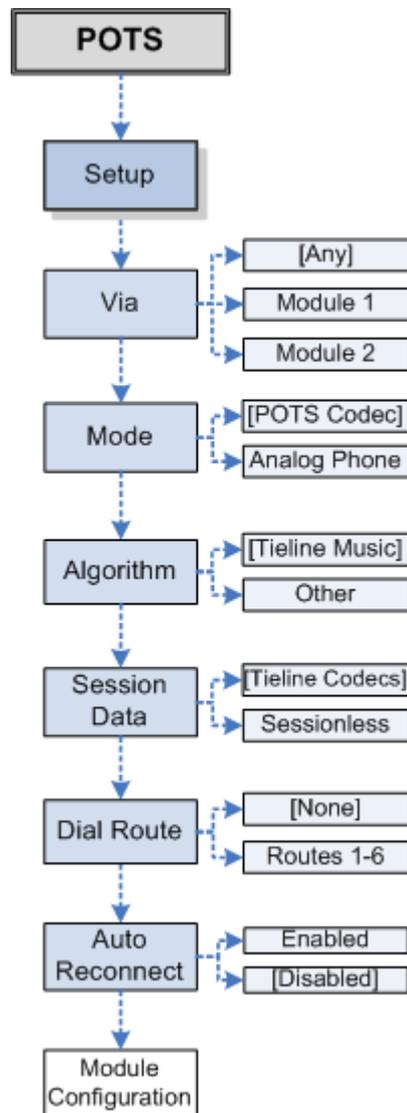

## Settings Menu

Press the **SETTINGS**  button on the codec front panel to access a wide range of configuration settings.

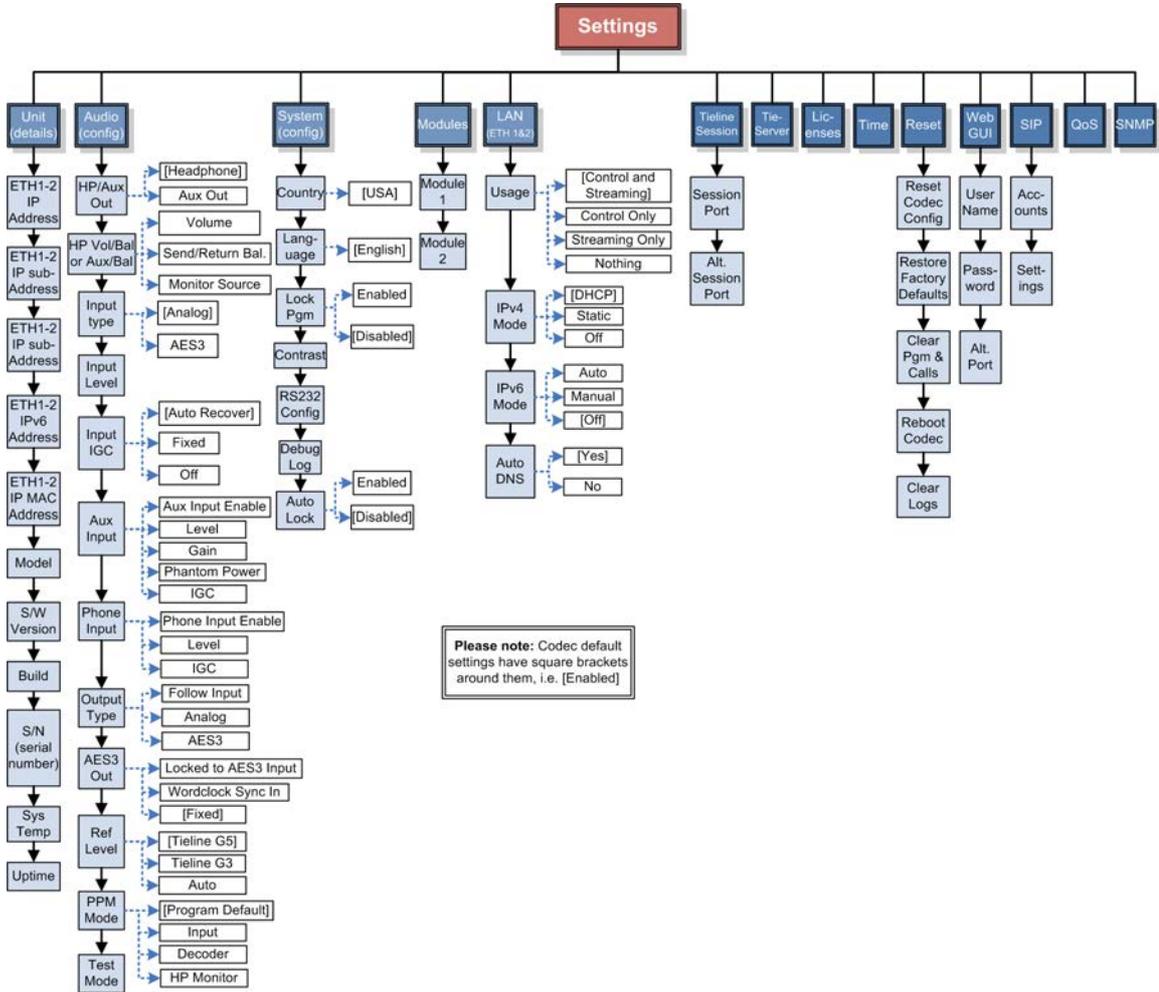

## 8 Genie STL Input Levels and PPMs



**Important Note:** Input levels can only be adjusted on analog inputs. Digital AES3 source audio is not adjustable. See [Configuring AES3 audio](#) for more information about the digital inputs and outputs. Input audio functions can be configured using the Toolbox Web-GUI; see [Configuring Input/Output Settings](#) for more information.

### Adjusting PPM Meter Reference Scale Settings

The codec is configured by default to automatically connect to other Tieline codecs using the correct audio meter reference scales. The **Tieline G5** audio reference scale displayed via the PPMs is -16dBu to +22dBu when you connect to a codec in Tieline's Merlin, Genie or Bridge-IT IP codec families. The audio reference level settings in the codec are:

	Reference Setting	Description
1	Auto (default)	When connecting to a Tieline codec with session data enabled the codec will automatically adjust the reference level for G5 and G3 codecs. When connecting to a non-Tieline codec, or a Tieline codec without session data enabled, the codec will use the <b>Tieline G5</b> setting.
2	Tieline G5	The audio reference scale is -16dBu to +22dBu
3	Tieline G3	The audio reference scale is -11dBu and +18dBu

### Audio Reference Metering when Connecting to Tieline G3 Codecs

New generation Genie, Merlin and Bridge-IT IP codecs have more audio headroom than Tieline G3 audio codecs, therefore metering needs to be adjusted when connecting to a Commander or i-Mix G3 codec. The G3 metering scale is between -11dBu and +18dBu and audio levels should average around the nominal 0vu point. Audio peaks should not exceed +16dbu.

### Configure Audio Reference Metering when Connecting to Tieline G3 Codecs

New generation Genie, Merlin and Bridge-IT IP codecs have more audio headroom than Tieline G3 audio codecs, therefore the audio metering reference scale needs to be adjusted when connecting to a Commander or i-Mix G3 codec with one of these codecs. The G3 metering scale is between -11dBu and +18dBu and audio levels should average around the nominal 0vu point. Audio peaks should not exceed +16dbu.

1. Press the **SETTINGS**  button.
2. Navigate to **Audio** and press .
3. Navigate to **Ref Level** and press .
4. Select **Tieline G3** and press .


	Features	Description
1	-11dBu	PPM meter low point
2	+4dBu	Nominal 0vu reference level at +4dBu
3	+16dBu	+16 indication where audio will clip/distort



**Important Note:** If your codec (Genie Distribution and Bridge-IT) supports sending multi-unicast connections and the **Auto** (default) reference level is selected, the first codec you connect with will configure the reference level used for all subsequent multi-unicast connections.

## Audio Levels and Meters

The PPM meters use dBu to express nominal operating, headroom and noise floor levels. Set audio levels so that audio peaks average at the nominal 0vu point indicated on the front panel PPM meters. This represents a program level of +4 dBu leaving the codec. Audio peaks can safely reach +22 dBu without clipping, providing 18dBu of headroom from the nominal 0vu point.

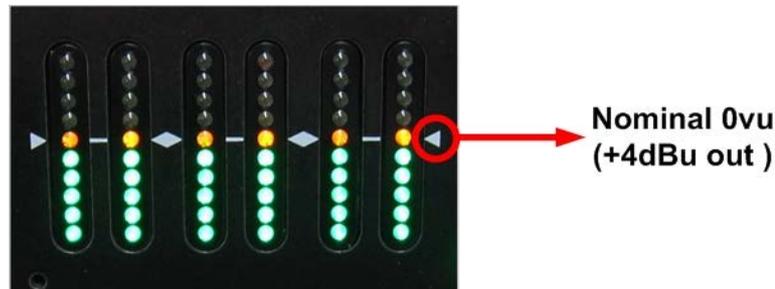

## Mono and Stereo Metering

When connected with a mono program the codec will display a mix of inputs 1 and 2 on **PPM1**. **PPM 3** displays the level of return audio.



Mono connection displaying audio on PPMs 1 and 3

When connecting with a stereo program, the codec displays audio on **PPM1 & 2** for inputs 1 and 2 and **PPM 3 & 4** for the return program audio.




Stereo connection with PPMs 1-4 displaying input and return audio

## Adjusting Default PPM Metering


The default PPM metering settings can be adjusted via **Settings > Audio > PPM Mode**. The options include:

	PPM Mode	Description
1	Program Default (default)	Displays default program PPM meter settings (i.e. the settings described previously for mono, stereo programs etc.)
2	Input	Maps input encoders 1 to 6 with PPM meters 1 to 6.
3	Decoder	Maps decoders 1 to 6 with PPM meters 1 to 6.
4	HP Monitor	Maps PPM meters to inputs/outputs currently selected via the headphone monitoring function. The default headphone monitoring setting is accessed via <b>HEADPHONE</b> > <b>Monitor Source</b> > [Select audio Source].

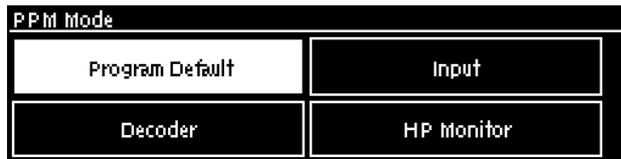


### Adjusting Analog Input Levels

1. Press the **SETTINGS** button.
2. Navigate to **Audio** and press .
3. Inputs are grouped in pairs under **Input Type** and should be set to **Analog**; press to toggle between **Analog** and **AES3** and press the **RETURN** button to exit the menu.
4. Use the down navigation button to highlight **Input Level** and press the .
5. Navigate to the channels you want to adjust and press .
6. Press the number on the keypad corresponding to the channel you want to toggle on or off. E.g. press on the numeric keypad to toggle channel 1 on and off.
7. Use the left or right navigation buttons to select the appropriate gain setting, then press the button to save the settings.

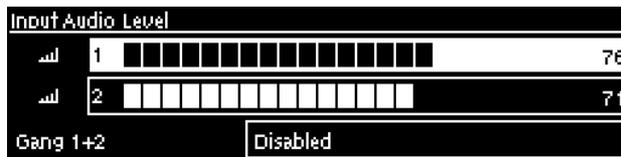

#### Important Note:

- To adjust levels quickly press and press and release the right arrow button to open the **Input Audio Level** adjustment screen and follow the preceding instructions.
- 15 volt phantom power can only be supplied on the auxiliary input; this is disabled by default.

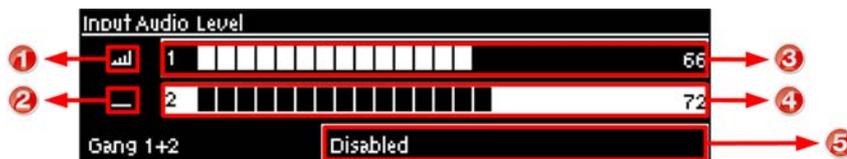

	Input Audio Features	Description
1	Channel On Symbol	Symbol indicates a channel is turned on
2	Channel Off Symbol	Symbol indicates a channel is turned off
3	Input 1 Level Control	Ch 1 level indication with percentage of gain indicated, i.e. <b>66</b>
4	Input 2 Level Control	Ch 1 level indication with percentage of gain indicated, i.e. <b>72</b>
5	Ch1/2 Gang Indication	Indicates whether ganging is enabled or disabled

## Auxiliary Input Adjustment

The codec has 1 x 6.35mm (1/4") Mic/Line level Jack on the rear panel. By default the input is **Off** and can be configured by:

1. Selecting the **SETTINGS**  button.
2. Navigate to **Audio** and press the  button.
3. Use the arrow-down  button to select **Aux Input** and press the  button to view menu options.



Input settings which can be adjusted include:

- Input on/off.
- Input level.
- Input Type: High Gain Mic, Medium Gain Mic, Low Gain Mic, Unbalanced and Line Level.
- Phantom power (15V available when enabled).
- IGC.



**Important Note:** When the auxiliary input (**AUX IN**) is **On** the default mixer configuration sends audio to all inputs. If you are not using the auxiliary input ensure it is **Off** to avoid additional noise in program audio.

## Ganging Audio Channels

It is possible to gang channels together and adjust the audio level of the ganged channels simultaneously. When channels are ganged together:

- Both channels highlight together when selected.
- The gain setting for both channels is automatically set to match the gain level of the lowest of the two channels when ganging is first configured.
- If one channel is turned on when ganging is first configured then the other one will be turned on automatically.

1. Press the **SETTINGS**  button.
2. Navigate to **Audio** and press .
3. Use the down  navigation button to highlight **Input Level** and press the .
4. Navigate to the channels you want to gang and press the .
5. Navigate to the **Gang** function and press the  button to toggle between **Enabled** or **Disabled**.
6. Use the up  and down  arrow buttons to highlight and select the audio channels.

7. Use the left ◀ and right ▶ arrow buttons to adjust the levels for both inputs up or down simultaneously.
8. Press the **RETURN**  or **HOME** buttons to exit the screen.



**Important Note:**

- To gang channels quickly press **F1**  and press and release the right ▶ arrow button to open the **Input Audio Level** adjustment screen and follow the preceding instructions.

## Intelligent Gain Control (IGC)

When the broadcast action really starts to heat up, the codec's inbuilt DSP limiter automatically takes care of any instantaneous audio peaks that occur in demanding broadcast situations. **Input IGC** (Intelligent Gain Control) is enabled by default and is automatically activated at +20 dBu (G5 audio scale) and +14dBu (G3 audio scale) to prevent audio clipping.

There are three settings; **Auto**, **Fixed** and **Off**. If **Auto** is configured the codec will detect when incoming audio levels have reduced sufficiently and automatically return input levels to the gain setting prior to IGC being activated. The codec takes just 250 milliseconds to detect audio levels have returned to normal (after **IGC Level** has been initiated) and will return the levels to the previous setting within half a second. This response is linear.

To adjust this setting in the codec:

1. Press the **SETTINGS**  button.
2. Navigate to **Audio** and press .
3. Navigate to **Input IGC** and press .
4. Select the channel you want to adjust and press .
5. Navigate to the preferred setting and press .

## 9 Configuring AES3 Audio

The codec has an **IN1/AES3** input on the rear panel of the codec for AES3 (AES/EBU) format audio. This balanced 110 ohm female XLR input can operate effectively over distances of up to 100 meters and accepts both mono and stereo AES3 signals.

1. Press the **SETTINGS**  button.
2. Navigate to **Audio** and press .
3. Select **Input Type** and press the  button.
4. Navigate to the inputs you want to configure and press the  button to toggle between **Analog** and **AES3**.

The 3 pin male XLR **AES3 OUT** connector is capable of sending both mono and stereo AES3 signals.



**Important Notes:** Input levels are set at 100% automatically for AES3 connections. If you switch back to the analog input setting after selecting AES3, the previous analog settings will be recovered.

## AES3 Sample Rate Conversion

The codec contains two sample rate converters.

## Input Sample Rate Converter

The codec implements an Asynchronous Sample Rate Converter (ASRC) to convert the sample rate of an AES3 input to the sample rate set in the codec. The codec sample rate is determined by the selected algorithm. For example, if you select the Music algorithm, the sample rate will be set to 32kHz.

By default the codec will up-sample all channel 1 and 2 AES3 input sources to 96kHz sampling unless your audio source uses a 44.1kHz sample rate.

## Output Sample Rate Converter

The sample rate of the AES3 output is currently configured using the clock source setting via the **SETTINGS**  button and then **Audio > Input Type > AES3 Out**. This configures the sample rate frequency of all AES3 output signals and there are three possible settings.



### Locked to AES3 Input

If this setting is used, the codec will use the sync information received by the AES3 XLR input (this is the same as the **AES Rx Clock** setting in Tieline G3 codecs) to set the sample rate within the codec. This codec input also carries AES3 audio data.

### Wordclock Sync In

This setting configures the codec for a word clock source via the **SYNC INPUT** on the codec rear panel (this is the same as the **External Word Clock** setting in Tieline G3 codecs). Often this will be a studio reference signal (D.A.R.S., or Digital Audio Reference Signal). In television broadcasting facilities, the audio reference signal should be locked to the video reference if there is one available. The sample rate being received is recognized by the codec and automatically adjusted within it. Sample rates from 32 kHz to 96 kHz are accepted, including the most popular rates of 32 kHz, 44.1 kHz and 48 kHz.

### Fixed Sample Clock

Select from a range of fixed output sample rates.

## 10 Genie STL Headphone/Aux Output

The codec has a 6.35mm (1/4") RTS stereo **HEADPHONE** output for monitoring inputs and return audio. If you are using analog inputs or digital inputs you will see audio metering on the PPMs and can monitor it with the headphones.



**Important Note:** The front panel **HEADPHONE** output and rear panel **HP/AUX** output share the same hardware output. This means both are switched and configured together. I.e. both outputs are either a stereo headphone output (default setting), or a balanced mono auxiliary output.

### Configure Headphone and Aux Output


Both the front panel **HEADPHONE** and rear panel **HP/AUX** outputs are configured as stereo headphone outputs by default. To adjust this setting:

1. Press the **SETTINGS** button.
2. Navigate to **Audio** and press .
3. Select **HP/Aux Out** and press to toggle between **Headphone** and **Aux Out**.



### Adjust Headphone Output Settings

1. Press the **HEADPHONE** button to display the headphone monitoring adjustment screen.
2. Use the left or right navigation buttons to adjust the volume level up or down. The screen displays level adjustments in real-time.

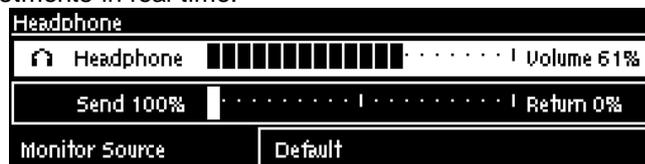


3. Press the down navigation button to select the **Send/Return** audio balance and use the left or right navigation buttons to adjust the balance. The **Send/Return** audio balance dictates whether the front panel **HEADPHONE** output and the rear panel **HP/AUX** output monitors send (input/encoder) audio only, return audio only (decoder audio from a connected device), or a mix of both send and return audio.
4. Press **RETURN** when you have finished to exit the menu.

Note: Headphone levels can also be adjusted by pressing the **SETTINGS** button, navigate to **Audio** and then **HP Vol/Bal** and press .

### Adjusting the Monitor Source

In headphone listen mode it is possible to select monitoring sources via **HEADPHONE** **> Monitor Source > [Select audio Source]**.

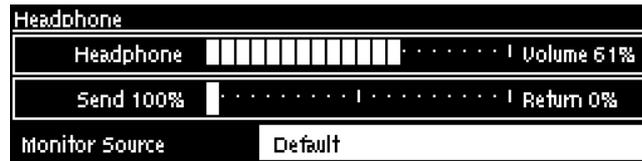

Navigate to the source you want to monitor and press . Options include:

1. **Default:** the default factory program headphone mix
2. **Audio Stream:** monitors the selected codec audio stream.
3. **Inputs:** monitors the codec inputs (i.e. encoders).

The default headphone mixes for factory programs are displayed in the following table.

Codec Programs	Left	Right
1 x Peer-to-Peer Mono	Inputs 1&2/ Outputs 1&2	Inputs 1&2/ Outputs 1&2
1 x Peer-to-Peer Stereo	Input1 /Output 1	Input 2/Output 2

## Adjust Auxiliary Output Settings

Settings for the auxiliary output audio are adjusted similarly to the **HEADPHONE** output, except that the output level is fixed at line level. Configure the front panel **HEADPHONE** output and rear panel **HP/AUX** output as an **Aux Out** and then:

1. Press the **HEADPHONE** button to display the aux output adjustment screen.
2. Use the left or right navigation buttons to adjust the **Send/Return** audio balance.



3. Press **RETURN** when you have finished to exit the menu.

Note: Send/Return balance can also be adjusted by pressing the **SETTINGS** button, navigate to **Audio** and then **Aux Bal** and press .

## 11 Inserting Hardware Modules

Two slots are available for inserting optional ISDN or POTS connection modules into the codec. The module slots are numbered as follows.



### Inserting or Removing a Module



Ensure the codec is not powered up when inserting or removing modules. Where possible use anti-static precautions to help minimize the chance of static charges damaging the highly sensitive circuitry. Do not force a module into the codec. Modules should be installed slowly and gently.

1. Remove power from the codec and then remove the 4 screws from the blanking panel or module installed in the codec.
2. Carefully slide the new module into the module slot and ensure the base of the module remains flat during insertion, to ensure it lines up correctly with the module connector within the codec.
3. Reinsert the 4 screws to hold the module firmly in place.
4. Power up the codec.
5. Press the **SETTINGS**  button to verify it is installed correctly.
6. Navigate to **Modules** and press the  button.
7. The newly installed module should be visible as **Module 1** or **Module 2**.



**Important Note:** If the module does not appear in the **Modules** menu in the codec, it is possible that the connector on the module has not lined up correctly with the connector inside the codec. Remove the module and reinsert it carefully to resolve this issue.

## 12 About ISDN Modules

ISDN stands for Integrated Services Digital Network. The Basic Rate Interface (BRI) of ISDN consists of 2 bearer (B) channels at 64 kbps each and 1 data (D) channel at 16 kbps, i.e. (2B +D). This can be provided over a 2 wire facility and the two B channels can be bonded together to form a single 128kbps channel. The B channel can carry user information such as voice, video or data. The D channel carries signaling information between a user and the network.

Tieline codecs fitted with an ISDN G5 module can provide high quality mono or stereo audio over a single B channel using the Tieline Music algorithm. If you have 2 B channels you can use one as a standby, or configure higher bandwidth mono or stereo connections using algorithms such as MusicPLUS and MPEG. The codec has two module slots available. Each module supports 2 B channels and it is possible to insert two ISDN modules and bond 4 B channels together. This will increase connection bandwidth to 256 kbps for connections using high quality algorithms like aptX Enhanced.



### Important Considerations

There are a number of things to consider if you are using your codec in ISDN mode. Some of these things include:

- Will you be operating within North America or other countries?
- Will you be using a single B channel, 2 B channels, or 4 B channels?
- Which network will you be using?
- Is your ISDN line Point-to-Point or Point-to-Multipoint?
- What are your directory numbers (DN)?
- If you are in the US, what are your Service Profile ID (SPID) numbers?
- What is your Multiple Subscriber Number (MSN) if you need to enter this outside North America?

The answers to these questions will be influenced by the country in which you operate. For example, a SPID does not need to be entered into a Tieline codec for operation within Europe, but it does in North America.

### U and S/T ISDN Interfaces

In North America the telephone company provides its BRI customers with a U interface. The U interface is a two-wire (single pair) interface from the phone switch. It supports full-duplex data transfer over a single pair of wires, therefore only a single device can be connected to a U interface.

The situation is different in Europe, the UK, most of Asia, Australia, Africa and parts of the Middle East, where the phone company is allowed to supply the NT-1 and the customer is given an S/T interface. The NT-1 is a relatively simple device that converts a 2-wire U interface into the 4-wire S/T interface.

If you have an NT-1 device connected to the U interface line then you will require a Tieline Euro ISDN G5 module (S/T interface - model: TLISDNEUROG5). If you don't have an NT-1 device installed then the Tieline US ISDN G5 module (U interface - model: TLISDNUSG5) will be required. You can ring your telecommunications provider to ask if you're not sure. Note: In Japan use the Tieline Euro ISDN module.



**Important Note:** Tieline S/T Euro ISDN G5 modules do not have internal terminating resistors. When you connect terminating equipment such as a Tieline codec to an NT-1, 100 ohm termination resistors must be connected between pins 3 and 6 and between

pins 4 and 5 at the last socket on the ISDN line. Check your NT-1 device user manual as this may be supported. Suppliers of electronic components sell suitable plugs with termination resistors when required. Please note: U interface ISDN terminations do not require terminating resistors.

## How to Configure ISDN G5 Modules

To configure the codec to dial using ISDN for the first time:

1. Ensure that the correct country setting is configured in your codec via **Settings > System > Country**.
2. If you are dialing between two Tieline codecs you normally only need to [configure an ISDN dialing program](#) via **Connect > ISDN**. See [Configuring ISDN](#) to adjust settings using the Java Toolbox Web-GUI, or click [here](#) to adjust settings using the HTML5 Toolbox Web-GUI.

Other more advanced settings can also be configured:

1. Select **Settings > Modules > [Select ISDN Module]** to adjust ISDN module settings specific to your codec site. See [Configure ISDN Module Settings](#) for more information. See [Configuring ISDN Modules](#) to adjust settings using the Java Toolbox Web-GUI, or click [here](#) to adjust settings using the HTML5 Toolbox Web-GUI.
2. ISDN answering can be configured to suit:
  - Hardware available in the codec, i.e. the number of B channels available.
  - Expected dialing behaviors, e.g. if B channels should bond or not, and whether audio streams need to use **Route** tags.
  - The type of call being made, e.g. Tieline (with Tieline Session Data) versus non-Tieline (sessionless calls).

Adjust answering configuration via **Settings > Answering > ISDN Answer Configs > [Select Config]** and see [ISDN Answering Configuration](#) for more information (see [Configuring ISDN Answering](#) to adjust settings using the Java Toolbox Web-GUI, or click [here](#) to adjust settings using the HTML5 Toolbox Web-GUI).

## 12.1 ISDN Module Settings

ISDN settings in the **Module** menu will determine how each installed module operates at a particular site. This allows you to copy programs between codecs installed at different locations and separately configure site-specific settings for how each ISDN module should connect. Other answering-related settings are available in the **Answering** menu via **Settings > Answering > [Select ISDN Config]**.


### Configuring ISDN G5 Modules

1. Press the the **SETTINGS**  button, then navigate to **Modules** and press the  button.



**Important Note:** You can also configure your ISDN module by pressing the **HOME**  button to return to the **Home** screen and select **Connect > ISDN**. Then use the down  navigation button to select **Module Configuration** and press the  button.

2. Navigate to the module you want to configure and press the  button. Note: Module 1 is on the left when looking at the codec rear panel.

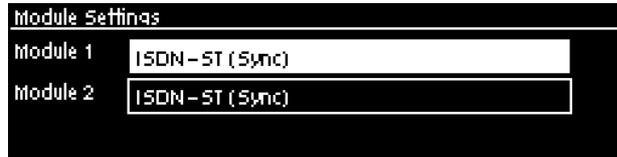


**Important Note: ISDN Sync** should be displayed when an ISDN line is connected to the codec. This appears regardless of whether you have configured the 'ISDN Line Type' correctly.

3. Navigate to **Accept** and press the  button. This menu is a call filter to allow or deny voice or data calls according to your preferences. The default setting allows both **Voice & Data**. Select your preferred option and press the  button.



**Important Note:** G.711 is the default algorithm for incoming connections when **Voice Only** is selected. There are two G.711 algorithms and the one used by the codec depends on the country setting in the codec. The  $\mu$ -law algorithm is used in the USA, Japan and Canada, whereas the A-law algorithm is used in other countries.

4. Navigate to **Network** and press the  button. Select the **Network Type** corresponding to the region in which you are using the codec, then press the  button.

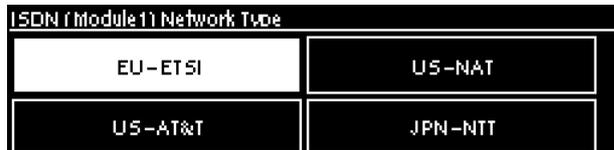

Networks	Select
US-Nat	If switch type is National ISDN-1 and 2
US-AT&T	If switch Type is AT&T 5ESS
EU-ETSI	If Switch Type is ETSI (UK, Europe, Australia and most other countries)
JPN-NTT	If you are in the Japan and your network is NTT


5. Navigate to **Line Type** and press the  button. Ask your Telco whether your ISDN line is Point-to-Point or Point-to-Multipoint. By default select **Point-to-Multipoint**, unless your switch type is point-to-point, your Telco says the line is point-to-point, or you are connected to a PABX system. Most PABX systems are point-to-point. Next, press the  button.



6. If you are in the US enter DN and SPID numbers as required, or in other regions enter DN or MSN numbers as required. Navigate to each **DN**, **SPID** or **MSN** and press the  button before entering each number, then press the  button to store each number.



8. Navigate up to **Apply Settings** and press the  button to apply all module settings.

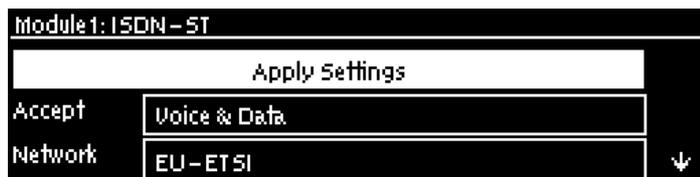

#### Important Notes:

##### **Directory Numbers and Multiple Subscriber Numbers**

Directory Numbers (DN) in North America and Multiple Subscriber Numbers (MSN) in the rest of the world are simply phone numbers associated with an ISDN B channel, like lines listed in a typical phone directory. Your Telco will normally supply 2 DN/MSN numbers for each pair of B channels. However, these numbers may or may not be associated with a specific B channel.

Often broadcasters prefer to predict which B channel will answer an incoming call to ensure audio routing is consistent. However, if a DN or MSN number is not entered in the codec and multiple B channels are available, the codec may use any channel to answer an incoming call. To ensure calls are routed consistently, enter a DN/MSN number (without the country or area code) as the DN/MSN for a B channel, then only that corresponding B channel will answer an incoming call to that number. Programming DN/MSN numbers for each B channel allows the codec to ignore calls without matching DN/

MSN numbers. This is the best way to answer calls from codecs in a predictable manner.

### ***SPID Numbers in North America***

ISDN relies on an initialization procedure for associating Service Profiles with specific terminating equipment (e.g. your audio codec) rather than lines. In the US Telcos assign a Service Profile ID (SPID) number which assists in identifying different ISDN services across the network. Your Telco must provide a SPID for each B channel you order when connecting over US-Nat or US-AT&T networks in the US. A SPID is not required when using the AT&T PTP protocol.

Typically, each ISDN BRI service in the US will have two SPIDs and these must be entered correctly. When you enter a SPID into your codec and connect it to an ISDN line, an initialization and identification process takes place, whereby the terminating equipment (your codec) sends the SPID to the switch. The switch then associates the SPID with a specific Service Profile and directory number.

Note: SPID numbers normally include the phone number and additional prefix or suffix digits up to 20 digits long.

## 12.2 ISDN Answering Configuration



**Important Note:** For more detailed information about **ISDN Answer Config** parameters, including bonding and 'route' configuration etc., please see [Configuring ISDN Answering](#) in the Java Toolbox Web-GUI manual, or [Configuring ISDN Answering](#) in the HTML5 Toolbox Web-GUI manual.


**ISDN Answering Configs** are used to determine how codec ISDN modules will behave when answering ISDN calls.

1. Press the the **SETTINGS**  button, then navigate to **Answering** and press the **OK**  button.




**Important Note:** You can also configure your ISDN module by pressing the **HOME**  button to return to the **Home** screen and select **Connect > ISDN**. Then use the down  navigation button to select **Module Configuration** and press the **OK**  button.

2. Navigate to **ISDN Answer Configs** and press the **OK**  button.

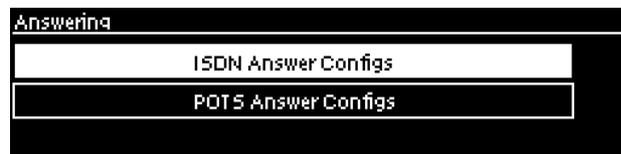


3. Navigate to one of the four available **Configs** and press the **OK**  button.

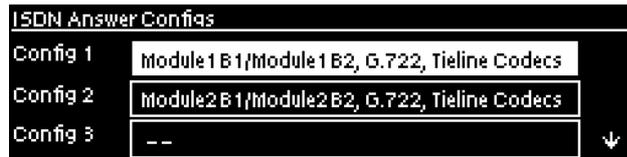

4. Navigate to **Edit** and press the button.




5. Navigate to each B channel and press the button if you want to select/deselect a B channel within the selected **Config**. Navigate to **Continue** and press the button. Notes: The tick symbol confirms a B channel has been selected.

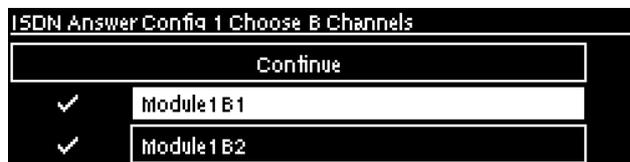


**Important Note:** If a B channel has been selected within another **Config** it will not be visible. Only available B channels are displayed.

6. Choose the bonding method if multiple B channels have been selected, then press the button.

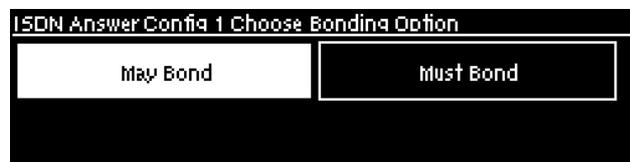

7. Select **Disable** when connecting to Tieline codecs using session data, or select **Enable** if connecting to non-Tieline codecs only, then press the button.

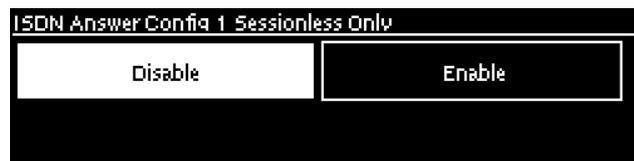

**Important Note:** Select **Disable** if the codec is expected to receive ISDN calls from Tieline codecs, or both Tieline and non-Tieline codecs (i.e. you are not sure which type of codec may call). In this mode, once the codec answers a call, it expects to receive Tieline session data from the caller and configure its own algorithm settings according to that. If it fails to receive Tieline session data within 5 seconds (i.e. a non-Tieline codec is calling, or a Tieline codec with session data disabled), it will use the settings in the **ISDN Answering Config** instead.

Enable **Sessionless Only** when answering ISDN calls from non-Tieline codecs only. When **Sessionless** is configured, the codec will not wait for the session data. This reduces the time taken to answer an inbound sessionless call.

8. Select the default algorithm when receiving a call from a non-Timeline codec, then press the  button.

ISDN Answer Config 1 Algorithm	
G.711	G.722
MP2 Mono	MP2 Stereo

9. Specify the audio stream **Route** when receiving a call on the answering codec from a non-Timeline codec, then press the  button.

ISDN Answer Config 1 Route	
None	Route 1
Route 2	Route 3

10. Select **Yes** and then press the  button to confirm all changes.

ISDN Answer Config 1 Confirm Changes	
Save ISDN Answer Config 1?	
No	Yes

## Reset ISDN Answer Configs

To reset ISDN answering settings to factory defaults:

1. Navigate to **Settings > Answering > ISDN Answer Configs > Reset ISDN Answer Configs** and then press the  button.

ISDN Answer Configs	
Config 4	--
Default	None
Reset ISDN Answer Configs	

2. Select **Yes** and press the  button.

Reset ISDN Answer	
Reset ISDN Answer Setup?	
No	Yes

## 13 About POTS Modules

The Tieline POTS G5 module can be used in the codec to stream high quality audio over a POTS (PSTN) phone line. The codec has two module slots available and it is possible to insert one or two POTS G5 modules, or a mix of POTS G5 and ISDN G5 modules as required. The Tieline Music algorithm can deliver 15 kHz quality bi-directional audio at bit rates as low as 24kbps over a POTS connection.



### Modem Negotiation and Line Quality

The codec can send and receive high-speed digital information over a standard POTS telephone line via the modem in the POTS G5 module.

G5 POTS modems initially attempt to establish a link at the lowest **Max Bit rate** setting configured in the two modules being connected. If the POTS line doesn't support this bit rate, the modems will attempt to connect at the highest possible bit rate to suit the prevailing line quality at each end of the link. The modem then perform a process called 'training', during which the codecs at each end of the link analyze the line. The codecs will then 'renegotiate' the link downwards to the highest possible bit rate where line quality is greater than 70%.

The POTS G5 module contains a SmartDAA™ (Smart Data Access Arrangement) line interface, which isolates the modem from voltages on phone lines. It is important to select the correct country in the codec from which you are dialing. This allows the SmartDAA to automatically adjust for the line voltage present in that country.



**Important Note:** It is possible to connect two concurrent POTS connections, however the codec will not bond two POTS connections.

### Connecting to G3 Codecs using POTS

The codec will successfully connect to Tieline Commander G3 and i-Mix G3 codecs over POTS. These Tieline G3 codecs may use:

- **POTS** modules (older superseded version)
- **POTS G3** modules (current version)

### Connecting to POTS G3 Modules

POTS G3 modules operate in the same way as POTS G5 modules when connecting, e.g. they establish a link at the default bit rate of 28.8kbps and then 'renegotiate' the link downwards to the highest possible bit rate where line quality is greater than 70%.

### Connecting to Legacy POTS Modules in G3 Codecs

These modules have slightly different characteristics when connecting. When dialing from a POTS G5 module to these older POTS modules the codecs will attempt to connect initially at 19.2kbps. If line quality is above 80% at this bit rate then the codec will 'retrain' the connection up to a maximum of 28,800bps (depending on modem handshaking). The codec will then renegotiate the link downwards to the highest possible bit rate where line quality is greater than 70%.

## How to Configure POTS G5 Codec Connections

To configure the codec to dial using POTS for the first time:

1. Ensure that the correct country setting is configured in your codec via **Settings > System > Country**. This ensures the correct settings are used by the codec when making POTS connections.
2. When dialing between two Tieline codecs you normally only need to [configure a POTS dialing program](#) via **Connect > POTS**.

Other more advanced settings can also be configured:

1. Select **Settings > Modules > [Select POTS Module]** to adjust POTS module settings specific to your codec site. See [Configure POTS Module Settings](#) for more information. See [Configuring POTS Modules](#) to adjust settings using the Java Toolbox Web-GUI, or click [here](#) to adjust settings using the HTML5 Toolbox Web-GUI.
2. If you are connecting to non-Tieline codecs you may need to create an answering "Config" via **Settings > Answering > POTS Answer Configs > [Select POTS Config]**, which will determine the module used and relevant settings for answering a non-Tieline POTS call. See [Configure POTS Module Answering](#) for more information. See [Configuring POTS Answering](#) to adjust settings using the Java Toolbox Web-GUI, or click [here](#) to adjust settings using the HTML5 Toolbox Web-GUI.



**Important Note:** The codec has a single analog phone input shared by both modules (default setting is **Off**). This phone input is used to monitor modem tones in **POTS Codec** mode and for receiving audio in **Analog Phone** mode. **Phone Input** settings can be adjusted via **Settings > Audio > Phone Input**.

## Making Analog Phone (Voice) Calls

All POTS G5 modules are capable of making analog voice calls. It may be necessary to make an analog call to dial a telephone hybrid, or to use for communications, or because there is no Tieline codec at the other end of the link. Remember analog voice calls are only 3 kHz audio quality. To select analog phone answering mode in a POTS G5 module navigate to **Settings > Modules > POTS > Answer Mode [Analog phone]**.



**Important Analog Phone Note:** The codec has a single analog phone input which is shared by two POTS G5 modules when installed. As a result, two concurrent analog phone connections are not recommended because both connections share the same input and audio will be accepted from the oldest active connection only.

## 13.1 POTS Module Settings

POTS settings in the **Module** menu determine how your codec behaves at a particular site. This allows you to copy programs between codecs installed at different locations and configure site-specific settings for how each module should connect. Other answering-related settings are available in the **Answering** menu via **Settings > Answering > [Select POTS Config]** if you are connecting to non-Tieline codecs over POTS.



**Important Notes:** When **POTS (Ready)** is displayed throughout POTS menus it means the POTS module has initialized and is ready to accept or make a call.

## How to Configure POTS G5 Modules

1. Press the the **SETTINGS**  button, then navigate to **Modules** and press the  button.



2. Navigate to the module you want to configure and press the  button. Note: **Module 1** is on the left when viewing the codec rear panel.



3. Complete configuration changes as per the following options and then navigate up to **Apply Settings** and press the  button to apply all module settings.

## Module (Site) Settings

### Answer Mode (Affects Answering Only)

**Answer Mode** selects how the selected module in the codec will be able to answer incoming POTS line calls. Options include:

- **POTS Codec:** allows the POTS G5 module to receive encoded audio data over a POTS line.
- **Analog Phone:** configures the POTS G5 module to receive a standard analog phone call.
- **Disabled:** disables the POTS G5 module from receiving a **POTS Codec** or **Analog Phone** call.

Calls are answered based on the settings in **Config 1 & 2** via **Settings > Answering > POTS Answer Configs**. Adjustments to these **Config** settings are not normally necessary when connecting between Tieline codecs. Default settings may need to be adjusted when connecting to non-Tieline codecs over POTS (see [POTS Answering Configuration](#) for more info).



### Maximum Bit rate (Affects Dialing and Answering)

The default setting for the **Max Bitrate** is **28800** (28.8kbps) and this only affects **POTS Codec** calls. The range of the setting is 9.6kbps to 33.6kbps. Even if the line is capable of establishing a connection at a higher bit rate, the **Max Bitrate** setting is the highest bit rate that will be attempted.

G5 POTS modems initially attempt to establish a link at the lowest **Max Bit rate** setting configured in the two modules being connected. If the POTS line doesn't support this bit rate, the modems will attempt to connect at the highest possible bit rate to suit the prevailing line quality at each end of the link.

In the initial connection phase, the modems perform a process called 'training', to analyze the line and compensate for frequency and phase response. This also cancels out any echo that may be present. The codec will then 'renegotiate' the link downwards to the highest possible bit rate where line quality is greater than 70%. Negotiation is the process of bit rate adjustment.

Reducing this value can improve connection reliability on poor quality lines. If two codecs are not configured the same, they will always attempt to connect at the lowest of the two **Max Bit rate** settings.



### Dialing Method (Affects Dialing only)

Use this menu to select **Tone** (DTMF) or **Pulse** dialing over **POTS Codec** connections. Tone dialing is used always when the **Answer Mode** is **Analog Phone**.

### Dial Tone Detect (Affects Dialing only)

There are two settings in this menu:

- **Dial Tone Detect:** The module will only be allowed to dial when a dial tone is present on the line.
- **Blind Dialing:** Allows the module to dial when no dial tone is present.

### Monitor Modem Tone (Affects Dialing and Answering)

This setting can be **Enabled** or **Disabled**. If enabled the module will allow audio monitoring of modem tones during connection in **POTS Codec** mode via the phone input. By default, the following phone input monitoring rules apply when multiple POTS G5 modules are installed in a codec and multiple POTS connections are dialed.

Module 1	Module 2	Audio Rule
POTS Codec (Monitor Modem Tone)	POTS Codec (Monitor Modem Tone)	The phone input receives a mix of modem tone audio from both modules
POTS Codec (Monitor Modem Tone)	Analog Phone	The phone input receives analog phone input audio only and mutes modem tone monitoring
Analog Phone	Analog Phone	The phone input accepts audio from the oldest active connection only



#### Important Notes:

- POTS modem tones are audible in the left side of the headphone output, irrespective of the type of program loaded in the codec.
- Modem tone monitoring will work even if **Phone Input Enable** is **Off** via **Settings > Audio > Phone Input > Phone Input Enable [Off]**.
- Modem tone monitoring is only enabled during the initial connection training and negotiation period in **POTS Codec** mode.
- The monitoring volume can be adjusted via **Settings > Audio > Phone Input > Level**.

## Country

This displays the current country setting in the codec. To adjust this setting select **Settings > System > Country**.



**Caution:** Don't forget to navigate up to **Apply Settings** and press the  button to apply all module settings before leaving this menu!

## 13.2 POTS Answering Configuration

Connection setting preferences are normally exchanged via session data sent between two Teline codecs when a connection is established. If you answer a call from a non-Teline codec you will need to create an answering "Config" to determine the settings used when connecting, and designate which module will answer the call (if more than one POTS module is installed).




### Important Notes:

- **POTS Answer Config** settings are applied to **POTS Codec** connections and not **Analog Phone** connections.
- When receiving a call from a Teline codec sending session data (i.e. not a **Sessionless** connection), the algorithm setting from the dialing codec overrides the setting in the **POTS Answer Config** menu.
- The default **POTS Answer Configs** accept a call from an incoming Teline codec with session data enabled. They will also answer a call from a Comrex POTS codec by using the **Other** algorithm.
- For more information about POTS answering parameters, including 'route' configuration, please see [Configuring POTS Answering](#) in the Java Toolbox Web-GUI manual, or [Configuring POTS Answering](#) in the HTML5 Toolbox Web-GUI manual.

1. Press the the **SETTINGS**  button, then navigate to **Answering** and press the  button.



2. Navigate to **POTS Answer Configs** and press the  button.

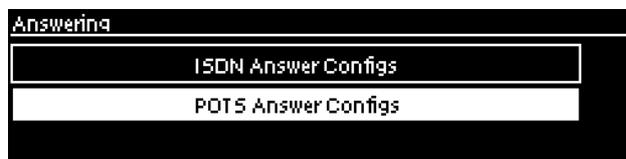

3. Navigate to **Config 1** and press  to configure a POTS module in [module slot 1](#), or navigate to **Config 2** and press  to configure a POTS module in [module slot 2](#).



4. Select **Info** to view current settings or **Edit** to adjust **Config** settings, then press the  button.



5. Select **Disable** when connecting to Tieline codecs using session data, or select **Enable** if connecting to non-Tieline codecs only, then press the  button.



**Important Note:** Select **Disable** if the codec is expected to receive POTS calls from Tieline codecs, or both Tieline and non-Tieline codecs (i.e. you are not sure which type of codec may call). In this mode, once the codec answers a call, it expects to receive Tieline session data from the caller and configure its own algorithm settings according to that. If it fails to receive Tieline session data within 5 seconds (e.g. a Comrex POTS codec is calling), it will use the settings in the **ISDN Answering Config** instead.

Enable **Sessionless Only** when answering POTS calls from non-Tieline codecs only. When **Sessionless** is configured, the codec will not wait for the session data. This reduces the time taken to answer an inbound sessionless call.

6. Select **Other** when connecting to Comrex® Vector, Matrix® and BlueBox® codecs, then press the  button.




**Important Note:** On the Comrex codec select its "Music" algorithm. Please note that 9.6kbps connections are not supported by the Comrex codecs.

7. If required you can specify the audio stream **Route** when answering a call from a non-Tieline codec, then press the  button.



8. Select **Yes** and press the  button to confirm the new **Config** settings.

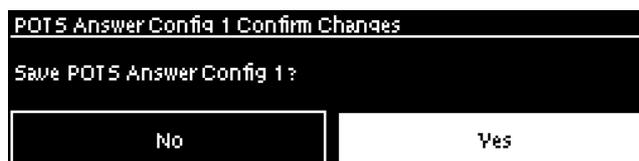

9. The new **Config** will be displayed showing the updated settings.




## Reset POTS Answer Configs

To reset POTS answering settings to factory defaults:

1. Navigate to **Settings > Answering > POTS Answer Configs > Reset POTS Answer Configs** and then press the button.



2. Select **Yes** and press the button.

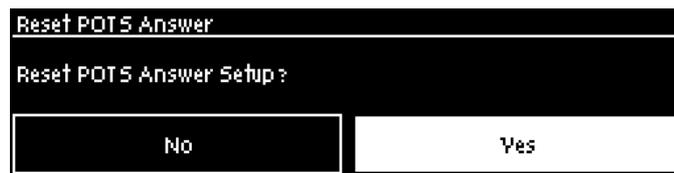

## 14 Language Selection

English is the default language in the codec. To select a new language:

1. Press the **SETTINGS** button.
2. Navigate to **System** and press .
3. Use the navigation buttons to select **Language** and press .
4. Select a language and press .

## 15 About Program Dialing

### What Defines a Program?

---

Tieline Genie and Merlin codecs use programs to connect to another codec. A **Program** configures a Tieline codec to send or receive one or more **Audio Streams** based upon the particular application the codec is being used for at any given time. The attributes of the audio stream and associated connections are embodied within a program when it is created, including the configuration, dialing and answering parameters.

Tieline Genie and Merlin codecs operate similarly to Tieline G3 codecs. By default, Tieline codecs send proprietary session data when connecting to each other in order to establish, manage and terminate connections. When a connection between two codecs is established:

1. The dialing codec sends information about how the codec receiving the call should be configured.
2. Once the codec receiving session data from the dialing codec has received information successfully, it sends an acknowledgement to the dialing codec and streaming can commence.

For example, if you configure a standard stereo program on the dialing codec using a particular algorithm and bit rate settings etc., these settings will be configured on the dialing codec when the codec connects. It is also possible to [lock a loaded program](#) in a codec to ensure the currently loaded program cannot be unloaded by a codec dialing in with different program settings.

For example, if your routing requirements require the codec at the studio to always connect in mono, simply load and lock a mono program in the codec. Generally programs will be up or down-mixed by the answering codec to match the loaded program type. In some situations incompatible program types will be rejected.


### Defining Audio Streams within Programs

---

Each audio stream within a program can be defined separately and contain a variety of settings relating to the number of connections (e.g. primary and backup) and the number of destinations to which each audio stream is distributed. Each audio stream is capable of being configured to include dial and answer connections, dial connections only, or answer connections only. Each audio stream has its own:

- Name.
- Connection, Transport, and Destination settings.
- Backup configuration options.

The following image displays a simple peer-to-peer program in the **Programs panel** within the Java Toolbox Web-GUI, which can be used to configure and edit all program parameters. The program displayed is configured to send a single stereo audio stream and will allow the codec to both answer and dial (via dialing and answering connections) if required. A backup dialing connection is configured in case the primary connection fails.

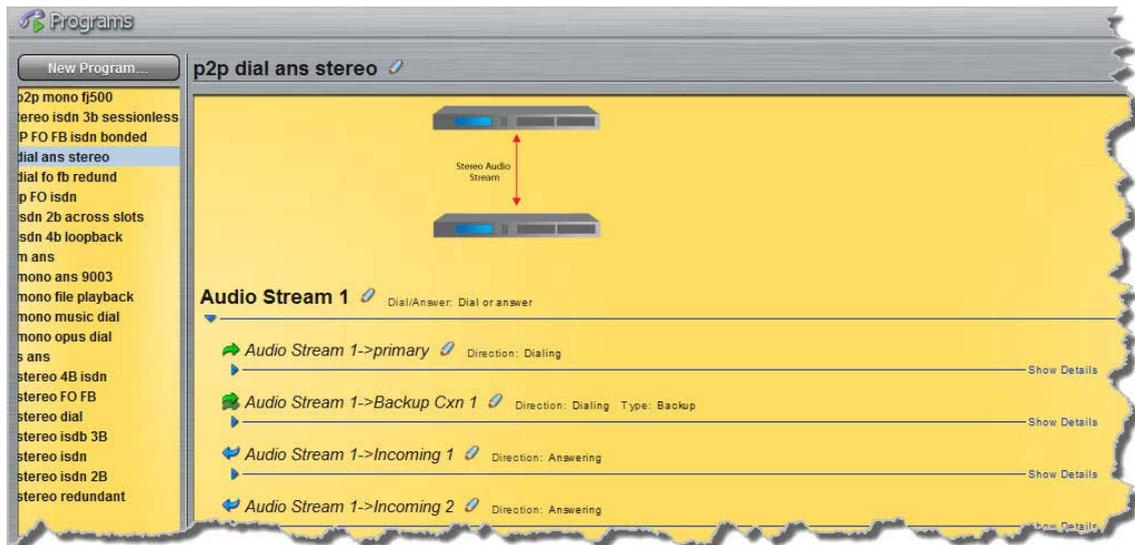

## Creating Programs

Only the simplest peer-to-peer (point-to-point) programs can be created using the codec front panel. The Java Toolbox web-GUI contains a **Programs panel** with a wizard for configuring program settings and backup connections. Edit settings easily at the touch of a button and use existing programs as templates for creating other programs.

### Mono and Stereo Peer-to-Peer Programs


New peer-to-peer programs can be created using the codec front panel keypad (see [Steps to Connect over IP](#)). If you know the IP address of the codec you want to dial then all you need to do is enter this into the codec, choose your preferred connection settings and then press **CONNECT** .

Front panel configured programs are automatically saved as **Recent Programs** which retain all the audio stream dialing and configuration information. These **Recent Programs** are displayed when you press the **CONNECT**  button from within any menu except the **IP Mode** or **SIP Mode** screens, or the **Connect IP** or **Connect SIP** screens.

Ensure you configure all the correct connection settings when using the codec front panel, because these are stored as part of the program's profile when you first connect. They cannot be adjusted afterwards without using the editing features in the **Program panel** within the Toolbox Web-GUI.



**Important Note:** When configuring a connection use the **Save** function in the **Connect IP** and **Connect SIP** screens to save programs permanently to the codec's **Programs** menu. Otherwise they are stored to the **Recent Programs** list and will be overwritten after several calls have been made.

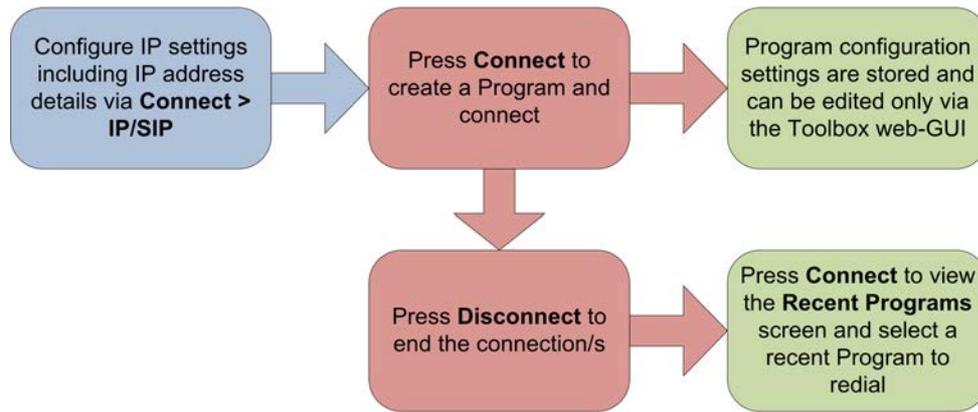

Peer-to-peer connection configured via the codec front panel

## 16 Getting Connected Quickly

Before attempting a new audio stream connection please connect and adjust the following:

1. Attach power to the codec.
2. For IP connections, attach RJ45 Ethernet cables to at least one of the **ETH** ports on the codec's rear panel. Attach cables to ISDN or POTS modules inserted in your codec as required.
3. Attach headphones to the 6.35mm (1/4") headphone jack on the codec's front panel.
4. Check that the correct country is selected in the codec.
  - i. Press the **SETTINGS**  button.
  - ii. Navigate to **System** and press the  button.
  - iii. Navigate to **Country** and press the  button.
  - iv. Use the navigation buttons to select your country of operation and press the  button.
5. Make sure you know the IP address, or line numbers for dialing over ISDN or POTS to the destination codec.



**Important Note:** It is important to set the correct country setting for connections over POTS to adjust the POTS G5 module for varying line voltages in different countries. The country setting also affects whether G.711  $\mu$ -Law (North America/Japan) or A-Law (Europe/Australasia) coding is used over IP, SIP and ISDN connections.

### 16.1 Steps to Connect over IP

The following procedure will create a custom peer-to-peer connection program using the codec front panel keypad and navigation buttons. It instructs how to connect your codec over IP for the very first time without using the Toolbox Web-GUI and your computer for configuration.



**Important Notes:**

- See [Using the Java Toolbox Web-GUI](#) for details on configuring connections remotely via a computer. Creation of programs is not currently supported in the HTML5 Toolbox Web-GUI.
- See [Installing the Codec at the Studio](#) for valuable information about installing your codec, negotiating firewalls and port forwarding.
- See [Tips for Creating Reliable IP Connections](#) for a range of IP information to assist with setting up IP services for your codecs.
- See [Testing IP Network Connections](#) to learn how you can test and verify the reliability of your IP connection.


1. Press  and press and release the right  arrow button to open the **Input Audio Level**

adjustment screen.


- Press the number on the keypad corresponding to the channel you want to toggle on or off. E.g. press  on the numeric keypad to toggle channel 1 on and off.
  - Use the up  and down  navigation buttons to select the gang function and press the  button to toggle ganging on/off.
  - Use the up  and down  navigation buttons to select a single channel, or ganged channels. Note: A channel is highlighted when selected.
  - Use the left  and right  navigation buttons to adjust the input levels up or down.
2. Press the **HOME**  button to return to the **Home** screen, select **Connect > IP > Tieline** and press the  button. Note: Select **SIP** or **Sessionless** instead of **Tieline** if these connections are required.
  3. Use the **RETURN**  button to delete any numbers if already entered, then use the numeric **KEYPAD** to enter the IP address of the codec you want to dial, using the  or  buttons to enter the periods in the IP address. Next, press the down  navigation button to select **Setup** and press .



**Important Note:** The codec remembers recent IP addresses just like a cell-phone. To view these addresses just press  when you select the **Connect IP** screen. The most recent addresses and programs are listed first and you can use the navigation buttons to scroll up and down. Press  to select the address you have highlighted.

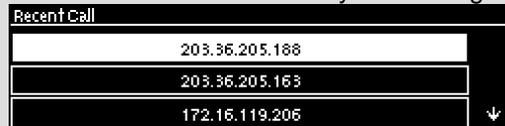

4. Navigate to **Algorithm** and press .

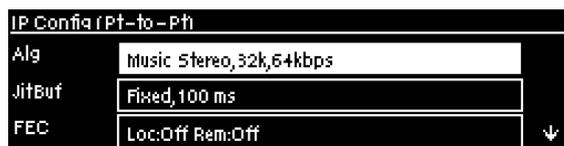


5. Use the navigation buttons to select an algorithm profile or manually enter algorithm settings, then press .




6. If you decide to manually program the algorithm, use the navigation buttons to select your preferred algorithm sample rate (if displayed) and bit rate, pressing  after each option is selected.



7. Press the down ▼ navigation button to select **Jitter Buffer** and press  to select a different automatic jitter buffer setting for your connection, or to enter a fixed buffer setting in milliseconds (maximum 5000 ms). The default **Auto, Best Compromise** setting is a good starting point for most internet connections.

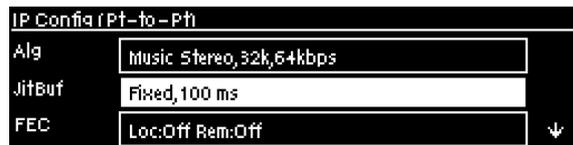

8. Press the down ▼ navigation button to select **FEC** (forward error correction) and press  to view selection options. Use the navigation buttons to choose the FEC percentage you want to use and press .

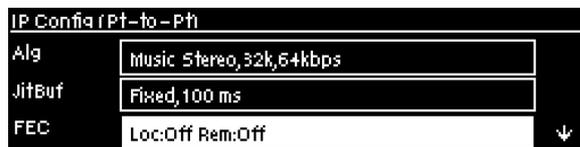

9. When configuration is complete press the **RETURN**  button to navigate backwards to the **Connect IP** screen that the IP address was entered into.



**Important Note:** At this point you can navigate to **Save** on the **Connect IP** screen and press  to use the numeric **KEYPAD** to name the program and press  to save the program.

10. Press the **CONNECT**  button to make a connection. The **Wait Connecting** screen appears during the connection process.
11. Alternatively, to load a saved program and dial press the **HOME**  button, navigate to **Programs**, select the program you want to dial and press the **CONNECT**  button to load the program and dial.
12. When dialing, the **CONNECTED LED** on the front of the unit will flash green. When connected, the **CONNECTED LED** on the front of the unit will illuminate solid green.
13. From the **Home** screen use the down ▼ navigation button to select **Cxns** and view connection **Status** and press  to view connection statistics for IP packets being sent over the connection. To negotiate higher bit rates press  then **3** on the numeric **KEYPAD**; for lower bit rates press  then **9**.

## 16.2 Monitoring IP Connections


### Connection Details

The number of active audio streams and connections is displayed on the **Home** screen via **Cxns**. In the following image two connections (left bracketed number) and two audio streams (right bracketed number) are currently in use.



1. Press the **HOME**  button to return to the **Home** screen.
2. Use the navigation buttons to select **Cxns** and press the  button.
3. If only a single IP audio stream is connected, the **Connected IP** screen displays details of the active connection. When multiple audio streams are connected, navigate to the one you want to view in the **Connections** screen and press the  button to view more details.

For IP connections you can view the IP address dialed and the **LQ** (link quality) on the screen. Use the down  navigation button to view the algorithm being used, the connection bit rate, total bytes used and the amount of jitter buffer delay over the IP network.

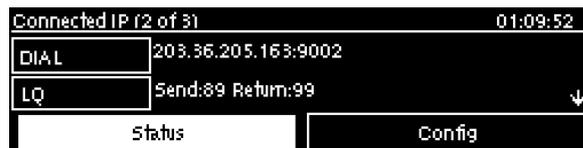

### Link Quality (LQ) Readings

Send and return LQ numbers can also help to determine if a problem is occurring at either end of a connection. For example, on an IP connection the **Return** reading represents the audio being downloaded from the network locally (i.e. audio data is being sent by the remote codec). Conversely, the **Send** link quality reading represents the audio data being sent by the local codec (i.e. being downloaded by the remote codec). To ensure a stable connection, try to maintain a reliable reading of 80 or higher for both the **Send** and **Return** LQ reading.



#### Important Note:

- The **Return** link quality reading is the same as the Local (**L**) setting displayed on a G3 codec.
- The **Send** link quality reading is the same as the Remote (**R**) setting displayed on a G3 codec.

### Viewing Connection Statistics

Navigate to **Status** in the **Connected IP** screen and press the  button to display the **Cxn Stats** (connection statistics) screen. This displays the performance of the codec in sending IP audio packets across the network. Analysis is historic and assessed over 60 seconds and 10 minutes of connection time.

Dur	Los	Emp	Lat	FEC
1m	0	0	0	0
10m	0	0	0	0

	Feature	Description
1	Lost Packets	Packets sent that failed to arrive
2	Empty (Jitter Buffer)	Indicates how often the jitter buffer 'reservoir' empties causing loss of audio
3	Late Packets	The number of packets that arrive late, i.e. after audio play out
4	FEC Packets	Indicates the number of forward error correction (FEC) packets that have been sent if it is enabled in the codec
5	1 minute	Statistics listed for the last minute of network activity
6	10 minutes	Statistics for the last 10 minutes of network activity



**Important Note:** If the jitter buffer, FEC or the connection bit rate is changed, we recommend assessing a minute of recent connection performance in preference to 10 minutes of historical connection performance. 10 minutes of data will include connection settings which may no longer be relevant. 'Packet arrival history' is cleared when you hang up a connection.

Following is a packet arrival analysis table with solutions for any noticeable packet loss statistics displayed on the screen.

Packet Analysis	Displays	Possible Causes	Possible Solutions
Loss	Packets sent and that failed to arrive.	<ul style="list-style-type: none"> <li>LAN/WAN congestion</li> <li>Unreliable ISPs</li> <li>Unreliable networks</li> <li>Inferior IP hardware</li> </ul>	<ul style="list-style-type: none"> <li>Renegotiate connection bit rate downwards</li> <li>If link quality good add or increase FEC as required</li> <li>Assess ISPs QoS if very bad performance</li> </ul>
Empty	Indicates how often the jitter buffer 'reservoir' empties causing loss of audio.	<ul style="list-style-type: none"> <li>High number of packets being lost or arriving late</li> <li>Signal dropouts using cell-phone networks</li> <li>Renegotiation causes the jitter buffer reservoir to empty</li> </ul>	<ul style="list-style-type: none"> <li>Once could be an anomaly – assess lost &amp; late packets</li> <li>If many lost packets and network is unreliable – renegotiate bit rate and /or FEC down</li> <li>If many late packets, increase jitter buffer</li> </ul>
Late	The number of packets that arrive late and after audio play out.	<ul style="list-style-type: none"> <li>Network congestion</li> <li>Jitter Buffer depth is too low</li> </ul>	<ul style="list-style-type: none"> <li>Auto-jitter buffer will adjust automatically</li> <li>For manual jitter buffer settings increase jitter buffer depth 50-100 ms &amp; reassess (if only a few packets arrive late over time, audio repairs will be automatic and may not require buffer changes).</li> </ul>
FECd	Indicates the	<ul style="list-style-type: none"> <li>Packets have been</li> </ul>	<ul style="list-style-type: none"> <li>Assess audio quality &amp; the number</li> </ul>

	number of FEC repaired packets if FEC active.	lost or corrupted over the network	of FEC repairs – if many packets are being 'lost' perhaps reduce FEC &/ or renegotiate bit rate down.
--	---	------------------------------------	---

## 16.3 Steps to Connect over ISDN

The following procedure explains how to create a custom peer-to-peer program and dial another Teline codec over ISDN using the front panel keypad and navigation buttons.



### Important Notes:

- See [Testing ISDN Connections](#) for valuable information about setting up and maintaining reliable ISDN connections.
- See [ISDN Module Configuration](#) for details on module settings.
- See [ISDN Answering Configuration](#) for details on ISDN answering settings.
- See [Configuring ISDN](#) for details on configuring connections via the Java Toolbox Web-GUI, or [click here](#) for details on using the HTML5 Toolbox Web-GUI to configure.

1. Press **F1** and press and release the right arrow button to open the **Input Audio Level** adjustment screen.
  - Press the number on the keypad corresponding to the channel you want to toggle on or off. E.g. press **1** on the numeric keypad to toggle channel 1 on and off.
  - Use the up and down navigation buttons to select the gang function and press the **OK** button to toggle ganging on/off.
  - Use the up and down navigation buttons to select a single channel, or ganged channels. Note: A channel is highlighted when selected.
  - Use the left and right navigation buttons to adjust the input levels up or down.
2. Press the **HOME** button to return to the **Home** screen, select **Connect > ISDN** and press the **OK** button.



3. Navigate to **Setup** and press the **OK** button.



4. Select whether to dial with Teline Session Data or select **Sessionless** if dialing a non-Teline codec, then press the **OK** button.



**Important Note:** By default, when Teline codecs dial they send call configuration settings to the remote codec using Teline Session Data. This configures the codec

receiving the call with matching algorithm, sample rate and bit rate settings. This does not occur when dialing to non-Tieline devices, therefore **Sessionless** must be selected to provide compatibility.

5. Select the **Dial Route** to use for this audio stream if one is required, then press the  button. Note: See [Configuring ISDN Answering](#) for more information on **Dial Route** and **Answer Route** tags. These are useful when routing multiple audio streams over transports like ISDN.

Select Dial Route	
None	Route 1
Route 2	Route 3

6. Select the number of B channels being used for the audio stream connection, then press the  button.

Number of B-channels	
1B	2B
3B	4B

7. Select an algorithm, then press the  button.

Algorithm	
MP2 Mono	MP2 Stereo
Music Mono	Music Stereo

8. Select the sample rate if required, then press the  button.

Sample Rate	
32kHz	48kHz

9. Select **Destination 1** and press the  button, then use the numeric **KEYPAD** to enter the ISDN number you want to dial and use the **RETURN**  button to delete any numbers already entered. Then press the  button.

ISDN Dial Setup	
Connect	
Setup	Tieline Codecs, MP2 Stereo, 32k, 128kbps
Dest 1	Press OK to edit

Destination 1 Number	
924999999	

10. Select the preferred B channel to use when dialing and press the  button.

Preferred Device	
Any	Module1, B-Any
Module1, B1	Module1, B2

11. If you are dialing over multiple B channels to create a bonded connection select the next

destination, e.g. **Destination 2**, and use the numeric **KEYPAD** to enter the next ISDN number you want to dial. Do this for all B channel destinations.



12. Navigate down to **Auto Reconnect** and press the  button to toggle between **Enabled** and **Disabled**. Note: This is normally enabled on the dialing codec only.



13. At this point we recommend you save a program to simplify dialing and to store this configuration for future use. Use the up  navigation button to select **Save as Program** and press the  button.



14. Use the numeric **KEYPAD** to name the program, then press  to save the program.



15. It is possible to dial the B channels associated with this audio stream from this menu. Use the up  navigation button to select **Connect** and press  to connect.
16. When dialing, the **CONNECTED LED** on the front of the unit will flash green. When connected, the **CONNECTED LED** on the front of the unit will illuminate solid green.



**Important Note:** To load a saved program and dial press the **HOME**  button, navigate to **Programs**, select the program you want to dial and press the **CONNECT**  button to load the program and dial.

## 16.4 Monitoring ISDN Connections

Each new audio stream connection becomes visible in the **Cxns** menu via the **Home** screen.

1. Press the **HOME**  button to return to the **Home** screen.
2. Use the navigation buttons to select **Cxns** and press the  button.
3. If a single ISDN audio stream is connected, the **Connected ISDN** screen will display details of the active ISDN connection. When multiple audio streams are connected, navigate to the one you want to view in the **Connections** screen, e.g. ISDN, and press the  button to view more details.

Connected ISDN		00:00:40
DIAL	55555555	↑
DIAL	55555556	
Alg	E apt-X Stereo 256kbps	

## 16.5 Steps to Connect over POTS

The following procedure explains how to create a custom peer-to-peer program and dial another Tieline codec over POTS using the front panel keypad and navigation buttons.




### Important Notes:

- See [POTS Connection Tips and Precautions](#) for valuable information about setting up and maintaining reliable POTS connections.
- See [POTS Module Settings](#) for details on module settings.
- See [POTS Answering Configuration](#) for details on POTS answering settings (required for answering calls from non-Tieline POTS codecs)
- See [Configuring POTS](#) for details on configuring codec connections via a computer.
- The **Local** and **Remote** line quality displayed for **POTS Codec** connections is related to the actual POTS line quality at either end of the link. This reading affects the maximum allowable bit rate when the codec is training and negotiating a connection.

1. Press **F1** and press and release the right **▶** arrow button to open the **Input Audio Level** adjustment screen.
  - Press the number on the keypad corresponding to the channel you want to toggle on or off. E.g. press **1** on the numeric keypad to toggle channel 1 on and off.
  - Use the up **▲** and down **▼** navigation buttons to select the gang function and press the **OK** button to toggle ganging on/off.
  - Use the up **▲** and down **▼** navigation buttons to select a single channel, or ganged channels. Note: A channel is highlighted when selected.
  - Use the left **◀** and right **▶** navigation buttons to adjust the input levels up or down.
2. Press the **HOME** button to return to the **Home** screen, select **Connect > POTS** and press the **OK** button.



3. Use the **RETURN** button to delete any numbers if already entered, then use the numeric **KEYPAD** to enter the number you want to dial. Note: When **POTS (Ready)** is displayed throughout POTS menus it means the POTS module has initialized and is ready to accept or make a call.

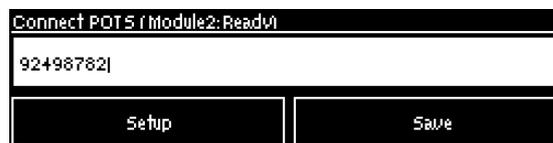

4. Navigate to **Setup** and press the **OK** button.



5. Select **Via** to nominate the module used when dialing a connection, or select **Any** to use any available module in the codec, then press the **OK** button.

POTS Connect Setup (Module2: ReadV)	
Via	Module2
Mode	POTS Codec
Algorithm	Music Mono

6. Navigate to the connection **Mode** and press the button to toggle between selecting either **POTS Codec** or **Analog Phone**. Note: Redundant settings in the menu will disappear if you select **Analog Phone**.

POTS Connect Setup (Module2: ReadV)	
Via	Module2
Mode	POTS Codec
Algorithm	Music Mono

7. Select an algorithm, then press the button.

Algorithm	
Music Mono	Other

8. Select **Tieline Codecs** session data when connecting to another Tieline codec or **Sessionless** when dialing to non-Tieline POTS codecs.

POTS Connect Setup (Module2: ReadV)	
Algorithm	Music Mono
Session	Tieline Codecs
Dial Route	None



**Important Notes:** To dial a Comrex® Vector, Matrix® or BlueBox® codec over POTS select the **Other** algorithm and **Sessionless**. Please note that 9.6kbps connections are not supported by Comrex codecs.

9. Select the **Dial Route** to use for this audio stream if one is required, then press the button. Note: See [Configuring POTS Answering](#) for more information on **Dial Route** and **Answer Route** tags. These can be useful when routing multiple audio streams.

Select Dial Route	
None	Route 1
Route 2	Route 3

10. Navigate to **Auto Reconnect** and press the button to **Enable** or **Disable** this setting as required.

POTS Connect Setup (Module2: ReadV)	
Dial Route	None
Auto Recon	Enabled
Module Configuration	

11. Select **Module Configuration** to adjust other settings specific to how you want POTS modules to dial and answer, e.g. Maximum connection bit rate and dial tone settings etc.




12. When configuration is complete press the **RETURN**  button to navigate back to the **Connect POTS** screen.



**Important Note:** At this point you can navigate to **Save** on the **Connect POTS** screen and press  to use the numeric **KEYPAD** to name the program. Then press  to save the program.

13. Press the **CONNECT**  button to make a connection. The **Wait Connecting** screen appears during the connection process.

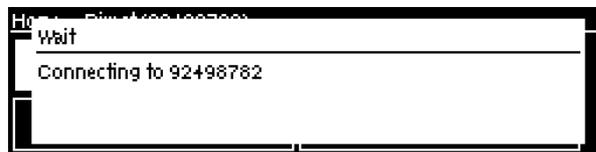

Note: To load a saved program and dial press the **HOME**  button, navigate to **Programs**, select the program you want to dial and press the **CONNECT**  button to load the program and dial.

14. To negotiate higher bit rates press  then **3** on the numeric **KEYPAD**; for lower bit rates press  then **9**.



**Important Note:** To load a saved program and dial press the **HOME**  button, navigate to **Programs**, select the program you want to dial and press the **CONNECT**  button to load the program and dial.


See [Monitoring POTS Connections](#) for more details on monitoring the different POTS connection states.

## 16.6 Monitoring POTS Connections

### Monitoring POTS Calls when Dialing and Connecting

1. When dialing and connecting:

- The **CONNECTED LED** on the front of the unit will flash green.
- The **Cxns** section on the **Home** screen displays **Pending** while the call is connecting (prior to streaming audio data).

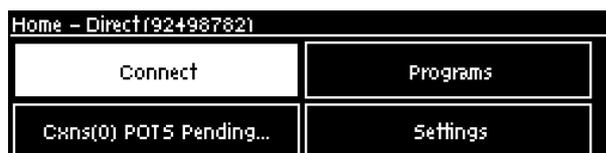

**Cxns Displays Pending**

- **Connecting** is displayed in the **Modules** menu via **Settings > Modules**.



**Modules Displays Connecting**

- While connecting you can also monitor dial tones and modem handshaking etc., via the left channel of the headphone output. For more details see the **Monitor Modem Tones** section in [POTS Module Settings](#).

## Monitoring POTS Calls when Connected

- The **CONNECTED LED** on the front of the codec illuminates solid green when connected.
- The newly connected audio stream connection becomes visible in the **Cxns** menu via the **Home** screen. To view connection details:
  - Use the down ▼ navigation button to select **Cxns** and press the  button.
  - When multiple audio streams are connected, navigate to the one you want to view and press the  button to view connection details.

Connected POTS		00:14:32
DIAL	Module:2 Mode:POTS Codec (92498782)	
LQ	Local:94 Remote:95	
Alg	Music Mono 26.4kbps	

The **Local** and **Remote** line quality displayed for **POTS Codec** connections is related to the actual POTS line quality at either end of the link. This reading affects the maximum allowable bit rate when the codec is training and negotiating a connection. It also indicates the stability of the connection when a call has been connected for a long period of time. If the line quality starts drop quite low after being connected for a long period, we recommend you retrain the connection to improve the line quality and avoid loss of audio.


## 16.7 Load and Dial Custom Programs

Custom programs stored on the codec are simple to load and dial from the codec front panel.

- Press the **HOME**  button to return to the **Home** screen.
- Use the navigation buttons to select **Programs** and press the  button.
- Use the up ▲ and down ▼ navigation buttons to select the program you want to use, then press the **CONNECT**  button to load the program and make a connection.
- The **Wait Connecting** screen appears during the connection process and then connection details are displayed.

## 16.8 Disconnecting a Connection

- Press the red **DISCONNECT**  button on the numeric **KEYPAD** at any time to hangup a connection.
- Use the right ► navigation button to select **Yes** and press the **DISCONNECT**  button or the  button to confirm the disconnection.

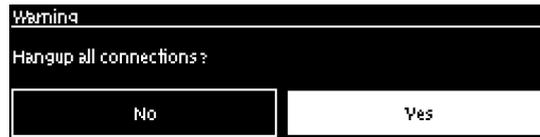

## 16.9 Redialing a Connection

Press the **CONNECT**  button from any codec menu to redial previous connections (except menus accessed via the **Connect > IP, ISDN or POTS** screens).

Manually dialed connections are saved as programs - retaining all the dialing and configuration information programmed into the codec. A program is identified in the **Recent Programs** redial screen using either a previously entered name, or by a dialing address or number (manually dialed connections).

## 16.10 Configuring Auto Reconnect

**Auto Reconnect** is disabled by default. When enabled, the dialing codec attempts to reconnect if data is temporarily lost over a connection.



**Important Note:** When **Auto Reconnect** is enabled, the dialing codec will continue to attempt a connection with the remote codec until **Disconnect** is pressed either on the dialing codec's keypad, or in the web-GUI.

### Auto Reconnect using IP

1. Press the **HOME**  button to return to the **Home** screen, select **Connect**, then select **IP** and press the  button.
2. Select the **IP Session** mode you are using to connect.
3. Select **Setup** and press .
4. Navigate to **Auto Recon** and press  to toggle between **Enabled** and **Disabled**.

### Auto Reconnect using ISDN

1. Press the **HOME**  button to return to the **Home** screen, select **Connect**, then select **ISDN** and press the .
2. Navigate to **Auto Recon** and press  to toggle between **Enabled** and **Disabled**.

### Auto Reconnect using POTS

1. Press the **HOME**  button to return to the **Home** screen, select **Connect**, then select **POTS** and press the .
2. Select **Setup** and press .
3. Navigate to **Auto Recon** and press  to toggle between **Enabled** and **Disabled**.

## 16.11 Speed Dialing Connections


### Assigning Speed Dial Numbers

1. Press the **HOME**  button to return to the **Home** screen.

2. Use the navigation buttons to select **Programs** and press the  button.
3. Navigate to the program you want to assign a speed number to and press the  button.
4. Navigate to **Speed Dial** and press the  button.



5. Navigate to the program you want to assign a speed dial number, then press the  button.
6. A confirmation message will display the number assigned.

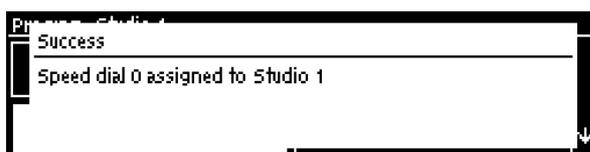

## Speed Dialing

1. Press the **HOME**  button to return to the **Home** screen.
2. Use the numeric **KEYPAD** to enter the speed dial number.
3. When the **Speed Dial** screen appears, press the  button or the **CONNECT**  button to connect.

## 16.12 Dial/Disconnect Multiple Audio Stream Programs

### Multiple Audio Streams within Programs

Some programs are created to allow simultaneous audio stream connections with different destination codecs, e.g. 2 x Mono peer-to-peer programs. These programs can only be created using the Toolbox web-GUI.

There are two ways to simultaneously dial multiple audio stream connections within these types of programs:

1. Load the program into the codec via the front panel and dial.
2. Connect to the codec using the Toolbox web-GUI and [use the Master panel to load the program and connect.](#)

### Dialing Multiple Audio Stream Programs with the Front Panel

1. Press the **HOME**  button to return to the **Home** screen.
2. Use the navigation buttons to select **Programs** and press the  button.
3. Use the up  and down  navigation buttons to select the program you want to connect with, then press the **CONNECT**  button to make a connection.
4. The **Wait Connecting** screen appears briefly and then the **Home** screen is displayed.

It is also possible to redial the connection, see [Redialing a Connection](#) for more information.

### Disconnect All Audio Stream Connections


1. Press the red **DISCONNECT**  button on the numeric **KEYPAD** at any time to hangup all

connections.

2. Use the right  navigation button to select **Yes** and press the **DISCONNECT**  button or the  button to confirm the disconnection.

### Disconnect a Single Audio Stream (not available for multi-unicast connections)

1. Press the **HOME**  button to return to the **Home** screen.
2. Use the navigation buttons to select **Cxns** and press the  button.
3. Use the up  and down  navigation buttons to select the connection you want to disconnect.

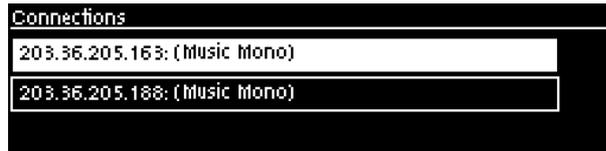

3. Press the red **DISCONNECT**  button on the numeric **KEYPAD**.
4. Use the right  navigation button to select **Yes** and press the **DISCONNECT**  button or the  button to confirm the disconnection.

## 16.13 Dialing SIP Peer-to-Peer



**Important Note:** When connecting to a Tieline G3 codec using SIP you need to manually select the G3 audio reference level. To do this select **SETTINGS**  **Audio > Ref Level > Tieline G3**. In addition, select the following on the G3 codec prior to dialing.

- Select either a mono or stereo profile
- Select **[Menu] > [Configuration] > [IP1 Setup] > [Session Type] > [SIP]**
- Select **[Menu] > [Configuration] > [IP1 Setup] > [Algorithm] > [G711/G722 or MP2]**

### Dialing Peer-to-Peer SIP IP Connections

SIP can be used to make direct peer-to-peer calls to different brands of IP codecs with public IP addresses, or between two codecs over a LAN which do not pass through firewalls. Peer-to-peer SIP calls are usually used to connect to other brands of codecs and perform call and session management tasks. Peer-to-peer SIP calls between two codecs are detected automatically and require no special pre-programming.

To make a peer-to-peer call between codecs we recommend both codecs use public IP addresses:

- Find out the IP address of the remote codec being dialed.
- Program each codec with a compatible algorithm and sample rate etc.
- Dial using **SIP** within the **Connect** menu.
- If the remote codec has a private IP address then it should be configured for port forwarding and should dial the public IP address at the studio (see [Programming TCP/UDP Protocols](#) for more details on port forwarding).

1. To dial peer-to-peer press the **HOME**  button to return to the **Home** screen, select **Connect > IP > SIP**.
2. Use the numeric **KEYPAD** to enter the IP address of the codec you want to dial, using the  or  buttons to enter the periods in the IP address and use the **RETURN**  button to delete numbers already entered.

3. Then press the down ▼ navigation button to select **Setup** and press  to adjust the algorithm, jitter buffer and encode/decode direction if required.
4. Press the **RETURN**  button to navigate backwards to the **Connect SIP** screen.
5. Press the **CONNECT**  button to make a connection.

## 16.14 Dialing SIP Addresses

### Dialing a SIP Address via the Codec Front Panel

1. Press the **HOME**  button to return to the **Home** screen, then select **Connect > IP > SIP** and press the  button.
2. Use the **KEYPAD** to enter any combination of alphabetic and numeric characters in the SIP address of the codec you want to dial. Use the  or  buttons to enter the periods in the SIP address and use the **RETURN**  button to delete any numbers already entered. Alternatively, if you have dialed the SIP address previously, press the **RETURN**  button to view the **Recent Call** screen and select the SIP address you want.




3. Press the down ▼ navigation button to select **Setup** and press , then adjust the algorithm, jitter buffer, encode/decode direction, port and auto reconnect settings if required.
4. Press the **RETURN**  button to navigate backwards to the **Connect SIP** screen and select **Save** to name and save the program.
5. Press the **CONNECT**  button to make a connection.



#### Important Notes:

- See [Configuring SIP Settings](#) for instructions on entering SIP account details into the codec. If your codec is registered with same SIP registrar as the destination codec then you only need to enter the SIP user name to dial successfully.
- If you don't save the program during configuration, a temporary program is created after you dial the SIP connection for the first time using the codec **KEYPAD**. The temporary program will appear in the recent calls list if you want to redial the program.

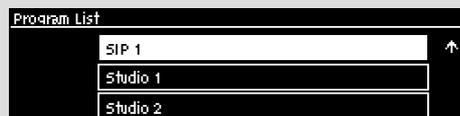

It is also possible to configure SIP programs using the Toolbox web-GUI. See the section titled [Configuring SIP Programs](#) for more information.

## 16.15 Creating a Multicast Client Program

Two different types of multicast programs need to be created when multicasting:

- A multicast server program is used by the broadcasting codec to send multicast IP packets to multicast routers on a network.
- A multicast client program is used by codecs to receive multicast IP audio packets.

**Important Notes:**

- You cannot edit a program when it is currently loaded in the codec.
- Ensure all connection related settings like the port, algorithm, bit rate (etc) match on both multicast server and client programs or they will not be able to join multicast streaming sessions.
- The default UDP audio port is 9000 for a multicast client program configured via the codec front panel.
- You can [lock a loaded custom program](#) in a codec to ensure the currently loaded program cannot be unloaded by a codec dialing in with a different program type.
- Always dial the multicast server codec connection first before connecting multicast client codecs.
- Multicast client codecs will display return link quality (LQ) only. The **Return** reading represents the audio being downloaded from the network locally.
- Forward Error Correction (FEC) is not available for multicast connections.
- It is not possible to send auxiliary data using multicast connections.
- It is not possible to connect to a G3 codec and receive multicast IP audio streams.
- To copy multicast client programs onto multiple codecs see [Save and Restore Configuration Files](#).
- To learn more about programs see the section titled [About Program Dialing](#).
- See Toolbox web-GUI documentation for more detailed information about [Configuring Multicast Client Programs](#)

1. Press the **HOME** button to return to the **Home** screen, select **Connect > IP > Sessionless** and press the button.



2. Select **Multicast Client** to configure a client codec program.



3. Use the **RETURN** button to delete any numbers already entered, then use the numeric **KEYPAD** to enter the multicast IP address you want to dial, using the or buttons to enter the periods in the IP address. The same multicast address and audio port must be used for both the server and client programs. Next, press the down navigation button to select **Setup** and press .



4. Press the down navigation button to select **Algorithm** and press .

IP Connect Setup (Mcast-C)	
Alg	Music Mono,32k,28.8kbps
JitBuf	Auto,Best Compromise
Proto	UDP/IP + RTP,9000

5. Use the navigation buttons to select an algorithm profile or manually choose algorithm settings, then press .

Set Algorithm	
Manual	Profile

6. Click to configure the Jitter Buffer from either **Auto Jitter Adapt** or **Fixed Buffer Level**, then and enter the **Jitter Depth**, which must be between 12ms and 5000ms depending on the algorithm you select, then press .

IP Connect Setup (Mcast-C)	
Alg	Music Mono,32k,28.8kbps
JitBuf	Auto,Best Compromise
Proto	UDP/IP + RTP,9000



**Important Notes:** Automatic or fixed jitter buffer settings can be adjusted on individual client codecs as required. There is no jitter buffer setting on the server codec because it never receives audio packets.

7. Select **Protocol** to select the audio protocol and adjust the **Return Audio Port**. Select **UDP/IP +RTP** for RFC compliant IP streaming. Press  to save settings.

IP Connect Setup (Mcast-C)	
Proto	UDP/IP + RTP,9000
Auto Reconn	Disabled
Via	Any

8. If required, enable **Auto Reconnect** and use **Via** to specify which IP streaming interface is used to dial this connection, e.g. **Primary** (port **ETH1**) or **Secondary** (port **ETH2**). Note: By default **Any** will select **ETH1** if it is available and **ETH2** if it is unavailable.

IP Connect Setup (Mcast-C)	
Proto	UDP/IP + RTP,9000
Auto Reconn	Disabled
Via	Any

9. Press the **RETURN**  button when configuration is complete to navigate backwards to the **Connect IP** screen that the multicast IP address was entered into.



**Important Note:** At this point you can navigate to **Save** on the **Connect IP** screen and press to save the settings as a custom program for subsequent recall and dialing. Use the numeric **KEYPAD** to give the program a name and press to save the program. A confirmation message is displayed after the program is saved.



## Connecting a Multicast Client Program

1. After you have created multicast server and client programs on your codecs you can dial multicast connections. First select the multicast server program you want to use on the server codec and dial to connect.
2. Select and load the multicast client program on each of the multicast client codecs and dial the multicast IP address to begin receiving multicast audio packets.
  - a. Press the **HOME** button to return to the **Home** screen.
  - b. Use the navigation buttons to select **Programs** and press the button.
  - c. Use the up and down navigation buttons to select the multicast client program you want to connect with, then press the button to load the program.
  - d. Press the **CONNECT** button to make a connection.

You can navigate to **Cxns** on the **Home** screen to view a codec's connection **Status**, then press to view connection statistics for IP packets being received over the connection.

## 16.16 Deleting Programs

1. Press the **HOME** button to return to the **Home** screen.
2. Use the navigation buttons to select **Programs** and press the button.
3. Navigate to the program you want to delete and press the button.



4. Navigate to **Delete** and press the button.



5. Confirm the deletion and press the button.

## 16.17 Selecting Algorithm Profiles

A number of pre-programmed mono and stereo dialing profiles are available for programming the codec quickly without individually selecting algorithms and bit rates etc. These profiles have been programmed with the most popular settings that provide high quality connections using each available algorithm.

1. Press the **HOME**  button to return to the **Home** screen.
2. Use the navigation buttons to select **Connect** and press the  button.
3. Select **IP** and press the  button.
4. Select **Tieline** session mode and press the  button. Note: algorithm profiles are only available for Tieline session connections.
5. Use the down  navigation button to select **Setup** and press the  button.
6. Select **Algorithm** and press the  button.
7. Use the right  navigation button to select **Profile**.
8. Choose the profile you want from the **Favorite**, **Mono** or **Stereo** menus.



	Features	Codec Home Screen Elements
1	Favorite	Displays a list of favorite profiles that have been selected manually within the codec by users
2	Mono	Displays preprogrammed mono profiles within the codec
3	Stereo	Displays preprogrammed stereo profiles within the codec

### Adding a Profile into the Favorite Menu

1. Press the **HOME**  button to return to the **Home** screen.
2. Use the navigation buttons to select **Connect** and press the  button.
3. Select **IP** and press the  button.
4. Select your preferred **IP Session** mode and press the  button.
5. Use the down  navigation button to select **Setup** and press the  button.
6. Press the  button to select **Algorithm**.
7. Use the right  navigation button to select **Profile**.
8. Select the profile you want from the **Mono** or **Stereo** menus.
9. Press the hatch (pound) button  to add the profile into the **Favorite** menu.

Profiles that have been added into the **Favorite** menu are identified by the hatch (pound) symbol next to their name after they have been selected.



## Deleting a Profile from the Favorite Menu

---

1. Press the **HOME**  button to return to the **Home** screen.
2. Use the navigation buttons to select **Connect** and press the  button.
3. Select **IP** and press the  button.
4. Select your preferred **IP Session** mode and press the  button.
5. Use the down  navigation button to select **Setup** and press the  button.
6. Press the  button to select **Algorithm**.
7. Use the right  navigation button to select **Profile**.
8. Select the profile you want to delete from the **Favorite** menus.
9. Press the hatch (pound) button  to delete the selected profile from the favorite menu.

## 16.18 Genie STL Algorithm Profiles

The following algorithm profiles are programmed into Genie STL codecs.

Profiles				
	Algorithm	Mono/Stereo	Sample Rate (kHz)	Bit rate (kbps)
1	AAC	Mono	48	64
2	AAC	Stereo	48	128
3	AAC	Stereo	48	256
4	HE-AAC	Mono	32	16
5	HE-AAC	Stereo	32	24
6	HE-AAC	Stereo	32	48
7	AAC-LD	Mono	32	48
8	AAC-LD	Stereo	32	64
9	AAC-ELD	Mono	32	24
10	AAC-ELD	Stereo	32	48
11	aptX Enhanced	Mono	32 (16 bit)	128
12	aptX Enhanced	Mono	48 (24 bit)	288
13	aptX Enhanced	Stereo	32 (16 bit)	256
14	aptX Enhanced	Stereo	48 (24 bit)	576
15	G.711	Mono	8	64
16	G.722	Mono	16	64
17	MPEG 1 Layer 2	J-Stereo	32	128
18	MPEG 1 Layer 2	J-Stereo	48	192
19	MPEG 1 Layer 2	Mono	24	64
20	MPEG 1 Layer 2	Mono	48	256
21	MPEG 1 Layer 2	Stereo	32	128
22	MPEG 1 Layer 2	Stereo	48	256
23	Music	Mono	32	28.8
24	Music	Mono	32	48
25	Music	Stereo	32	64
26	Music	Stereo	32	96
27	MusicPLUS	Mono	48	48
28	MusicPLUS	Mono	48	96
29	MusicPLUS	Stereo	48	96
30	MusicPLUS	Stereo	48	128
31	MusicPLUS	Stereo	48	192
32	PCM Mono	Mono	48 (16bit)	768
33	PCM Stereo	Stereo	48 (16bit)	1,540
34	PCM Mono	Mono	96 (24bit)	2,304
35	PCM Stereo	Stereo	96 (24bit)	4,608
36	Opus Mono	Mono	48	64
37	Opus Stereo	Stereo	48	128

3

## 16.19 Genie STL Backup Options

Tieline codecs feature highly advanced backup and redundancy options to maintain reliable audio codec streaming. These include the options outlined in the following table:

Tieline Audio Codec Backup Features			
Backup Option	Transport: IP, ISDN or POTS	Time Required to Respond	How to Enable
<b>SmartStream PLUS</b>	IP Only (Note: concurrent packet stream sent; codec detects IP packet loss or delayed packets)	No time delay - simultaneous dual redundant streaming	Enabled in dialing codec program; configures local decoding, or remote decoding via session data
<b>On-demand (cold) Failover</b>	All transports (Note: codec detects loss of data or connection and redials the backup connection)	User configurable detection parameters during program configuration*. Delay is equal to detection time plus the time required to dial the alternative connection	Dialing codec program monitors streaming and manages failover
<b>File Playback</b>	All transports (Note: enabled by loss of decodable audio or connection problem)	User configurable detection parameters during program configuration*	Enabled in the answering or dialing codec program
<b>FEC (Forward Error Correction)</b>	IP Only (Note: decoding codec detects IP packet loss or delayed packets)	No time delay - packet replacement occurs in real-time	Dialing codec configures local and remote FEC settings via session data transfer when connecting
<b>Auto Reconnect</b>	All transports; codec will redial continuously to try and reconnect	Immediately redials after loss of IP stream detected	Enabled in dialing codec program

\* Note: POTS can take up to 60 seconds to connect successfully.

## SmartStream PLUS Redundant IP Streaming

Tieline's proprietary SmartStream PLUS IP technology ensures you're always on the air. The codec features dual Ethernet IP ports allowing two completely independent IP connections. There are three levels to SmartStream PLUS IP streaming.


1. The codec can stream simultaneous redundant data streams from both Ethernet ports and deliver seamless redundancy by switching back and forth, without loss of audio, from the nominated primary data link to the backup link if one fails and then subsequently recovers. Use IP links from two different IP network providers for optimal redundancy over mission critical connections.
2. Second, when multiple redundant audio streams are sent, the decoding codec automatically reconstructs audio into a single stream on a first packet arrived basis, to minimize program latency and ensure audio integrity.
3. Third, SmartStream features automated jitter buffer management and Forward Error Correction (FEC) and these advanced network management tools deliver uncompromising audio quality, while dynamically responding to variable conditions over unmanaged IP networks like the internet.

These combined measures ensure Tieline is capable of offering a rock solid IP audio solution for distributing IP audio economically and efficiently across broadcast networks. See the procedures for configuring different programs [using the web-GUI](#) for more configuration details.

## On-Demand Failover (IP, ISDN or POTS)

On-demand failover requires configuration of a primary connection and an on-demand 'cold' backup connection. On-demand failover is activated when the dialing codec program detects the loss of the primary connection, or if audio streaming ceases. The backup connection is then dialed to replace the primary connection.

The codec can be configured to switch to a backup connection over IP, ISDN or POTS as required. For example, you can create a program with IP as the primary connection and also create a backup ISDN or POTS connection in the same program. For details on configuring backup connections using failover see [Configure Mono or Stereo Peer-to-Peer Programs](#).

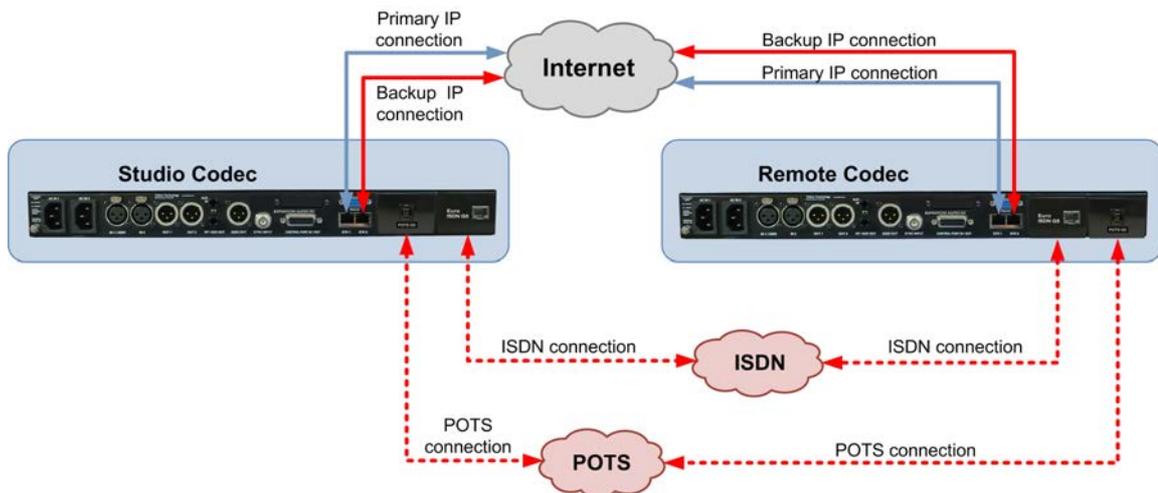

## USB File Backup Connections

The codec features a USB 2.0 Host port for connection to USB memory sticks and selected external devices. Backup connections are configured using the web-GUI and this is outlined in [Configuring Mono or Stereo Peer-to-Peer Programs](#); USB file backup specifically is outlined in [Configure File Playback on Silence Detection](#).



### Important Notes:

- Ensure MP3 recordings used are not variable bit rate files.
- When you create your MP2 or MP3 files please ensure that the audio levels match the audio scale of your codec connection and that peaks average at the correct levels, because IGC is only used on audio inputs and not file playback.

USB file backup is automatic and occurs:

1. If encoded audio streaming from a remote codec is lost for a time period predetermined within the web-GUI (default 30 seconds).
2. Immediately if a connection to another codec is lost.

Backup will occur according to the silence threshold parameters configured for audio file backup. After USB file backup is activated the audio file plays continuously in loop mode until a backup connection is dialed and connects, or the primary connection is restored. The codec **Home** screen indicates failover to USB backup has occurred by displaying **(F)** in the **Cxns** display. Playback continues during reconnection attempts and ceases when a connection is restored.



### Important Note:

- USB backup audio is only sent to the outputs of the local codec to which a USB drive is

attached. USB file audio is not sent to encoders and cannot be transmitted via an audio stream to another codec.

- The USB drive can be inserted or removed at any time as long as the codec is not already playing audio in failover mode. Removing the USB drive while audio is playing from it will result in poor audio quality and should be avoided. If it is removed accidentally you must reboot the codec to ensure USB failover will work in future.



**Caution:** Do not attach a bootable USB drive to the **USB HOST PORT** or the codec will attempt to reboot using the USB drive instead of the codec if the codec is repowered. To ensure a drive is non-bootable, remove all system partitions and format the device without system startup files.

## Forward Error Correction (FEC)

FEC transmits a secondary stream of audio data packets over a single connection. If packets are lost or corrupted over the connection then replacement FEC data packets can be substituted to replace them.

Note: FEC should not be confused with SmartStream PLUS. FEC packets are sent over a single data stream connection, whereas SmartStream PLUS dual redundant streaming transmits two completely redundant audio data streams. FEC is also a subset of features within SmartStream PLUS, which means you can configure SmartStream PLUS dual redundant data streams and also configure FEC on each of these data streams. For more info on FEC see [Configuring Forward Error Correction](#).

## Auto Reconnect

Auto Reconnect is the simplest form of connection backup whereby the codec will redial a lost connection continuously until it is either:

- Re-established, or
- Dialing is manually stopped.

Auto reconnect can be enabled when configuring a codec program designed to dial another codec or codecs. See the procedures for configuring different programs [using the web-GUI](#) for more configuration details.

## 16.20 USB File Playback

### Playing Audio from the USB Port

A device connected to the **USB HOST PORT** is treated as a connection and files can be played back using the codec front panel controls.

1. Press the **HOME**  button to return to the **Home** screen.
2. Select **Connect**, then select **File** and press the  button.
3. Use the navigation buttons to select a file.
4. Press the  button or the **CONNECT**  button to play the selected file.
5. Press the red **DISCONNECT**  button on the numeric **KEYPAD** to stop file playback.



**Caution:** Do not attach a bootable USB drive to the **USB HOST PORT** or the codec will attempt to reboot using the USB drive instead of the codec if the codec is repowered. To ensure any drive connected is a non-bootable drive, remove all system partitions and format the device without system startup files.



#### Important Notes for File Playback:

- Ensure MP3 recordings used are not variable bit rate files.
- File playback audio is sent directly to the codec outputs and therefore IGC is not available. When you create your MP2 or MP3 files ensure the audio levels match the audio reference level of your codec and that peaks average at the correct levels.
- USB backup audio is only sent to the outputs of the local codec to which a USB drive is attached. USB file audio is not sent to encoders and cannot be transmitted via an audio stream to another codec.
- The USB drive can be inserted or removed at any time as long as the codec is not already playing audio in failover mode. Removing the USB drive while audio is playing from it will result in poor audio quality and should be avoided. If it is removed accidentally you must reboot the codec to ensure USB failover will work in future.
- If you enter a single file name ensure you add the file extension, e.g. "test.mp3", or the file will not play back.
- If you enter a directory name, all the files within the directory will be played back. We recommend you save all audio files as a playlist and link to this if you want them to play out sequentially. Please note that "M3U" is the playlist file format supported by the codec.
- File playback will occur automatically if the silence threshold parameters are breached; if the codec is not connected for any reason file playback will commence. To stop file playback open the **Master panel** in the web-GUI, click to select the file playback connection, then click **Disconnect**.

## 16.21 Lock or Unlock a Program in the Codec


It is possible to lock a loaded custom program in a codec to ensure the currently loaded program type, e.g. mono, cannot be unloaded by a codec dialing in with a different program type, e.g. stereo. For example, if your routing requirements require the codec at the studio to always connect in mono, simply load and lock a mono program in the codec. On the answering codec, you may wish to configure the codec to always use a particular jitter buffer or FEC setting.

Generally programs will be up or down-mixed by the answering codec to match the loaded program type. In some situations incompatible program types will be rejected. A compatible program type can still connect and specify different connection parameters such as algorithm preferences and bit rates via session data.


1. Press the **HOME**  button to return to the **Home** screen.
2. Select **Settings** and press .
3. Navigate to **System** and press .
4. Navigate to **Lock Program** and press  to toggle between **Enabled** and **Disabled**.



5. When program lock is **Enabled** a warning message confirms program status.

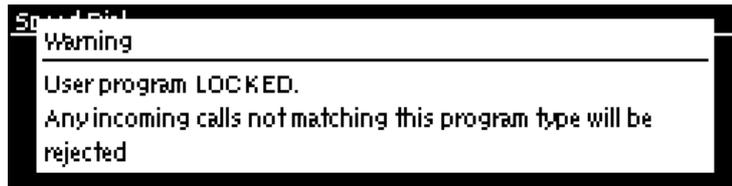

6. When program lock is **Disabled** a warning message confirms incoming calls may load any supported factory program.

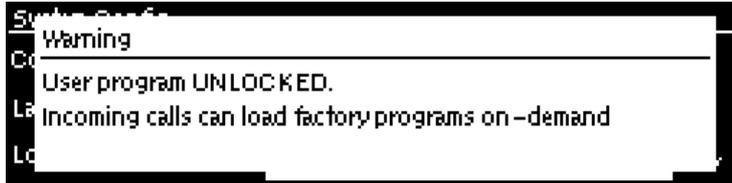

7. Press the **RETURN**  button to exit the warning message.



**Important Note:** It is only possible to lock custom programs in a codec. If **Lock Program** is enabled and you load a new custom program in the codec, **Lock Program** remains enabled and locks the most recently loaded custom program.

## 16.22 Locking the Front Panel

The codec features a front panel lock feature for tamper-proof operation. This feature is disabled by default.

There are two levels of panel lock and each requires a user to enter a PIN to access different features:

1. **Admin PIN:** Required to change codec connection or configuration settings accessed via the **SETTINGS**  button. (Default PIN is: 456789)
2. **User PIN:** Required to use the codec front panel buttons and dial/hangup a connection (Default PIN is: 123456)

### Enabling the Front Panel Lock Feature

1. Press the **SETTINGS**  button.
2. Navigate to **System** and press .
3. Navigate to **Auto Lock** and press  to toggle from **Disabled** to **Enabled**.



4. Navigate down to the panel **Lock Timeout** field and press  to enter the desired time-out period in seconds. Note: The time-out period is the time in seconds before the codec front panel is relocked after being used.
5. If you want to change the default **Admin PIN** or **User PIN**, navigate down to each in turn and press  to enter a new PIN.

## 17 Connecting to the ToolBox Web-GUI

There are three graphical user interface (GUI) options for configuring Tieline G5 codecs:

1. Java Toolbox Web-GUI: codecs can be fully configured including program creation, dial and hangup, command and control.
2. HTML5 Toolbox Web-GUI: most codec settings can be configured, dial and hangup existing programs only, quick connect option available for simple peer-to-peer connections, command and control.
3. HTML5 Toolbox Quick Connect Web-GUI: designed for simple peer-to-peer connections and non-technical users.

### About the Java Toolbox Web-GUI

---

Codecs can be fully configured using the Java ToolBox Web-GUI and this can be launched using an IP/LAN connection with the codec. Instructions for using the Java web-GUI are contained in the application itself from the **Help** panel and additional information is available at <http://www.tieline.com/support/toolbox>. The Tieline Java Toolbox Web-GUI application runs on:

- Internet Explorer 6 or greater on Windows® XP, Windows Vista ® and Windows 7 ®.
- Firefox® 3 or greater on Windows® XP, Windows Vista ® and Windows 7 ®, Solaris™ and Linux®.

### Java Toolbox Web-GUI Prerequisites

1. To use the Java ToolBox Web-GUI you will need to download the latest version of Java™ by visiting <http://www.java.com>. The Web-GUI will prompt you to do this if Java is not installed and you attempt to launch the Java ToolBox Web-GUI.
2. After updating to the latest version of Java you need to refresh your browser.

### About the HTML5 Toolbox Web-GUI

---

The HTML5 Toolbox Web-GUI was developed to improve the user experience with G5 codec command and control. With some major web-browsers moving away from Java compatibility, Tieline has delivered an HTML5 configuration option which runs seamlessly on modern browsers.

The HTML5 Toolbox Web-GUI will run on computers and tablets, as well as iOS and Android smartphones, which expands the range of devices engineers can now use for configuration. In addition, many users have previously experienced connectivity issues due to regular Java updates designed to mitigate exposure to security vulnerabilities. By using the HTML5 Toolbox these issues will be avoided.

Most codec settings can be configured using the HTML5 Toolbox Web-GUI, including:

- Dial and hangup existing programs only (currently program creation wizard is not available).
- Quick connect option available for simple peer-to-peer connections: configure IP, SIP, ISDN and POTS connections including the algorithm, sample rate, bit-rate and dial number/address.
- Extensive command and control of codec settings.


### About the HTML5 Toolbox Quick Connect

---

The HTML5 Toolbox Quick Connect Web-GUI has a reduced feature-set and allows non-technical users to load existing programs and dial via the **Quick Connect panel**. Users can dial a simple peer-to-peer connection over POTS, ISDN or IP.

## 17.1 Opening the Java or HTML5 Web-GUI & Login

1. Attach an Ethernet cable to the **ETH1** port on the codec.
2. Press the **SETTINGS**  button and select **Unit** to display the IP address programmed into your codec.
3. Ensure your PC is connected to the same LAN.
4. Open your web browser and type the IP address of your codec into the address bar of your browser, e.g. **http://192.168.0.xxx** (the last digits are the private address details unique to your codec over a private LAN).
5. Refresh the browser and the Web-GUI landing page will display the various command and control options.

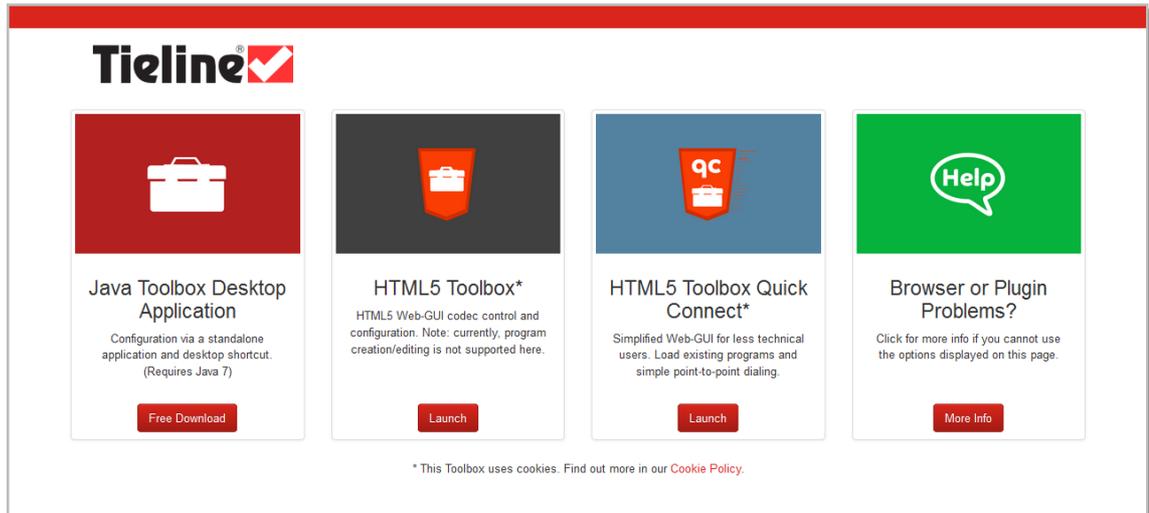

### Launching the Java Toolbox Web-GUI

1. Click to launch the **ToolBox Web Start Desktop Application** (this is recommended in preference to launching the Java Toolbox Browser Applet). Note: When you launch for the first time the application will download and launch the desktop Toolbox application that will allow you to configure your codec. A desktop short-cut will also be created.




2. When you launch Toolbox an authentication dialog prompts you to enter a password to login. The first time you log in you can enter the default setting "**password**" and click the **OK** button. Tieline highly recommends you click the hyperlink in the login dialog or visit [Changing the Default Password](#) to change the password. This will provide better network security to maintain reliability during live broadcasts.



**Important Note:** If you update Java software or clear the Java cache on your computer you will need to repeat the preceding steps. If you have trouble launching the Web-GUI in a browser, type `http://<insert codec IP address>.htm` directly in your browser.


## Launching the HTML5 Toolbox Web-GUI

1. Click to launch the **HTML5 Toolbox Web-GUI**.
2. When you launch Toolbox for the first time an authentication dialog prompts you to enter the user name "**admin**" and password "**password**" to login, then click the **OK** button. Tieline highly recommends you change the password (see [Changing the Default Password](#)). This will provide better network security to maintain reliability during live broadcasts.

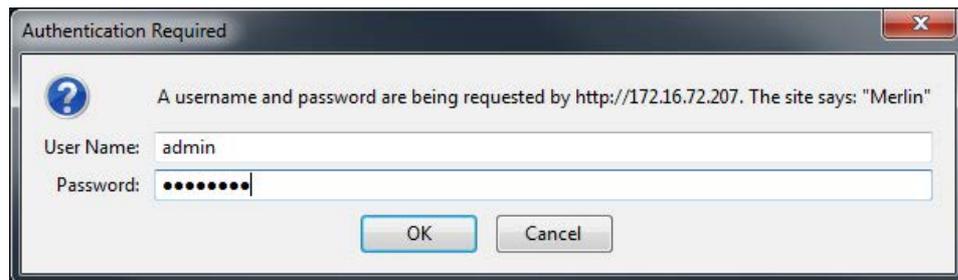

## Launching the HTML5 Toolbox Quick Connect

1. Click to launch the **HTML5 Toolbox Quick Connect Web-GUI**.
2. When you launch Toolbox for the first time an authentication dialog prompts you to enter the user name "**admin**" and password "**password**" to login, then click the **OK** button. Tieline highly recommends you change the password (see [Changing the Default Password](#)). This will provide better network security to maintain reliability during live broadcasts.

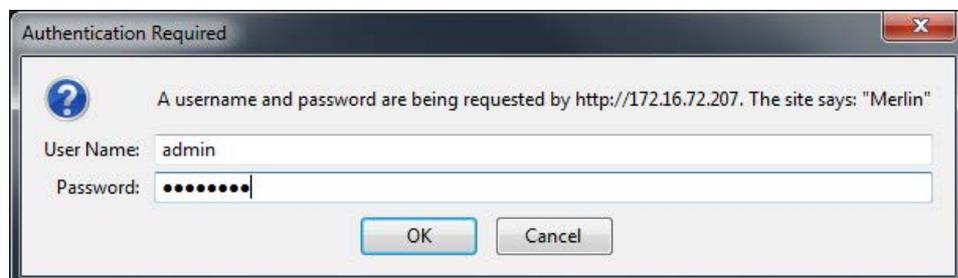

## Using the Web-GUI over the Internet

If your codec is connected over the internet via a public static IP address it is possible to connect and configure it from any PC which is also connected to the internet.

## LAN Troubleshooting

### PC LAN Settings

Check the LAN settings on your PC if it is connected to a LAN and is having trouble opening the Toolbox Web-GUI in a web-browser.

1. Open Internet Explorer.
2. Click **Tools > Internet Options > Connections**.
3. Click the **LAN settings** button.
4. If the PC is using a proxy server over the LAN you may need to select the **Bypass proxy server for local addresses** option box.
5. If you still can't connect, click the **Advanced** button in the **LAN Settings** dialog and ask your IT administrator to assist you with entering the IP address of the codec into the **Exceptions** pane of the **Proxy Settings** dialog.

### Port Selection

By default port 80 is used by your PC to communicate with the codec and launch the web-GUI. If port 80 cannot be used across your network for some reason, type the IP address of your codec into your browser with a full colon and the port number 8080.

E.g. **192.168.0.176:8080**

It is also possible to specify a different port for connecting the Toolbox web-GUI to your codec.

1. Press the **HOME**  button on the codec to return to the **Home** screen.
2. Use the navigation buttons to select **Settings** and press the  button.
3. Use the navigation button to navigate down to **WebGUI** and press the  button.
4. Select **Alt. Port** and press .
5. Use the **KEYPAD** to enter a new port number and press the  button to save the new setting.
6. Type the IP address of your codec into your browser with a full colon and then the new port number.




**Important Note:** Any new port specified must be within the range 2000 to 65535 inclusive.

## 17.2 Changing the Default Password

The default password for the Toolbox Web-GUI is **password**. Enter this in the authentication dialog to use the Web-GUI initially and then Tieline highly recommends changing the default password to protect your codec from being tampered with during live broadcasts.



**Toolbox Java Web-GUI Login Dialog**

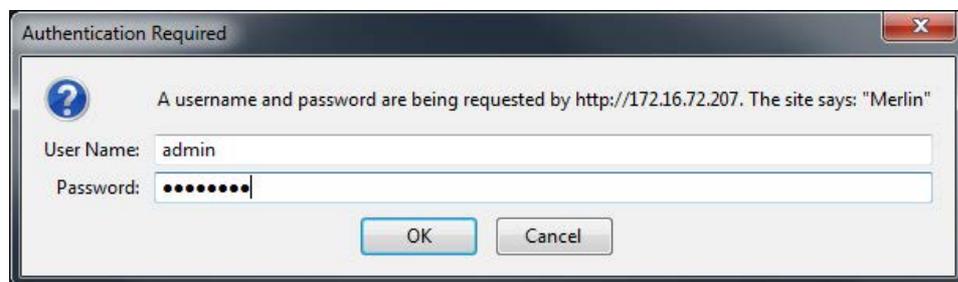

**Toolbox HTML5 Web-GUI Login Dialog on a Merlin Codec**

**⚠ Caution:** Codecs connected to the internet can be accessed by anyone with knowledge of the codec's public IP address. Setting a strong password protects your equipment from being tampered with and jeopardizing live broadcasts.

### Creating a New Password

The authentication login password can be changed at any time using the codec keypad and LCD screen. Note that passwords are case sensitive:

1. Press the **SETTINGS**  button.
2. Use the navigation button to select **WebGUI** and press the  button.
3. Select **Password** and press .
4. Use the **KEYPAD** to enter a new password and press the  button to save the new setting (Note: there is no character limit for passwords).

If you forget the password for the Toolbox web-GUI then you can always press the **SETTINGS**  button on the codec and navigate to **WebGUI** to view the current password and change it if required.



**Important Note:** The **Username** in the codec menu is permanently set to **admin** and cannot be changed; only the **Password** can be changed.

## 18 Using the Java Toolbox Web-GUI


The following sections provide an overview of the different programming panels available within the JavaToolbox Web-GUI. Navigate with the mouse pointer to a symbol at the top of the Web-GUI screen and click to open the panel selected. When a panel is opened in the Web-GUI, the text below the symbol at the top of the screen is highlighted (see **Master** in the following image).



**Web-GUI Symbols for Opening Panels**


The most recently opened panel is displayed underneath the **Master panel** by default. Click the **Maximize/Minimize** symbol to view a panel in full-screen mode, or click to minimize back to the default panel size.

### Master Panel to Load Programs and Connect Audio Streams

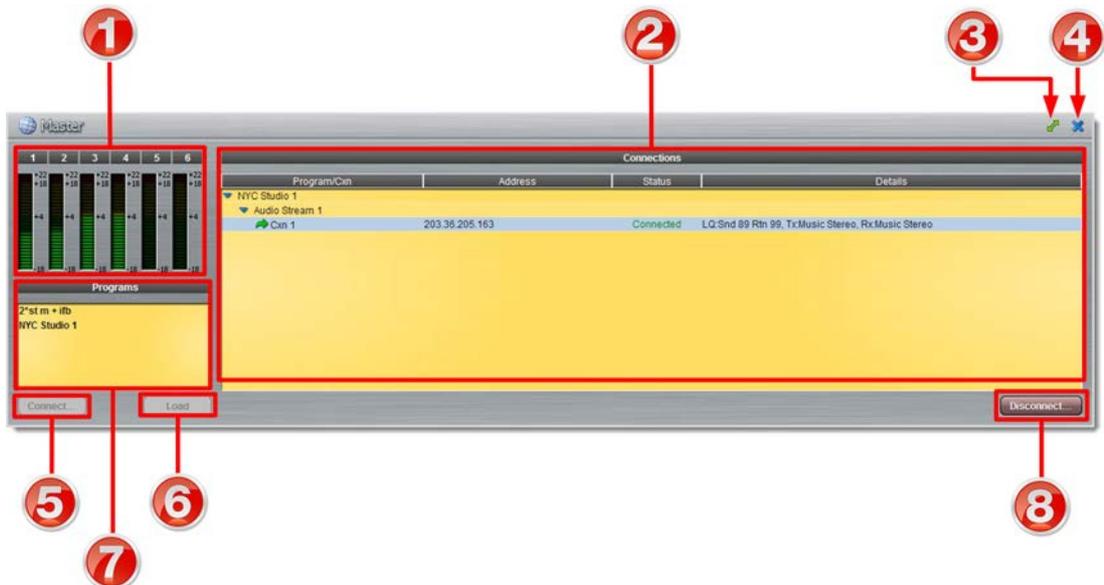


	Feature	Description
1	Input/Output PPMs	6 PPM meters to display audio levels for inputs and outputs
2	<b>Connections</b>	Provides a summary of connection details and audio streams
3	Locked program	Symbol indicates the currently loaded program is locked
4	Maximize/Minimize	Click to maximize a panel to view it in full-screen mode, or click to minimize back to the default panel size
5	<b>Close</b> button	Click to close the <b>Master panel</b>
6	<b>Connect</b> button	Click Connect to connect all audio streams configured within the currently selected program in the Programs list; this button also loads the program currently selected in the Programs list
7	<b>Load</b> button	Click to load the program currently selected in the Programs list
8	Programs list	Lists all configured programs which have been added into the codec. Click to select a program before loading or connecting
9	<b>Disconnect</b> button	Click to disconnect the currently selected audio stream or a specific connection. Note: this button becomes a <b>Connect</b> or <b>Unload</b> button when all audio streams are disconnected.

### Programs Panel for Connection Configuration

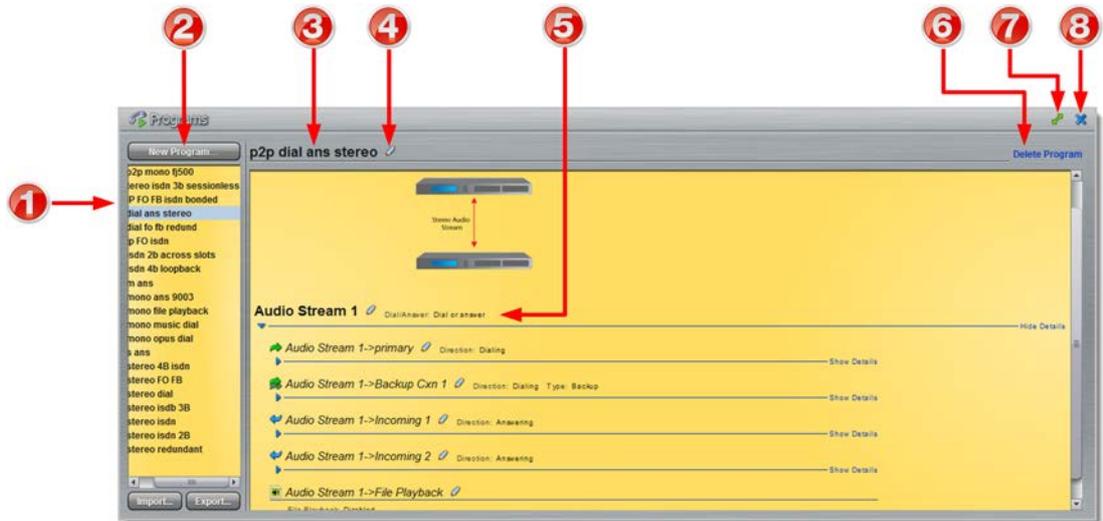

	Feature	Description
1	Programs List	Displays all programs in the codec
2	<b>New Program</b> button	Click to add a new program.
3	Program Name	The name of the currently selected program in the panel.
4	<b>Edit Name</b>	Click to edit the name of the currently selected program.
5	Audio Stream overview	Click the blue arrows ▶ to expand audio stream and connection information; click the <b>Edit</b> symbol 🛠 to adjust program settings. This panel displays the program wizard when creating a new program.
6	<b>Delete Program</b>	Click to delete the currently selected program (Note: Ensure the program is not loaded or the delete function will not work).
7	Maximize/Minimize	Click to maximize a panel to view it in full-screen mode, or click to minimize back to the default panel size
8	<b>Close</b> button	Click to close the <b>Connect</b> panel.

**Inputs Panel for Input Adjustments**

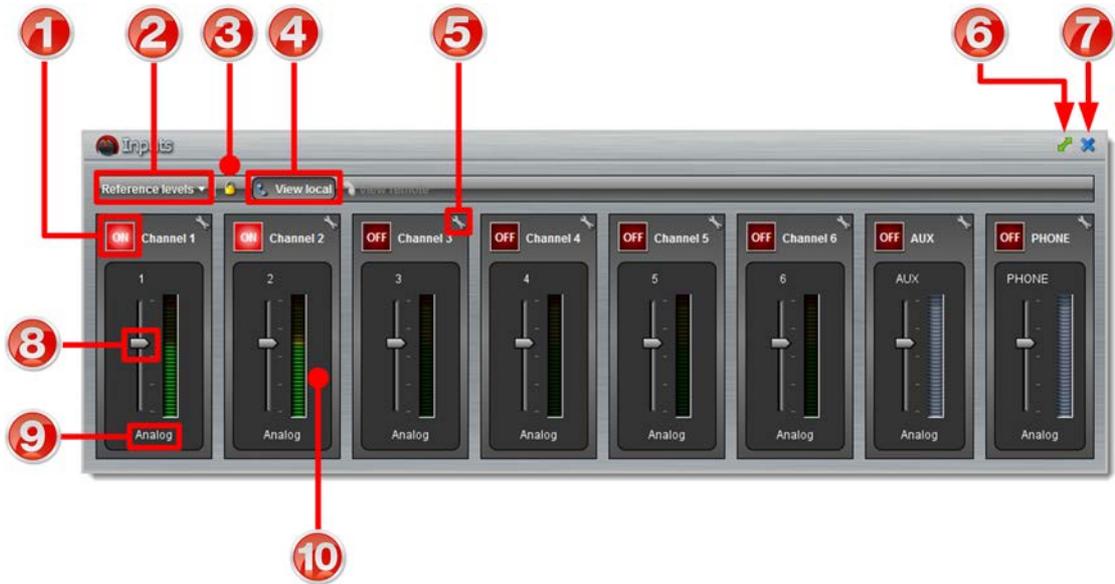

**Important Note:** Tieline codecs have different input configurations, therefore the image shown may not reflect the number of inputs displayed in your codec Web-GUI.


	Feature	Description
1	Channel <b>ON/OFF</b> Buttons	Click to turn each channel <b>ON</b> or <b>OFF</b>
2	<b>Reference levels</b> menu	Click the drop-down arrow to select the codec input reference level (default setting <b>Auto</b> )
3	Lock Button	Click to lock all <b>Input</b> panel settings (greys out when locked)
4	<b>View local</b>	Click to view local codec inputs (default)
5	<b>Settings</b> button	Click to adjust input <b>Name</b> , <b>Type</b> , <b>IGC</b> and <b>Ganging</b>
6	Maximize/Minimize	Click to maximize a panel to view it in full-screen mode, or click to minimize back to the default panel size
7	<b>Close</b> button	Click to close the panel
8	Input Sliders/Faders	Input gain control sliders/faders
9	Analog/AES3 Indication	Indicates whether the codec input is configured for analog or digital audio sources
10	Input PPM meter	Input PPM meter

### Statistics Panel for Monitoring Connection Stability




	Feature	Description
1	Headings	Headings for the various packet arrival statistics available
2	Connection Statistics	Right-click to view audio stream bit-rate and jitter buffer statistics
3	Maximize/Minimize	Click to maximize a panel to view it in full-screen mode, or click to minimize back to the default panel size
4	Close button	Click to close the panel

**Rules Panel for Creating Relay Activation Rules**

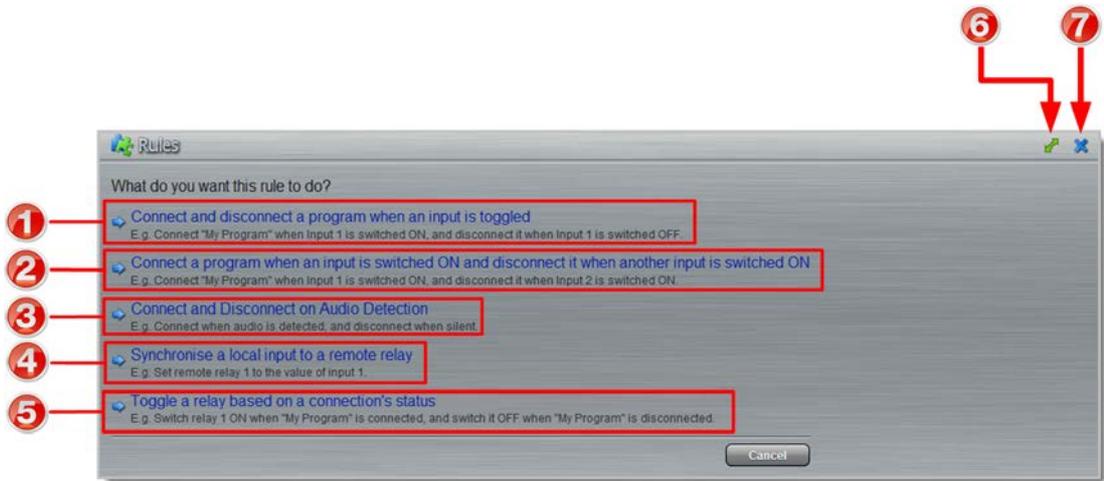


	Rule	Description
1	Connect and disconnect a program when an input is toggled	Click to configure Connection and Disconnection by toggling an input
2	Connect when an input is switched <b>ON</b> ; Disconnect when another input is switched <b>ON</b>	Click to configure Connection and Disconnection after different relay inputs are switched <b>ON</b>
3	Connect and Disconnect on Audio Detection	Click to configure the codec to connect when audio is detected and disconnect when silence is detected
4	Synchronise a local relay input with a remote relay output	Click to configure a local relay input to synchronise with the state of a remote relay output
5	Toggle a relay based on a connection's status	Click to configure a relay to toggle based on connection status
6	Maximize/Minimize	Click to maximize a panel to view it in full-screen mode, or click to minimize back to the default panel size
7	<b>Close</b> button	Click to close the <b>Rules</b> panel

## Alarms Panel

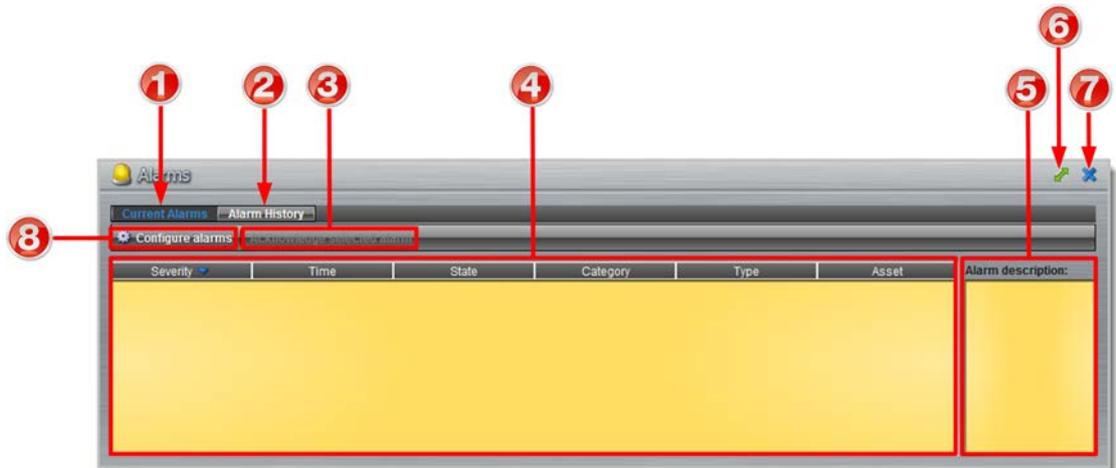

	Feature	Description
1	<b>Current Alarms</b>	Click to view current device alarms
2	<b>Alarm History</b>	Click to view the history of device alarms
3	<b>Acknowledge Alarm</b> <b>Selected</b>	Click to acknowledge an alarm after activation
4	<b>Alarm details</b> pane	Displays alarm details
5	<b>Alarm description</b> pane	Troubleshooting information to assist users when alarms occur
6	Maximize/Minimize	Click to maximize a panel to view it in full-screen mode, or click to minimize back to the default panel size
7	<b>Close</b> button	Click to close the <b>Alarms</b> panel
8	<b>Configure alarms</b>	Click to create or edit alarms.

## Panel

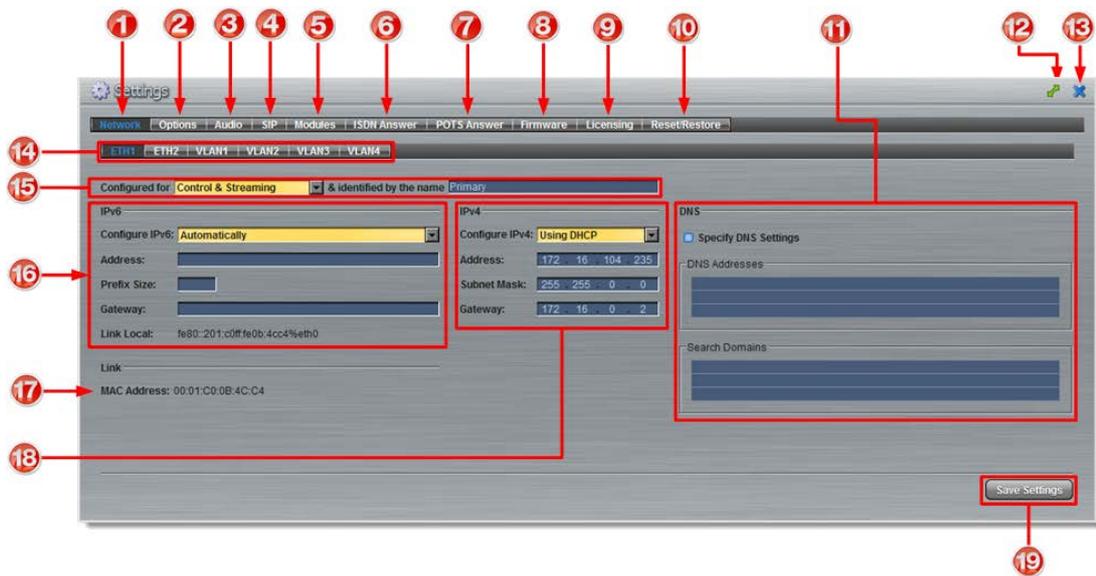

	Feature	Description
1	<b>Network tab</b>	Click to edit or view codec network configuration settings
2	<b>Options tab</b>	Click to configure RS232 and QoS data settings, lock a loaded user Program and adjust Session Port settings and SNMP.
3	<b>Audio tab</b>	Click to configure the AES Output Clock sample rate
4	<b>SIP tab</b>	Click to edit or view SIP configuration settings
5	<b>Modules tab</b>	Click to edit hardware module configuration
6	<b>ISDN Answer tab</b>	Click to configure ISDN Answering settings
7	<b>POTS Answer tab</b>	Click to configure POTS Answering settings
8	<b>Firmware tab</b>	Click to view software versions and perform an upgrade
9	<b>Licensing tab</b>	Click to select a license file and install it into the codec
10	<b>Reset/Restore tab</b>	Click to reset codec default settings and perform backup/restore of codec programs and settings
11	<b>DNS Pane</b>	Activate to specify DNS addresses and domains to search.
12	Maximize/Minimize	Click to maximize a panel to view it in full-screen mode, or click to minimize back to the default panel size
13	<b>Close button</b>	Click to close the panel
14	Network Interface	Select a network interface for configuration options
15	Network Interface Identifier	Control and streaming configuration options for each network interface, e.g. Ethernet Port 1 or 2.
16	<b>IPv6 details</b>	IPv6 addressing details and configuration
17	<b>MAC Address</b>	Device MAC address
18	<b>IPv4 details</b>	IPv4 addressing details and configuration
19	<b>Save Settings button</b>	Saves all configuration settings

## Help Panel



	Feature	Description
1	<b>About</b>	Details of the Toolbox Web-GUI and codec firmware versions, as well as the codec serial number
2	<b>Resources</b>	Links to open the user manual in a new browser, or view support information
3	<b>Support Logs</b>	Click to download diagnostic information that can be sent to Tieline support
4	<b>Event Logs</b>	Click to download user-viewable event logs
5	Maximize/Minimize	Click to maximize a panel to view it in full-screen mode, or click to minimize back to the default panel size
6	<b>Close button</b>	Click to close the <b>Help panel</b>

## Language Selection

The Toolbox Web-GUI offers language support for several languages.

1. Click on the language drop-down menu arrow in the top right-hand corner of the Web-GUI page.
2. Select your language of choice.



3. Click to refresh your web-browser and display the new language selected.

## 18.1 Configuring IP Settings

Click the **Settings**  symbol to open the **Settings** panel and click the **Network** button to view Ethernet and VLAN interface settings in the Web-GUI.



**Important Note:** For assistance with configuration of IPv4 or IPv6 network connections contact your IT Administrator.

### IPv4 versus IPv6

An IP address is a unique address to identify a device on a TCP/IP network. Your codec uses dual IP protocol stacks to allow your codec to work on both IPv4 and IPv6 networks. Your Tieline codec supports both DHCP (default) IP addressing and static IP addresses for dialing IPv4 connection endpoints.

If you want to dial a codec with a public IP address you simply dial the IP address to connect. If you want to dial a codec with a private IP address you need to perform network address translation (NAT). NAT allows a single device, such as a broadband router, to act as an agent between the public internet and a local private LAN. Usually this will be set up at the studio end so you can dial into the studio from the remote codec.

Support for IPv6 connections allows you to use IPv6 infrastructure to connect to other codecs globally.


### Configuring Ethernet Ports and VLANs

The codec features two physical Ethernet port interfaces and up to four additional VLAN interfaces.

VLAN interfaces have features similar to physical Ethernet interfaces. However, your network administrator will need to configure VLAN support throughout your network for them to be supported in your codec.

As an example, if only one physical Ethernet interface is available, VLANs can be used to operate SmartStream PLUS or to separate codec Control and Streaming functions if required. Ethernet and VLAN interfaces can be configured for:

- Controlling audio: codec control and command only from the Ethernet port.
- Controlling and Streaming: stream audio and control and command the codec via the Ethernet port.
- Streaming audio: stream audio only from an Ethernet port (**ETH2** and **VLANs** only).
- Nothing: Disable the Ethernet port from streaming audio and codec command and control (**VLANs** only).

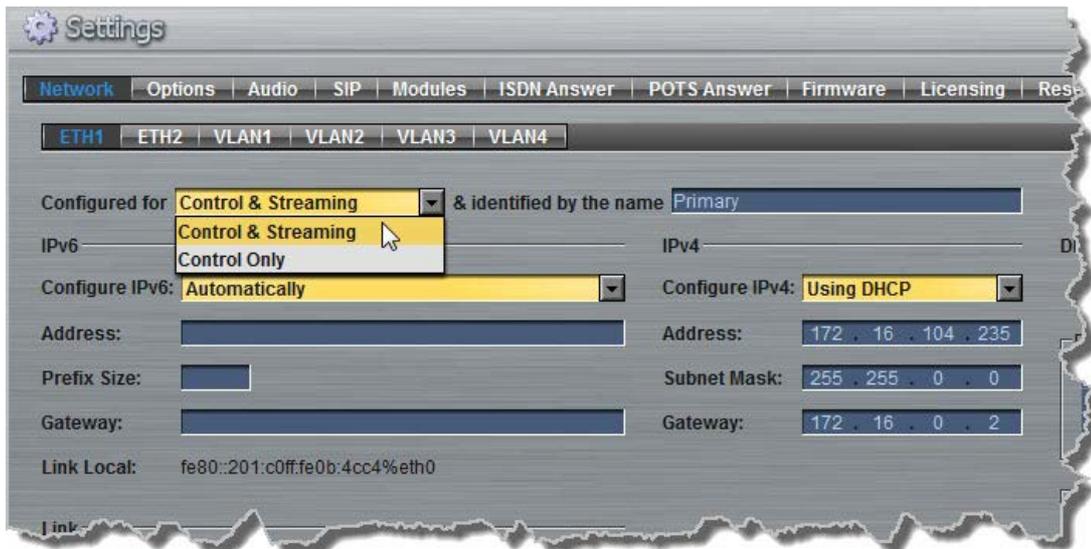


The name entered into the right-hand text box, e.g. **Primary** or **Secondary**, is an interface identifier used when configuring new programs via the **Programs panel**.

## IPv4 Address Configuration


The codec is capable of automatic DHCP address assignment, or manually configured static IPv4 address configuration via the drop-down **Configure IPv4** menu. If you want to ignore IPv4 settings select **Off**.



DHCP IP addresses are automatically assigned and can change each time you connect to your Internet Service Provider or to your own local area network (LAN). By default the codec is programmed for DHCP-assigned IP addresses.

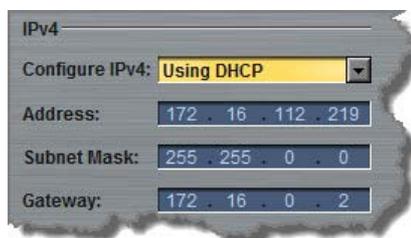

Static IP addresses are fixed addresses that are recommended for studio installations, so that IP address dialing remains the same over time for incoming codec connections.

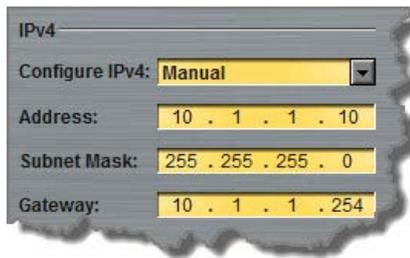

Click **Save Settings** to store all configuration settings.



**Note:** The **Subnet Mask** is used by the TCP/IP protocol to determine whether a host is on the local subnet or on a remote network. The default **Gateway** is the router linking the codec's subnet to other networks. See your IT administrator for more details.

## IPv6 Address Configuration

An IPv6 address is represented by 8 groups of 16-bit hexadecimal values separated by colons (:). The drop-down **Configure IPv6** menu provides three address configuration options:

1. Auto: An address is automatically assigned to the codec when you connect the codec to an IPv6 router. This process is similar to how an IPv4 DHCP address is assigned.
2. Manual: Select to enter static IPv6 address details.
3. Off: Select to ignore IPv6 address details.



**Important Note:** Select **Off** in the drop-down **Configure IPv6** menu if you are not using IPv6 to connect to another device. This ensures your codec will attempt to connect using IPv4 at all times.

## Types of IPv6 Addresses

There are two types of addresses displayed in the IPv6 section:

1. IPv6 address (normally global): A router-allocated IP address with 'global' visibility, details of which are displayed in the **Address**, **Prefix** and **Gateway** text boxes.
2. Link Local Address: A local address which can only be used to connect to another device directly over a LAN. This address is allocated by the codec internally based on MAC address details.


## Auto Address Assignment

By default the codec is programmed for connecting to an IPv6 router which automatically allocates IPv6 address details, as displayed in the following example.



## Manual IPv6 Address Assignment


To configure IPv6 address details into the codec manually, select **Manual** and enter details into the **Address**, **Prefix** and **Gateway** text boxes.

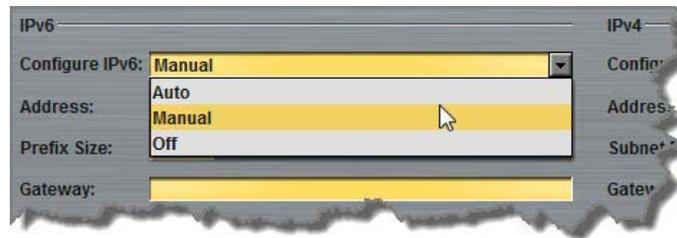

Click **Save Settings** to store all configuration settings.

## Specifying DNS Settings


It is possible to specify Domain Name Server (DNS) settings to allow easy look up of codecs within the specified **DNS Addresses** or **Domains**.

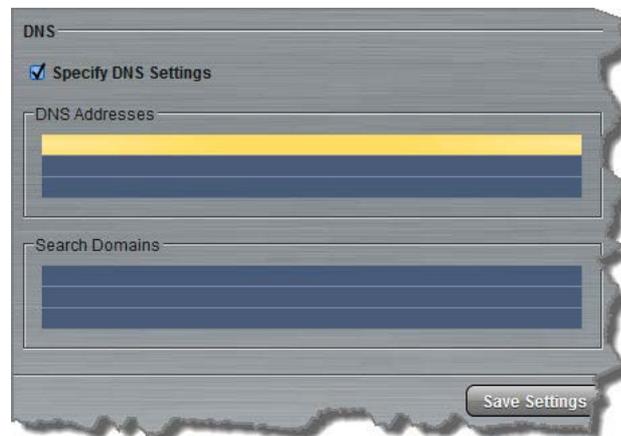

The codec can be configured to tag IP data packets sent across a network by entering a value into the Differentiated Services Code Point (DSCP) field within the header of data packets transmitted over the network.

## Configuring QoS

1. Open the Java Toolbox Web-GUI and click the **Settings**  symbol at the top of the screen to display the **Settings panel**.
2. Click the **Options** button at the top of the **Settings panel**.
3. Click in the **QoS** text box and enter the new value.

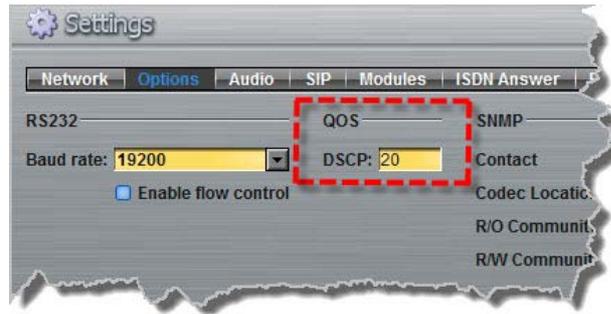

4. Click the **Save Settings** button to save the new setting.



**Important Note:** Check with your IT administrator before changing this setting. By default the codec is programmed for Assured Forwarding and more details about DSCP are available on Wikipedia at <http://en.wikipedia.org/wiki/Dscp>.

## 18.2 Configuring ISDN

Two slots are available for inserting optional ISDN modules into the codec. These can be configured using the codec front panel or the Toolbox graphical user interface (GUI). See [About ISDN Modules](#) for additional information on ISDN.


You can use the Java Toolbox Web-GUI to configure a dial and/or answer program with ISDN settings. You may also need to:

1. [Configure ISDN module settings.](#)
2. [Configure ISDN Answering settings.](#)

### 18.2.1 Configuring ISDN Modules

ISDN settings in the **Module** menu determine how each codec module operates at a particular site. You can copy similar programs between codecs installed at different locations and also configure site-specific settings for how each ISDN module should connect. ISDN module settings may need to be adjusted depending on your country and network requirements.


1. Open the Java Toolbox web-GUI and click the **Settings**  symbol at the top of the screen to display the **Settings panel**.
2. Click the **Modules** button at the top of the **Settings panel**.
3. Select Module 1 or Module 2.
4. Click the drop down arrow for **Accept** and select whether to allow or disallow circuit switched voice or data calls. The default setting allows **Data Only**.

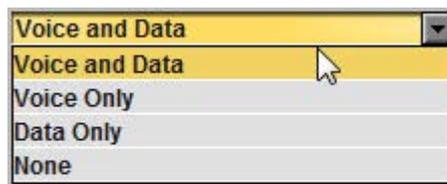

**Important Note:** G.711 is the algorithm used when **Voice Only** is selected.

5. Click the drop down arrow for **Network** and select the **Network Type** corresponding to the region

in which you are using the codec (see [ISDN Module Configuration](#) for more details).

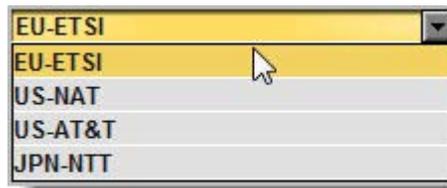

6. Click the drop-down arrow for **Line Type** and select your preferred option. Ask your Telco whether your ISDN line is Point-to-Point or Point-to-Multipoint. By default select **Point-to-Multipoint**, unless your switch type is an AT&T 5ESS custom point-to-point.
7. If you are in the US enter DN and SPID numbers as required, or in other regions enter DN or MSN numbers as required.
8. Click the **Save Settings** button when configuration is complete.



#### **Important Notes:**

##### ***Directory Numbers and Multiple Subscriber Numbers***

Directory Numbers (DN) in North America and Multiple Subscriber Numbers (MSN) in the rest of the world are simply phone numbers associated with an ISDN B channel, like lines listed in a typical phone directory. Your Telco will normally supply 2 DN/MSN numbers for each pair of B channels. However, these numbers may or may not be associated with a specific B channel.

Often broadcasters prefer to predict which B channel will answer an incoming call to ensure audio routing is consistent. However, if a DN or MSN number is not entered in the codec and multiple B channels are available, the codec may use any channel to answer an incoming call. To ensure calls are routed consistently, enter a DN/MSN number (without the country or area code) as the DN/MSN for a B channel, then only that corresponding B channel will answer an incoming call to that number. Programming DN/MSN numbers for each B channel allows the codec to ignore calls without matching DN/MSN numbers. This is the best way to answer calls from codecs in a predictable manner.

##### ***SPID Numbers in North America***

ISDN relies on an initialization procedure for associating Service Profiles with specific terminating equipment (e.g. your audio codec) rather than lines. In the US Telcos assign a Service Profile ID (SPID) number which assists in identifying different ISDN services across the network. Your Telco must provide a SPID for each B channel you order when connecting over US-Nat or US-AT&T networks in the US. A SPID is not required when using the AT&T PTP protocol.


Typically, each ISDN BRI service in the US will have two SPIDs and these must be entered correctly. When you enter a SPID into your codec and connect it to an ISDN line, an initialization and identification process takes place, whereby the terminating equipment (your codec) sends the SPID to the switch. The switch then associates the SPID with a specific Service Profile and directory number.

Note: SPID numbers normally include the phone number and additional prefix or suffix digits up to 20 digits long.

## 18.2.2 Configuring ISDN Answering

**ISDN Answer Configs** are used to determine how codec ISDN modules will behave when answering ISDN calls.

The following image explains the difference between answering calls from Tieline codecs sending session data, and non-Tieline codecs making sessionless ISDN calls. Codecs sending Tieline Session Data contain all the information required to connect, e.g. algorithm and audio stream routing settings. When answering sessionless calls it is necessary to configure the answering codec with an **ISDN Answer Config**, which tells the answering codec how a sessionless call will try and connect.

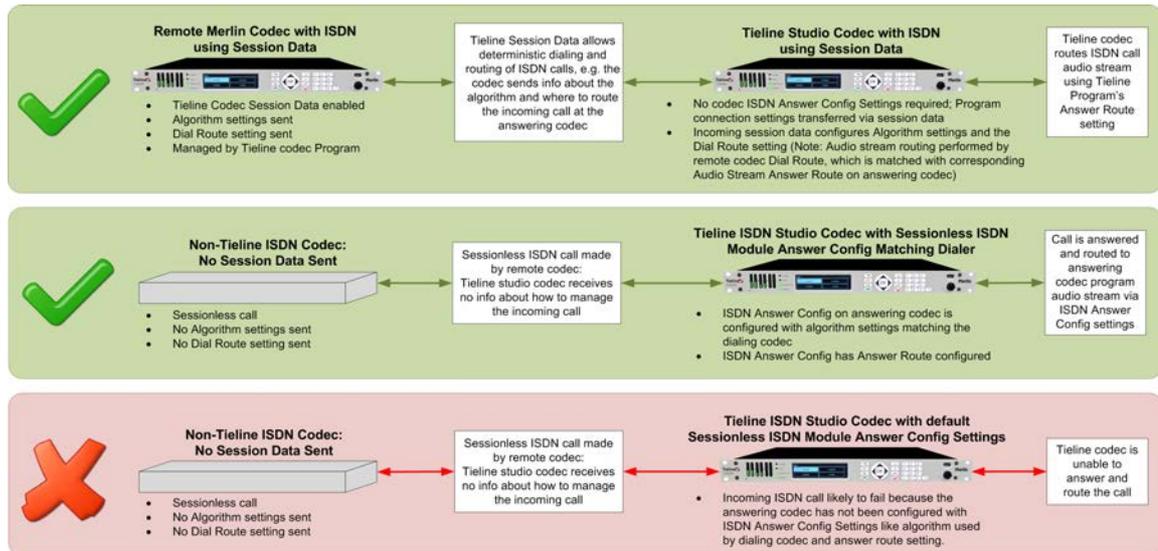

It is possible to save up to four different **ISDN Answer Configs**, which allow up to 4 ISDN B channels to be individually configured for unique answering behaviors. ISDN answering can be configured to suit:

- Hardware available in the codec, i.e. the number of B channels available.
- Expected dialing behaviors, e.g. if B channels should bond or not, and whether audio streams need to use **Dial** and **Answer Route** tags.
- The type of call being received by the codec, e.g. Tieline (with Tieline Session Data) versus non-Tieline sessionless calls.
- The algorithm expected when receiving sessionless calls.

Each of the four available **Configs** allows you to select which B channel or channels are used to answer a call or calls from incoming ISDN codecs. A maximum of up to 4 B channels can be selected if 2 ISDN modules are installed in the codec.



**Important Note:** B channels can only be selected once and are greyed out once they have been selected in one of the four ISDN **Configs**.

### Single B Channel Config

To use a single 64kbps B channel for a connection (e.g. a 1 x Mono Peer-to-Peer audio stream) simply select a B channel from those available and click the **Save settings** button. If only one B channel is selected then **Unbonded Only** is the default setting.



### Multiple B Channel Bonding Config

A point-to-point audio stream can also bond multiple B channels to create higher bandwidth connections. In the following example, two B channels from **Module 2** have been selected within **Config 2**. Note that **B Channel 1** in **Module 1** has already been selected in **Config 1** and is therefore unavailable in **Config 2**.




Configure the bonding setting that best suits the audio stream with which this **Config** will be associated. **Bonded or Unbonded** is the best setting in most situations. Note: Click the **Save settings** button to apply changes to the **Config**.


Bonding Setting	Behavior
Unbonded Only	Unbonded single B Channel
Bonded or Unbonded (May Bond)	Calls using the same algorithm from the same Tieline codec, or sessionless calls, will attempt to bond when received. Calls using incompatible algorithms will not be bonded
Bonded Only	Will only bond compatible algorithms. This mode will reject incompatible calls which cannot be bonded, e.g. G.711 and G.722

## Dial and Answer Route Settings in Programs

**Dial Route** and **Answer Route** tags allow you to associate a B channel (or channels) in a **Config** with a particular incoming audio stream from either Tieline or non-Tieline codecs. This is not necessary in simple point-to-point ISDN audio stream configurations, however it is very useful in multiple audio stream codecs using multiple B channels. When dialing Tieline to Tieline over ISDN using the Merlin or Genie family of codecs, you can configure a **Dial Route** in the dialing codec's program and a corresponding **Answer Route** in the answering codec's program. This will ensure a particular audio stream is routed between two codecs consistently.

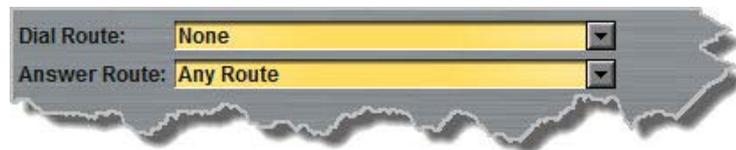

In principle, the concept of 'routes' operates similarly to how audio ports are used to route multiple audio streams over IP. Selecting different IP audio port numbers allows users to define which incoming IP audio stream is routed to a specific answering audio stream configuration on the codec. This ensures inbound calls from multiple codecs can be consistently routed to the same answering codec audio streams, and therefore the same inputs and outputs. Following is an example of how to consistently route incoming ISDN audio streams using dial and answer routes.

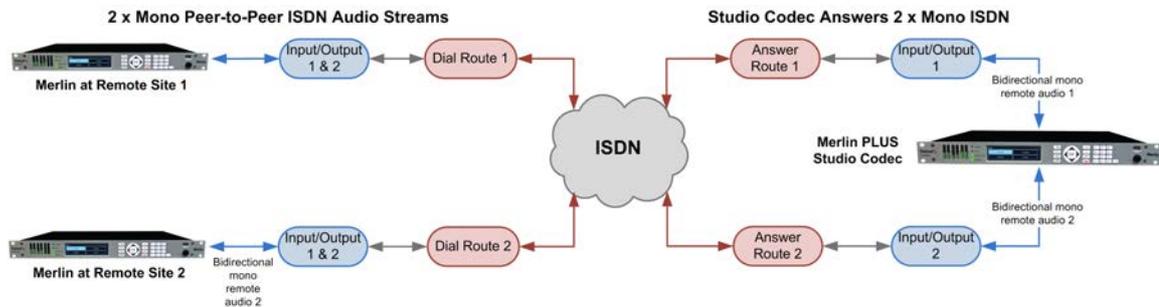


## Answer Routes for Non-Tieline (Sessionless) ISDN Calls

In some situations you may receive a call from a non-Tieline codec which doesn't support session data and **Dial Route** tags. In this situation you can still specify the audio stream **Route** on the answering codec using **Config 1-4** in **ISDN Answer**. You can also select the default algorithm.

For example, if a call from a non-Tieline codec is received via **B Channel 1** on **Module 1** (i.e. no **Dial Route** has been specified in the dialing codec):

1. Select a **Route** for this B channel in one of the four **Configs** within **ISDN Answer**, e.g. **Route1**, then select the default **Encoding** algorithm to use when connecting (default setting is **G.722**).

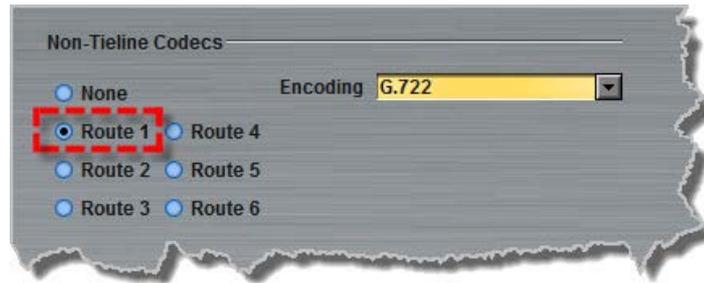

2. Click **Save Settings** to store the new **Config** settings.
3. This will associate the incoming call with a corresponding **Answer Route** configured in the answering codec program, e.g. **Answer Route 1**.




More detailed information about how to configure the codec to answer and route multiple sessionless ISDN calls is available in [Using ISDN Answer Routes for Sessionless ISDN Calls](#). This uses examples to explain how to set up consistent deterministic routing of multiple incoming sessionless calls.

## Answering both Tieline Session and Sessionless ISDN Calls

Leave the **Sessionless Only** checkbox in the **ISDN Answering Config** unchecked if the codec is expected to receive ISDN calls from Tieline codecs, or both Tieline and non-Tieline codecs (i.e. you are not sure which type of codec may call). In this mode, when the codec answers a call it initially expects to receive Tieline session data from the dialing codec and configure its own algorithm settings according to that. If it fails to receive Tieline session data within 5 seconds (i.e. a non-Tieline codec is calling, or a Tieline codec with session data disabled), it will use the settings in the **ISDN Answering Config** instead.


The following image displays how the answering codec will behave in this mode when receiving calls from both Tieline and non-Tieline codecs.

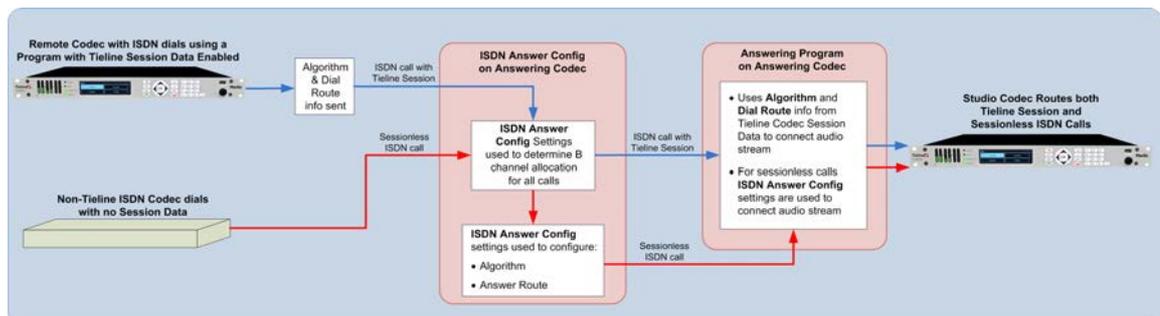

## Allow Answering of Sessionless ISDN Calls Only


Select **Sessionless Only** when answering ISDN calls from non-Tieline codecs only. When **Sessionless Only** is selected, the codec will not wait to receive the Tieline session data. This reduces the time taken to answer an inbound sessionless call.

The following image displays how the answering codec will respond with **Sessionless Only** selected, i.e. calls from both Tieline and non-Tieline codecs are always regarded as sessionless.

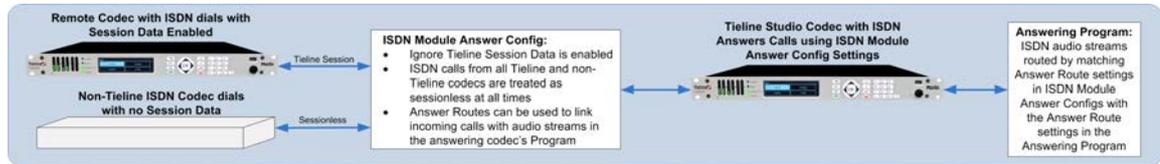

## Answering Multiple ISDN Calls from Tieline and non-Tieline Codecs

Tieline codecs capable of answering multiple incoming audio streams can be configured to answer both Tieline session data and sessionless ISDN calls at different times. They can also support connections using other transports such as IP or POTS. The following example shows how a Tieline codec can be configured to answer up to 4 separate mono ISDN calls at different times from both Tieline and non-Tieline codecs, as well as two mono IP audio streams.

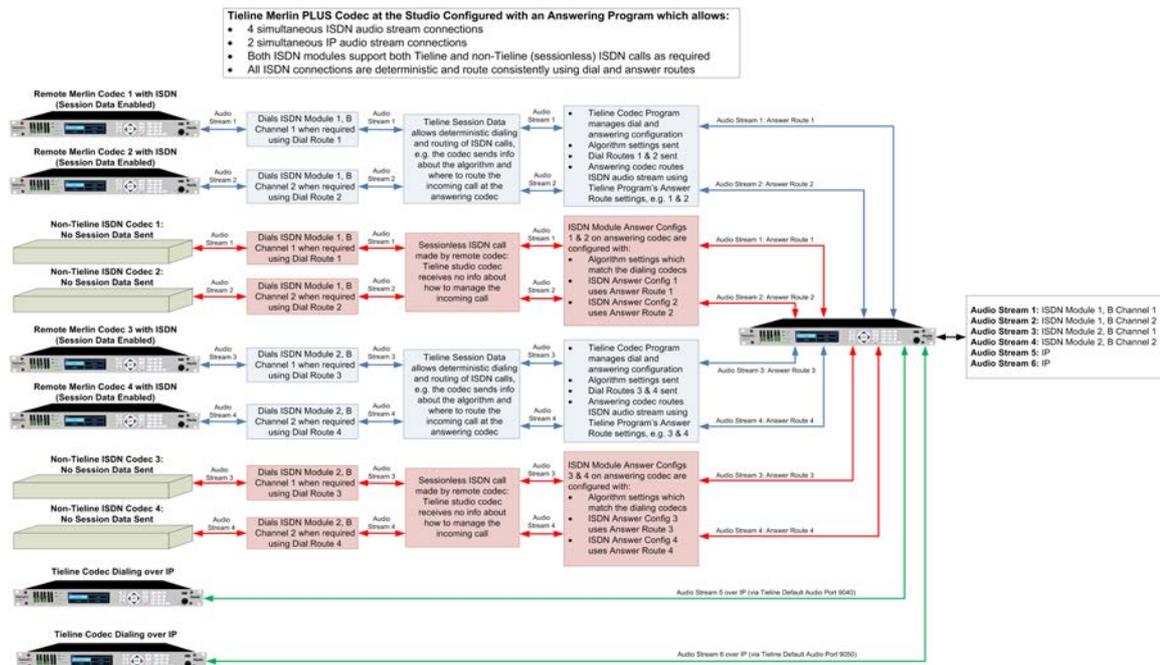

## Default Answering Settings

When a B channel is not associated with a **Config** it inherits the following default settings:

- Tieline Session
- Unbonded
- G.722 algorithm
- Audio route: None

## 18.3 Configuring POTS

Two slots are available for inserting optional POTS modules into the codec. These can be configured using the codec front panel or the Toolbox graphical user interface (GUI). See [About POTS Modules](#) for additional information on POTS.

You can use the Web-GUI to configure a dial and/or answer program with POTS settings. You may also need to:

1. [Configure POTS module settings.](#)
2. [Configure POTS Answering settings.](#)

### 18.3.1 Configuring POTS Modules

POTS settings in the **Module** menu determine how your codec will connect at a particular site. You can copy similar programs between codecs installed at different locations and also configure site-specific settings for how each module should connect. The default **Config** settings for POTS modules are designed to suit Tieline codecs. These settings will need to be adjusted to connect to non-Tieline POTS codecs or connect in **Analog Phone** mode.


#### Configuring POTS G5 Modules

1. Open the Java Toolbox Web-GUI and click the **Settings**  symbol at the top of the screen to display the **Settings panel**.
2. Click the **Modules** button at the top of the **Settings panel**.
3. Select **Module 1** or **Module 2**.




4. Click the drop down arrow to adjust the **Answer Mode** and select how the module in the codec will be able to answer incoming POTS calls. Options include:

- **POTS Codec:** allows the POTS G5 module to receive incoming audio data over a POTS line.
- **Analog Phone:** configures the POTS G5 module to receive a standard analog phone call.
- **Disabled:** disables the POTS G5 module from receiving a **POTS Codec** or **Analog Phone** call.

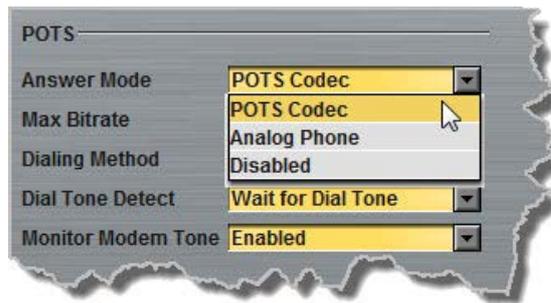

Calls are answered based on the **POTS Answer settings** in **Config 1 & 2**. Adjustments to these **Config** settings are not normally necessary when connecting between Tieline codecs. They are normally adjusted when connecting to non-Tieline codecs over POTS (see [Configuring POTS Answering](#) for more info).


5. Click the **Max Bitrate** drop-down arrow to adjust the maximum bit rate (dialing and answering). The default setting is **28800** (28.8kbps) and this only affects **POTS Codec** calls. The range of the setting is 9.6kbps to 33.6kbps. Even if the line is capable of establishing a connection at a higher bit rate, the **Max Bitrate** setting is the highest bit rate that will be attempted. Reducing this value can improve connection reliability on poor quality lines. If two codecs are not configured the same, they will attempt to connect at the lowest of the two **Max Bit rate** settings.

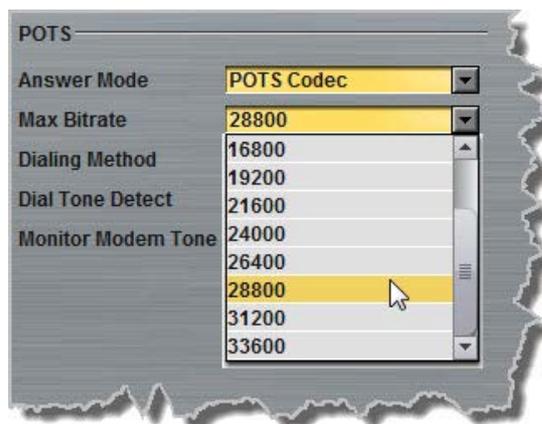

**Important Note:** G5 POTS modems initially attempt to establish a link at the lowest **Max Bitrate** setting configured in the two modules being connected. If the POTS line doesn't support this bit rate, the modems will attempt to connect at the highest possible bit rate to suit the prevailing line quality at each end of the link.

### Dialing Method (Dialing only)

Click the drop-down arrow for **Dialing Method** to select **Tone** (DTMF) or **Pulse** dialing over POTS Codec connections. Tone dialing is used always when the **Answer Mode** is **Analog Phone**.

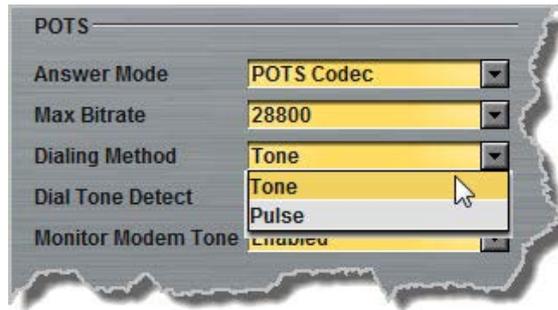

### Dial Tone Detect (Dialing only)


Click the drop-down arrow for Dial Tone detect to select either:

- **Dial Tone Detect:** The module will only be allowed to dial when a dial tone is present on the line.
- **Blind Dialing:** Allows the module to dial when no dial tone is present.



### Monitor Modem Tone (Dialing and Answering)

Click the drop-down arrow for **Monitor Modem Tone** to select either **Enabled** or **Disabled**.

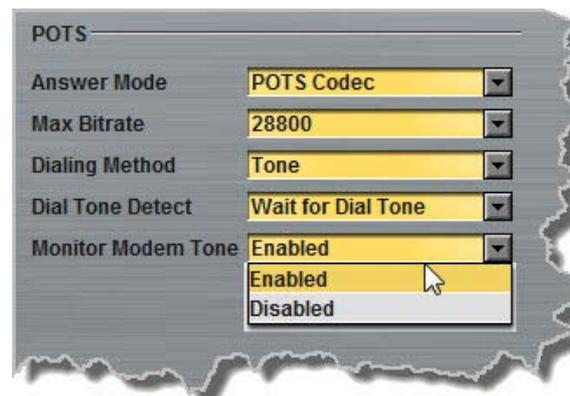

When enabled the module will allow audio monitoring of modem tones during connection in **POTS Codec** mode via the phone input. By default, the following phone input monitoring rules apply when multiple POTS G5 modules are installed in a codec and multiple POTS connections are dialed.

Module 1	Module 2	Audio Rule
POTS Codec (Monitor Modem Tone)	POTS Codec (Monitor Modem Tone)	The phone input receives a mix of modem tone audio from both modules
POTS Codec (Monitor Modem Tone)	Analog Phone	The phone input receives analog phone input audio only and mutes modem tone monitoring
Analog Phone	Analog Phone	The phone input receives audio from the oldest active connection only



#### Important Notes:

- Modem tone monitoring will work even if **Phone Input Enable** is **Off** via **Settings > Audio > Phone Input > Phone Input Enable [Off]**.
- Modem tone monitoring is only enabled during the initial connection training and negotiation period in **POTS Codec** mode.
- The monitoring volume can be adjusted using the codec front panel via **Settings > Audio > Phone Input > Level**, or by opening the **Inputs panel** in the Web-GUI and adjusting the **Phone** input volume slider.

## Country

This displays the current country setting in the codec. To adjust this setting select **Settings > System > Country**.

### 18.3.2 Configuring POTS Answering

It is possible to store a different **POTS Answer Config** for each POTS module installed in the codec. POTS answering can be configured to suit:

- The type of call being made, e.g. Teline (with Teline Session Data) versus non-Teline (Sessionless).
- Expected dialing behaviors and encoding, e.g. whether audio streams use **Route** tags and which algorithm is used.

If you answer a call from a non-Teline codec you will need to create an answering "Config" to determine which module in the codec will answer the call and the settings used when connecting.



#### Important Notes:


- **POTS Answer Config** settings are applied to **POTS Codec** connections and not **Analog Phone** connections.
- When receiving a call from a Teline codec with session data enabled (i.e. not **Sessionless**), the algorithm setting from the dialing codec overrides the setting in the **POTS Answer Config** menu.

## POTS Config Settings

The default **POTS Answer** module **Config** settings are:

- **Teline Codecs** Session Data,
- The **Other** algorithm.

This configuration will accept the settings from an incoming Teline codec when it dials with session data enabled. It will also allow the codec to answer a call from a Comrex POTS codec supporting the **Other** algorithm setting.

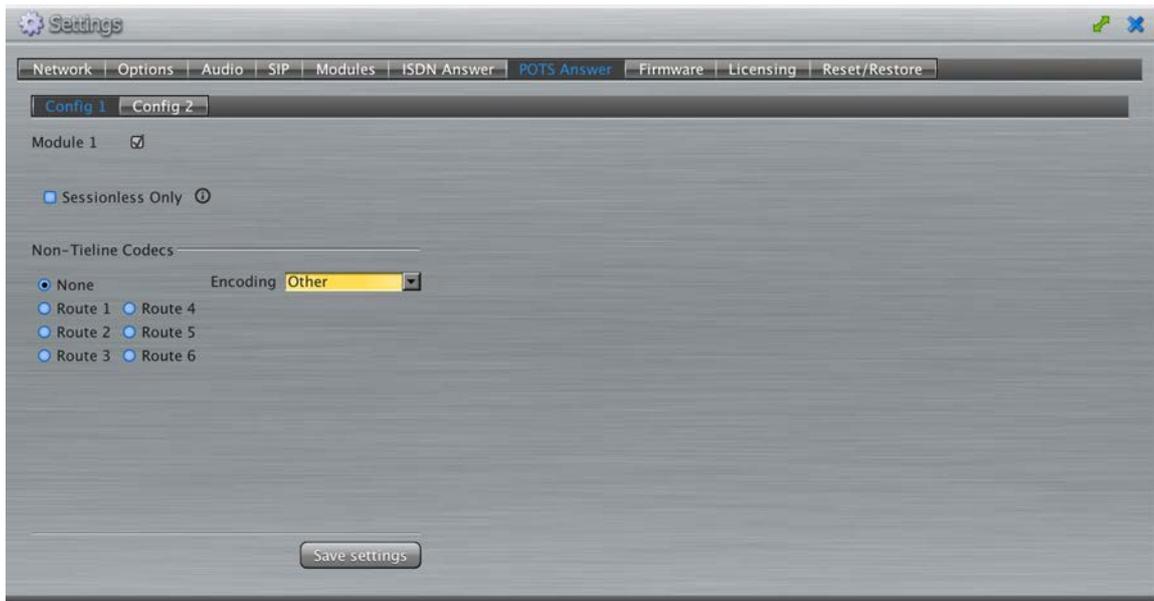

## Answering Calls from Non-Tipline POTS Codecs


Select the **Sessionless Only** check-box when only non-Tipline codecs are dialing a Tipline codec over POTS. This allows you to choose the default encoding setting and **Route** the incoming call to a nominated audio stream via a corresponding **Answer Route** in the answering codec program if required.



**Important Note:** Select **Other** in the **Encoding** drop-down menu when connecting to Comrex® Vector, Matrix® and BlueBox® codecs. On the Comrex codec select its "Music" algorithm. Please note that 9.6kbps connections are not supported by the Comrex codecs.


## Dial and Answer Route Settings in Programs

**Dial Route** and **Answer Route** tags allow you to associate a POTS **Config** with a particular incoming audio stream from either Tipline or non-Tipline codecs.

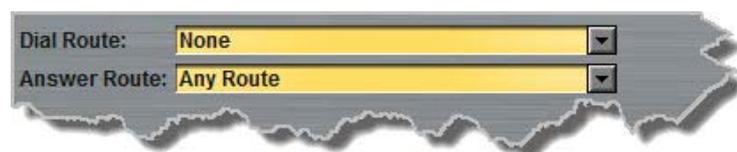

In principle, this operates similarly to how audio ports are used to route multiple audio streams over IP. Selecting different IP audio port numbers allows users to define which incoming IP audio stream is routed to a specific answering audio stream configuration on the codec. This ensures inbound calls from multiple codecs can be consistently routed to the same answering audio streams, and therefore the same inputs and outputs.

This is not necessary in simple point-to-point POTS audio stream configurations, however it is very useful in multiple audio stream codecs which support POTS connections. When dialing Tipline to Tipline over POTS using the Merlin or Genie family of codecs, you can configure a **Dial Route** in the dialing codec's program and a corresponding **Answer Route** in the answering codec's program. This will ensure a particular audio stream is routed between two codecs consistently.

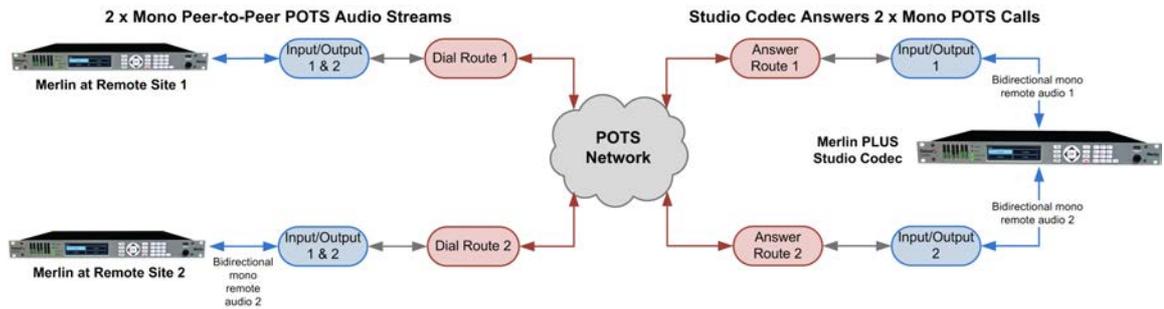


## Answer Routes for Non-Tieline POTS Codecs

In some situations you may receive a call from a non-Tieline POTS codec which doesn't support **Dial Route** tags. In this situation you can still specify the audio stream **Route** on the answering codec using **Config 1 or 2 in POTS Answer**. You can also select the default algorithm.

For example, if a call from a non-Tieline codec is received via POTS **Module 1** (i.e. no **Dial Route** has been specified in the dialing codec):

1. Select an answering **Route** for this POTS module in one of the two **Configs** within **POTS Answer**, e.g. **Route1**, then select the default **Encoding** algorithm to use when connecting (Note: **Other** is used for connecting to Comrex POTS codecs).

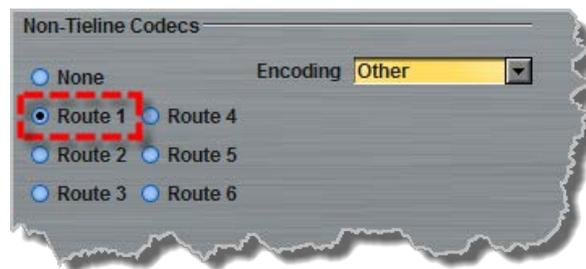

2. Click **Save Settings** to store the new **Config** settings.
3. This will associate the incoming call with a corresponding **Answer Route** configured in the answering codec program, e.g. **Answer Route 1**.



## 18.4 Configuring Input/Output Settings

Click the **Inputs** button  to view input controls available within the Java Toolbox Web-GUI.



**Important Note:** 15 volt phantom power can only be supplied on the Auxiliary input; this is disabled by default.

### Configuring Input Channel Settings

#### Renaming Input Channels:

1. Click the **Input Settings**  symbol on the input channel you want to rename.
2. Select **Name** and click in the text box to edit or enter a new name.
3. Click **Change Name** to confirm the name change.



#### Selecting Analog and Digital Audio Sources:

Codec inputs are configured for analog high-gain mic level audio sources by default.

1. Click the **Input Settings**  symbol.
2. Select **Type** and click to select either **Analog** or **AES3**.



3. When you select AES3, the display changes to reflect 100% input levels; slider and input on/off controls are locked on.




**Important Note:** Input levels can only be adjusted on analog inputs. [See Configuring AES3 Audio](#) for more information about the digital inputs and outputs.

## Ganging Channels:

Ganging is useful because it allows you to adjust the audio level of both inputs simultaneously.


1. Click the **Input Settings**  symbol on either channel.
2. Select **Gang** and click to either gang or ungang channels.

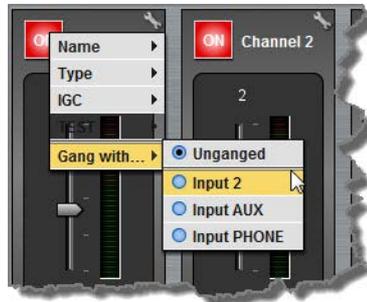

3. When ganged, the two channel sliders move in sync with each other when dragged using a mouse-pointer.



4. Click the **Link** symbol to temporarily disable the ganging function and fine-tune channel audio levels. Click the **Link** symbol again to resume ganging.

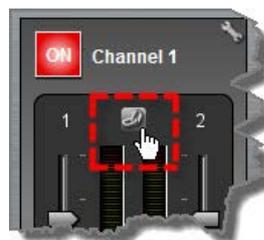


## Setting Analog Audio Levels

Audio levels on the **Input panel** should be set to ensure audio peaks average at the first yellow indications on the PPM meters, which represents +4dBu. These levels should also be checked against the **Input PPM Meters** on the **Master panel**.

## Other Input Controls

Adjust the **IGC** (Intelligent Gain Control) input settings to **Auto**, **Fixed** or **Off** as required.

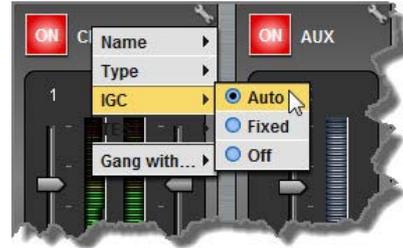

**Important Note:** When the auxiliary input (**AUX IN**) is **On** the default mixer configuration sends audio to all inputs. If you are not using the auxiliary input ensure it is **Off** to avoid additional noise in program audio.

## Locking Input Settings

1. Click the **Lock**  symbol to lock all **Input panel** settings.
2. When locked, the **Input panel** is greyed out and the lock symbol appears in the bottom-left corner. Note: this lock function does not affect the codec front panel controls.

## AES3 Output Sample Rate Configuration

The AES3 output sample rate can be configured using the Java Toolbox Web-GUI.

1. Open the Java Toolbox Web-GUI and click the **Settings**  symbol at the top of the screen to open the **Settings panel**.
2. Click the **Audio tab** and use the drop-down menu to select your preferred **AES Output Clock** setting, then click **Save Settings**.



## 18.5 Configure Mono or Stereo Peer-to-Peer Programs

The **Programs panel** incorporates a wizard to configure a new program and all audio stream settings. Before you configure a new codec program consider if:

- You want your codec to be capable of dialing and answering, dialing only or answering only.
- A backup connection is required.

This section contains instructions for:

1. [Configuring Point-to-Point Programs: Dialing](#)
2. [Configuring a Backup Connection or Auto Reconnect](#)
3. [Configuring the Codec to Answer Connections](#)
4. [Configuring File Playback on Silence Detection](#)

For more information about programs and audio streams within programs see the section titled [About Program Dialing](#). Note: The following instructions will display how to configure a dial and answer program, with a backup connection and USB file playback. If you want the codec to either dial or answer only, select the option and the wizard will automatically display relevant screens to allow you to configure the codec correctly.


### Configuring Peer-to-Peer Programs: Dialing



**Important Notes:** Before you start program configuration please note:


- You cannot edit a program when it is currently loaded in the codec.
- You can [lock a loaded custom program](#) in a codec to ensure the currently loaded program cannot be unloaded by a codec dialing in with a different type of program..
- Some drop-down menus and settings may be greyed out intentionally depending on features available and the transport selected (e.g. IP or ISDN).
- It is possible to save a program at several points throughout the program wizard and use default settings to save configuration time.
- Failover and SmartStream PLUS redundant streaming are not available with SIP or sessionless IP connections.
- POTS is not supported for stereo audio stream connections.
- To learn more about programs see the section titled [About Program Dialing](#).

1. Open the Java Toolbox Web-GUI and click the **Programs**  symbol at the top of the screen to display the **Programs panel**.
2. Click the **New Program** button to open the wizard and:
  - Click in the text box to name the new program.
  - Select **Mono/Stereo Peer-to-Peer**, or if you want to use an existing program as a template, select this option. Then click **Next**.

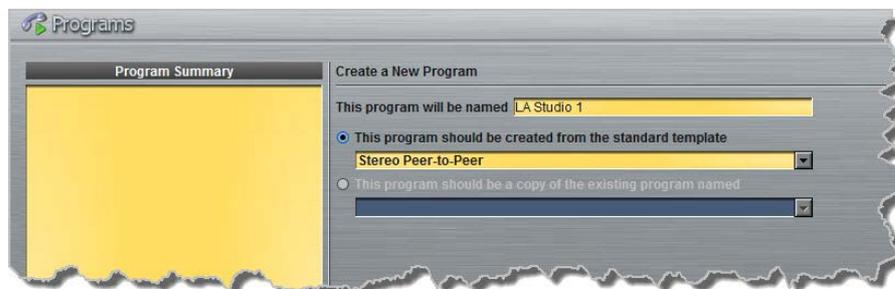

**Important Note:** When you decide to use an existing program as a template, the new program inherits all the settings of the template program and you can adjust these settings as required by continuing through the program wizard.

3. Enter a name for the **Audio Stream** and configure the codec to dial, answer or dial and answer. Then click **Next**.

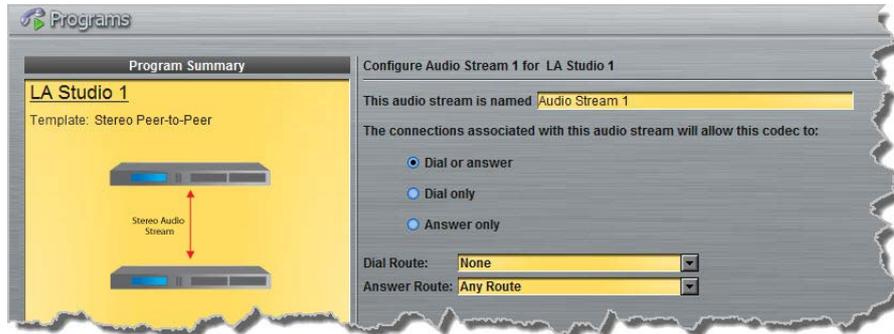


ISDN


POTS

It is also possible to select a **Dial Route** or **Answer Route** if required. When routing multiple audio streams over transports like ISDN or POTS, you can use **Dial** and **Answer Routes** to configure deterministic routing of audio streams. Use of **Dial** and **Answer Routes** is not recommended over IP. See [Configuring ISDN Answering](#) or [Configuring POTS Answering](#) for more information. Use the default settings for IP connections.

4. This audio stream connection in the wizard will allow the codec to dial. Enter the name of the connection in the text box, then click **Next**.

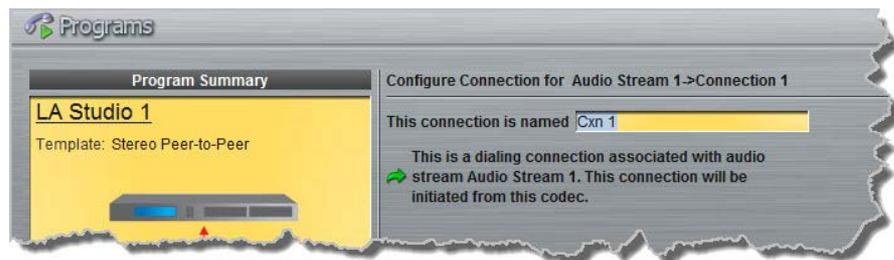

5. Follow the instructions on the right-hand side of the panel to configure the transport settings for the connection, then click **Next**.

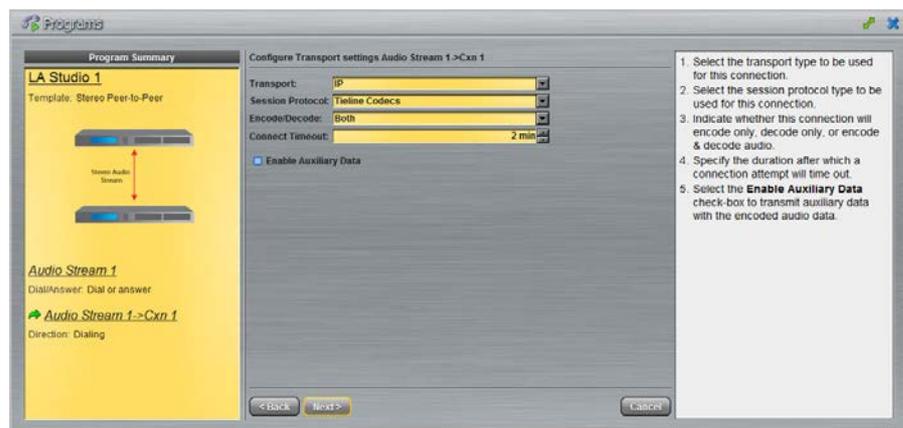

**Important Note:** See [RS232 Data Configuration](#) for detailed information on RS232 data and see [Enabling Relays and RS232 Data](#) for more information on relay operations.

6. Configure destination codec dialing and encoding settings:

IP

For IP connections configure the IP address, ports, and then specify which streaming interface is used to dial this connection, e.g. **Primary** (port **ETH1**) or **Secondary** (port **ETH2**). Note: By default **Any** will select **ETH1** if it is available and **ETH2** if it is unavailable.

Enter Destination Audio Stream 1->Cxn 1

Address: 203.36.205.163

Session Port: 9002

Send Audio Port: 9000

Return Audio Port:  Automatic

Via: Any



**Important Note:** The **Send Audio Port** is the codec port at the remote end of the link to which you are sending audio. The **Return Audio Port** is used by the local codec to receive audio from the remote codec. When **Tieline Codecs** is the **Session Protocol** selected (using Tieline session data), the default port value for the **Return Audio Port** is **Automatic**. Note: **Automatic** indicates that the codec will arbitrarily allocate the return port value and send this information to the codec to which you are dialing. Click to deselect the **Automatic** checkbox and change this setting. When you select **Sessionless** as the **Session Protocol**, the **Session Port** is not configurable and you can manually configure the **Send Audio Port** and **Return Audio Port**.

Click **Save Program** to save the program with the default algorithm, jitter and FEC settings which are physically entered in the codec. Alternatively, click **Next** to specify individual algorithm, jitter buffer and FEC settings and configure a backup connection or SmartStream PLUS for this audio stream (recommended).

Click the drop-down arrows on the right-hand side of each text box to adjust the **Encoding**, **Sample rate** and **Bit rate** options.

Transmitting

Encoding: Music Stereo

Sample rate: 32 kHz

Bit rate: 64 kbps

Receiving  Use Tx

Encoding: Music Stereo

Sample rate: 32 kHz

Bit rate: 64 kbps

For IP connections click to configure:

- **Auto Jitter Adapt** and the preferred auto jitter setting using the drop-down arrow for **Buffer priority**, or

- **Fixed Buffer Level** and enter the **Jitter Depth**, which must be between 12ms and 5000ms depending on the algorithm you select.
- **Local** and **Remote FEC** settings if required.

Buffer type:  Auto Jitter Adapt  
 Fixed Buffer Level

Buffer priority: Best Compromise

Local FEC: Off

Remote FEC: Off

Click the check-box to select **Enable Redundant SmartStream PLUS** and configure dual Ethernet SmartStream IP streaming. Alternatively, click **Next** to configure **Auto Reconnect** or a backup connection, whereby the alternative connection is dialed if the primary connection fails.

By default, primary IP streaming is via **ETH1**. To achieve the maximum level of redundancy select **Secondary** to configure redundant streaming from the secondary IP port **ETH2**. The redundant stream uses **Send Audio Port 9001** by default and the **Return Audio Port** allocated is **Automatic**. Note: **Automatic** indicates that the codec will arbitrarily allocate the return port value and send this information to the codec to which you are dialing.

**Enable Redundant SmartStream PLUS**

Address: 203.36.205.163

Session Port: 9002

Send Audio Port: 9001

Return Audio Port:  Automatic

Via: Secondary



**Important Note:** Dual SmartStream PLUS redundant streaming over both Ethernet ports mitigates lost packets on either link and will provide IP network backup if an IP link is lost. To learn more about SmartStream PLUS redundant IP streaming visit <http://www.tieline.com/Transports/SmartStream-IP>

## ISDN

For ISDN connections enter a number and select which B channel to use. Select the **Enable bonded connections** check-box to configure and bond multiple B channels.

Enter Destination Audio Stream 1->Cxn 1

Number: 55555555

Via: Module 1, B-Any

Enable bonded connections

Number: 55555556

Via: Module 1, B-Any

Next, click **Save Program** to save the program with default algorithm settings, or click **Next** to specify a different algorithm and configure a backup connection if required. (recommended).

Transmitting

Encoding: Music Stereo

Sample rate: 32 kHz

Bit rate: 64 kbps

Receiving  Use Tx

Encoding: Music Stereo

Sample rate: 32 kHz

Bit rate: 64 kbps

Dialing settings for this ISDN audio stream are now complete.

## POTS

Select **POTS Codec** in the **Mode** drop-down menu to encode/decode using POTS, or select **Analog Phone** to configure a standard analog phone call, then click **Next**.

Configure Transport settings Audio Stream 1->Cxn 1

Transport: POTS

Mode: POTS Codec

Session Protocol: Tipline Codecs

Encode/Decode: Both

Connect Timeout: 2 min

Next, enter the phone number of the codec or device you want to dial. When multiple POTS modules are installed, click the **Via** drop-down menu and select **Module 1** or **Module 2** to specify which POTS module will dial. Next, click **Save Program** to save the program with default settings, or click **Next** to specify algorithm settings and configure a backup connection if required (recommended).

Enter Destination Audio Stream 1->Cxn 1

Number: 55555555

Via: Any

Dialing settings for this POTS audio stream are now complete.

## Configuring a Backup Connection or Auto Reconnect

At this point in the wizard you can choose to configure **Auto Reconnect** or create a backup connection for the audio stream you are configuring.



**Important Note:** When **Auto Reconnect** is enabled, the dialing codec will continue to attempt a connection with the remote codec until **Disconnect** is pressed either on the dialing codec's keypad, or in the Web-GUI.

To configure a backup connection:

1. Click to select the check-box for **Create a Backup Connection**. Adjust the parameters and click **Next**.

Programs

Program Summary

Address: 203.36.205.163  
Session Port: 9002  
Audio Port: 9000  
Via: Any  
Tx Encoding: Music Stereo  
Tx Sample Rate: 32 kHz  
Tx Bit Rate: 64 kbps  
Rx Encoding: Music Stereo  
Rx Sample Rate: 32 kHz  
Rx Bit Rate: 64 kbps  
Buffer Type: Auto Jitter Adapt  
Priority: Best Compromise  
Local FEC: Off  
Remote FEC: Off  
Redundant: Enabled  
Address: 203.36.205.163  
Session Port: 9002  
Audio Port: 9001  
Via: Any

Configure Backup & Auto Reconnect Audio Stream 1->Cxn 1

Enable Auto Reconnect

Create a Backup Connection

Backup Parameters

Threshold: 5%

Time Frame: 5000 ms

Keep Alive: 5 sec

Automatic Resume

Stable Time: 30 sec

Max Retries: 10

Time Frame: 10 min

< Back Next > Cancel

1. Deselect **Create a Backup Connection** to disable Backup.
2. Enter the Lost Data Threshold percentage.
3. Enter the Lost Data Time Frame in milliseconds (500 - 30000).
4. Enter the Keep Alive Time in seconds (3 - 30) before fail over.
5. Select if the connection should support Automatic Resume.
6. Enter the Automatic Resume Stable Time in seconds (15 - 60).
7. Enter the number of Maximum Connection Retries (1 - 10).
8. Enter the Automatic Resume Time Frame for retries in minutes (10 - 60).

Note: The explanations within the following table can be used to assist with backup connection configuration.

	Screen Display	Description
1	Threshold	The percentage of lost data measured during a given time frame
2	Time Frame	The time frame against which lost data is measured
3	Keep Alive	The keep connection alive time before failing over to a backup connection; Tieline RTP pings every second to confirm connectivity
4	Automatic Resume	Select the check-box to configure fail back to a higher priority connection
5	Stable Time	The amount of time a primary connection must remain stable before attempting to fail back from the backup connection
6	Maximum Retries	The maximum number of fail back retries a codec can try before ending fail back attempts
7	Time Frame	The time frame used to measure the number of fail back retries attempted

2. Enter a name for the backup connection and click **Next**.



3. Click **Next** to continue through the wizard and configure the backup connection in a similar manner to how you configured the primary connection.

## Configuring the Codec to Answer Connections

The codec is capable of being configured to accept calls via different transports (e.g. IP and ISDN), or to accept calls using different audio ports. If you are configuring the codec to allow it to answer one or more incoming audio stream connections:

1. Enter a name for the answering connection and click **Next**.



2. Configure the transport settings:

**IP**

For IP select the **Session Protocol** and **Return Audio Port**, then click **Next** to configure jitter buffer and FEC settings.



Click to configure:

- **Auto Jitter Adapt** and the preferred auto jitter setting using the drop-down arrow for Buffer Priority, or
- **Fixed Buffer Level** and enter the **Jitter Depth**, which must be between 12ms and 5000ms depending on the algorithm you select.
- **Local** and **Remote FEC** settings if required.

ISDN

For ISDN, settings are determined by ISDN module answering settings. For more details see [Configuring ISDN Answering](#).

POTS


For POTS, settings are determined by POTS module answering settings. For more details see [Configuring POTS Answering](#).

3. After configuring all settings there are 3 options:


- i. If you want to create another answering connection, select the check-box for **Create another answering connection** and continue through the wizard.
- ii. Click **Save Program** to save the program at this point.
- iii. Click **Next** to configure file playback using silence detection.

## Configuring File Playback on Silence Detection

1. Select the **Enable File Playback on silence detection** check-box to configure the codec to play back audio from a file via a drive attached to the USB port.

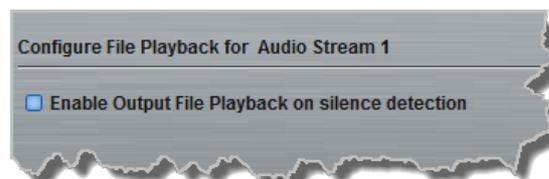

2. Specify the parameters as outlined in the instructions on the right-hand pane of the panel, then click **Save Program** to complete program configuration.

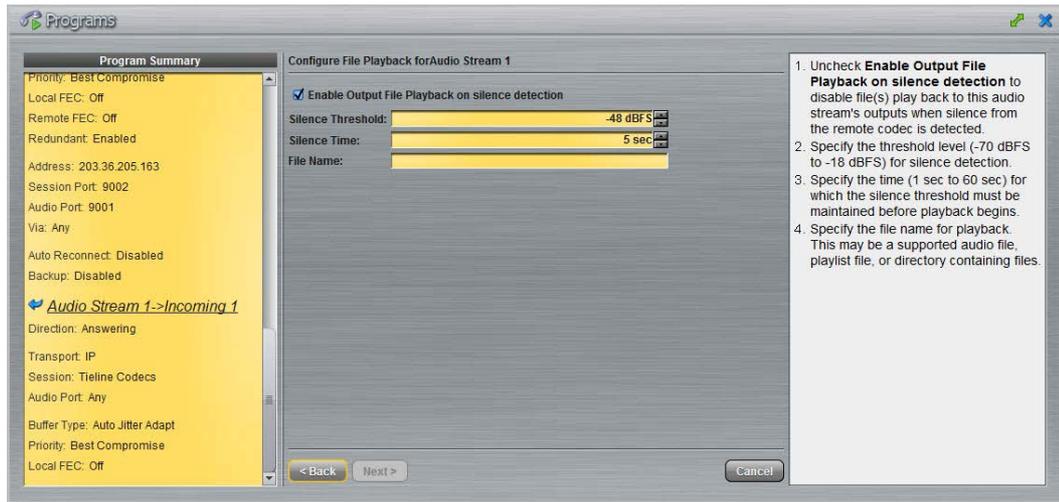

### Important Notes for File Playback:

- Ensure MP3 recordings used are not variable bit rate files.
- File playback audio is sent directly to the codec outputs and therefore IGC is not available. When you create your MP2 or MP3 files ensure the audio levels match the audio reference level of your codec and that peaks average at the correct levels.
- USB backup audio is only sent to the outputs of the local codec to which a USB drive is attached. USB file audio is not sent to encoders and cannot be transmitted via an audio stream to another codec.
- The USB drive can be inserted or removed at any time as long as the codec is not already playing audio in failover mode. Removing the USB drive while audio is playing from it will result in poor audio quality and should be avoided. If it is removed accidentally you must reboot the codec to ensure USB failover will work in future.
- If you enter a single file name ensure you add the file extension, e.g. "test.mp3", or the file will not play back.
- If you enter a directory name, all the files within the directory will be played back. We recommend you save all audio files as a playlist and link to this if you want them to play out sequentially. Please note that "M3U" is the playlist file format supported by the codec.
- File playback will occur automatically if the silence threshold parameters are breached; if the codec is not connected for any reason file playback will commence. To stop file playback open the **Master panel** in the Web-GUI, click to select the file playback connection, then click **Disconnect**.



3. Click **Finish** to exit the wizard.



4. The newly created program will be displayed in the left pane within the **Programs panel** and in the **Master panel**. [Select and connect audio streams](#) in a program using the **Master panel**, or [dial the program manually](#) using the codec front panel.

## 18.6 Configure Multicast Client Programs




**Important Notes:** Before you commence program configuration please note:

- Ensure all connection related settings like the port, algorithm, bit rate (etc) match on both multicast server and client programs or they will not connect successfully.
- You cannot edit a program when it is currently loaded in the codec.
- You can [lock a loaded custom program](#) in a codec to ensure the currently loaded program cannot be unloaded by a codec dialing in with a different program type.
- Some drop-down menus and settings may be greyed out intentionally depending on features available.
- It is possible to save a program at several points throughout the program wizard and use default settings to save configuration time.
- To learn more about programs see the section titled [About Program Dialing](#).
- Always dial the multicast server codec connection first before connecting multicast client codecs.
- Multicast client codecs will display return link quality (LQ) only. The **Return** reading represents the audio being downloaded from the network locally. Multicast server codecs do not display LQ readings.
- The default UDP audio port setting is 9000 for the first multicast, 9010 for the second multicast and 9020 for the third multicast. The client and server port settings must match to receive an audio stream. E.g. if a client codec wishes to receive multicast audio stream 2 then it must use audio port 9010.
- Forward Error Correction (FEC) is not available for multicast connections.
- Use firmware higher than 2.8.xx in the Bridge-IT, Genie and Merlin families of codecs to enable auxiliary data.
  - It is not possible to connect to a G3 codec and receive multicast IP audio streams.
  - To copy multicast client programs onto multiple codecs see [Backup and Restore Functions](#).

### Configuring Multicast Client Programs

1. Open the Java Toolbox Web-GUI and click the **Programs**  symbol at the top of the screen to display the **Programs panel**.
2. Click the **New Program** button to open the wizard and:
  - Click in the text box to name the new program.
  - Select **Multicast Client** to configure a multicast program, or if you want to use an existing program as a template, select this option. Then click **Next**.

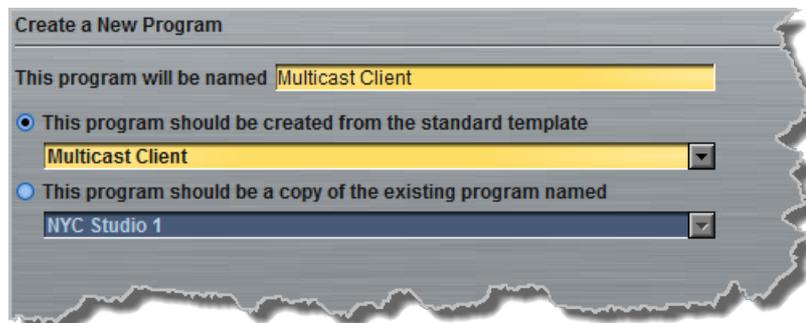

**Important Notes:** When you decide to use an existing program as a template, the new

program inherits all the settings of the template program and you can adjust these settings as required by continuing through the program wizard.

3. Enter a name for the **Audio Stream**, then click **Next**.



4. This audio stream connection in the wizard will allow the codec to dial. Enter the name of the connection in the text box, then click **Next**.



5. Follow the instructions on the right-hand side of the panel to configure the transport settings for the connection, then click **Next**. Note: select **UDP/IP +RTP** for RFC compliant streaming.



**Important Note:** Bidirectional auxiliary IP data is available on one audio stream when multicast dialing programs. When auxiliary data is enabled on one stream the option is greyed out for other audio streams in the program wizard. See [RS232 Data Configuration](#) for detailed information on RS232 data and see [Enabling Relays and RS232 Data](#) for more information on relay operations.

6. Configure the multicast IP address and audio port (the same multicast address and port must be used for both the server and client programs), then specify which IP streaming interface is used to dial this connection, e.g. **Primary** (port **ETH1**) or **Secondary** (port **ETH2**), then click **Next**. Note: By default **Any** will select **ETH1** if it is available and **ETH2** if it is unavailable.

Enter Destination Multicast Client Audio Stream 1->Multicast Client Cxn 1

Address: 224.0.255.255

Return Audio Port: 9000  Automatic

Via: Any

7. Click the drop-down arrows on the right-hand side of each text box to select the **Encoding**, **Sample rate**, **Bit rate** or **Sample size** options. Click **Next** to continue.

Select Encodings Multicast Client Audio Stream 1->Multicast Client Cxn 1

Receiving

Encoding: Music Stereo

Sample rate: 32 kHz

Bit rate: 64 kbps

8. Click to configure:
- **Auto Jitter Adapt** and the preferred auto jitter setting using the drop-down arrow for **Buffer Priority**, or
  - **Fixed Buffer Level** and enter the **Jitter Depth**, which must be between 12ms and 5000ms depending on the algorithm you select.

Configure SmartStream Multicast Client Audio Stream 1->Multicast Client Cxn 1

Buffer type:  Auto Jitter Adapt  Fixed Buffer Level

Buffer priority: Best Compromise



**Important Notes:** Automatic or fixed jitter buffer settings can be adjusted on individual client codecs as required. There is no jitter buffer setting on the server codec because it never receives audio packets.

9. Select the **Enable File Playback on silence detection** check-box to configure the codec to play back audio from a file via a drive attached to the USB port.

Configure File Playback for Multicast Client Audio Stream 1

Enable Output File Playback on silence detection

10. Click **Save Program** to complete configuration of the program.
11. Configure multicast server and multicast client programs and load all codecs with the appropriate program. [Select and connect audio streams](#) in a program using the **Master panel**, or

[dial the program manually](#) using the codec front panel. Dial the multicast server program connection first and then connect multicast client codec programs to begin receiving multicast audio packets.

## 18.7 Configure SIP Settings

The codec is fully EBU N/ACIP Tech 3326 compliant when connecting using SIP (Session Initiation Protocol) to other brands of IP codecs.

### About SIP

SIP provides superior interoperability between different brands of codecs due to its standardized protocols for connecting devices and is intended to be used when connecting Tieline codecs to non-Tieline devices. Devices primarily use SIP to dial another device's SIP address and find its location with a minimum of fuss. This task is usually performed by SIP servers, which communicate between SIP-compliant devices to set up a call.

When connecting two devices, SDP performs similar tasks to Tieline's proprietary session data, which is used to configure all non-SIP IP connections. There are two very distinct parts to a call when dialing over IP. The initial stage is the call setup stage and this is what SIP is used for. The second stage is when data transference occurs and this is left to the other protocols used by a device (i.e. using UDP to send audio data).

All the mandatory EBU N/ACIP 3326 algorithms are supported (G.711, G.722, MPEG-1 Layer 2 and 16 bit PCM), as well as optional algorithms including LC- AAC, HE-AAC and aptX Enhanced. The default algorithm selected when connecting using SIP is G.711.



#### Important Notes:

- Each codec should be registered to a different SIP server account to avoid connection conflicts.
- SIP account registration can only be configured via Ethernet port 1.
- SIP dialing is only supported over point-to-point connections, not multi-unicast connections.
- Tieline G3 codecs do not support connections using AAC and will default to MPEG Layer 2 if an incoming call is programmed to use this algorithm.
- Failover and SmartStream PLUS redundant streaming are not available with SIP connections.
- When connecting to a Tieline G3 codec using SIP you need to manually select the G3 audio reference level in the codec. To do this select **SETTINGS** **> Audio > Ref Level > Tieline G3**. In addition, select the following on the G3 codec prior to dialing.
  - Select either a mono or stereo profile
  - Select **[Menu] > [Configuration] > [IP1 Setup] > [Session Type] > [SIP]**
  - Select **[Menu] > [Configuration] > [IP1 Setup] > [Algorithm] > [G711/G722 or MP2]**

### SIP Server Connections: Getting Started

Registering codecs for SIP connectivity is simple. First, choose the SIP server that you wish to register your codec with. On a LAN this may be your own server, or it could be one of the many internet servers available. We recommend that you use your own SIP server and configure it to use G.711, G.722, MP2 and AAC algorithms. This is because most internet SIP servers are for VoIP phones and are only configured for G.711 and GSM algorithms.

When you register an account with a SIP server you will be provided with:

- The SIP server IP address.
- A username (often the same as a SIP number).
- A password.
- Domain details.
- Realm details (sometimes).

## Program the Codec for SIP using the Java Web-GUI

Use the Java Toolbox Web-GUI to configure SIP account registration details into your codec. Once these details have been entered into the codec, each time it is connected to a public IP address it will contact the SIP server automatically to acknowledge its presence over a wide area network.

1. Connect your codec to a LAN connection with a public IP address, then login to the Java Toolbox Web-GUI and click the **Settings**  symbol at the top of the screen to display the **Settings panel**.
2. Click the **SIP** button in the top-left corner of the **System panel**.
3. Enter the account details into the relevant text boxes.
4. Enter the **Registration Timeout** (this shouldn't need to be adjusted from the default setting).
5. Click to select **Activate Account** and click the **Save Settings** button to create the account in the codec. **Settings Saved** is displayed in the bottom-left corner of the **Settings panel** if the account details are saved successfully.



6. Navigate to **SETTINGS**  > **SIP** > **Accounts** to verify that the account has been registered to the SIP server. The registration symbol  appears when it is activated successfully.



**Important Notes:** Some ISPs may block SIP traffic over UDP port 5060.

## 18.8 Configure Peer-to-Peer SIP Programs


SIP programs are like a normal IP program to configure, with two small differences; entering a SIP address and selecting SIP as the **Session Protocol**.



**Important Notes:** Before you start program configuration please note:

- You cannot edit a program when it is currently loaded in the codec.
- Some drop-down menus and settings may be greyed out intentionally depending on features available.
- Failover and SmartStream PLUS redundant streaming are not available with SIP connections.
- To learn more about programs see the section titled [About Program Dialing](#).

1. Open the Java Toolbox Web-GUI and click the **Programs**  symbol at the top of the screen to display the **Programs panel**.
2. Click the **New Program** button to open the wizard and:
  - Click in the **Program Name** text box to name the new program.
  - Select **Mono/Stereo Peer-to-Peer**, or if you want to use an existing program as a template, select this option. Then click **Next**.

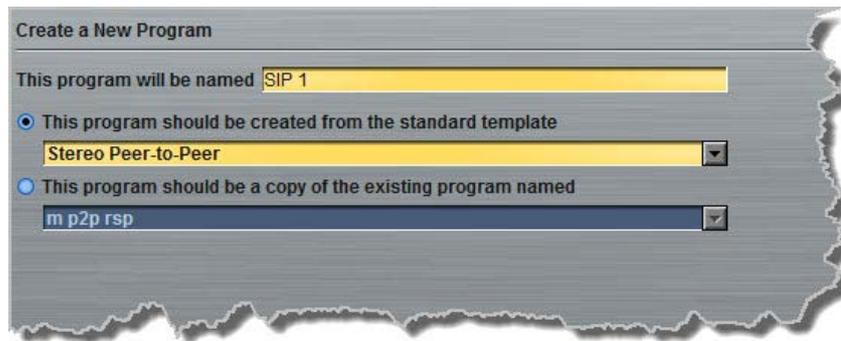

**Important Notes:** When you choose to use an existing program as a template, the new program inherits all the settings of the template program and you can adjust these settings as required by continuing through the program wizard.

3. Enter a name for the **Audio Stream** and configure the codec to dial, answer or dial and answer. Then click **Next**.

Note: The following example will display how to configure a dial and answer program. If you want the codec to either dial or answer only, select the option and the wizard will automatically display screens to allow you to configure the codec correctly.

Configure Audio Stream 1 for SIP 1

This audio stream is named **Audio Stream 1**

The connections associated with this audio stream will allow this codec to:

Dial or answer

Dial only

Answer only

Dial Route: **None**

Answer Route: **Any Route**

4. This audio stream connection in the wizard will allow the codec to dial. Enter the name of the connection in the text box, then click **Next**.

Configure Connection for Audio Stream 1->Connection 1

This connection is named **STL Dial Cxn 1**

This is a dialing connection associated with audio stream **Audio Stream 1**. This connection will be initiated from this codec.

5. Follow the instructions on the right-hand side of the panel to configure the transport settings for the connection: Ensure that you select:
- **IP** as the **Transport**.
  - **SIP** from the **Session Protocol** menu option.

Then click **Next**.

Configure Transport settings Audio Stream 1->STL Dial Cxn 1

Transport: **IP**

Session Protocol: **SIP**

Encode/Decode: **Both**

Connect Timeout: **2 min**

6. Configure the destination codec **Address**, then specify the network interface used to dial the connection, e.g. **Primary** (Ethernet port 1).

At this point you can click **Save Program** and save the program with default algorithm and jitter settings. Alternatively, click **Next** to confirm and specify algorithm and jitter settings for this connection and configure backup audio settings (recommended).

Enter Destination Audio Stream 1->STL Dial Cxn 1


Address: **TielineTest@sip.iptel.org**

Via: **Any**

**Important Notes:**

- If your codec is registered with same SIP registrar as the destination codec then you only need to enter the SIP user name to dial successfully.
- The default UDP audio port when using SIP for a peer-to-peer connection is 5004 in Tieline codecs. To contact a codec that is behind a firewall or NAT-enabled router, it is essential that this and all other relevant ports are open and forwarded to the other device.

7. Click the drop-down arrows on the right-hand side of each active drop-down menu to adjust the **Encoding**, **Sample rate** or **Bit rate** parameters. Click Next to continue.

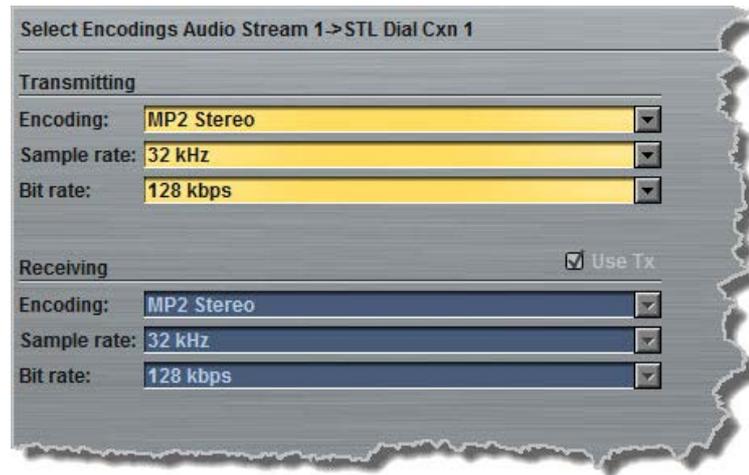

Click to configure:

- **Auto Jitter Adapt** and the preferred auto jitter setting using the drop-down arrow for **Buffer Priority**, or
- **Fixed Buffer Level** and enter the **Jitter Depth**, which must be between 12ms and 5000 ms depending on the algorithm you select.



Click **Save Program** to save all settings, or click **Next** to configure **Auto Reconnect**. If you click **Save Program**, select the check-box if you want to connect the program immediately, then click **Finish**.




- The newly created program will be displayed in the **Programs panel** and in the **Master panel**. Dial the program by loading and connecting using the **Master panel**, or [dial the program manually](#) using the codec front panel.

## 18.9 Dial and Disconnect a Program

### Connecting a Program


- Click to select the program you want to load from the **Programs list** in the **Master panel**.

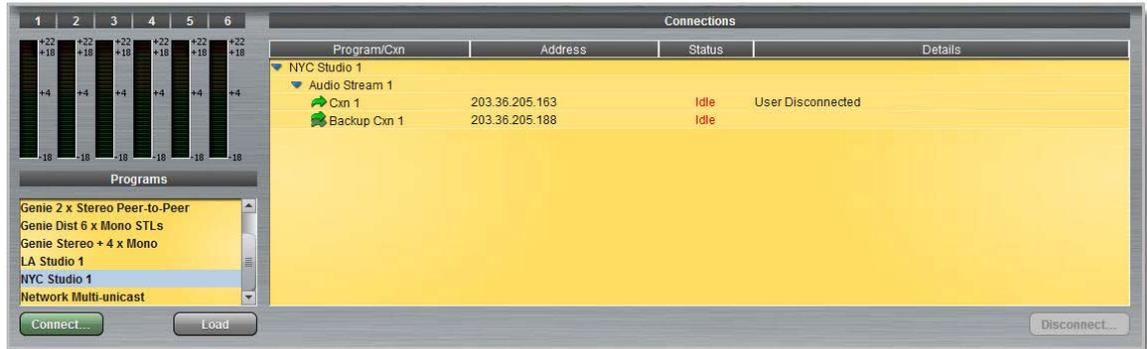

- Click **Connect** to load the program and connect all audio streams.

### Disconnecting a Program

- Click to highlight the audio stream in the **Connections** pane of the **Master panel**.

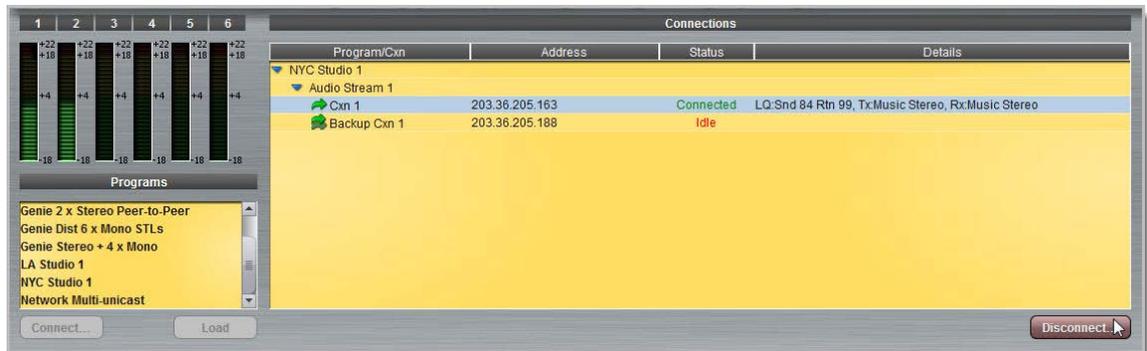

- Click **Disconnect** to end the connection.


## 18.10 View/Edit/Delete Programs



**Important Notes:** You cannot edit or delete a program when it is currently loaded in the codec; ensure you have unloaded a program prior to editing the current configuration.

To view configuration settings for an existing program, or edit settings:

- Open the Java Toolbox Web-GUI and click the **Programs** symbol at the top of the screen to display the **Programs panel**.
- Click to select a program in the left-hand pane.

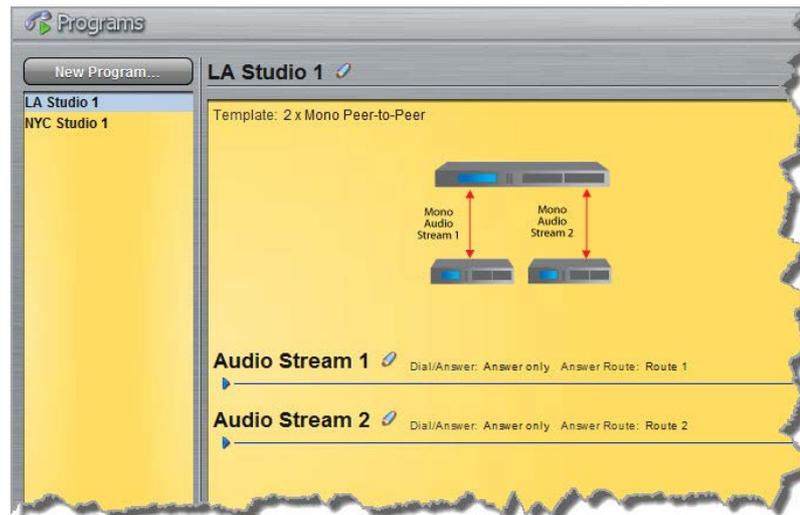

3. Click the blue arrow  to expand audio stream information and click the **Edit** symbol  to adjust program settings.
4. The program wizard will open at the relevant point to facilitate editing of connection parameters. Click **Save Program** to store settings.


## Deleting Programs

There are two ways to delete a program.

1. Ensure the program you want to delete is not currently loaded in the codec.
2. Click to select a program listed on the left hand side of the **Programs panel** and then right-click to display menu options.



3. Select and click **Delete Program**.
4. Click **Yes** in the confirmation dialog.

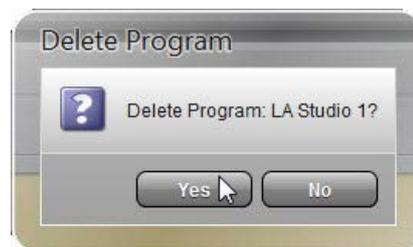

5. Alternatively, click **Delete Program** next to the program name in the top-right corner of the **Programs panel**.



## 18.11 Edit File Playback Settings

1. Click the **Edit** symbol  to adjust **File Playback** settings displayed in the panel.



2. Adjust the parameters and click **Save Program** to store the new settings.


## 18.12 Reset Factory Default Settings

There are several options which allow you to restore factory default settings within the codec. See [Reset and Restore Factory Defaults](#) for more details on each option.

1. Open the Web-GUI and click the **Settings**  symbol at the top of the screen to display the **Settings** panel.
2. Click the **Reset/Restore** button at the top of the **Settings** panel.



3. Click one of the four reset options available.

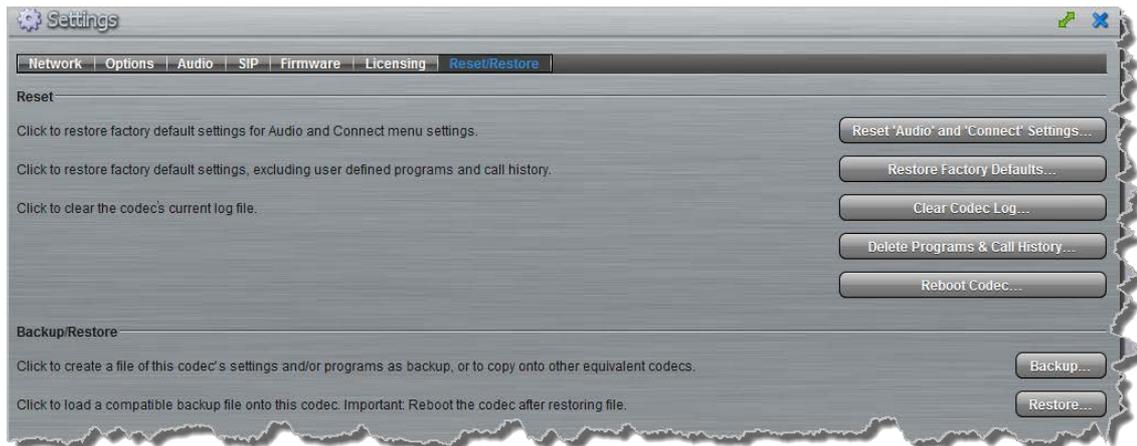

4. A confirmation dialog appears for each option, click **Yes** to proceed or **No** to cancel the reset function.



## 18.13 Backup and Restore Functions

The Java Toolbox Web-GUI can be used to backup and restore codec settings, including:


- Programs containing a variety of connection settings.
- All system settings that have been adjusted to change the factory default codec settings (current runtime settings).

Files can also be used to copy configurations onto other similar codecs. Programs are essentially connection profiles that may include:


- Program, audio stream and connection names.
- IP address, port, algorithm, jitter buffer, FEC and bit rate settings (etc.) for audio stream connections.

### Creating Backup Files

1. Open the Java Toolbox Web-GUI and click the **Settings**  symbol at the top of the screen to display the **Settings panel**.
2. Click the **Reset/Restore** button at the top of the **Settings panel**.

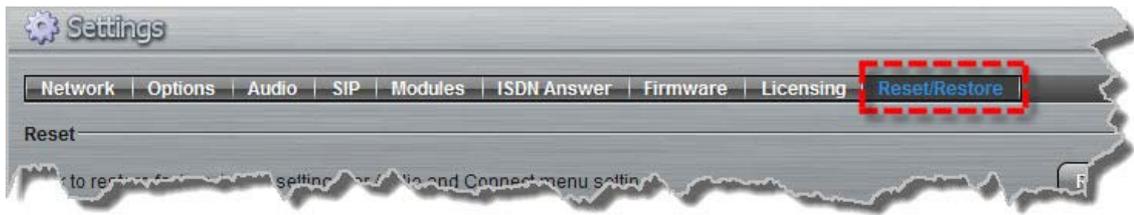

3. Click **Backup**.

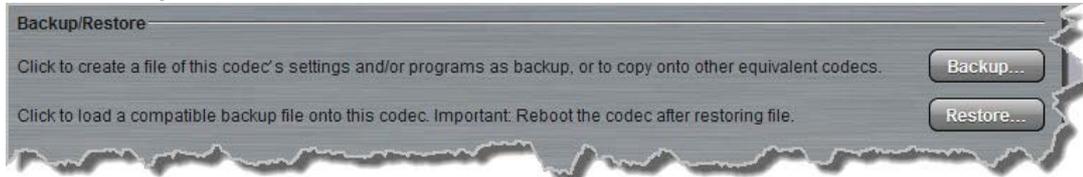


4. Use your mouse-pointer to click and select the check boxes to confirm your backup requirements, then click **Backup**.




5. Click **Save** and select a location on your PC to save the configuration file.

## Restoring Configuration File Settings

1. Open the Java Toolbox Web-GUI and click the **Settings**  symbol at the top of the screen to display the **Settings** panel.
2. Click the **Reset/Restore** button at the top of the **Settings** panel.

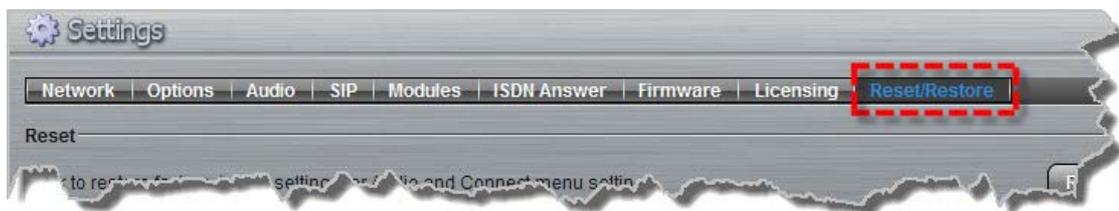

3. Click **Restore**.

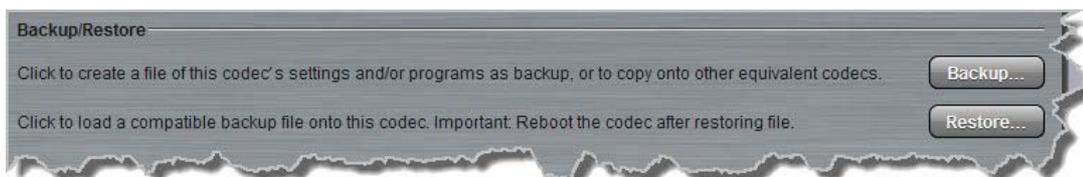


4. Navigate to the configuration file on your PC that you want to load, then click **Open**.
5. Use your mouse-pointer to click and select the check boxes for restoring items. For example,

you could select the **Include programs** check-box and deselect the **Include system** check-box if you are only copying programs onto codecs.



6. Click **Restore** to copy the configuration file settings onto the codec; confirmation of successful file restoration is provided.

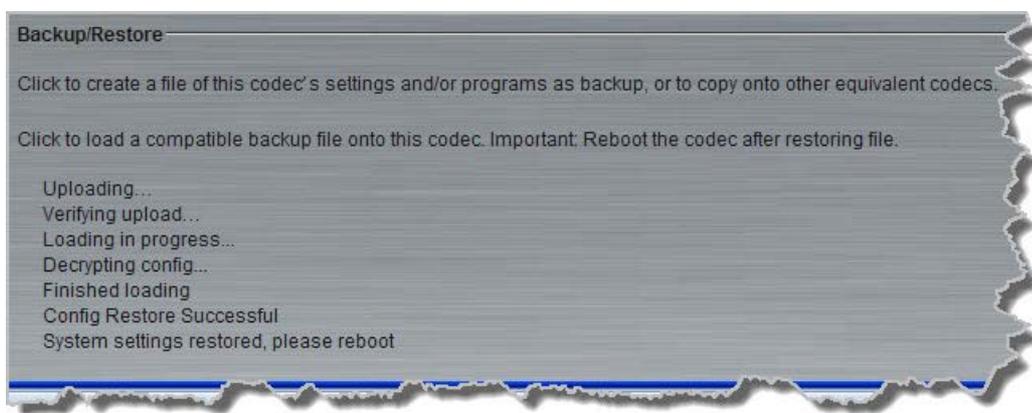


Note: The codec will automatically reboot to ensure the restored configuration takes effect in the codec.

## 18.14 Lock or Unlock Programs

It is possible to lock a loaded custom program in a codec to ensure the currently loaded program type, e.g. mono, cannot be unloaded by a codec dialing in with a different program type, e.g. stereo. For example, if you require the codec at the studio to always connect in mono, simply load and lock a mono program in the codec. Generally programs will be up or down-mixed by the answering codec to match the loaded program type. In some situations incompatible program types will be rejected.

1. Open the Java Toolbox Web-GUI and click the **Settings**  symbol at the top of the screen to display the **Settings panel**.
2. Click the **Options** button at the top of the **Settings panel**.
3. Click the **Lock Loaded User Program** check-box to lock or unlock a user program in the codec.

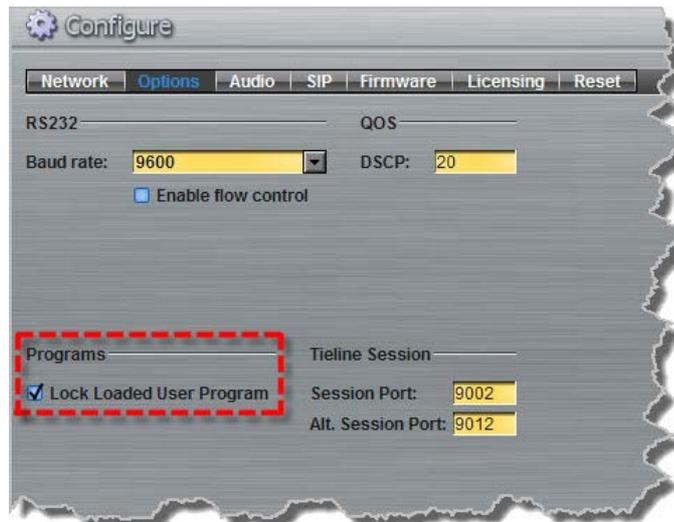

4. Click **Save Settings** to save the new configuration.



#### Important Note:

- It is only possible to lock custom programs in a codec.
- If **Lock Program** is enabled and you load a new custom program in the codec, **Lock Program** remains enabled and locks the most recently loaded custom program.
- A red **Padlock** symbol appears in the **Status** section of the **Master panel** to indicate a program is locked in the codec.

## 18.15 Configuring SNMP in the Codec

The codec supports Simple Network Management Protocol (SNMP ) for managing devices on IP networks. There are two elements to configuring SNMP in your codec:

1. Configure SNMP Device settings in your codec.
2. Configure SNMP Traps via the **Alarms Panel** in the Java Toolbox Web-GUI (see [SNMP Trap Configuration](#) in Configuring Alarms, or to configure using the codec front panel see [Configuring SNMP Settings](#)).


### Description of SNMP Settings in the Codec

Features	Operation Button Descriptions
<b>Codec Name</b>	A user-specified alphanumeric identifier which may be used by third-party SNMP software to identify a device. The device name corresponds to the ".iso.org.dod.internet.mgmt.mib-2.system.sysName" SNMP attribute and is completely independent of DNS, NIS, WINS or other device naming and identification schemes, though convention is to use the device's fully-qualified domain name.
<b>Codec Location</b>	A user-specified alphanumeric string which may be used by third-party SNMP software to identify a device. Device location corresponds to the ".iso.org.dod.internet.mgmt.mib-2.system.sysLocation" SNMP attribute.
<b>Contact</b>	A text identifier for the contact person for this managed node, together with information on how to contact this person.
<b>R/O Community</b>	SNMP provides two types of access, namely Read-Only access and Read-Write access. The R/O Community identifier allows Read Only

	level access.
<b>R/W Community</b>	The R/W Community identifier allows Read/Write level access.

## Configuring SNMP Settings in the Codec

1. Open the Java Toolbox Web-GUI and click the **Settings**  symbol at the top of the screen to display the **Settings panel**.
2. Click the **Options** button at the top of the **Settings panel**.
3. Click in the text boxes to enter SNMP configuration settings.

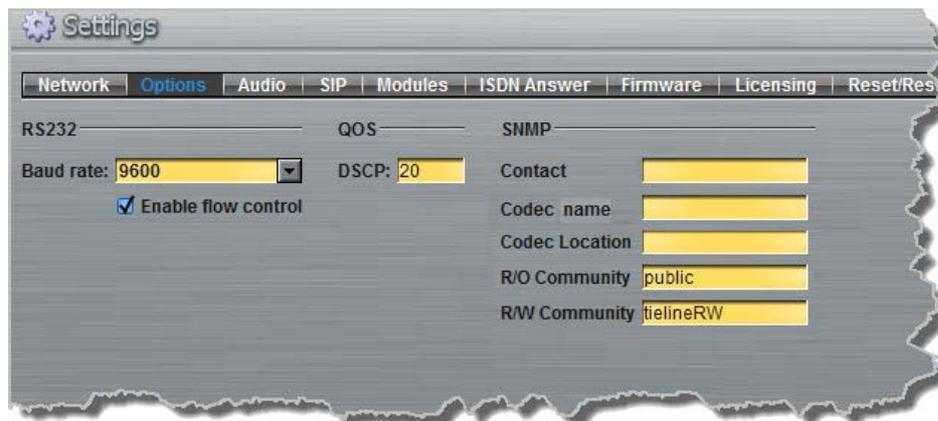

4. Click the **Save Settings** button to save the new settings.

## MIB Files for SNMP Configuration

Management Information Base (MIB) files are required for SNMP applications to interact with your Tieline codec and interpret SNMP data. The codec supports SNMPv1 and SNMPv2 MIB protocols. The required MIB files can be downloaded from the codec using the following link in a PC web browser connected to the same network as your codec:

- [http://<YOUR\\_CODEC\\_ADDRESS>/mibs/tieline-mibs.zip](http://<YOUR_CODEC_ADDRESS>/mibs/tieline-mibs.zip)

Save the .zip file to your PC and import the contents into the MIB browser you use to manage SNMP-enabled network devices.



**Important Note:** The codec supports the attributes specified in the MIB-II standard. Please verify that your SNMP software contains the required files as specified in [RFC 1213](#).

## 18.16 Download Logs

The codec is capable of providing diagnostic information via user logs, which can either be sent to Tieline support, or downloaded for user diagnostics.

### Procedure for Sending Logs to Tieline

1. Open the Java Toolbox Web-GUI and click the **Help**  symbol at the top of the screen to display the **Help panel**.
2. Click **Download Logs**.



3. Save the file to your computer and then send it as a .zip file to Tieline support via [support@tieline.com](mailto:support@tieline.com)

### Download Event Logs

---

Event logs can be downloaded from the codec and viewed using any text editor, e.g. Microsoft® Word.

1. Open the Java Toolbox Web-GUI and click the **Help**  symbol at the top of the screen to display the **Help panel**.
2. Click **Download Event Log** and select a location to save the log file.



### Clearing Logs

---

This option should only be used if instructed to by Tieline support staff. To clear all event and other logs in the codec via the front panel see the [Reset and Restore Factory Default Settings](#) section of this manual, or see [Reset Factory Default Settings](#) to clear recent log history using the Web-GUI.

## 18.17 Configuring Alarms

Click the **Alarm symbol**  at the top of the Java Toolbox Web-GUI to view and configure a range of alarms, which can provide alerts as required.

### Alarm Types

---

Click **Alarm Types** to display the alarm overview pane within the **Alarms Panel**.




The following **System** and **Audio** alarms are available:

Alarm	Alarm Type	Explanation
PSU Failure	System	Raises an alarm if one or both PSUs fail
Chassis Fan Failure	System	Raises an alarm if the internal fan fails
Temperature Too High	System	Raises an alarm if the temperature is too high
Input Silence	Audio	Raises an alarm if input audio is lost (according to preconfigured silence detection threshold parameters)
AES Input Lost	Audio	Raises an alarm if the AES input signal is lost
AES Reference Lost	Audio	Raises an alarm if the AES reference clock signal is lost

## Configuring an Alarm's Severity Level

Codec alarms can be configured for three different severity levels:

1. Click an alarm in the **Alarm Type** pane to highlight it.

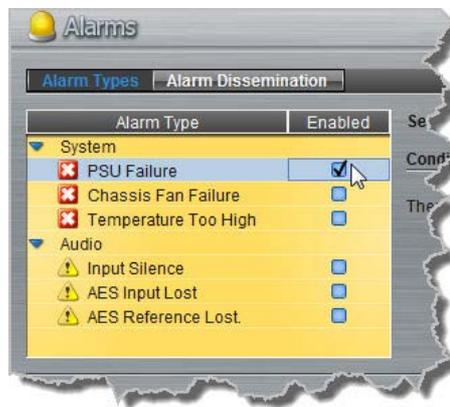

2. Click the **Severity** drop-down menu and select the preferred severity level.




3. Perform this for each alarm you want to configure and then click **Apply** or **OK** to save settings.

## Enabling Alarms

To enable and disable alarms:

1. Click the **Enabled** check-box to toggle enabling and disabling of an alarm.

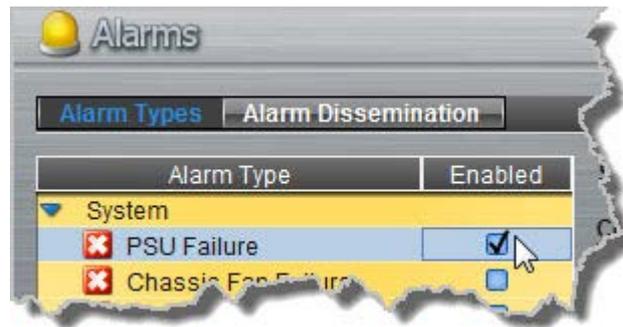


2. Click **Apply** or **OK** to save settings.


## Configuring Input Silence Detection Parameters

When configuring an **Input Silence** alarm it is also necessary to configure the audio silence thresholds and timeout duration.

1. Click **Input Silence** to highlight the alarm and ensure it is **Enabled**.

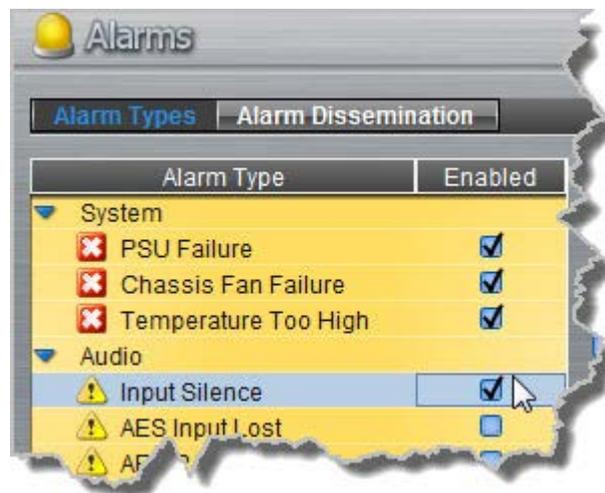

2. Configure the dBFS threshold and timeout duration in seconds within the **Conditions** pane and ensure the input check-boxes are selected. An alarm will be raised when these thresholds are breached.

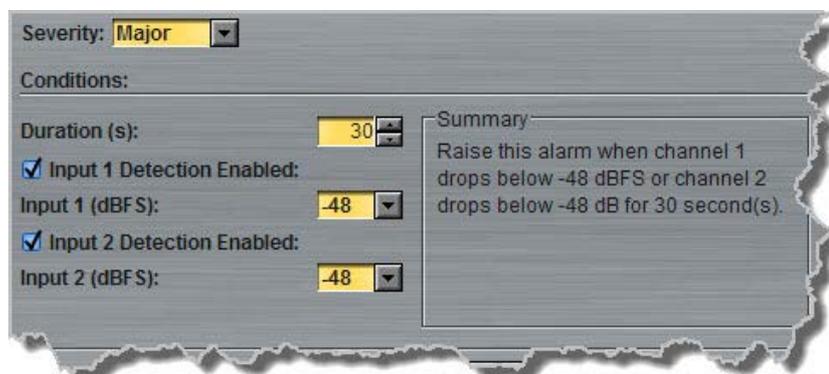

3. Click **Apply** or **OK** to save settings.

## Configuring Alarm Dissemination Severity Alerts

Alerts for each alarm severity level are configured using the **Alarm Dissemination** tab.

1. Click **Alarm Dissemination**.



2. Click to highlight the **Alarm Severity** level you want to configure, then select and configure the alerts as required.



3. Click **Apply** or **OK** to save settings.

## SNMP Trap Configuration

Simple Network Management Protocol (SNMP) is a protocol used to manage devices on IP networks. SNMP provides the ability to send traps (notifications or alerts), which are packets containing data relating to a system component. These packets are generated by agents on a managed device and may be either statistic or status related. Please see your system administrator if you require more information.

1. Click to select the **Send SNMP trap** check-box.



2. Click **edit** to open the **Enter the SNMP trap target** dialog and enter the SNMP trap target, then click **OK**.



## 18.17.1 Managing Alarms

Active codec alarms are indicated in the **Current Alarms** screen in the Java Toolbox Web-GUI .



The user is alerted to active alarms by:

1. The **Alarm Symbol**  flashing in the top right-hand corner of the Java Toolbox Web-GUI screen.
2. All new alarms being listed in the **Current Alarms** tab within the **Alarms Panel**.
3. Other alerts as per [Alarm Dissemination](#) settings.
4. The codec front panel **ALARM LED** flashing red.



**Important Note:** When a connection is active the front panel **CONNECTED LED** is illuminated solid green. Illumination will cease if a connection is lost.

## Acknowledging Alarms

To acknowledge an alarm:

1. Click to select the alarm in the **Current Alarms** tab.
2. Click **Acknowledge selected alarm**.

After acknowledging the alarm:

1. The **State** will change from **Active** to **Acknowledged**.
2. The **Alarm Symbol**  will stop flashing but remain visible in the top right-hand corner of the Java Toolbox Web-GUI screen.
3. The codec front panel **ALARM LED** will stop flashing and illuminate solid red.
4. The state of other alerts may change, as per [Alarm Dissemination](#) settings.

Alarm State	Front Panel Alarm LED	Web-GUI Alarm Symbol
<b>Active</b>	Flashing red	Flashing
<b>Acknowledged</b>	Solid red	Stops flashing, remains visible

## Deactivating Alarms


An alarm is deactivated automatically when the alarm state is reversed. E.g. if power is restored after a **PSU Failure** alarm, or if audio is restored after an **Input Silence** alarm.

## Deactivating Input Silence Alarms

An **Input Silence** alarm is activated when the configured audio and duration thresholds have been breached. To recover from this alarm state the codec must detect input audio higher than the failure threshold. When audio at this level is detected, the codec monitors input audio to ensure it doesn't drop below the recovery threshold setting more than 5 times within the nominated **Input Silence** duration time. The alarm is then deactivated automatically.

## Alarm History

Click the **Alarm History** tab within the **Alarms Panel** to display a record of all system alarms which have been raised.

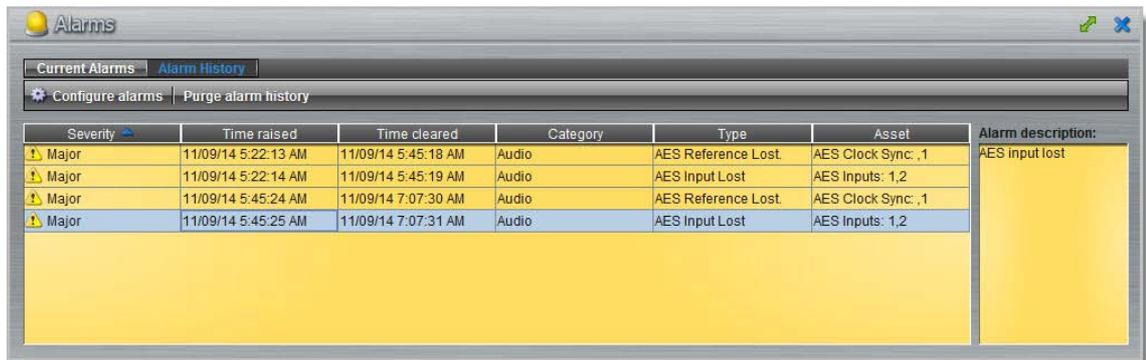

Click the **Purge Alarm History** button to clear all alarms from the **Alarm History** tab.

## 18.18 RS232 Data Configuration

The codec supports both in-band and out-of-band data depending on the connection transport and algorithm you are using. RTP data is automatically enabled when using the Tieline Music or MusicPLUS algorithms over any transport. Over IP it is also possible to enable synchronized out-of-band data using any algorithm.

Algorithm Selected	IP	ISDN and POTS
<b>Tieline Music and MusicPLUS</b>	<ul style="list-style-type: none"> <li>In-band RTP data enabled automatically</li> <li>Synchronized out-of-band data can be enabled and disabled</li> </ul>	<ul style="list-style-type: none"> <li>In-band RTP data enabled automatically</li> </ul>
<b>All other algorithms</b>	<ul style="list-style-type: none"> <li>Synchronized out-of-band data can be enabled and disabled</li> </ul>	<ul style="list-style-type: none"> <li>No in-band or out-of-band data available</li> </ul>

The codec can be connected to external devices and send RS232-compatible data via the serial port on the rear panel of the codec. To enable RS232 data within a connection, select **Enable Auxiliary Data** when creating a program in the **Programs panel** wizard. Alternatively, select using the codec **Setup** menu (see [Enabling RS232 Data](#)).

## Setting RS232 Data Rates and Flow Control

1. Open the Java Toolbox Web-GUI and click the **Settings**  symbol at the top of the screen to display the **Settings panel**.
2. Click the **Options** button.
3. Click the **Baud rate** drop-down menu arrow to select the serial port baud rate which matches the

baud rate of the external device connected to the RS232 port on the codec.

- Click to select the **Enable flow control** check box and enable flow control, then click **Save settings**.



#### Important Notes:

- When connecting to G3 codecs over IP, ISDN or POTS only in-band data is available via the Music and MusicPLUS algorithms.
- Use firmware higher than 2.8.xx in the Bridge-IT, Genie and Merlin families of codecs to enable auxiliary data over multicast connections.
- It is important to enable serial port flow control as it regulates the flow of data through the serial port. If disabled, data will flow unregulated and some may be lost.
- Ensure you configure the serial port baud rate to match the setting of the external device to which you are connecting. Ideally the settings on both codecs should match, or you could have data overflow issues.
- Only the dialing codec needs to be configured to send RS232 data. Session data sent from the dialing codec will configure all other compatible codecs (non-G3) when you connect.
- RS232 data can be sent from the dialing codec to all endpoints of a multi-unicast or multicast connection if your codec is capable of these connections. Note: Bidirectional RS232 data is only available on the first connection dialed when multi-unicasting.

## 18.19 Creating Rules

The **Rules panel** in the Java Toolbox Web-GUI is used to program events for specific codec actions. Typically these 'rules' are based on a change in the state of a GPIO control port or the codec being connected or disconnected. Rules can only be created with the Web-GUI while the codec is disconnected.



**Important Note:** Data transmission is disabled by default. **Data** must be enabled in the **Connection** menu to enable contact closure operation and RS232 data.

1. Press the **HOME**  button to return to the **Home** screen
2. Use the navigation buttons on the front panel to select **Connect** and press the  button
3. Select **IP** and press the  button
4. Select your preferred **IP Mode** and press the  button.
5. Use the down  navigation button to select **Setup** and press the  button.
6. Navigate to **Data** and press  to toggle between **Enabled** and **Disabled**.

For more information please see [Enabling Relays & RS232 Data](#).

## Configuring Rules

Default rules have been preprogrammed into the codec to facilitate programming the most common events required by broadcast engineers. To view rules options:

1. Click the **Rules**  symbol at the top of the Java Toolbox Web-GUI screen to open the **Rules panel**.
2. Click **Add New Rule**.
3. Click to select the appropriate programming rule for your requirements. See the [Web-GUI Introduction](#) section for explanations of the actions each rule can perform.




When rules have been configured previously, they are displayed when the **Rules panel** is first opened.

### Rule 1: Toggle a Control Port Input to Connect and Disconnect a Program

This rule is used to connect and disconnect a selected program when a control port input is toggled.

1. Click the first rule in the **Rules panel**.
2. Click the drop-down **Input** arrow and select the control port input which will trigger program connection and disconnection.
3. Click the drop-down **Program** arrow to select the program to be connected.

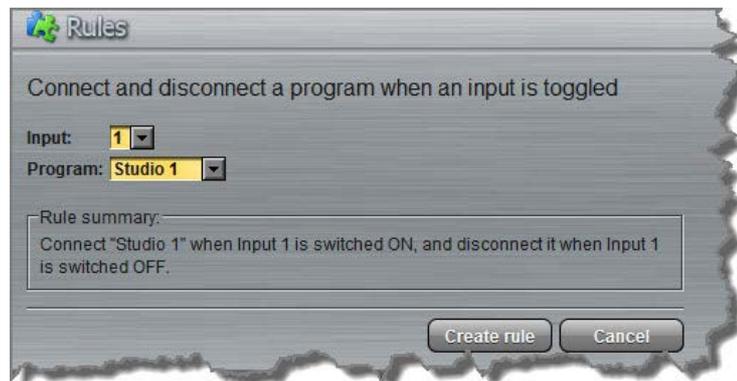


4. Check the **Rule Summary** and click **Create Rule** to save the settings.

### Rule 2: Switch Different Control Port Inputs On to Connect and Disconnect a Program

This rule is used to connect and disconnect a selected program when different codec control port inputs are turned on.

1. Click the second rule in the **Rules panel**.
2. Click the drop-down arrows to select the control port input for connecting and the alternative

- one for disconnecting.
3. Click the drop-down **Program** arrow to select an individual program which will be connected and disconnected by the change in the control port input states.

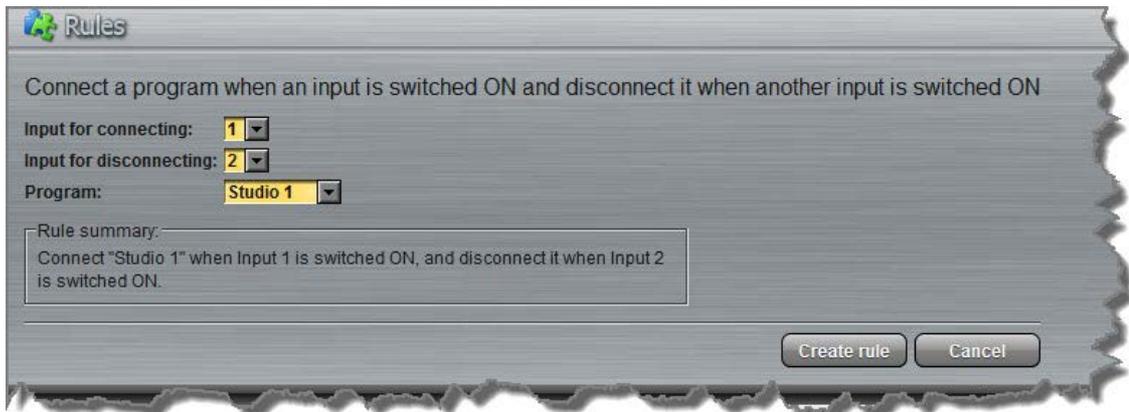


4. Check the **Rule summary** and click **Create Rule** to save the settings.

### Rule 3: Synchronise Local Control Port Input Status with a Remote Relay Output

Use this rule allow a local codec's control port input to change the state of a remote relay output.

1. Click the fourth rule in the **Rules panel**.
2. Click the drop-down arrow to select the local control port input used to control a remote relay output.

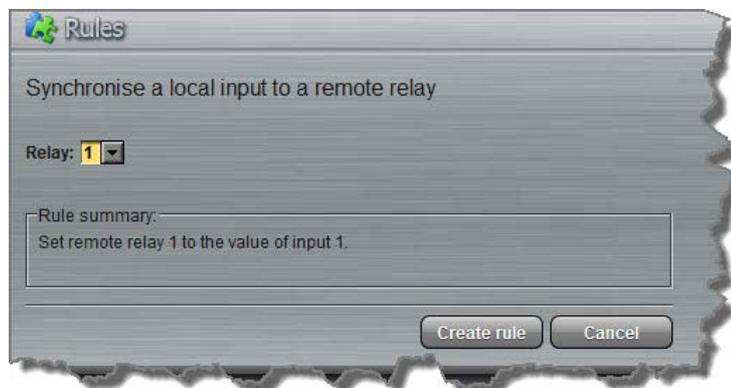

3. Check the **Rule summary** and click **Create Rule** to save the settings.

### Rule 4: Toggle a Relay Output with each Change in Connection Status

This rule is used to toggle a codec's control port relay output each time a program connects and disconnects.

1. Click the fifth rule in the **Rules panel**.
2. Click the drop-down **Relay** arrow and select the relay output you want to toggle.
3. Click the drop-down **Program** arrow to select a specific program which will affect the relay toggle function, or use the default setting whereby any program will toggle the relay output.



4. Check the **Rule summary** and click **Create Rule** to save the settings.

## Deleting Rules

1. Click the **Rules**  symbol at the top of the Java Toolbox Web-GUI screen to open the **Rules panel**.
2. Click the **Delete** button next to the rule you want to delete.
3. Click **Yes** in the confirmation dialog.

## 18.20 Upgrading Codec Firmware

To download the latest codec firmware visit <http://www.tieline.com/Support/Latest-Firmware>.

### Manual Firmware Upgrades

The following procedure explains how to perform codec firmware upgrades with a downloaded firmware file saved to your PC.

1. Click the **Settings**  symbol at the top of the Java Toolbox Web-GUI screen if the **Settings panel** is not displayed.
2. Click **Firmware**.



3. Click **Update from a selected file** and click the **Select File** button.
4. Select the **.bin** file you are using to perform the upgrade and click **Open**.
5. Press the **Update Firmware** button to commence the upgrade.

### Automatic Firmware Upgrades

By default the Web-GUI application integrates with TieServer to automatically update users when a firmware upgrade is available.

1. Connect your codec to your PC using either a LAN or USB connection and open the Java Toolbox Web-GUI (See [Connecting to the Web GUI](#))
2. If new software is available the **Update** symbol appears in the top-left of the screen.

3. Position your mouse-pointer over the **Update** symbol and click the update dialog when it appears to download the new software.



4. Click **More Information** in the **Updating firmware** dialog to display details of the upgrade process.



**Important Note:** Firmware upgrade files are very large and it is usually much quicker to download the file to your PC first and then upgrade the codec manually using the Manual Firmware Upgrade procedure.

## 19 Using the HTML5 Toolbox Web-GUI

The following sections provide an overview of the different configuration panels available within the codec's HTML5 Toolbox Web-GUI. Navigate with the mouse pointer to the **Menu bar** at the top of the Web-GUI screen and click to select and open each panel in turn.




### HTML GUI Menu Bar for Opening Panels

When you first open the HTML5 Toolbox Web-GUI the **Program Loader panel**, **Connections panel** and **PPMs panel** are loaded by default. If you retain cookies in your browser, any panels opened previously in the Web-GUI are automatically populated when you log in next. The default panel view is displayed on login if cookies have been cleared.


### Adjusting the Theme

To adjust the **Theme** or 'skin' of the HTML5 Toolbox Web-GUI, navigate to the **Menu bar** at the top of the screen and click **Theme**, then click to select your preferred option. Note: this manual uses the **White** theme for most images.

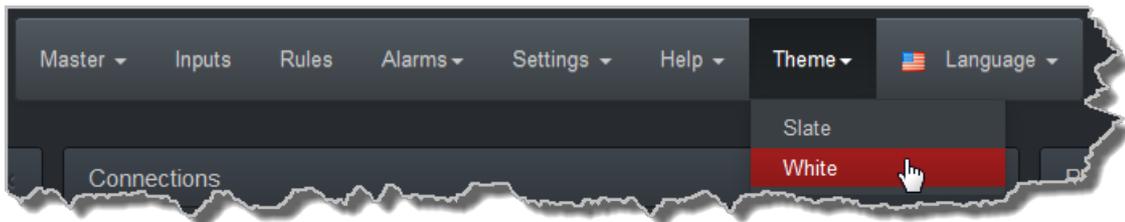


### Opening a Panel & Adjusting Screen Position

Click an item in the **Menu bar** to display available panel options, then click to select and open a panel. New panels automatically open in the top left of the screen.

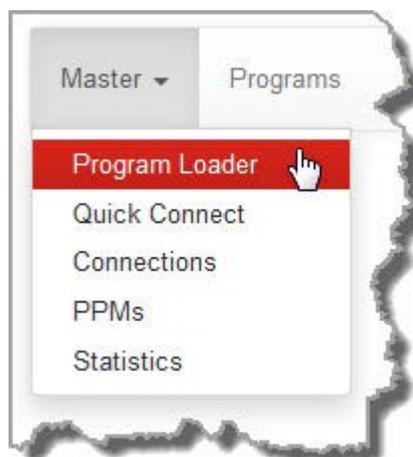


Position the mouse pointer over a panel's **Title bar** and click and drag to move a panel and reposition it in a preferred screen position.

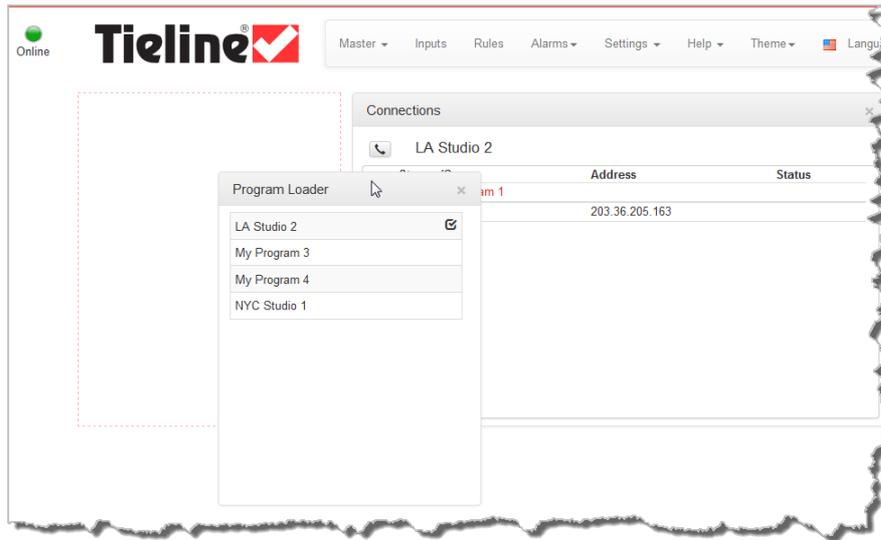


**Master Panels: Load Programs & Manage Audio Streams**

**Program Loader Panel**

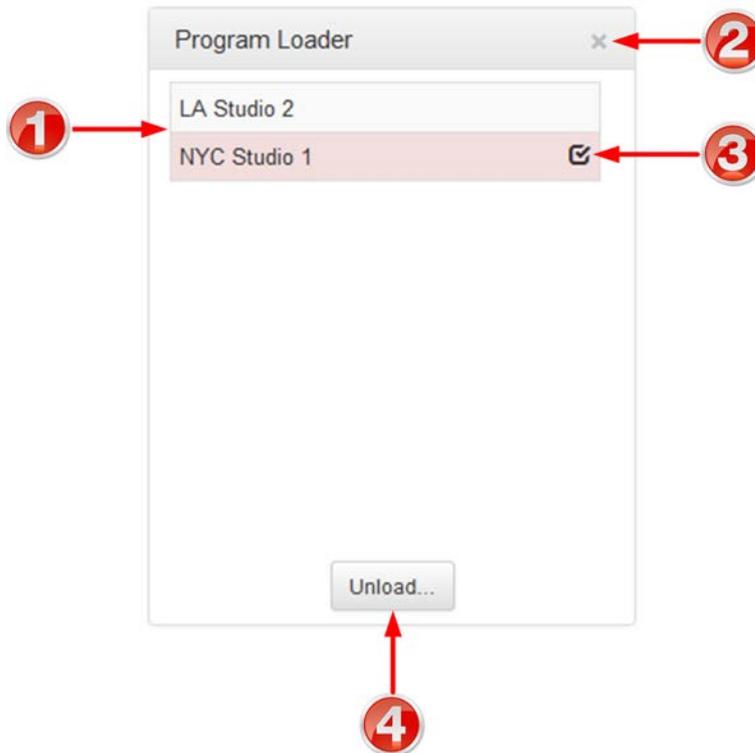


	Feature	Description
1	Programs list	Lists all configured programs which have been added into the codec. Click to select a program before loading.
2	Close button	Click to close the panel.
3	Check-box symbol	The <b>Check-box symbol</b> identifies the currently loaded program in the codec.
4	Load and Unload button	Click <b>Load</b> to load the currently selected program in the <b>Programs</b> list; the button changes automatically to <b>Unload</b> after loading, to allow unloading of a program when required.

### Connections Panel

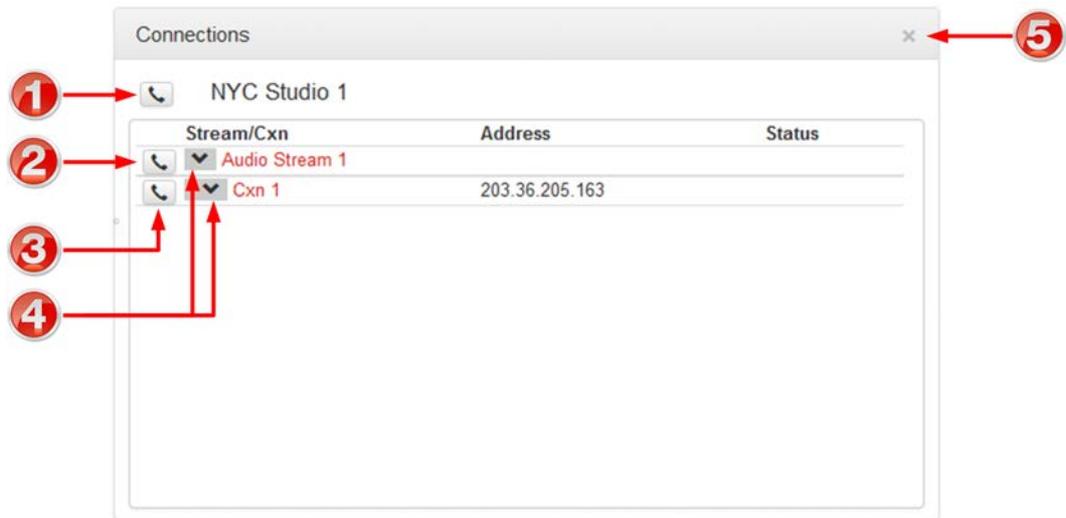

	Feature	Description
1	Program <b>Connect/Disconnect</b> button	Click to connect/disconnect all audio streams in a program.
2	Audio Stream <b>Connect/Disconnect</b> button	Click to connect/disconnect all connections in an audio stream.
3	Connection <b>Connect/Disconnect</b> button	Click to connect/disconnect an individual connection.
4	Show/Hide Arrow	Click to show/hide audio stream and connection details.
5	<b>Close</b> button	Click to close the panel.

### Statistics Panel

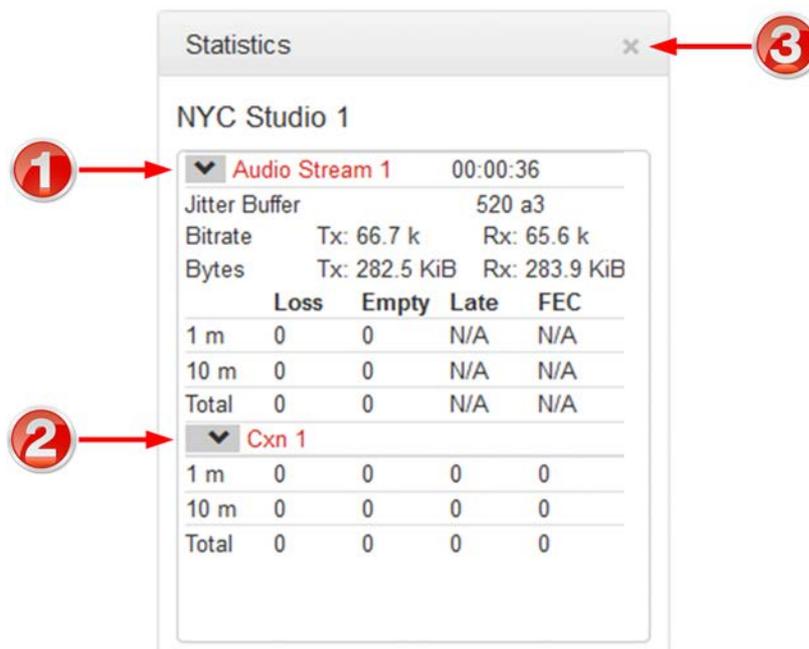

	Feature	Description
1	Show/Hide Arrow	Click to show/hide audio stream statistics.
2	Show/Hide Arrow	Click to show/hide individual connection statistics.
3	Close button	Click to close the panel.

### PPMs Panel



	Feature	Description
1	PPM Meters	6 PPM meters.
2	Close button	Click to close the panel.


## Inputs Panel for Input Adjustments



**Important Note:** Tieline codecs have different input configurations, therefore the image shown may not reflect the number of inputs displayed in your codec Web-GUI.

	Feature	Description
1	<b>Settings</b> button	Click to adjust input <b>Name</b> , <b>Type</b> and <b>IGC</b> .
2	Input PPM meter	Input PPM meter.
3	<b>Close</b> button	Click to close the panel.
4	<b>On/Off</b> button	Click to toggle an input on or off.
5	Input Sliders/Faders	Input gain control sliders/faders.

### Rules Panel for Creating Relay Activation Rules

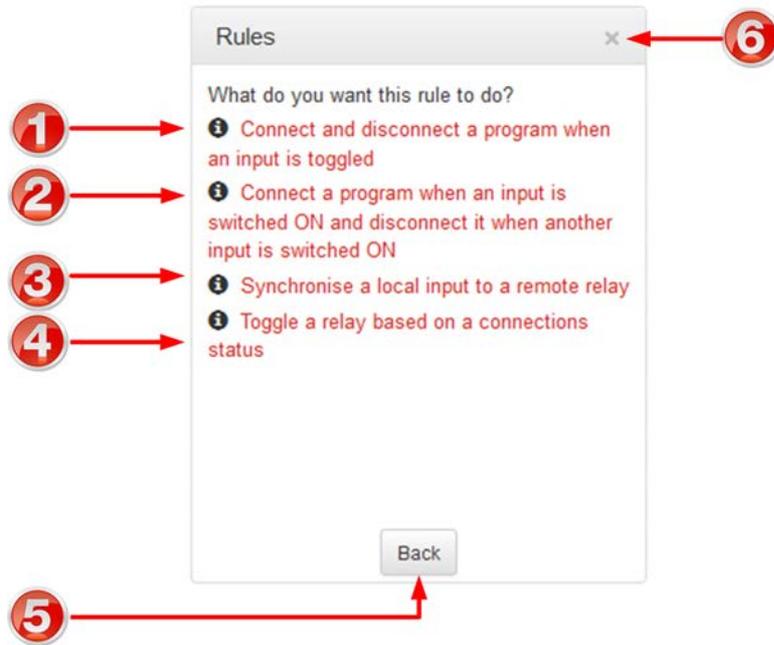

	Rule	Description
1	Connect and disconnect a program when an input is toggled	Click to configure connection and disconnection by toggling an input.
2	Connect when an input is switched <b>ON</b> ; Disconnect when another input is switched <b>ON</b>	Click to configure connection and disconnection after different relay inputs are switched <b>ON</b> .
3	Synchronise a local relay input with a remote relay output	Click to configure a local relay input to synchronise with the state of a remote relay output.
4	Toggle a relay based on a connection's status	Click to configure a relay to toggle based on connection status.
5	<b>Back / Add New Rule</b> button	Click to add a new rule, or exit the rule creation function.
6	<b>Close</b> button	Click to close the panel.

## Alarm Panels: Configure & Monitor Alarms


### Configure Alarms Panel



	Feature	Description
1	List of alarm types	Click to select an alarm type to configure.
2	Scroll bar	Click and drag the scroll bar to view all listed alarms.
3	Enable Alarm check-box	Click the <b>Enabled</b> check-box to enable the currently selected alarm.
4	<b>Edit / Save</b> button	Click to edit an alarm, or save configured alarm settings when in edit mode.
5	Alarm Severity Setting	Click the drop-down arrow to select an alarm severity setting.
6	<b>Close</b> button	Click to close the panel

### Alarm Dissemination Panel


Alerts for each alarm severity level are configured using the **Alarm Dissemination** panel.

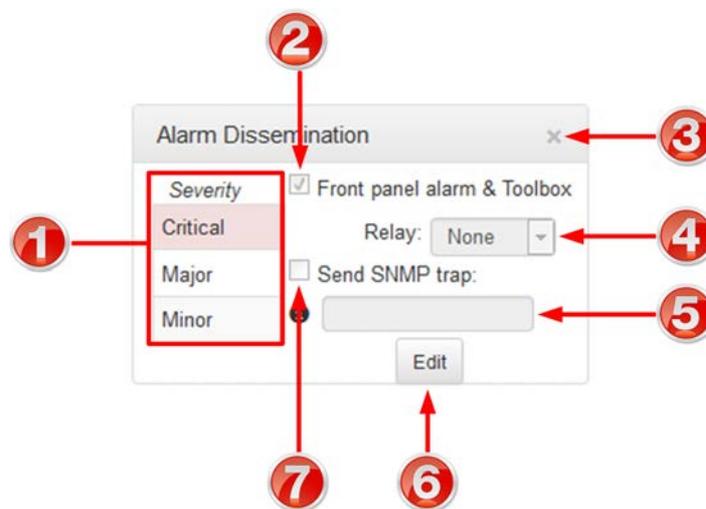

	Feature	Description
1	List of alarm severity levels	Click to select an alarm severity level to configure it.
2	<b>Front panel alarm &amp; Toolbox</b> check-box	Select the check-box (default enabled) to deliver front panel <b>ALARM LED</b> notifications and HTML5 Toolbox Web-GUI alarm notifications.
3	<b>Close</b> button	Click to close the panel.
4	<b>Relay</b> drop-down selection	Click the drop-down arrow to select a relay to open when an alarm using the current severity level is activated.


5	SNMP Trap Target text-box	Click in the text box in edit mode to enter the SNMP trap target for alarms using the currently selected severity level.
6	Edit / Save button	Click to edit alarm dissemination settings, or save configured settings when in edit mode.
7	Send SNMP trap check-box	Select the check-box to enable SNMP traps to be sent (for alarms using the selected severity level).

**Current Alarms**

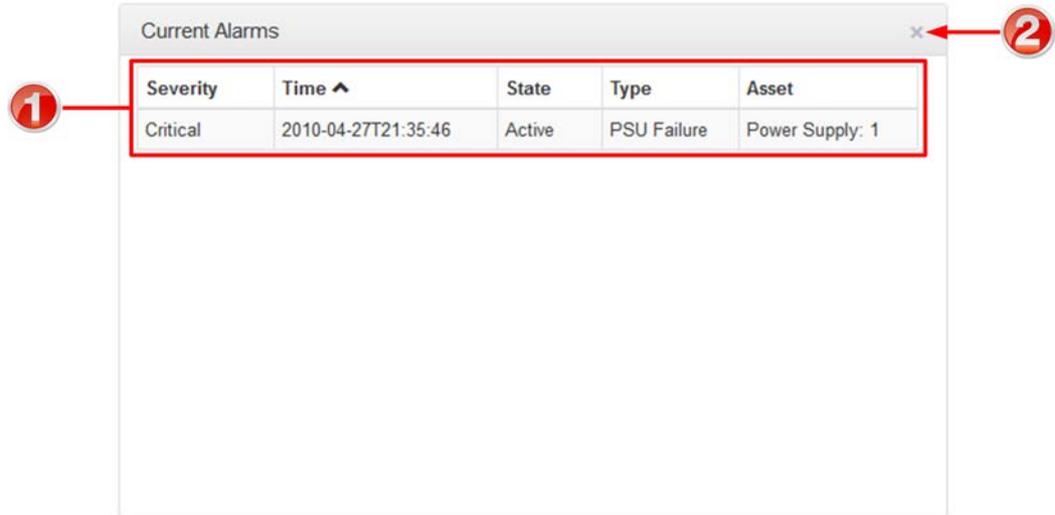

	Feature	Description
1	Current alarm description	View a list of active alarms in the codec
2	Close button	Click to close the panel

**Alarm History**

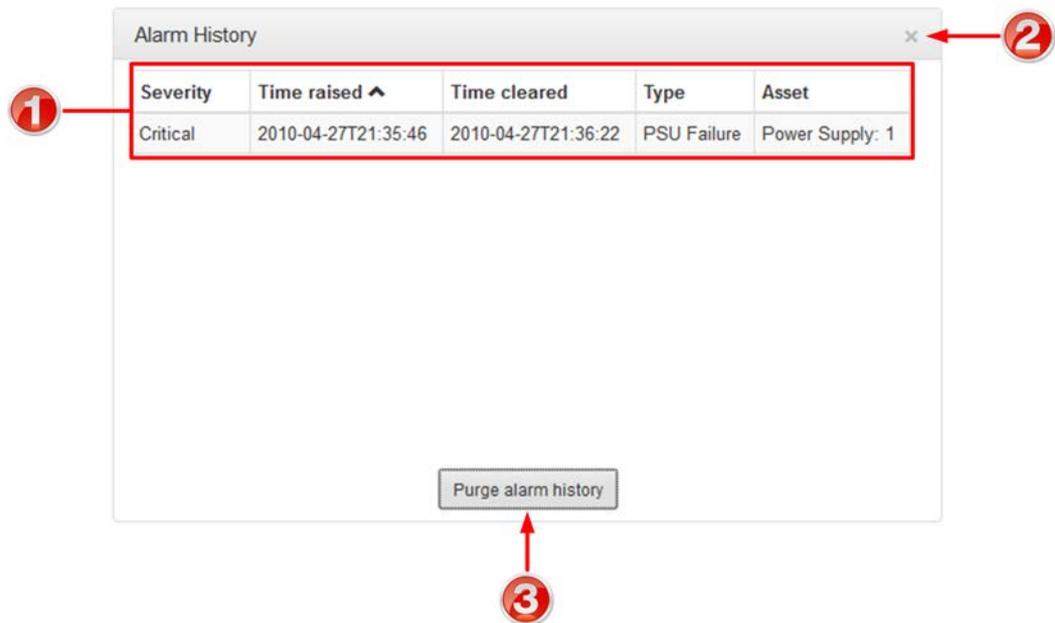


	Feature	Description
1	Alarm history description	View the history of previous alarms in the codec.
2	<b>Close</b> button	Click to close the <b>Alarms</b> panel.
3	<b>Purge History</b> button	Click to clear the alarm history.


**Settings Panels**

There are 9 **Settings** panels which can be opened in the Web-GUI. Each panel provides specific codec configuration settings and options. Click to select and open each panel.

As an example, the **Network** panel is displayed with network interface configuration options. A brief description of the other panel options is also provided.

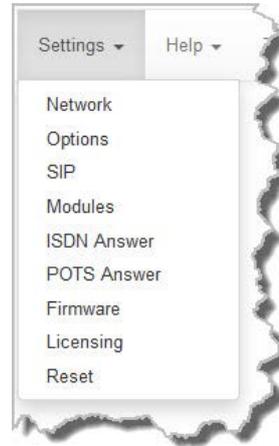

**Settings panels**

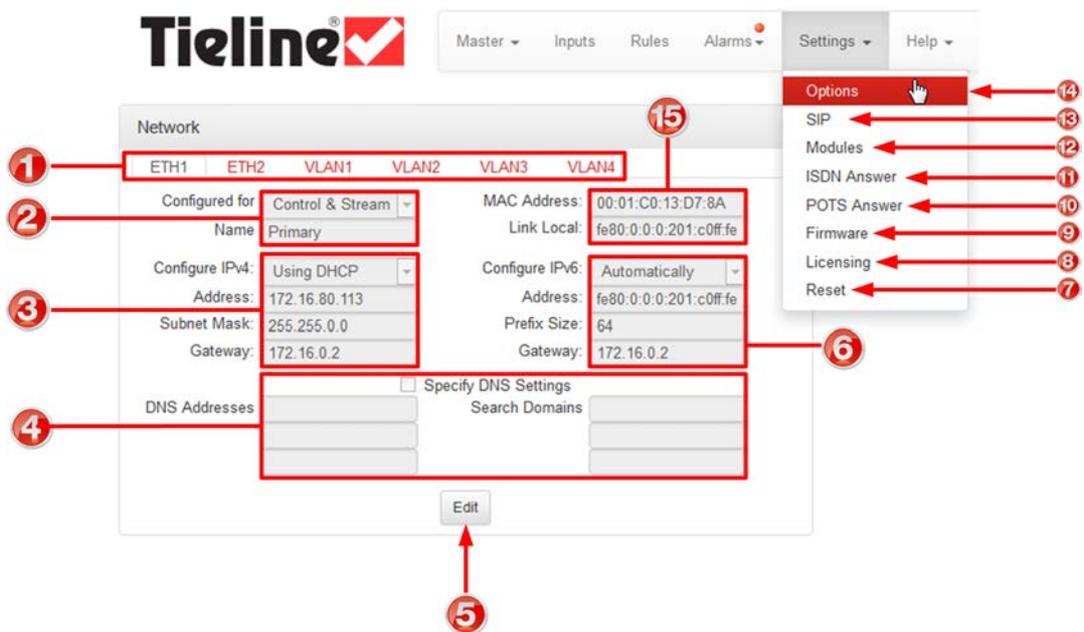


	Feature	Description
1	<b>Network tab</b>	Click to select and edit, or view network configuration settings for each Ethernet and VLAN interface.
2	Network Interface	Control and streaming configuration options for each network interface.
3	IPv4 details	IPv4 address details and configuration.
4	DNS details	Select the check-box and specify DNS addresses and domains to search.
5	<b>Edit / Save</b> button	Click to edit Network settings, or save configured settings.
6	IPv6 details	IPv6 address details and configuration.
7	<b>Reset</b>	Click to open the panel; reset codec default settings and perform backup/restore of codec programs and settings.
8	<b>Licensing tab</b>	Click to open the panel; select a license file and install it in the codec.

9	<b>Firmware tab</b>	Click to open the panel; view software versions and perform an upgrade.
10	<b>POTS Answer tab</b>	Click to open the panel and configure POTS Answering settings.
11	<b>ISDN Answer tab</b>	Click to open the panel and configure ISDN Answering settings.
12	<b>Modules tab</b>	Click to edit hardware module configuration.
13	<b>SIP tab</b>	Click to open the panel and edit or view SIP configuration settings.
14	<b>Options tab</b>	Click to open the panel; configure RS232 and QoS data settings, lock a loaded user Program and adjust Session Port settings and SNMP. Also configure the AES Output Clock sample rate.
15	<b>MAC Address / Link Local</b>	Click to open the panel and view the device MAC address and IPv6 local network address created by the codec.

## Help Panels

### Resources

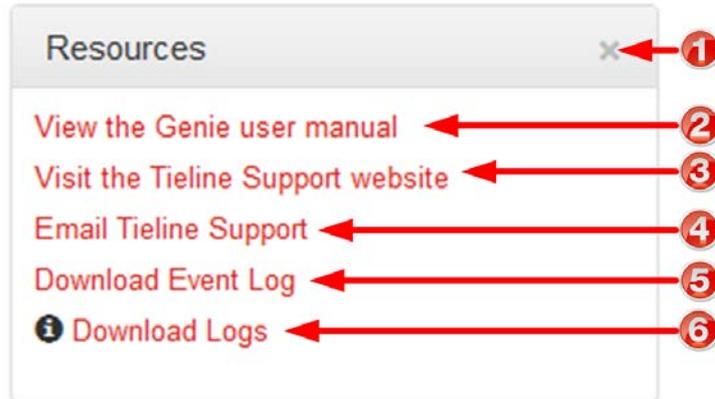

	Feature	Description
1	Close button	Click to close the panel.
2	User manual link	Click to open the codec user manual in a new browser, or view support information (Note: the codec name displayed will vary by product type)
3	Support website link	Click to visit the support page on the Tieline website.
4	Email Support	Click to email Tieline support.
5	Event Logs	Click to download user-viewable event logs
6	Support Logs	Click to download diagnostic information that can be sent to Tieline support

### About Panel

Details of the codec Toolbox and firmware version, as well as the codec serial number. Note: the codec name displayed will vary by product type.



## Language Selection

The HTML5 Toolbox Web-GUI offers language support for several languages.

1. Click on the **Language** drop-down menu arrow in the top right-hand corner of the Web-GUI page.
2. Select the preferred language to display.



## 19.1 Using the HTML5 Toolbox Quick Connect Web-GUI

The HTML5 Quick Connect Web-GUI is designed for simple peer-to-peer connections and non-technical users. It has a reduced feature-set and allows users to:

1. Load existing programs in a codec via the **Program Loader panel** and then dial via the **Quick Connect panel**.
2. Use the **Quick Connect panel** to create and dial a simple peer-to-peer connection using IP/SIP, ISDN or POTS.



**Important Note:** Simple peer-to-peer connections are not saved as programs with unique names. Details of the last ad hoc dial are retained in the **Quick Connect panel**, even after a program is loaded and unloaded using the **Program Loader panel**.

### Launching the HTML5 Quick Connect Web-GUI

1. Type the codec IP address in your web-browser.
2. Click to launch the HTML5 Toolbox Quick Connect Web-GUI.
3. Enter the authentication **Password** for the codec and click **OK**.
4. The panels in the Quick Connect Web-GUI will automatically be displayed.




**Important Note:** To change the password using the codec front panel navigate to **Settings > WebGUI > Password** and press the **OK** button. Use the keypad to enter a new password and press the **OK** button to save the new setting.


### Loading and Unloading an Existing Program

If programs are saved in the codec they are displayed in the **Program Loader panel**.

1. Click to select a program in the **Program Loader panel** and click the **Load button** to load it in the codec.

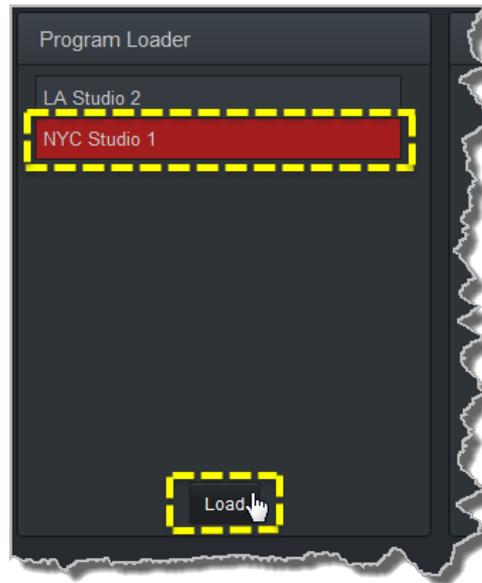


2. The **Check-box** symbol appears next to the program name to confirm it has been loaded and the **Load** button changes to an **Unload** button.

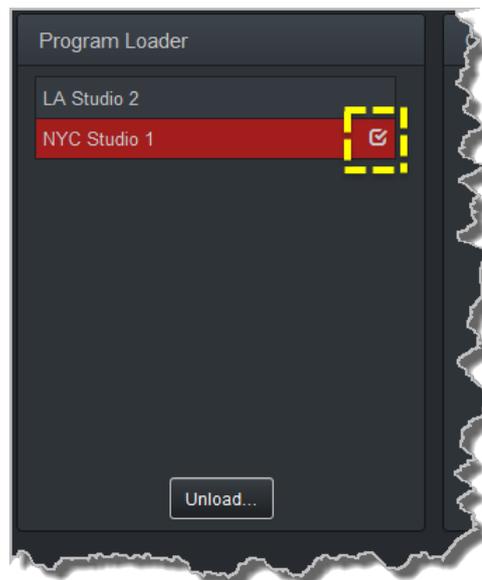

To unload a program click the **Unload** button.


### Dial a Loaded Program

1. Click the **Connect** button in the **Quick Connect** panel to dial a loaded program. Note: After connecting, the **Connect** button changes to a **Disconnect** button.

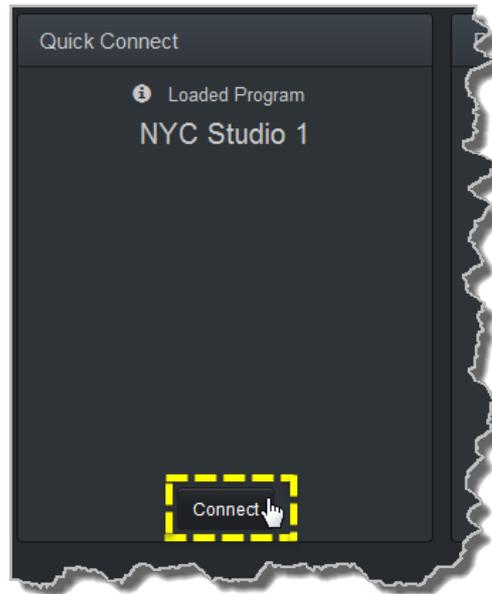


## Disconnect a Loaded Program

1. Click the **Disconnect** button in the **Quick Connect** panel.

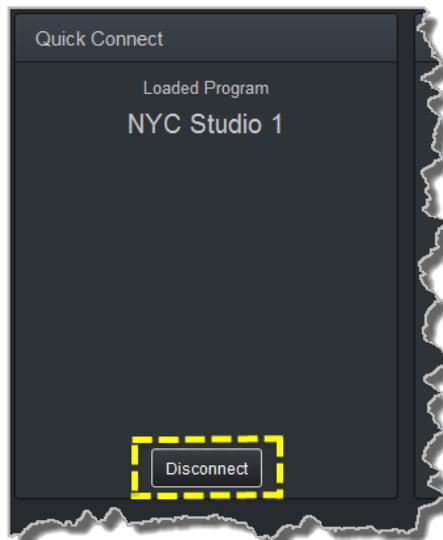

2. Click **Yes** in the confirmation dialog to disconnect the connection.

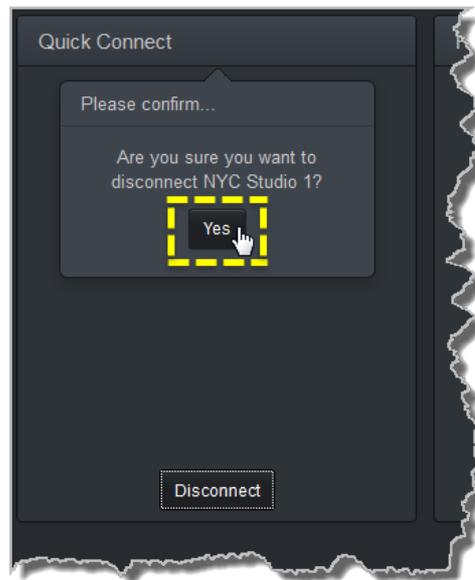


## Dial Peer-to-Peer over IP with Quick Connect




### Important Notes:

- Click the **Unload** button in the **Program Loader** panel if a program is currently loaded.
- The transcriptor algorithm is for closed captioning and not normal broadcast configurations.


1. Click the drop-down **Transport** menu arrow in the **Quick Connect** panel and select **IP**.

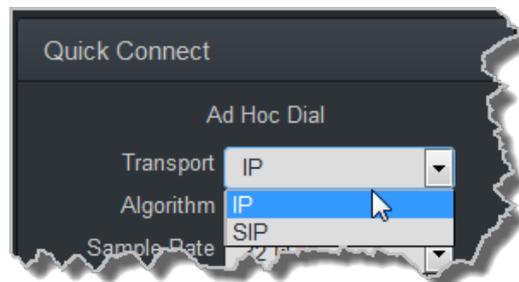

2. Click the drop-down **Algorithm** menu and select an algorithm.

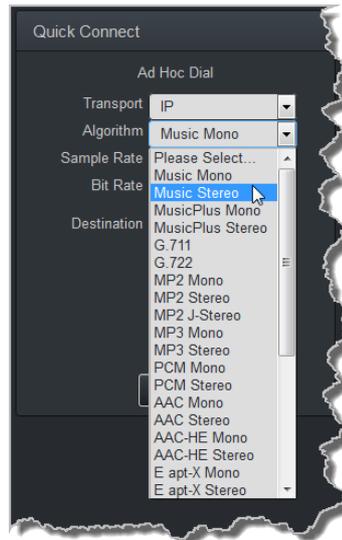

3. Click to select the appropriate **Sample Rate** and **Bit Rate** for the connection. Note: If only one sample rate is available this will be automatically selected.
4. Click in the **Destination** text box and enter the IP address of the destination codec.

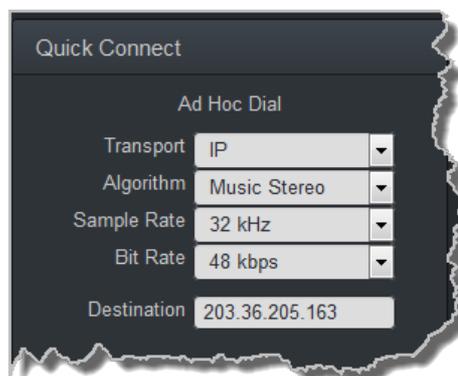

5. Click the **Connect** button to dial.


## Dial Peer-to-Peer over ISDN with Quick Connect



### Important Notes:

- Click the **Unload** button in the **Program Loader** panel if a program is currently loaded.
- The transcaptor algorithm is for closed captioning and not normal broadcast configurations.

1. Click the drop-down **Transport** menu arrow in the **Quick Connect** panel and select **ISDN**.
2. Click the drop-down **Algorithm** menu and select an algorithm.
3. Click the drop-down **B Channels** menu and select the number of channels required for this connection.

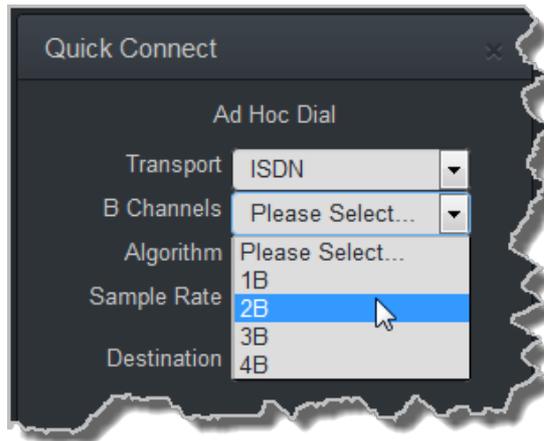

4. Click to select the appropriate **Sample Rate** for the connection.
5. Click in each **Destination** text box in turn to enter the ISDN number for each B Channel.
6. Click the **Connect** button to dial.


### Dial Peer-to-Peer Over POTS with Quick Connect



#### Important Notes:

- Click the **Unload** button in the **Program Loader** panel if a program is currently loaded.
- The transcriptor algorithm is for closed captioning and not normal broadcast configurations.


1. Click the drop-down **Transport** menu arrow in the **Quick Connect** panel and select **POTS**.
2. Click the drop-down **Algorithm** menu and select an algorithm. The connection bit rate is configured automatically. Note: G5 POTS modems initially attempt to establish a link at the lowest **Max Bit rate** setting configured in the two modules being connected. If the POTS line doesn't support this bit rate, the modems will attempt to connect at the highest possible bit rate to suit the prevailing line quality at each end of the link.
3. Enter the phone number in the **Destination** text box.

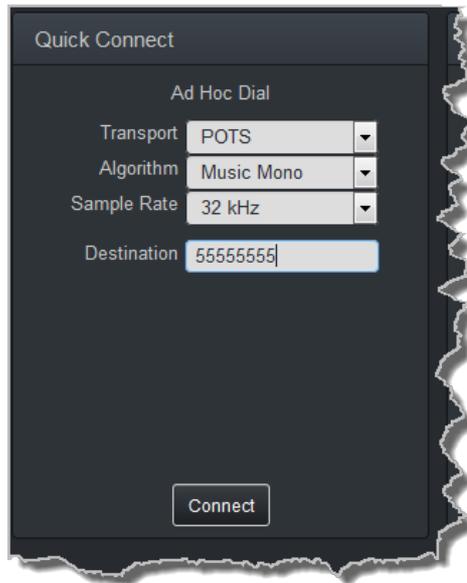

4. Click the **Connect** button to dial.

## Monitoring PPMs

Set audio levels so that audio peaks average at the nominal 0vu point indicated below on the PPM meters. This represents a program level of +4 dBu leaving the codec. Audio peaks can safely reach +22 dBu without clipping, providing 18dBu of headroom from the nominal 0vu point. Note: the audio metering reference scale is automatically adjusted by default when a Merlin codec connects to a Commander G3 codec. The G3 metering scale is between -11dBu and +18dBu.

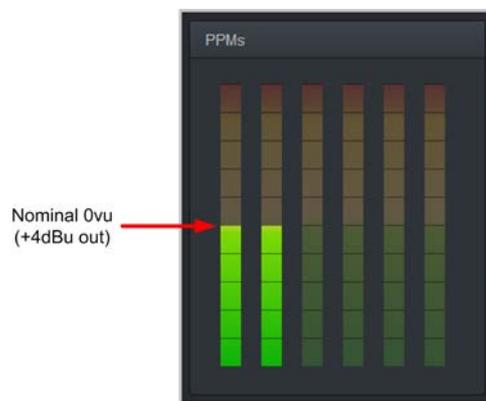


## Mono and Stereo PPM Metering

When connected with a mono program the codec will display a mix of inputs 1 and 2 on **PPM1**. **PPM 3** displays the level of return audio.



When connecting with a stereo program, the codec displays audio on **PPM1** and **2** for inputs 1 and 2 and **PPM 3** and **4** for the return audio.

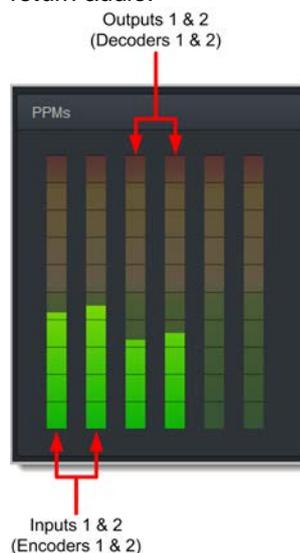

## 19.2 Configuring IP Settings

Open the HTML5 Toolbox Web-GUI and click **Settings** and then click **Network** to view and configure Ethernet and VLAN interface settings in the Web-GUI.



**Important Note:** For assistance with configuration of IPv4 or IPv6 network connections contact your IT Administrator.

### IPv4 versus IPv6

An IP address is a unique address to identify a device on a TCP/IP network. Your codec uses dual IP protocol stacks to allow your codec to work on both IPv4 and IPv6 networks. Tieline codecs support both DHCP (default) IP addressing and static IP addresses for dialing IPv4 connection endpoints.

If you want to dial a codec with a public IP address you simply dial the IP address to connect. If you want to dial a codec with a private IP address you need to perform network address translation (NAT). NAT allows a single device, such as a broadband router, to act as an agent between the

public internet and a local private LAN. Usually this will be set up at the studio end so you can dial into the studio from the remote codec.

Support for IPv6 connections allows you to use IPv6 infrastructure to connect to other codecs globally.


## Configuring Ethernet Ports and VLANs

The codec features two physical Ethernet port interfaces and up to four additional VLAN interfaces.


VLAN interfaces have features similar to physical Ethernet interfaces. However, your network administrator will need to configure VLAN support throughout your network for them to be supported in your codec.

As an example, if only one physical Ethernet interface is available, VLANs can be used to operate SmartStream PLUS or to separate codec **Control and Streaming** functions if required. Ethernet and VLAN interfaces can be configured for:

- Controlling audio: codec control and command only from the Ethernet port.
- Controlling and Streaming: stream audio and control and command the codec via the Ethernet port.
- Streaming audio: stream audio only from an Ethernet port (**ETH2 and VLANs** only).
- Nothing: Disable the Ethernet port from streaming audio and codec command and control (**VLANs** only).

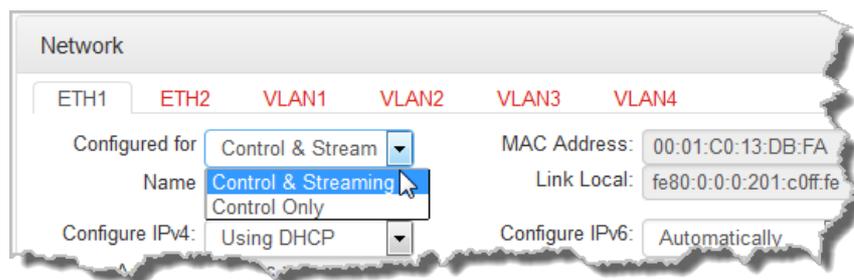

The **Name** text box, e.g. **Primary** or **Secondary**, is an interface identifier used when configuring new programs via the **Programs** panel.

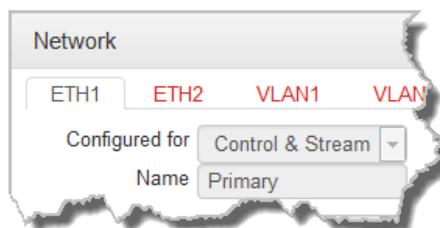

## IPv4 Address Configuration

Click the **Edit** button in the **Network** panel to configure settings. The codec is capable of automatic DHCP address assignment, or manually configured static IPv4 address configuration via the drop-down **Configure IPv4** menu. If you want to ignore IPv4 settings select **Off**.

Configure IPv4: Using DHCP  
 Address: Using DHCP  
 Subnet Mask: Off  
 Gateway: 172.16.0.2

DHCP IP addresses are automatically assigned and can change each time you connect to your Internet Service Provider, or to your own local area network (LAN). By default the codec is programmed for DHCP-assigned IP addresses.

Configure IPv4: Using DHCP  
 Address: 172.16.72.207  
 Subnet Mask: 255.255.0.0  
 Gateway: 172.16.0.2

Static IP addresses are fixed addresses that are recommended for studio installations, so that IP address dialing remains the same over time for incoming codec connections.

Configure IPv4: Static  
 Address: 10.1.1.10  
 Subnet Mask: 255.255.255.0  
 Gateway: 10.1.1.254

Click **Save** to store all configuration settings.



**Note:** The **Subnet Mask** is used by the TCP/IP protocol to determine whether a host is on the local subnet or on a remote network. The default **Gateway** is the router linking the codec's subnet to other networks. See your IT administrator for more details.

## IPv6 Address Configuration

An IPv6 address is represented by 8 groups of 16-bit hexadecimal values separated by colons (:). The drop-down **Configure IPv6** menu provides three address configuration options:

1. **Automatically:** An address is automatically assigned to the codec when you connect the codec to an IPv6 router. This process is similar to how an IPv4 DHCP address is assigned.
2. **Manually:** Select to enter static IPv6 address details.
3. **Off:** Select to ignore IPv6 address details.



**Important Note:** Select **Off** in the drop-down **Configure IPv6** menu if you are not using IPv6 to connect to another device. This ensures your codec will attempt to connect using IPv4 at all times.

### Types of IPv6 Addresses

There are two types of addresses displayed in the IPv6 section:

1. IPv6 address (normally global): A router-allocated IP address with 'global' visibility, details of which are displayed in the **Address**, **Prefix size** and **Gateway** text boxes.
2. Link Local: A local address which can only be used to connect to another device directly

over a LAN. This address is allocated by the codec internally based on MAC address details.

### Auto Address Assignment

1. Click the **Edit** button in the **Network** panel to configure settings.
2. By default the codec is programmed for connecting to an IPv6 router which automatically allocates IPv6 address details, as displayed in the following example.

The screenshot shows a configuration panel for IPv6. The 'Configure IPv6' dropdown is set to 'Automatically'. Below it, the 'Address' field contains 'fe80:0:0:0:201:c0ff:fe', the 'Prefix Size' is '64', and the 'Gateway' is '172.16.0.2'.

3. Click **Save** to store all configuration settings.

### Manual IPv6 Address Assignment

1. Click the **Edit** button in the **Network** panel to configure settings.
2. To configure IPv6 address details into the codec manually, select Manual and enter details into the **Address**, **Prefix** and **Gateway** text boxes.

The screenshot shows the same configuration panel as above, but the 'Configure IPv6' dropdown is now set to 'Manually'. The 'Address' field is empty, and the 'Prefix Size' dropdown is open, showing 'Manually' selected and 'Off' as an option. The 'Gateway' field is also empty.

3. Click **Save** to store all configuration settings.

### Specifying DNS Settings

It is possible to specify Domain Name Server (DNS) settings to allow easy look up of codecs within the specified **DNS Addresses** or **Domains**.

1. Click the **Edit** button in the **Network** panel to configure settings.

The screenshot shows a configuration panel for DNS settings. A checkbox labeled 'Specify DNS Settings' is checked. Below it, there are two columns of text boxes. The left column is labeled 'DNS Addresses' and has three empty text boxes. The right column is labeled 'Search Domains' and also has three empty text boxes.

2. Click **Save** to store all configuration settings.

### Configuring QoS

1. Open the HTML5 Toolbox Web-GUI and click **Settings** and then click **Options** to open the **Options** panel.

2. Click the **Edit** button.
3. Click in the **DSCP** field and enter the priority setting recommended by your IT administrator.
4. Click **Save** to store configuration settings.

Options

Tieline Session

Session Port: 9002

Alt. Session Port: 9012

RS232

Baud rate: 9600

Enable flow control

Programs

Lock Loaded User Program

QOS

DSCP: 20

4. Click **Save** to store the new configuration.



**Important Note:** Check with your IT administrator before changing this setting. By default the codec is configured for Assured Forwarding and more details about DSCP are available on Wikipedia at <http://en.wikipedia.org/wiki/Dscp>.

## 19.3 Configuring ISDN

Two slots are available for inserting optional ISDN modules into the codec. These can be configured using the codec front panel or the HTML5 Toolbox Web-GUI. See [About ISDN Modules](#) for additional information on ISDN.

You can use the Java Toolbox Web-GUI to configure a dial and/or answer program with ISDN settings. You may also need to:

1. [Configure ISDN module settings.](#)
2. [Configure ISDN Answering settings.](#)

### 19.3.1 Configuring ISDN Modules

ISDN settings in the **Modules panel** determine how each codec module operates at a particular site. You can copy similar programs between codecs installed at different locations and also configure site-specific settings for how each ISDN module should connect. ISDN module settings may need to be adjusted depending on your country and network requirements.

1. Open the HTML5 Toolbox Web-GUI and click **Modules** to view and configure ISDN site settings.

The screenshot shows the 'Modules' dialog box with 'Module 1' selected. The configuration fields are as follows:

Status	
Type	ISDN
Accept	Data Only
Network	EU-ETSI
Line Type	Point to Multipoin
DN1/MSN1	
DN2/MSN2	
SPID 1	
SPID 2	

An 'Edit' button is located at the bottom of the dialog.

2. Click to select **Module 1** or **Module 2**.
3. Click the **Edit** button to configure settings.
4. Click the drop-down arrow for **Accept** to select whether to allow or disallow circuit switched voice and data calls. The default setting allows **Data only**.

The screenshot shows the 'Accept' dropdown menu open. The options are:

- Data Only (selected)
- Voice and Data
- Voice Only
- None




**Important Note:** G.711 is the algorithm used when **Voice Only** is selected.

5. Click the drop-down **Network** arrow and select the **Network Type** corresponding to the region in which you are using the codec (see [ISDN Module Settings](#) for more details).

The screenshot shows the 'Network' dropdown menu open. The options are:

- EU-ETSI (selected)
- US-AT&T
- US-NAT
- JPN-NTT

6. Click the drop-down **Line Type** arrow and select your preferred option. Ask your Telco whether your ISDN line is Point-to-Point or Point-to-Multipoint. By default select **Point-to-Multipoint**, unless your switch type is an AT&T 5ESS custom point-to-point.

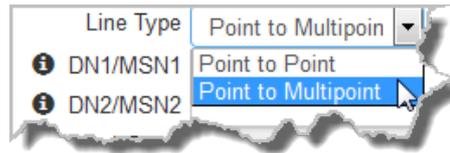

7. If you are in the US enter DN and SPID numbers as required, or in other regions enter DN or MSN numbers as required.
8. Click **Save** when configuration is complete.



#### Important Notes:

##### ***Directory Numbers and Multiple Subscriber Numbers***

Directory Numbers (DN) in North America and Multiple Subscriber Numbers (MSN) in the rest of the world are simply phone numbers associated with an ISDN B channel, like lines listed in a typical phone directory. Your Telco will normally supply 2 DN/MSN numbers for each pair of B channels. However, these numbers may or may not be associated with a specific B channel.

Often broadcasters prefer to predict which B channel will answer an incoming call to ensure audio routing is consistent. However, if a DN or MSN number is not entered in the codec and multiple B channels are available, the codec may use any channel to answer an incoming call. To ensure calls are routed consistently, enter a DN/MSN number (without the country or area code) as the DN/MSN for a B channel, then only that corresponding B channel will answer an incoming call to that number. Programming DN/MSN numbers for each B channel allows the codec to ignore calls without matching DN/MSN numbers. This is the best way to answer calls from codecs in a predictable manner.

##### ***SPID Numbers in North America***

ISDN relies on an initialization procedure for associating Service Profiles with specific terminating equipment (e.g. your audio codec) rather than lines. In the US Telcos assign a Service Profile ID (SPID) number which assists in identifying different ISDN services across the network. Your Telco must provide a SPID for each B channel you order when connecting over US-Nat or US-AT&T networks in the US. A SPID is not required when using the AT&T PTP protocol.


Typically, each ISDN BRI service in the US will have two SPIDs and these must be entered correctly. When you enter a SPID into your codec and connect it to an ISDN line, an initialization and identification process takes place, whereby the terminating equipment (your codec) sends the SPID to the switch. The switch then associates the SPID with a specific Service Profile and directory number.

Note: SPID numbers normally include the phone number and additional prefix or suffix digits up to 20 digits long.

## 19.3.2 Configuring ISDN Answering

**ISDN Answer Configs** are used to determine how codec ISDN modules will behave when answering ISDN calls.


The following image explains the difference between answering calls from Teline codecs sending session data, and non-Teline codecs making sessionless ISDN calls. Codecs sending Teline Session Data contain all the information required to connect, e.g. algorithm and audio stream routing settings. When answering sessionless calls it is necessary to configure the answering codec with an **ISDN Answer Config**, which tells the answering codec how a sessionless call will try and connect.

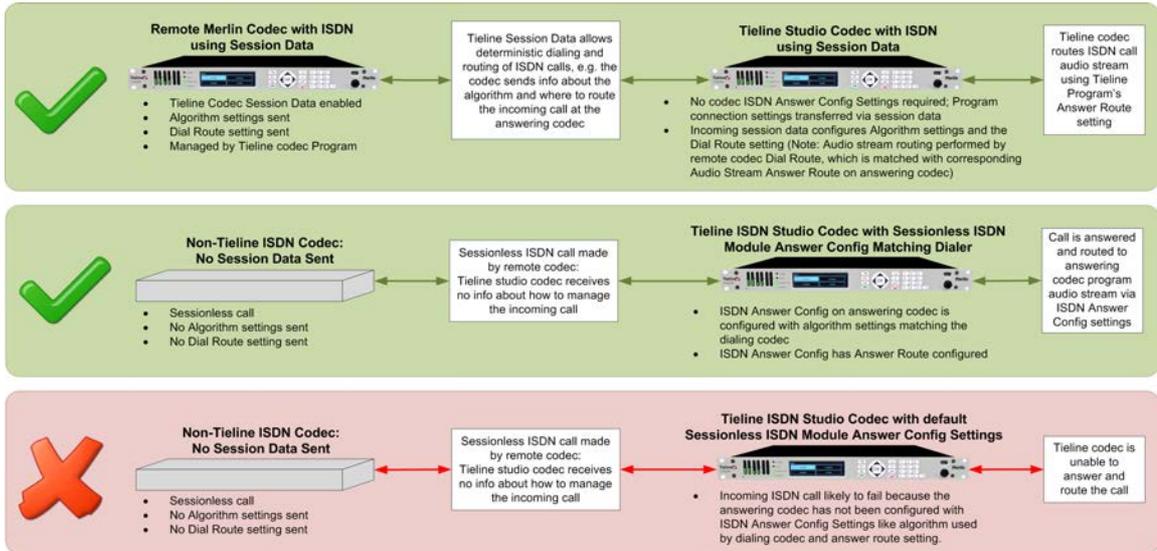

It is possible to save up to four different **ISDN Answer Configs**, which allow up to 4 ISDN B channels to be individually configured for unique answering behaviors. ISDN answering can be configured to suit:

- Hardware available in the codec, i.e. the number of B channels available.
- Expected dialing behaviors, e.g. if B channels should bond or not, and whether audio streams need to use **Dial** and **Answer Route** tags.
- The type of call being received by the codec, e.g. Tieline (with Tieline Session Data) versus non-Tieline sessionless calls.
- The algorithm expected when receiving sessionless calls.

Each of the four available **Configs** allows you to select which B channel or channels are used to answer a call or calls from incoming ISDN codecs. A maximum of up to 4 B channels can be selected if 2 ISDN modules are installed in the codec.

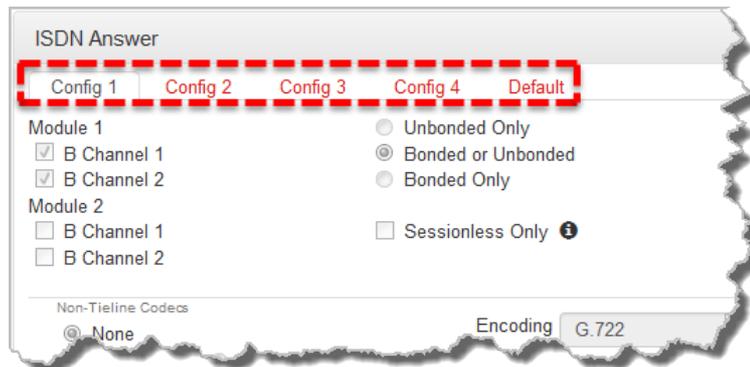

**Important Note:** B channels can only be selected once and are greyed out once they have been selected in one of the four ISDN **Configs**.

### Single B Channel Config

To use a single 64kbps B channel for a connection (e.g. a 1 x Mono Peer-to-Peer audio stream):

1. Click the **Edit** button to configure settings.
2. Select a B channel from those available and then click **Save**. **Unbonded Only** is the default


setting if only one B channel is selected.



## Multiple B Channel Bonding Config

A point-to-point audio stream can also bond multiple B channels to create higher bandwidth connections.

1. Click the **Edit** button to configure settings.
2. In the following example, two B channels from **Module 2** have been selected within **Config 2**. Note that **B Channel 1** in **Module 1** has already been selected in **Config 1** and is therefore greyed out and unavailable in **Config 2**.

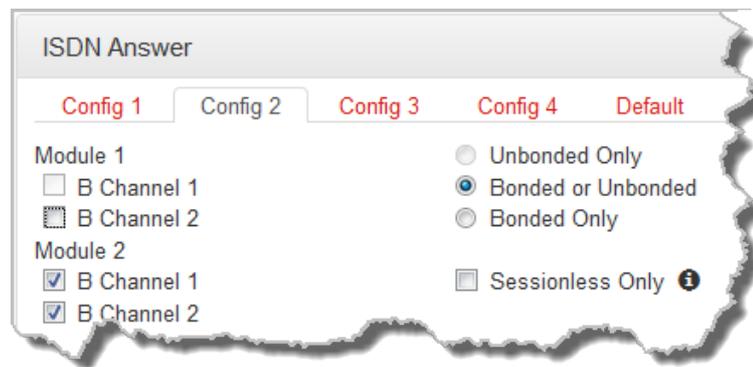

3. Configure the bonding setting that best suits the audio stream with which this **Config** is associated. **Bonded or Unbonded** is the best setting in most situations.


Bonding Setting	Behavior
Unbonded Only	Unbonded single B Channel
Bonded or Unbonded (May Bond)	Calls using the same algorithm from the same Teline codec, or sessionless calls, will attempt to bond when received. Calls using incompatible algorithms will not be bonded
Bonded Only	Will only bond compatible algorithms. This mode will reject incompatible calls which cannot be bonded, e.g. G.711 and G.722

3. Click **Save** to apply changes to the **Config**.


## Dial and Answer Route Settings in Programs

**Dial Route** and **Answer Route** tags allow you to associate a B channel (or channels) in a **Config** with a particular incoming audio stream from either Teline or non-Teline codecs. This is not necessary in simple point-to-point ISDN audio stream configurations, however it is very useful in multiple audio stream codecs using multiple B channels. When dialing Teline to Teline over ISDN using the Merlin or Genie family of codecs, you can configure a **Dial Route** in the dialing codec's

program and a corresponding **Answer Route** in the answering codec's program. This will ensure a particular audio stream is routed between two codecs consistently.

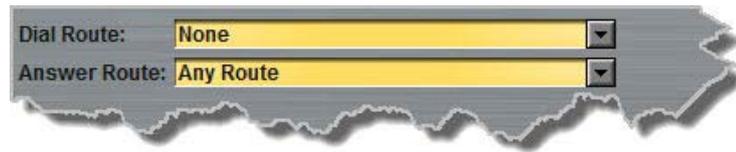

In principle, the concept of 'routes' operates similarly to how audio ports are used to route multiple audio streams over IP. Selecting different IP audio port numbers allows users to define which incoming IP audio stream is routed to a specific answering audio stream configuration on the codec. This ensures inbound calls from multiple codecs can be consistently routed to the same answering codec audio streams, and therefore the same inputs and outputs. Following is an example of how to consistently route incoming ISDN audio streams using dial and answer routes.

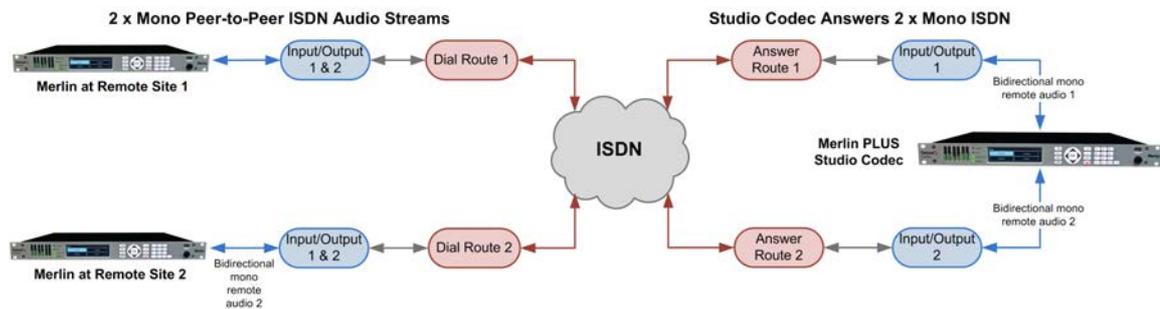

### Answer Routes for Non-Tieline (Sessionless) ISDN Calls

In some situations you may receive a call from a non-Tieline codec which doesn't support session data and **Dial Route** tags. In this situation you can still specify the audio stream **Route** on the answering codec using **Config 1-4** in **ISDN Answer**. You can also select the default algorithm.

For example, if a call from a non-Tieline codec is being received via **B Channel 1** on **Module 1** (i.e. no **Dial Route** has been specified in the dialing codec):

1. Click the **Edit** button to configure settings.
2. Select a **Route** for this B channel in one of the four **Configs** within **ISDN Answer**, e.g. **Route1**, then select the default **Encoding** algorithm to use when connecting (default setting is **G.722**).



3. Click **Save** when configuration is complete to store the new **Config** settings.
4. This will associate the incoming call with a corresponding **Answer Route** configured in the answering codec program, e.g. **Answer Route 1**.




More detailed information about how to configure the codec to answer and route multiple sessionless ISDN calls is available in [Using ISDN Answer Routes for Sessionless ISDN Calls](#). This uses examples to explain how to set up consistent deterministic routing of multiple incoming sessionless calls.

## Answering both Tieline Session and Sessionless ISDN Calls

Leave the **Sessionless Only** check-box in the **ISDN Answering Config** unchecked if the codec is expected to receive ISDN calls from Tieline codecs, or both Tieline and non-Tieline codecs (i.e. you are not sure which type of codec may call). In this mode, when the codec answers a call it initially expects to receive Tieline session data from the dialing codec and configure its own algorithm settings according to that. If it fails to receive Tieline session data within 5 seconds (i.e. a non-Tieline codec is calling, or a Tieline codec with session data disabled), it will use the settings in the **ISDN Answering Config** instead.


The following image displays how the answering codec will behave in this mode when receiving calls from both Tieline and non-Tieline codecs.

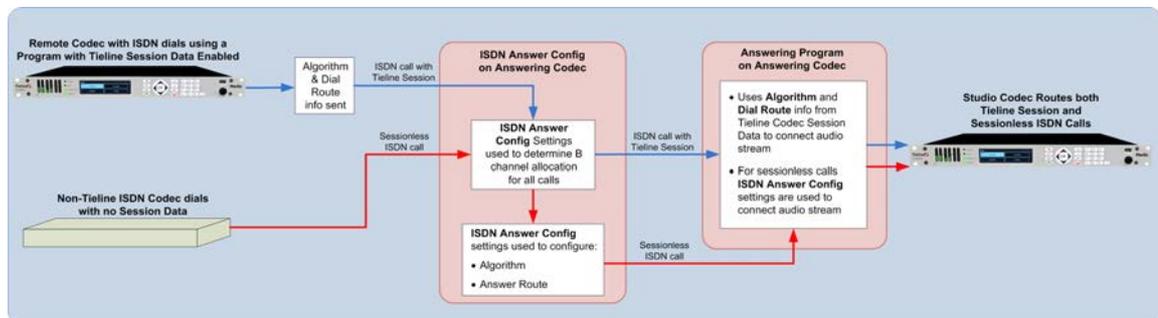

## Allow Answering of Sessionless ISDN Calls Only


Select **Sessionless Only** when answering ISDN calls from non-Tieline codecs only. When **Sessionless Only** is selected, the codec will not wait to receive the Tieline session data. This reduces the time taken to answer an inbound sessionless call.

The following image displays how the answering codec will respond with **Sessionless Only** selected, i.e. calls from both Tieline and non-Tieline codecs are always regarded as sessionless.

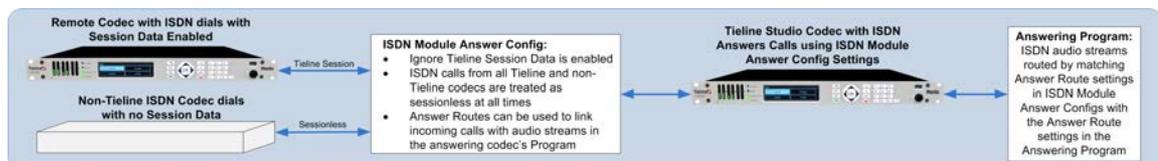

## Answering Multiple ISDN Calls from Tieline and non-Tieline Codecs

Tieline codecs capable of answering multiple incoming audio streams can be configured to answer both Tieline session data and sessionless ISDN calls at different times. They can also support connections using other transports such as IP or POTS. The following example shows how a Tieline codec can be configured to answer up to 4 separate mono ISDN calls at different times from both Tieline and non-Tieline codecs, as well as two mono IP audio streams.

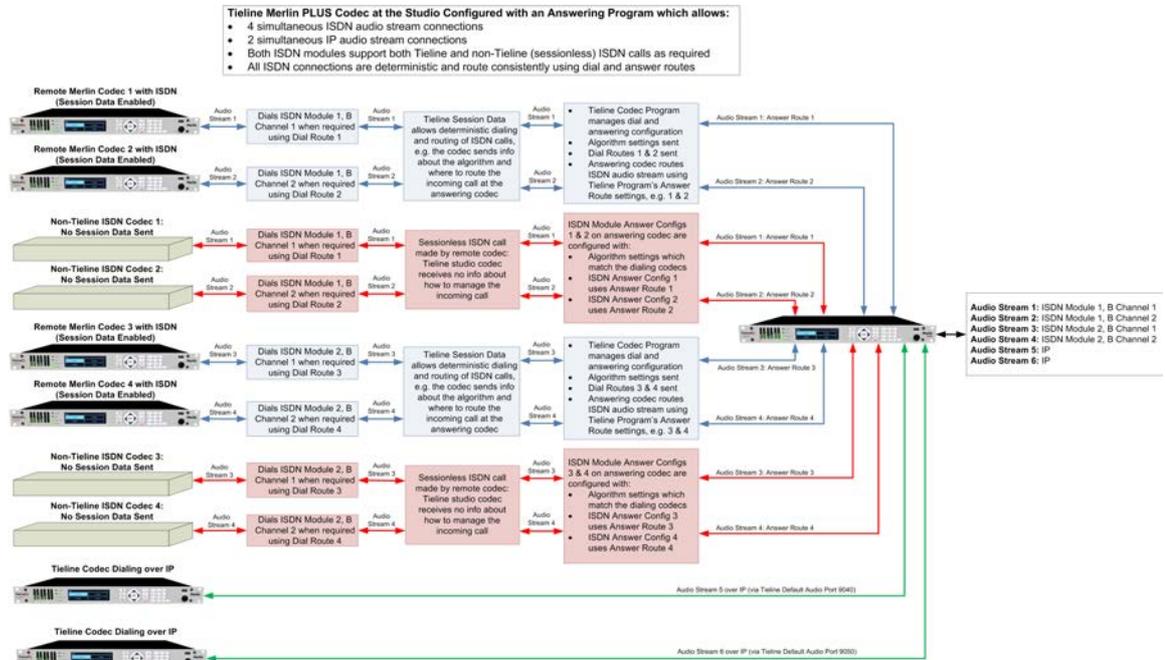

## Default Answering Settings

When a B channel is not associated with a **Config** it inherits the following default settings:

- Tieline Session
- Unbonded
- G.722 algorithm
- Audio route: None

## 19.4 Configuring POTS

Two slots are available for inserting optional POTS modules into the codec. These can be configured using the codec front panel or the HTML5 Toolbox Web-GUI. See [About POTS Modules](#) for additional information on POTS.

You can use the Java Toolbox Web-GUI to configure a dial and/or answer program with POTS settings. You may also need to:

1. [Configure POTS module settings.](#)
2. [Configure POTS Answering settings.](#)

### 19.4.1 Configuring POTS Modules

POTS settings in the **Modules panel** menu determine how your codec will connect at a particular site. You can copy similar programs between codecs installed at different locations and also configure site-specific settings for how each module should connect. The default **Config** settings for POTS modules are designed to suit Tieline codecs. These settings will need to be adjusted to connect to non-Tieline POTS codecs or connect in **Analog Phone** mode.


#### Configuring POTS G5 Modules

1. Open the HTML5 Toolbox Web-GUI and click **Modules** to view and configure POTS site settings.




**Important Notes:** The POTS module **Status** is displayed in the **Modules panel**. **No Phone Line** is displayed when a cable is detached; **Ready** is displayed when a cable is attached and the line voltage is good.

2. Click to select **Module 1** or **Module 2**.
3. Click the **Edit** button to configure settings.
4. Click the drop down arrow to adjust the **Answer Mode** and select how the module in the codec will be able to answer incoming POTS calls. Options include:
  - **POTS Codec:** allows the POTS G5 module to receive incoming audio data over a POTS line.
  - **Analog Phone:** configures the POTS G5 module to receive a standard analog phone call.
  - **Disabled:** disables the POTS G5 module from receiving a **POTS Codec** or **Analog Phone** call.

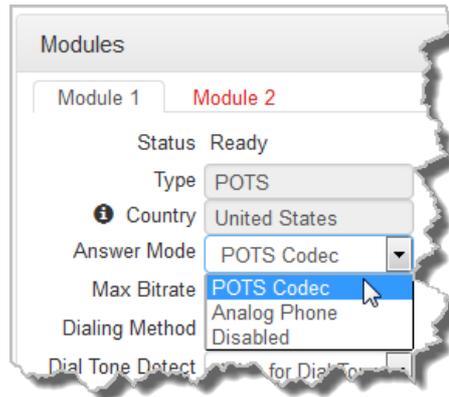


Calls are answered based on the **POTS Answer settings** in **Config 1 & 2**. Adjustments to these **Config** settings are not normally necessary when connecting between Tieline codecs. They are usually adjusted when connecting to non-Tieline codecs over POTS (see [Configuring POTS Answering](#) for more info).

- Click the **Max Bitrate** drop-down arrow to adjust the maximum bit rate (dialing and answering). The default setting is **28800** (28.8kbps) and this only affects **POTS Codec** calls. The range of the setting is 9.6kbps to 33.6kbps. Even if the line is capable of establishing a connection at a higher bit rate, the **Max Bitrate** setting is the highest bit rate that will be attempted. Reducing this value can improve connection reliability on poor quality lines. If two codecs are not configured with the same setting, they will attempt to connect at the lowest of the two **Max Bit rate** settings.

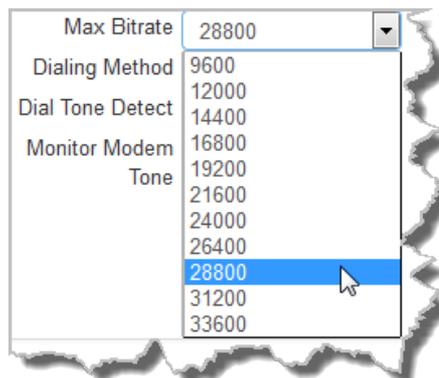

**Important Note:** G5 POTS modems initially attempt to establish a link at the lowest **Max Bitrate** setting configured in the two modules being connected. If the POTS line doesn't support this bit rate, the modems will attempt to connect at the highest possible bit rate to suit the prevailing line quality at each end of the link.


- Click the drop-down arrow for **Dialing Method** to select **Tone** (DTMF) or **Pulse** dialing over POTS Codec connections. Tone dialing is used always when the **Answer Mode** is **Analog Phone**.

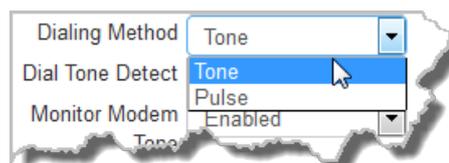

- Click the drop-down arrow for **Dial Tone Detect** to select either:

- Wait for Dial Tone:** The module will only be allowed to dial when a dial tone is present on the line.

- **Blind Dialing:** Allows the module to dial when no dial tone is present.

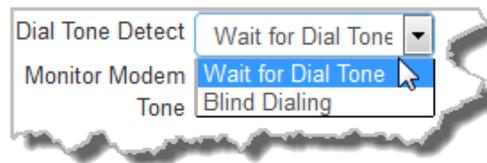

8. Click the drop-down arrow for **Monitor Modem Tone** to select either **Enabled** or **Disabled**.



When enabled the module will allow audio monitoring of modem tones during connection in **POTS Codec** mode via the phone input. By default, the following phone input monitoring rules apply when multiple POTS G5 modules are installed in a codec and multiple POTS connections are dialed.

Module 1	Module 2	Audio Rule
POTS Codec (Monitor Modem Tone)	POTS Codec (Monitor Modem Tone)	The phone input receives a mix of modem tone audio from both modules
POTS Codec (Monitor Modem Tone)	Analog Phone	The phone input receives analog phone input audio only and mutes modem tone monitoring
Analog Phone	Analog Phone	The phone input receives audio from the oldest active connection only



#### Important Notes:

- Modem tone monitoring will work even if **Phone Input Enable** is **Off** via **Settings > Audio > Phone Input > Phone Input Enable [Off]**.
- Modem tone monitoring is only enabled during the initial connection training and negotiation period in **POTS Codec** mode.
- The monitoring volume can be adjusted using the codec front panel via **Settings > Audio > Phone Input > Level**, or by opening the **Inputs panel** in the Web-GUI and adjusting the **Phone** input volume slider.

9. **Country** displays the current country setting in the codec. To adjust this setting select **Settings > System > Country**.

10. Click **Save** when configuration is complete.

## 19.4.2 Configuring POTS Answering

It is possible to store a different **POTS Answer Config** for each POTS module installed in the codec. POTS answering can be configured to suit:

- The type of call being made, e.g. Teline (with Teline Session Data) versus non-Teline (Sessionless).
- Expected dialing behaviors and encoding, e.g. whether audio streams use **Route** tags and which algorithm is used.

If you answer a call from a non-Teline codec you will need to create an answering "Config" to determine which module in the codec will answer the call and the settings used when connecting.

**Important Notes:**

- **POTS Answer Config** settings are applied to **POTS Codec** connections and not **Analog Phone** connections.
- When receiving a call from a Tieline codec with session data enabled (i.e. not **Sessionless**), the algorithm setting from the dialing codec overrides the setting in the **POTS Answer Config** menu.

## POTS Config Settings

The default **POTS Answer** module **Config** settings, which can be viewed in the **POTS Answer** panel are:

- **Tieline Codecs** Session Data,
- The **Other** algorithm.

This configuration will accept the settings from an incoming Tieline codec when it dials with session data enabled. It will also allow the codec to answer a call from a Comrex POTS codec supporting the **Other** algorithm setting.

POTS Answer

Config 1 Config 2

Module 1

Sessionless Only ⓘ

Non-Tieline Codecs

Encoding Other

None

Route 1  Route 4


Route 2  Route 5

Route 3  Route 6

Edit

## Answering Calls from Non-Tieline POTS Codecs

1. Click the **Edit** button to configure settings.
2. Select the **Sessionless Only** check-box when only non-Tieline codecs are dialing a Tieline codec over POTS. This allows you to choose the default encoding setting and **Route** the incoming call to a nominated audio stream via a corresponding **Answer Route** in the answering codec program if required.

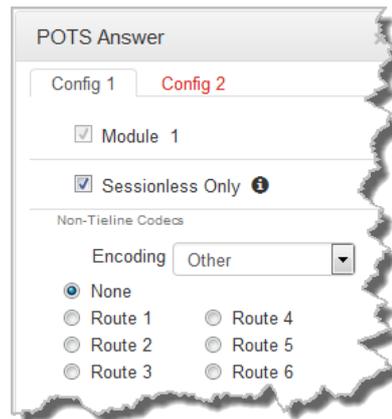


3. Click **Save** to apply changes to the **Config**.



**Important Note:** Select **Other** in the **Encoding** drop-down menu when connecting to Comrex® Vector, Matrix® and BlueBox® codecs. On the Comrex codec select its "Music" algorithm. Please note that 9.6kbps connections are not supported by the Comrex codecs.


## Dial and Answer Route Settings in Programs

**Dial Route** and **Answer Route** tags allow you to associate a POTS **Config** with a particular incoming audio stream from either Tieline or non-Tieline codecs.

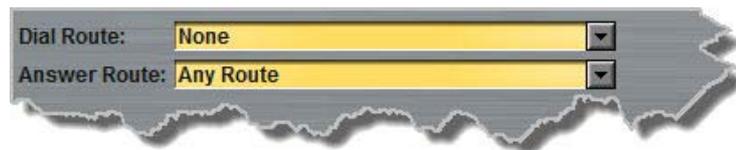

In principle, this operates similarly to how audio ports are used to route multiple audio streams over IP. Selecting different IP audio port numbers allows users to define which incoming IP audio stream is routed to a specific answering audio stream configuration on the codec. This ensures inbound calls from multiple codecs can be consistently routed to the same answering audio streams, and therefore the same inputs and outputs.

This is not necessary in simple point-to-point POTS audio stream configurations, however it is very useful in multiple audio stream codecs which support POTS connections. When dialing Tieline to Tieline over POTS using the Merlin or Genie family of codecs, you can configure a **Dial Route** in the dialing codec's program and a corresponding **Answer Route** in the answering codec's program. This will ensure a particular audio stream is routed between two codecs consistently.

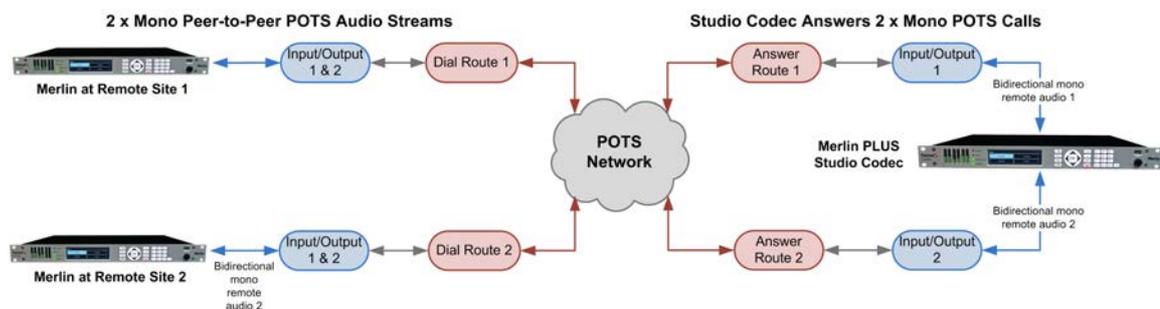


## Answer Routes for Non-Tieline POTS Codecs

In some situations you may receive a call from a non-Tieline POTS codec which doesn't support

**Dial Route** tags. In this situation you can still specify the audio stream **Route** on the answering codec using **Config 1 or 2** in **POTS Answer**. You can also select the default algorithm.

For example, if a call from a non-Tieline codec is received via POTS **Module 1** (i.e. no **Dial Route** has been specified in the dialing codec):

1. Click the **Edit** button to configure settings.
2. Select an answering **Route** for this POTS module in one of the two **Configs** available in the **POTS Answer panel**, e.g. **Route1**, then select the default **Encoding** algorithm **Other** (Note: **Other** is used for connecting to Comrex POTS codecs).

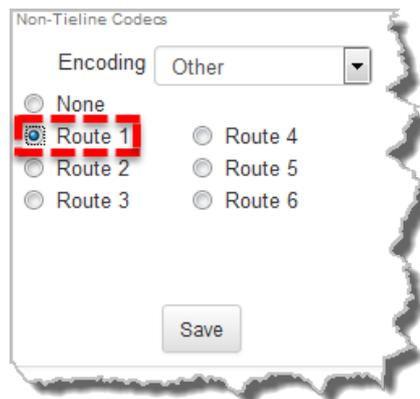

3. Click **Save Settings** to store the new **Config** settings.
4. This will associate the incoming call with a corresponding **Answer Route** configured in the answering codec program, e.g. **Answer Route 1**.



## 19.5 Configuring Input/Output Settings

Open the HTML5 Toolbox Web-GUI and click **Inputs** to display the **Inputs panel**.




**Important Note:** 15 volt phantom power can only be supplied on the Auxiliary input; this is disabled by default.

### Configuring Input Channel Settings

#### Renaming Input Channels:

1. Click the **Input Settings**  symbol on the input you want to rename.
2. Click in the **Name** text box to enter a new name, or edit an existing name.

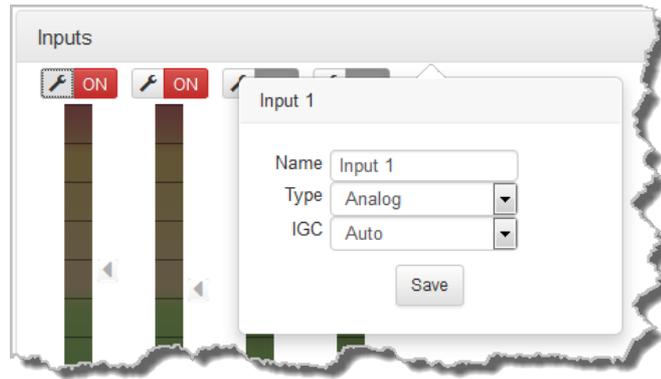


3. Click **Save** to confirm the name change.

### Selecting Analog and Digital Audio Sources:

Codec inputs are configured for analog line level audio sources by default.

1. Click the **Input Settings**  symbol.
2. Select **Type** and click to select either **Analog** or **AES3**.

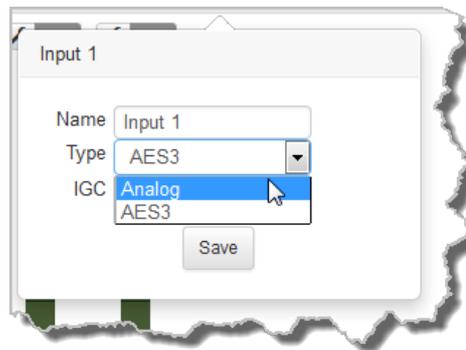

3. When you select AES3, an input is automatically configured for 100% input levels; input level and input on/off controls are unable to be adjusted.




**Important Note:** Input levels can only be adjusted on analog inputs. [See Configuring AES3 Audio](#) for more information about the digital inputs and outputs.

### Setting Analog Audio Levels

Audio levels on the **Input panel** should be set to ensure audio peaks average at the first yellow indications on the PPM meters, which represents +4dBu. These levels should also be checked against the **Input PPM Meters** on the **Master panel**.

## Other Input Controls

Adjust the **IGC** (Intelligent Gain Control) input settings to **Auto**, **Fixed** or **Off** as required.

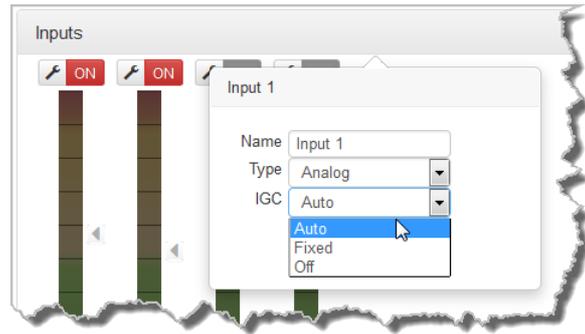


**Important Note:** When the auxiliary input (**AUX IN**) is **On** the default mixer configuration sends audio to all inputs. If you are not using the auxiliary input ensure it is **Off** to avoid additional noise in program audio.

## AES3 Output Sample Rate Configuration

The AES3 output sample rate can be configured using the HTML5 Toolbox Web-GUI.

1. Open the HTML5 Toolbox Web-GUI and click **Settings**, then click **Options** to open the **Options** panel.
2. Click the **Edit** button to configure settings.
3. Click the **AES Output Clock** drop-down menu to select your preferred **AES Output Clock** setting, then click **Save**.

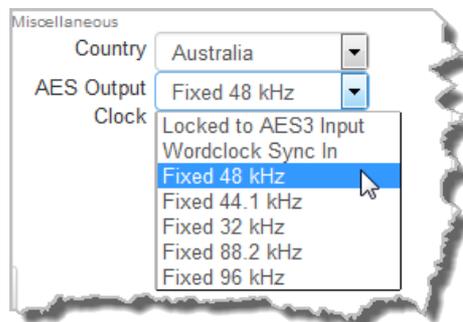

## 19.6 Configure SIP Settings

The codec is fully EBU N/ACIP Tech 3326 compliant when connecting using SIP (Session Initiation Protocol) to other brands of IP codecs.

### About SIP

SIP provides superior interoperability between different brands of codecs due to its standardized protocols for connecting devices and is intended to be used when connecting Tieline codecs to non-Tieline devices. Devices primarily use SIP to dial another device's SIP address and find its location with a minimum of fuss. This task is usually performed by SIP servers, which communicate between SIP-compliant devices to set up a call.

When connecting two devices, SDP performs similar tasks to Tieline's proprietary session data, which is used to configure all non-SIP IP connections. There are two very distinct parts to a call when dialing over IP. The initial stage is the call setup stage and this is what SIP is used for. The

second stage is when data transference occurs and this is left to the other protocols used by a device (i.e. using UDP to send audio data).

All the mandatory EBU N/ACIP 3326 algorithms are supported (G.711, G.722, MPEG-1 Layer 2 and 16 bit PCM), as well as optional algorithms including LC- AAC, HE-AAC and aptX Enhanced. The default algorithm selected when connecting using SIP is G.711.



#### Important Notes:

- Each codec should be registered to a different SIP server account to avoid connection conflicts.
- SIP account registration can only be configured via Ethernet port 1.
- SIP dialing is only supported over point-to-point connections, not multi-unicast connections.
- Tieline G3 codecs do not support connections using AAC and will default to MPEG Layer 2 if an incoming call is programmed to use this algorithm.
- Failover and SmartStream PLUS redundant streaming are not available with SIP connections.
- When connecting to a Tieline G3 codec using SIP you need to manually select the G3 audio reference level in the codec. To do this select **SETTINGS**  > **Audio** > **Ref Level** > **Tieline G3**. In addition, select the following on the G3 codec prior to dialing.
  - Select either a mono or stereo profile
  - Select **[Menu]** > **[Configuration]** > **[IP1 Setup]** > **[Session Type]** > **[SIP]**
  - Select **[Menu]** > **[Configuration]** > **[IP1 Setup]** > **[Algorithm]** > **[G711/G722 or MP2]**

## SIP Server Connections: Getting Started

Registering codecs for SIP connectivity is simple. First, choose the SIP server that you wish to register your codec with. On a LAN this may be your own server, or it could be one of the many internet servers available. We recommend that you use your own SIP server and configure it to use G.711, G.722, MP2 and AAC algorithms. This is because most internet SIP servers are for VoIP phones and are only configured for G.711 and GSM algorithms.


When you register an account with a SIP server you will be provided with:

- The SIP server IP address.
- A username (often the same as a SIP number).
- A password.
- Domain details.
- Realm details (sometimes).

## Configure the Codec for SIP using the Web-GUI

Use the HTML5 Toolbox Web-GUI to configure SIP account registration details in your codec. Once these details have been entered into the codec, each time it is connected to a public IP address it will contact the SIP server automatically to acknowledge its presence over a wide area network.

1. Connect your codec to a LAN connection with a public IP address, then login to the HTML5 Toolbox Web-GUI.
2. Click **Settings** at the top of the screen and then click SIP to display the **SIP panel**.

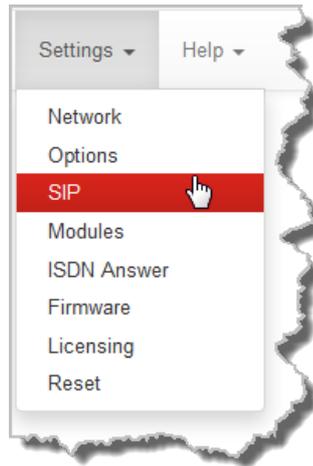

3. Click the **Edit** button to configure settings.
4. Enter the account details into the relevant text boxes.
5. Enter the **Registration Timeout** (this shouldn't need to be adjusted from the default setting).
6. Click to select the **Activate Account** check-box and click **Save** to create the account in the codec.

A screenshot of a 'SIP' configuration dialog box. The dialog has a title bar with 'SIP' and a close button. It contains several input fields: 'Session Port' (5060), 'SIP Server' (sip.iptel.org), 'Port' (5060), 'Username' (TielineTest3), 'Password' (masked with dots), 'Domain' (iptel.org), 'Realm' (empty), and 'Reg. Timeout' (3600). There is a checked checkbox for 'Activate account' and an 'Edit' button at the bottom.

7. Navigate to **SETTINGS**  > **SIP** > **Accounts** to verify that the account has been registered to the SIP server. The registration symbol  appears when it is activated successfully.



**Important Notes:** Some ISPs may block SIP traffic over UDP port 5060.

## 19.7 Load, Unload and Dial a Program


To load and dial a program it is necessary to open the **Program Loader panel** and **Connections panel**. Use the **Program Loader panel** to load a program and then manage connecting and disconnecting using the **Connections panel**.



**Important Notes:** The HTML5 Toolbox Web-GUI currently does not support the creation of new programs. Use the [Java Toolbox Web-GUI](#) to create a new program.

### Loading a New Program

1. Open the HTML5 Toolbox Web-GUI and click **Master** and then click **Program Loader** to open the **Program Loader panel**.
2. Click to select a program in the **Program Loader panel** and then click **Load** to load the program in the codec.

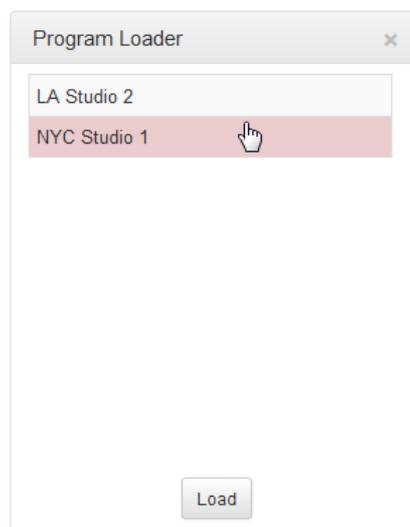


Note: the currently loaded program has the check-box symbol displayed next to its name.




### Connecting a Program

To connect audio streams and connections within an existing program there are three options:

1. Click the program **Connect/Disconnect**  symbol and then click **Connect**; this connects all active audio streams and connections associated with the program.

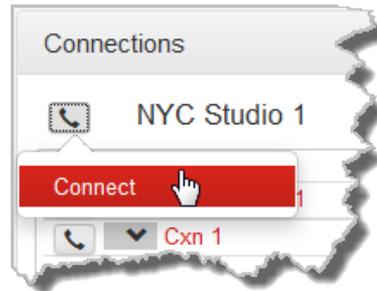

2. Click the audio stream **Connect/Disconnect**  symbol and then click **Connect**; this connects all connections associated with this audio stream.

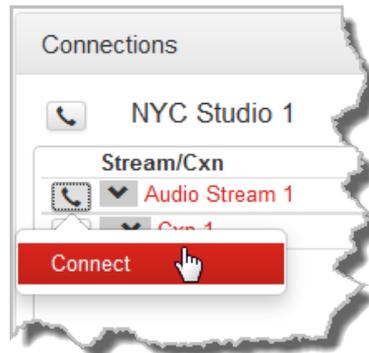


3. Click the connection **Connect/Disconnect**  symbol and then click **Connect**; this connects an individual audio stream connection.




## Disconnect a Program

To disconnect audio streams and connections within an existing program there are three options:


1. Click the program **Connect/Disconnect**  symbol and then click **Disconnect** to disconnect a program; this includes all audio streams and connections associated with the program.

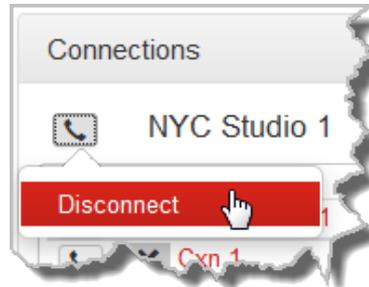

2. Click the audio stream **Connect/Disconnect**  symbol and then click **Disconnect** to disconnect an individual audio stream and all associated connections.

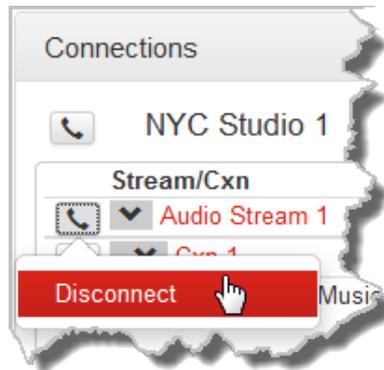


3. Click the connection **Connect/Disconnect**  symbol to disconnect an individual audio stream connection.

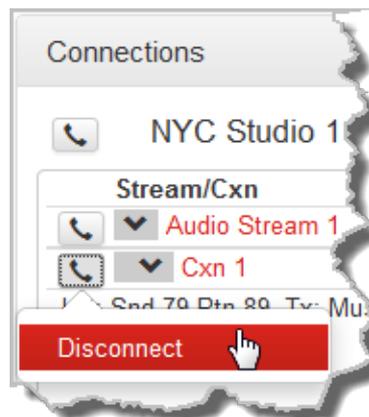

## Unloading a Program


1. Click to select the loaded program in the **Program Loader panel** and then click **Unload** to unload the program in the codec.

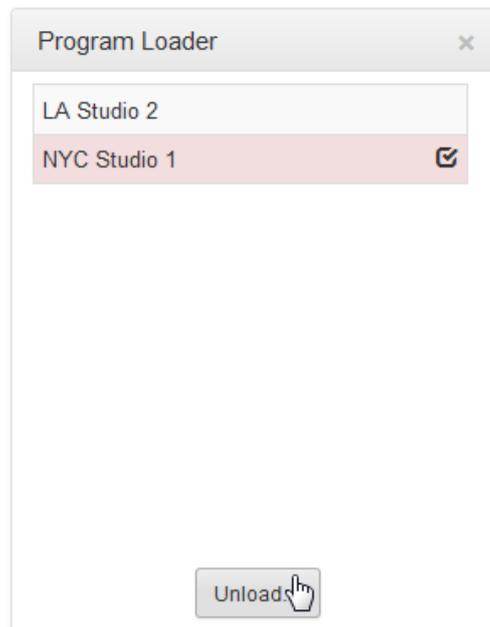


## 19.8 Reset Factory Default Settings

There are several options which allow you to restore factory default settings within the codec. See [Reset and Restore Factory Defaults](#) for more details on each option.


1. Open the HTML5 Toolbox Web-GUI and click **Settings** at the top of the screen, then click **Reset** to display the **Reset panel**.

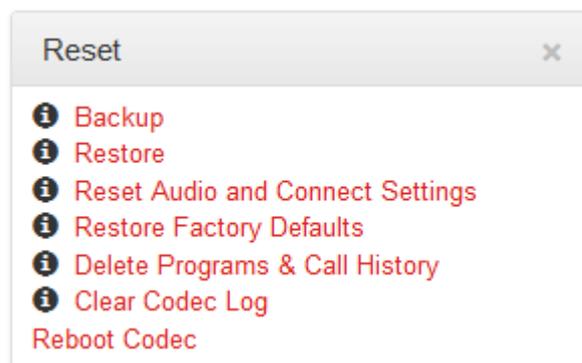

2. Click one of the available reset options to adjust codec settings, or reboot the codec. Note: Hover with the mouse pointer over the **Information** **i** symbol to view a tool-tip for each reset option..

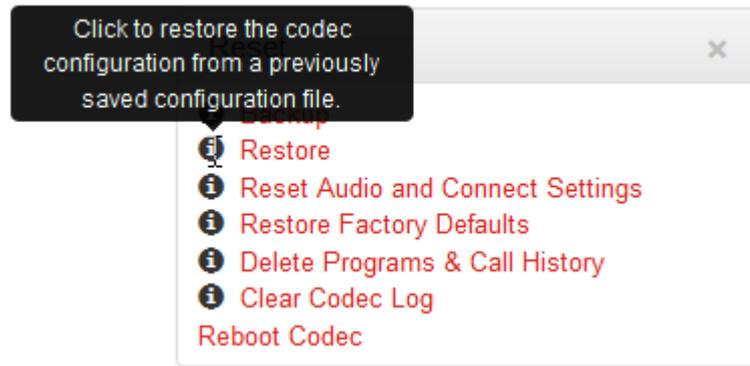

4. A confirmation dialog appears for each option; click **Yes** to proceed.

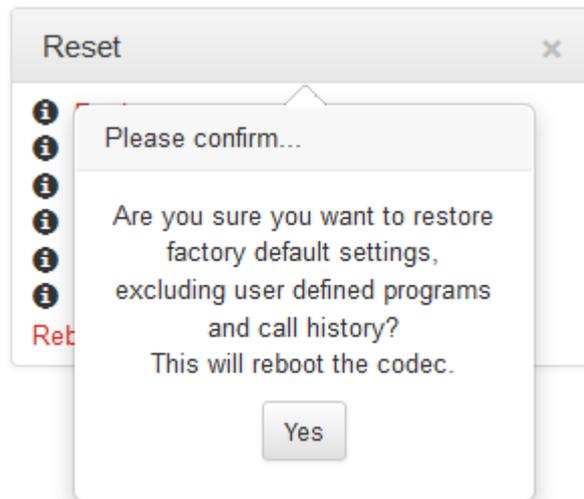

## 19.9 Backup and Restore Functions

The HTML5 Toolbox Web-GUI can be used to backup and restore codec settings, including:


- Programs containing a variety of connection settings.
- All system settings that have been adjusted to change the factory default codec settings (current runtime settings).

Files can also be used to copy configurations onto other similar codecs. Programs are essentially connection profiles that may include:


- Program, audio stream and connection names.
- IP address, port, algorithm, jitter buffer, FEC and bit rate settings (etc.) for audio stream connections.

### Creating Backup Files

1. Open the HTML5 Toolbox Web-GUI and click **Settings** at the top of the screen, then click **Reset** to display the **Reset panel**.

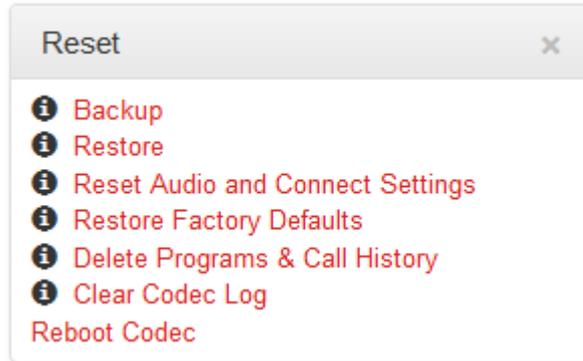


2. Click **Backup**.
3. Click to select the check-boxes to confirm your backup requirements, then click **Backup**.

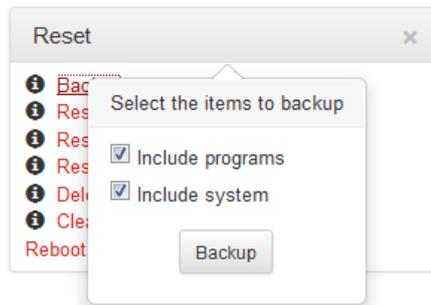


4. Select a location on your PC to save the configuration file. Note: You may need to "allow" your browser to display the pop-up dialog.

## Restoring Configuration File Settings

1. Open the HTML5 Toolbox Web-GUI and click **Settings** at the top of the screen, then click **Reset** to display the **Reset** panel.
2. Click **Restore**.
3. Click to select the check-boxes and confirm your restore settings. For example, you could select the **Include programs** check-box and deselect the **Include system** check-box if you are only copying programs onto codecs.

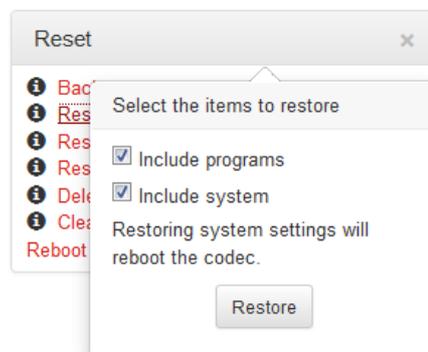

4. Click **Restore** and select the .tgz file you want to load onto the codec. A **Success** dialog confirms the files are restored.

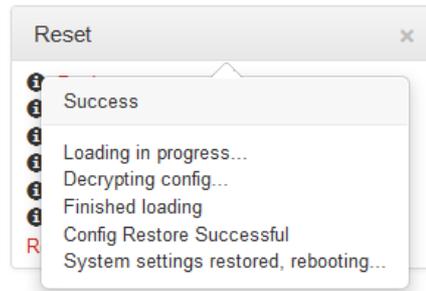

Note: The codec will automatically reboot if you restore system settings.

## 19.10 Lock or Unlock Programs

It is possible to lock a loaded custom program in a codec to ensure the currently loaded program type, e.g. mono, cannot be unloaded by a codec dialing in with a different program type, e.g. stereo. For example, if you require the codec at the studio to always connect in mono, simply load and lock a mono program in the codec. Generally programs will be up or down-mixed by the answering codec to match the loaded program type. In some situations incompatible program types will be rejected.

1. Open the HTML5 Toolbox Web-GUI and click **Settings** at the top of the screen, then click **Options** to display the **Options panel**.
2. Click the **Edit** button to configure settings.
3. Click the **Lock Loaded User Program** check-box to lock or unlock a user program in the codec.

4. Click **Save** to store the new configuration.



### Important Note:

- A black **Padlock** symbol appears next to the program name in the **Connections panel** and in the **Program Loader panel**, to indicate a program is locked in the

codec.

- It is only possible to lock custom programs in a codec.
- If **Lock Program** is enabled and you load a new custom program in the codec, **Lock Program** remains enabled and locks the most recently loaded custom program.

## 19.11 Configuring SNMP in the Codec

The codec supports Simple Network Management Protocol (SNMP ) for managing devices on IP networks. There are two elements to configuring SNMP in your codec:

1. Configure SNMP Device settings in your codec.
2. Configure SNMP Traps via the **Alarms Panel** in the Web-GUI (see [SNMP Trap Configuration](#) in Configuring Alarms, or to configure using the codec front panel see [Configuring SNMP Settings](#)).

### Description of SNMP Settings in the Codec

Features	Operation Button Descriptions
<b>Codec Name</b>	A user-specified alphanumeric identifier which may be used by third-party SNMP software to identify a device. The device name corresponds to the ".iso.org.dod.internet.mgmt.mib-2.system.sysName" SNMP attribute and is completely independent of DNS, NIS, WINS or other device naming and identification schemes, though convention is to use the device's fully-qualified domain name.
<b>Codec Location</b>	A user-specified alphanumeric string which may be used by third-party SNMP software to identify a device. Device location corresponds to the ".iso.org.dod.internet.mgmt.mib-2.system.sysLocation" SNMP attribute.
<b>Contact</b>	A text identifier for the contact person for this managed node, together with information on how to contact this person.
<b>R/O Community</b>	SNMP provides two types of access, namely Read-Only access and Read-Write access. The R/O Community identifier allows Read Only level access.
<b>R/W Community</b>	The R/W Community identifier allows Read/Write level access.

### Configuring SNMP Settings in the Codec

1. Open the HTML5 Toolbox Web-GUI and click **Settings** at the top of the screen, then click **Options** to display the **Options panel**.
2. Click the **Edit** button to configure settings.
3. Click in the text boxes to enter SNMP configuration settings.

Options

Tieline Session RS232

Session Port: 9002

Alt. Session Port: 9012

Programs QOS

Lock Loaded User Program

SNMP Miscellaneous

Contact

Codec Location

R/O Community public

R/W Community tielineRW

Save

4. Click **Save** to store the new configuration.

## MIB Files for SNMP Configuration

Management Information Base (MIB) files are required for SNMP applications to interact with your Tieline codec and interpret SNMP data. The codec supports SNMPv1 and SNMPv2 MIB protocols. The required MIB files can be downloaded from the codec using the following link in a PC web browser connected to the same network as your codec:

- [http://<YOUR\\_CODEC\\_ADDRESS>/mibs/tieline-mibs.zip](http://<YOUR_CODEC_ADDRESS>/mibs/tieline-mibs.zip)

Save the .zip file to your PC and import the contents into the MIB browser you use to manage SNMP-enabled network devices.



**Important Note:** The codec supports the attributes specified in the MIB-II standard. Please verify that your SNMP software contains the required files as specified in [RFC 1213](#).

## 19.12 Download Logs

The codec is capable of providing diagnostic information via user logs, which can either be sent to Tieline support, or downloaded for user diagnostics.

### Procedure for Sending Logs to Tieline

1. Open the HTML5 Toolbox Web-GUI and click **Settings** in the **Menu Bar**, then click **Help** to display the **Help panel**.
2. Click **Download Logs**.



3. Save the file to your computer and then send it as a .zip file to Tieline support via [support@tieline.com](mailto:support@tieline.com)

### Download Event Logs

Event logs can be downloaded from the codec and viewed in your browser.

1. Open the HTML5 Toolbox Web-GUI and click **Settings** in the **Menu Bar**, then click **Help** to display the **Help panel**.
2. Click **Download Event Log** to view the log in a new web-browser window.




## Clearing Logs

This option should only be used if instructed to by Tieline support staff. To clear all event and other logs in the codec via the front panel, see the [Reset and Restore Factory Default Settings](#) section of this manual, or see [Reset Factory Default Settings](#) to clear recent log history using the Web-GUI.


## 19.13 Configuring Alarms

Open the HTML5 Toolbox Web-GUI and click **Alarms** to open and view panels used to configure and monitor a range of alarms.

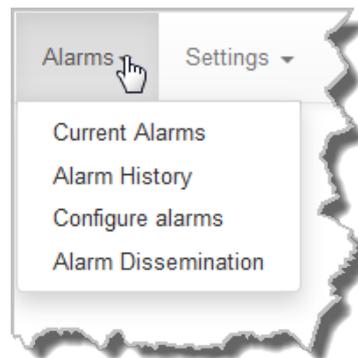


## Configure and Enable Alarms

1. Open the HTML5 Toolbox Web-GUI and click **Alarms**, then click **Configure alarms** to open the panel.

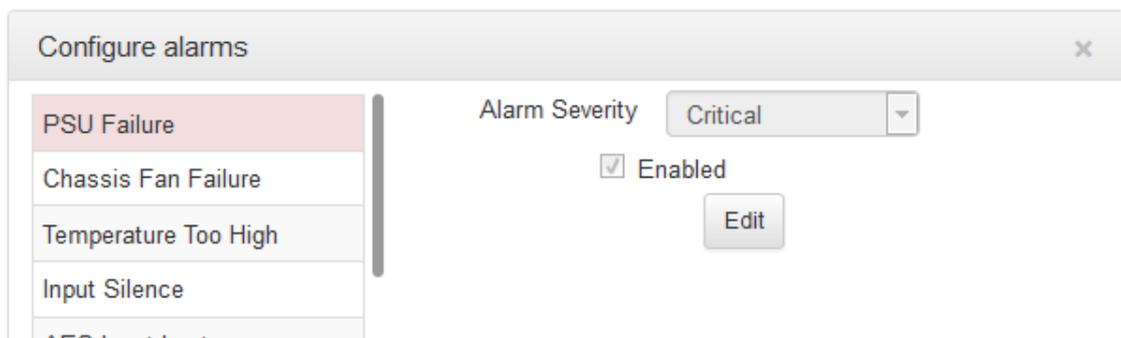

2. Click to select an alarm from the list on the left side of the panel.
3. Click **Edit** to configure alarm settings.
4. Click the **Enabled** check-box to activate the alarm and then select an Alarm Severity level from the drop-down menu.

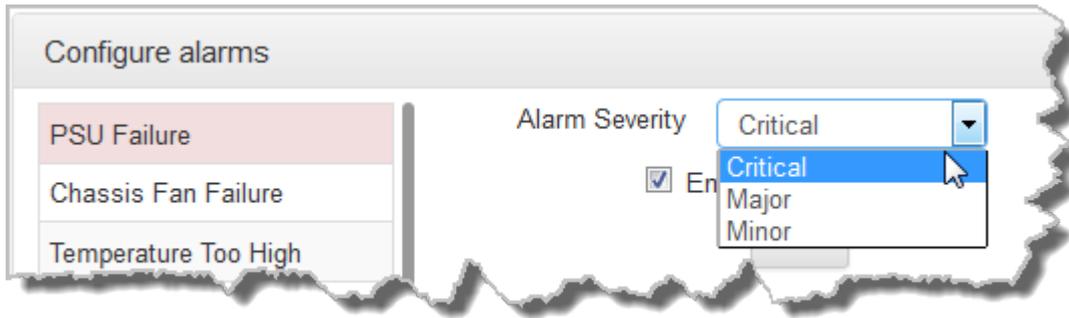

3. Click **Save** to store the new settings.


Note: The following **System** and **Audio** alarms are available:

Alarm	Alarm Type	Explanation
PSU Failure	System	Raises an alarm if one or both PSUs fail
Chassis Fan Failure	System	Raises an alarm if the internal fan fails
Temperature Too High	System	Raises an alarm if the temperature is too high
Input Silence	Audio	Raises an alarm if input audio is lost (according to preconfigured silence detection threshold parameters)
AES Input Lost	Audio	Raises an alarm if the AES input signal is lost (not available in WheatNet-IP capable codecs)
AES Reference Lost	Audio	Raises an alarm if the AES reference clock signal is lost (not available in WheatNet-IP capable codecs)


## Configuring an Alarm's Severity Level

Codec alarms can be configured for three different severity levels:

1. Click to select an alarm from those displayed in the **Configure alarms** panel.

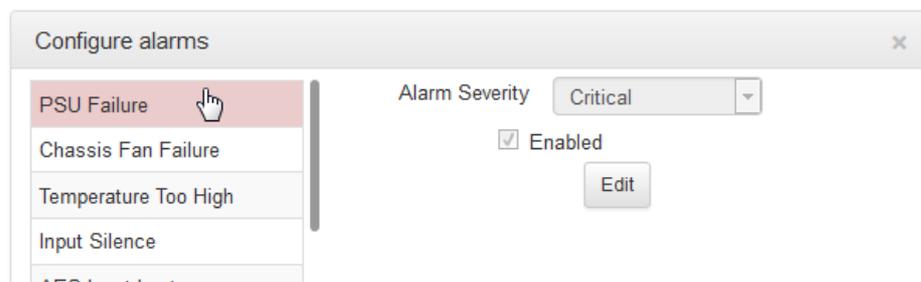

2. Click **Edit** to configure alarm settings.
3. Click the **Alarm Severity** drop-down menu and select the preferred severity level.

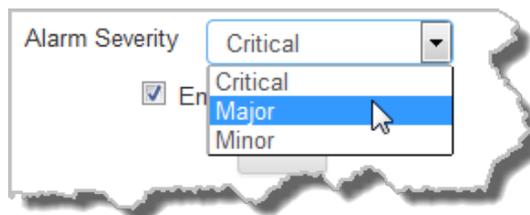


4. Click **Save** to store the new settings for the selected alarm.


## Configuring Alarm Dissemination Severity Alerts

Alerts for each alarm severity level are configured using the **Alarm Dissemination** panel.

1. Open the HTML5 Toolbox Web-GUI and click **Alarms**, then click **Alarm Dissemination** to open the panel..

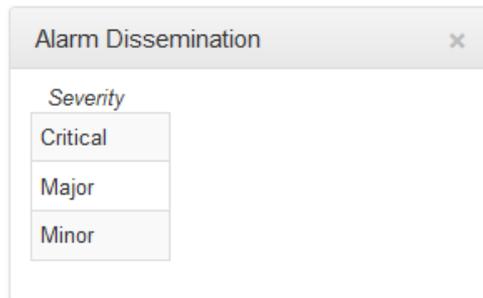

2. Click to highlight the **Alarm Severity** level you want to configure.

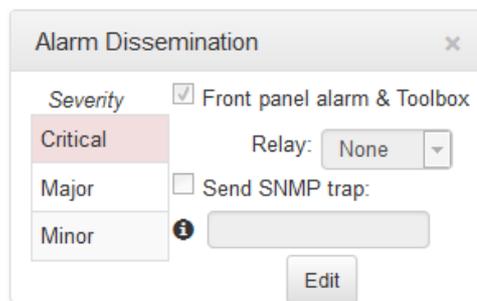

3. Click **Edit** to configure notification settings.
4. Click **Save** to store the new settings.

## SNMP Trap Configuration

Simple Network Management Protocol (SNMP) is a protocol used to manage devices on IP networks. SNMP provides the ability to send traps (notifications or alerts), which are packets containing data relating to a system component. These packets are generated by agents on a managed device and may be either statistic or status related. Please see your system administrator if you require more information.

1. Click to select the **Send SNMP trap** check-box.



2. Enter the SNMP trap target in the text box, then click **Save** to store the new settings.

## Configuring Input Silence Detection Parameters

When configuring an **Input Silence** alarm it is also necessary to configure the audio silence thresholds and timeout duration.

1. Click **Input Silence** to select the alarm.

2. Click **Edit** to configure alarm settings.
3. Configure the dBFS threshold and timeout duration in seconds and ensure the input **Enabled** check-boxes are selected. An alarm will be raised when these thresholds are breached.

4. Click **Save** to store the new input silence alarm settings.

### 19.13.1 Managing Alarms


Open the HTML5 Toolbox Web-GUI and click **Alarms**, then click **Current Alarms** to view active alarms.

Severity	Time ▲	State	Type	Asset
Major	2010-04-25T22:56:21	Active	AES Input Lost	AES Inputs: 1,2

## Viewing Current Alarms

Active alarms are indicated by:

1. The red **Alarm Symbol** flashing in the toolbar of the HTML5 Toolbox Web-GUI screen.

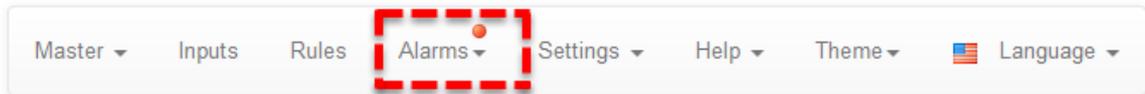

2. All new alarms being listed in the **Current Alarms panel**.
3. Other alerts as per **Alarm Dissemination panel** settings.
4. The codec front panel **ALARM LED** flashing red.




**Important Note:** When a connection is active the front panel **CONNECTED LED** is illuminated solid green. Illumination will cease if a connection is lost.

## Acknowledging Alarms

To acknowledge an alarm in the **Current Alarms panel**:

1. Click to select the alarm in the **Current Alarms panel**.

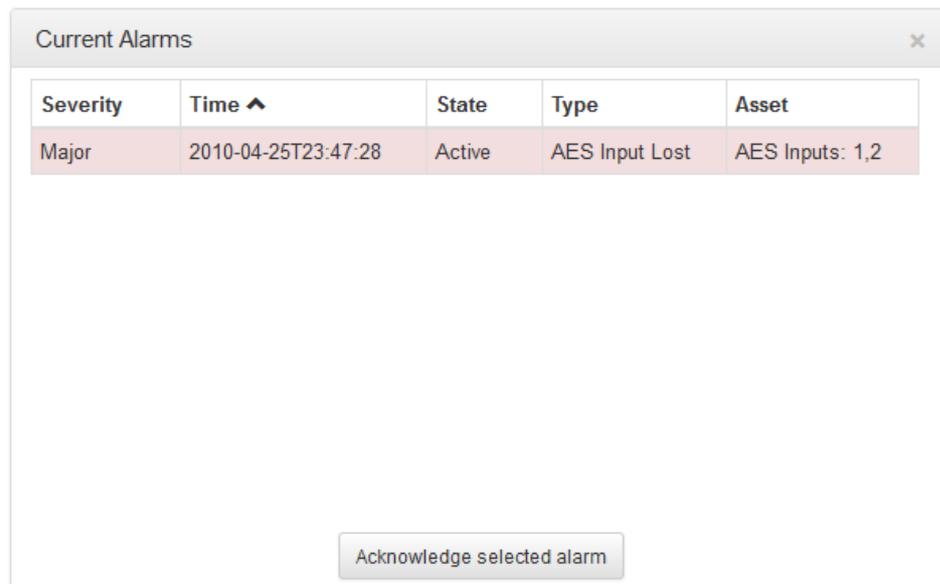

2. Click **Acknowledge selected alarm**.

After acknowledging the alarm:

1. The **State** will change from **Active** to **Acknowledged**.
2. The red **Alarm Symbol** will stop flashing but remain visible in the toolbar of the HTML5 Toolbox Web-GUI screen.
3. The codec front panel **ALARM LED** will stop flashing and illuminate solid red.
4. The state of other alerts may change, as per **Alarm Dissemination panel** settings.

Alarm State	Front Panel Alarm LED	Web-GUI Alarm Symbol
<b>Active</b>	Flashing red	Flashing
<b>Acknowledged</b>	Solid red	Stops flashing, remains solid red

## Deactivating Alarms


An alarm is deactivated automatically when the alarm state is reversed. E.g. if power is restored after a **PSU Failure** alarm, or if audio is restored after an **Input Silence** alarm.

### Deactivating Input Silence Alarms

An **Input Silence** alarm is activated when the configured audio and duration thresholds have been breached. To recover from this alarm state the codec must detect input audio higher than the failure threshold. When audio at this level is detected, the codec monitors input audio to ensure it doesn't drop below the recovery threshold setting more than 5 times within the nominated **Input Silence** duration time. The alarm is then deactivated automatically.

## Alarm History

1. Open the HTML5 Toolbox Web-GUI and click **Alarms**, then click **Alarm History** to display a record of all system alarms which have been raised.

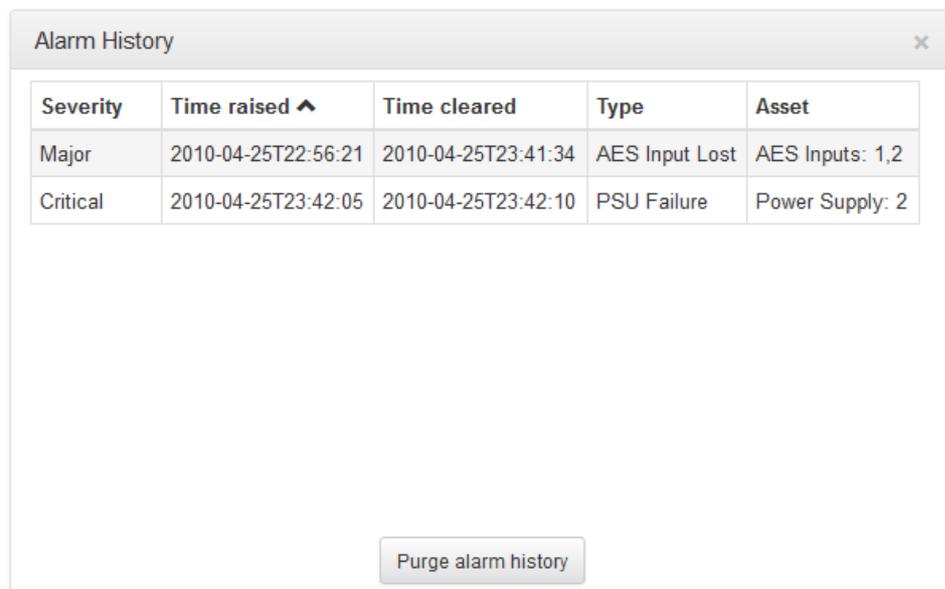

Severity	Time raised ^	Time cleared	Type	Asset
Major	2010-04-25T22:56:21	2010-04-25T23:41:34	AES Input Lost	AES Inputs: 1,2
Critical	2010-04-25T23:42:05	2010-04-25T23:42:10	PSU Failure	Power Supply: 2

Purge alarm history

Click the **Purge alarm history** button to clear all alarms from the **Alarm History** panel.

## 19.14 RS232 Data Configuration


The codec supports both in-band and out-of-band data depending on the connection transport and algorithm you are using. RPTP data is automatically enabled when using the Tieline Music or MusicPLUS algorithms over any transport. Over IP it is also possible to enable synchronized out-of-band data using any algorithm.

Algorithm Selected	IP	ISDN and POTS
<b>Tieline Music and MusicPLUS</b>	<ul style="list-style-type: none"> <li>In-band RPTP data enabled automatically</li> <li>Synchronized out-of-band data can be enabled and disabled</li> </ul>	<ul style="list-style-type: none"> <li>In-band RPTP data enabled automatically</li> </ul>
<b>All other algorithms</b>	<ul style="list-style-type: none"> <li>Synchronized out-of-band data can be enabled and disabled</li> </ul>	<ul style="list-style-type: none"> <li>No in-band or out-of-band data available</li> </ul>

The codec can be connected to external devices and send RS232-compatible data via the serial port on the rear panel of the codec. To enable RS232 data within a connection, select **Enable Auxiliary Data** when creating a program in the **Programs panel** wizard. Alternatively, select using the codec **Setup** menu (see [Enabling RS232 Data](#)).

### Setting RS232 Data Rates and Flow Control

1. Open the HTML5 Toolbox Web-GUI and click **Settings** in the **Menu Bar**, then click **Options** to display the **Options panel**.
2. Click the **Edit** button to configure settings.
3. Click the **Baud rate** drop-down menu arrow to select the serial port baud rate which matches the baud rate of the external device connected to the RS232 port on the codec.
4. Click to select the **Enable flow control** check box and enable flow control, then click **Save** to store the new settings.

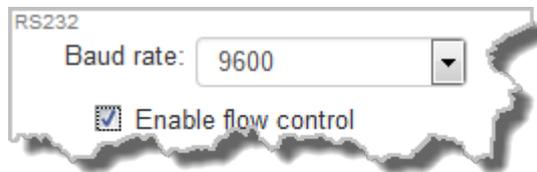

#### Important Notes:

- When connecting to G3 codecs over IP, ISDN or POTS only in-band data is available via the Music and MusicPLUS algorithms.
- Use firmware higher than 2.8.xx in the Bridge-IT, Genie and Merlin families of codecs to enable auxiliary data over multicast connections.
- It is important to enable serial port flow control as it regulates the flow of data through the serial port. If disabled, data will flow unregulated and some may be lost.
- Ensure you configure the serial port baud rate to match the setting of the external device to which you are connecting. Ideally the settings on both codecs should match, or you could have data overflow issues.
- Only the dialing codec needs to be configured to send RS232 data. Session data sent from the dialing codec will configure all other compatible codecs (non-G3) when you connect.
- RS232 data can be sent from the dialing codec to all endpoints of a multi-unicast or multicast connection if your codec is capable of these connections. Note: Bidirectional RS232 data is only available on the first connection dialed when multi-unicasting.

## 19.15 Creating Rules

The **Rules panel** in the Toolbox Web-GUI is used to program events for specific codec actions. Typically these 'rules' are based on a change in the state of a GPIO control port or the codec being connected or disconnected. Rules can only be created with the Web-GUI while the codec is disconnected.



**Important Note:** Data transmission is disabled by default. **Data** must be enabled in the **Connection** menu to enable contact closure operation and RS232 data.


1. Press the **HOME**  button to return to the **Home** screen
2. Use the navigation buttons on the front panel to select **Connect** and press the  button
3. Select **IP** and press the  button
4. Select your preferred **IP Mode** and press the  button.
5. Use the down  navigation button to select **Setup** and press the  button.
6. Navigate to **Data** and press  to toggle between **Enabled** and **Disabled**.

For more information please see [Enabling Relays & RS232 Data](#).

### Programming Rules

Default rules have been preprogrammed into the codec to facilitate programming the most common events required by broadcast engineers. To view rules options:

1. Open the Toolbox HTML5 Web-GUI and click **Rules** in the **Menu Bar** to display the **Rules panel**.
2. Click **Add New Rule**.
3. Click to select the appropriate rule for your requirements. See the [Rules panel](#) section in [Using the Toolbox HTML5 Web-GUI](#) for an explanation of the action each rule can perform.

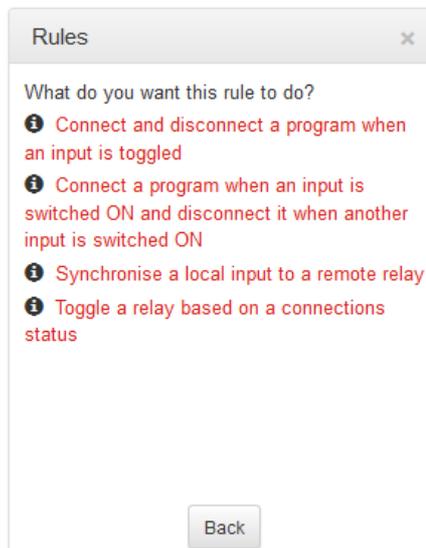


Note: When rules have been configured previously they are listed when the **Rules panel** is opened.

## Rule 1: Toggle a Control Port Input to Connect and Disconnect a Program

This rule is used to connect and disconnect a selected program when a control port input is toggled.

1. Click the first rule in the **Rules panel** titled **Connect and disconnect a program when an input is toggled**.
2. Click the drop-down **Input** arrow and select the control port input which will trigger program connection and disconnection.
3. Click the drop-down **Program** arrow to select the program to be connected.

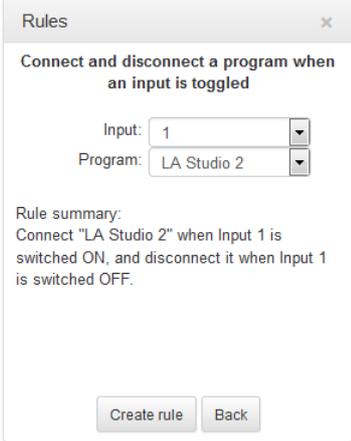

Rules

Connect and disconnect a program when an input is toggled

Input: 1

Program: LA Studio 2

Rule summary:  
Connect "LA Studio 2" when Input 1 is switched ON, and disconnect it when Input 1 is switched OFF.


Create rule Back

4. Check the **Rule Summary** and click **Create Rule** to save the settings.

## Rule 2: Switch Different Control Port Inputs On to Connect and Disconnect a Program

This rule is used to connect and disconnect a selected program when different codec control port inputs are turned on.

1. Click the second rule in the **Rules panel** titled **Connect a program when an input is switched ON and disconnect it when another input is switched ON**.
2. Click the drop-down arrows to select the control port input used to connect and the alternative input for disconnecting.
3. Click the drop-down **Program** arrow to select an individual program which will be connected and disconnected by the change in the control port input states.

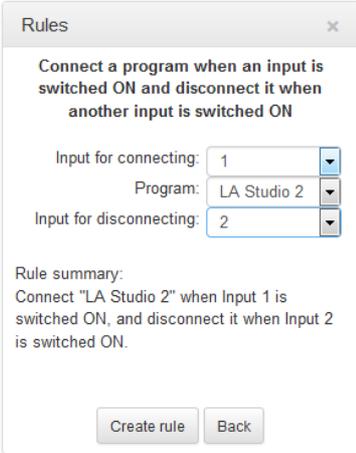

Rules

Connect a program when an input is switched ON and disconnect it when another input is switched ON

Input for connecting: 1

Program: LA Studio 2

Input for disconnecting: 2

Rule summary:  
Connect "LA Studio 2" when Input 1 is switched ON, and disconnect it when Input 2 is switched ON.


Create rule Back

4. Check the **Rule summary** and click **Create Rule** to save the settings.

### Rule 3: Synchronise Local Control Port Input Status with a Remote Relay Output

Use this rule allow a local codec's control port input to change the state of a remote relay output.

1. Click the third rule in the **Rules panel** titled **Synchronise a local input to a remote relay**.
2. Click the drop-down arrow to select the local control port input used to control a remote relay output.

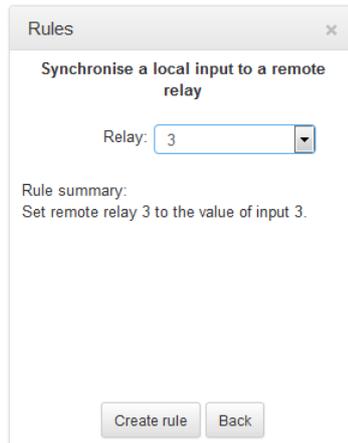


The screenshot shows a dialog box titled "Rules" with a close button (X) in the top right corner. The main title is "Synchronise a local input to a remote relay". Below the title, there is a "Relay:" label followed by a dropdown menu showing the value "3". Underneath, the "Rule summary:" is displayed as "Set remote relay 3 to the value of input 3." At the bottom of the dialog, there are two buttons: "Create rule" and "Back".

3. Check the **Rule summary** and click **Create Rule** to save the settings.

### Rule 4: Toggle a Relay Output with each Change in Connection Status

This rule is used to toggle a codec's control port relay output each time a program connects and disconnects.

1. Click the fourth rule in the **Rules panel** titled **Toggle a relay based on a connection's status**.
2. Click the drop-down **Relay** arrow and select the relay output you want to toggle.
3. Click the drop-down **Program** arrow to select a specific program which will affect the relay toggle function, or use the default setting whereby any program will toggle the relay output.

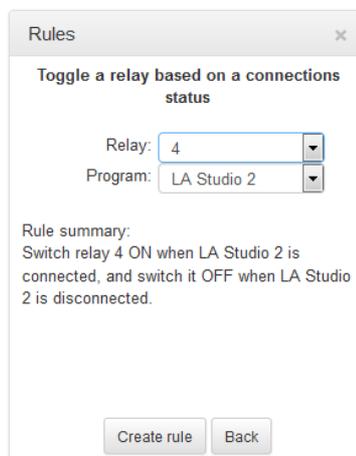


The screenshot shows a dialog box titled "Rules" with a close button (X) in the top right corner. The main title is "Toggle a relay based on a connections status". Below the title, there are two dropdown menus: "Relay:" showing the value "4" and "Program:" showing the value "LA Studio 2". Underneath, the "Rule summary:" is displayed as "Switch relay 4 ON when LA Studio 2 is connected, and switch it OFF when LA Studio 2 is disconnected." At the bottom of the dialog, there are two buttons: "Create rule" and "Back".

4. Check the **Rule summary** and click **Create Rule** to save the settings.

## Deleting Rules

---

1. Open the Toolbox HTML5 Web-GUI and click **Rules** in the **Menu Bar** to display the **Rules panel**.
2. Click to select the rule you want to delete.
3. Click the **Delete** button.

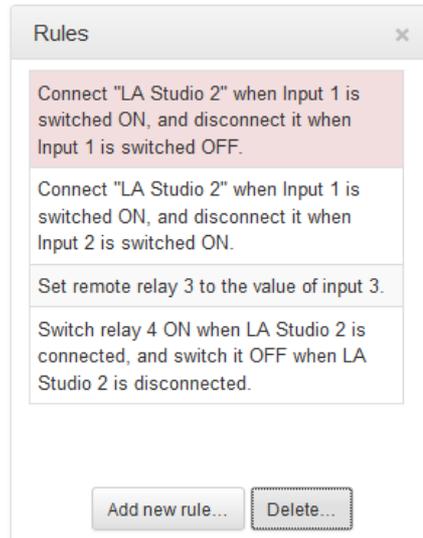

4. Click **Yes** in the confirmation dialog.


## 19.16 Upgrading Codec Firmware

To download the latest codec firmware visit <http://www.tieline.com/Support/Latest-Firmware>.


### Firmware Upgrades

The following procedure explains how to perform codec firmware upgrades with a downloaded firmware file saved to your PC.

1. Open the Toolbox HTML5 Web-GUI and click **Settings** in the **Menu Bar**, then click **Firmware** to display the **Firmware panel**.

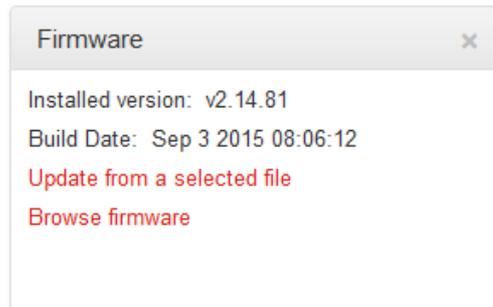

2. Click **Browse firmware** to search for the firmware for your codec and download it to your computer.
3. Once the firmware has been saved, click **Update from a selected file** in the **Firmware panel**.
4. Select the **.bin** file you are using to perform the upgrade and click **Open** to start the upgrade.

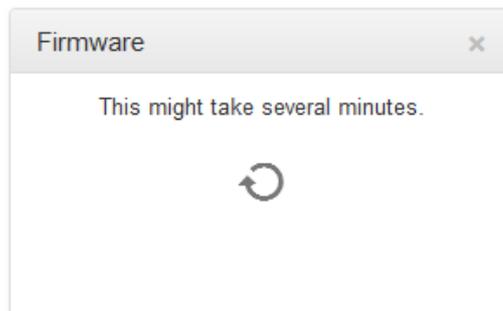

## 20 Front Panel Configuration Tasks

The following sections explain how to configure codec settings using the front panel **LCD** screen and **KEYPAD**.

### 20.1 Configuring IP via the Front Panel

#### Checking IP Address Details in the Codec

1. Press the **SETTINGS**  button.
2. Select **Unit** and press the **OK**  button.
3. IP address details and other unit details are listed. Use the arrow up  and down  buttons to scroll and view all details listed.

Unit Details	
ETH1-IP	172.16.112.219
ETH1-Sub	255.255.0.0
ETH1-IPv6	fe80:0:0:0:201:c0ff:fe0c:e5eb%eth0



**Important Note:** See the [Configuring IP Connections](#) sections for more details about IP connections. For assistance with configuration of IPv4 or IPv6 network connections contact your IT Administrator.

#### Ethernet and VLAN Configuration Options

The codec features two physical Ethernet port interfaces and up to four additional VLAN interfaces.

VLAN interfaces have features similar to physical Ethernet interfaces. However, your network administrator will need to configure VLAN support throughout your network for VLANs to be supported in your codec.

As an example, if only one physical Ethernet interface is available, VLANs can be used to operate SmartStream PLUS or separate codec Control and Streaming functions if required.

Following are a range of options which can be configured in the **LAN** menu. After completing configuration ensure you navigate to **Apply Setting** and press the **OK**  button to apply the new settings.

ETH1: Config	
Apply Setting	
Usage	Control & Streaming
IPv4 Mode	DHCP

#### Configure an IPv4 DHCP Address

By default the codec is programmed for DHCP-assigned IP addresses. DHCP IP addresses are automatically assigned and can change each time you connect to your Internet Service Provider or by a router on your local area network (LAN).

1. Press the **SETTINGS**  button.
2. Select **LAN** and press the **OK**  button.
3. Use the down  navigation button to select **ETH1**, **ETH2** or a **VLAN** interface.

4. Select **Usage** and choose the appropriate control and/or streaming mode for the connection, then press the  button.
5. Select **IPv4 Mode** and press the  button.
6. Select **DHCP** and press the  button.
7. Use the up  navigation button to scroll to the top of the menu and select **Apply Setting**, then press the  button to confirm the new settings.

## Configure a Static IPv4 Address

Static IP addresses are fixed addresses which are recommended for studio installations. Using a static IP address ensures remote codecs can connect reliably using the same IP address over time.

1. Press the **SETTINGS**  button.
2. Select **LAN** and press the  button.
3. Use the down  navigation button to select **ETH1**, **ETH2** or a **VLAN** interface.
4. Select **Usage** and choose the appropriate control and/or streaming mode for the connection, then press the  button.
5. Select **IPv4 Mode** and press the  button.
6. Select **Static** and press the  button.
7. Navigate to **IPv4 Static** and enter the IP address, then press the  button.
8. Navigate to **IPv4 Subnet** and enter the Subnet Mask, then press the  button.
9. Navigate to **IPv4 Gateway** and enter the Gateway details, then press the  button.

ETH1 Config (Primary)	
IPv4 Static	10.1.1.10 
IPv4 Subnet	255.255.255.0
IPv4 Gateway	10.1.1.254 

10. Use the up  navigation button to scroll to the top of the menu and select **Apply Setting**, then press the  button to confirm the new settings.
11. Check the **Unit Details** menu to ensure the new static IP address has been entered correctly.

## IPv6 Address Assignment

There are three IPv6 settings available for each Ethernet port on the codec and any VLANs which are configured.

1. Auto: An address is automatically assigned to the codec when you connect the codec to an IPv6 router. This process is similar to how an IPv4 DHCP address is assigned.
2. Manual: Select to manually enter IPv6 address details.
3. Off: Select to ignore IPv6 address details.



**Important Note:** Select **Off** if you are not using IPv6 to connect to another device. This ensures your codec will attempt to connect using IPv4 at all times.

To adjust this setting:

1. Press the **SETTINGS**  button.
2. Select **LAN** and press the  button.
3. Use the down  navigation button to select **ETH1**, **ETH2** or a **VLAN** interface.
4. Select **IPv6 Mode** and press the  button.

5. Select **Auto**, **Manual** or **Off** and press the  button.

By default the codec is configured to allow the codec to automatically receive IPv6 address information from an IPv6 enabled router.

### Manual IPv6 Address Assignment

Select **Manual** mode using the previous procedure and enter information into the **IPv6 Static** (Address), **IPv6 Prefix** and IPv6 **Gateway** fields in the codec to manually configure address details.

### DNS Server

---

It is possible to specify Domain Name Server (DNS) settings to allow easy look up of codecs within the specified **DNS Addresses** or **Domains** [section within the Web-GUI](#). This feature can be turned on or off in the LAN codec menu.

1. Press the **SETTINGS**  button.
2. Use the navigation buttons on the front panel to select **LAN** and press the  button.
3. Use the down  navigation button to select **ETH1**, **ETH2** or a **VLAN** interface.
4. Use the down  navigation button to scroll to **Auto DNS**.
5. Press the  button to toggle between **Yes** and **No**.

### VLAN ID (VLAN configuration only)

---

The **VLAN ID** is encapsulated in IP packets to facilitate routing throughout your network.

1. Press the **SETTINGS**  button.
2. Use the navigation buttons on the front panel to select **LAN** and press the  button.
3. Use the down  navigation button to select a **VLAN** interface.
4. Select **Usage** and press the  button.
5. Select the mode of operation for this VLAN (e.g. Control & Streaming, Streaming only, Control Only) and press the  button.
6. Use the down  navigation button to scroll to **VLAN ID**.
7. Press the  button to enter a number between 1-4094 inclusive.
8. Press the  button to confirm this setting.

### VLAN Priority (VLAN configuration only)

---

The **VLAN Priority** setting represents a prioritization scheme for forwarding data packets throughout Virtual Local Area Networks.

1. Press the **SETTINGS**  button.
2. Use the navigation buttons on the front panel to select **LAN** and press the  button.
3. Use the down  navigation button to select a **VLAN** interface.
4. Select **Usage** and press the  button.
5. Select the mode of operation for this VLAN (e.g. Control & Streaming, Streaming only, Control Only) and press the  button.
6. Use the down  navigation button to scroll to **VLAN Priority**.
7. Press the  button to enter a number from 0 to 7 inclusive.
8. Press the  button to confirm this setting.

## VLAN Interface (VLAN configuration only)

---

This setting applies the VLAN settings to a physical Ethernet port in the codec.

1. Press the **SETTINGS**  button.
2. Use the navigation buttons on the front panel to select **LAN** and press the  button.
3. Use the down  navigation button to select a **VLAN** interface.
4. Select **Usage** and press the  button.
5. Select the mode of operation for this VLAN (e.g. Control & Streaming, Streaming only, Control Only) and press the  button.
6. Use the down  navigation button to scroll to **Interface**.
7. Press the  button to select **ETH1** or **ETH2**, then press the  button.

## 20.2 Selecting an Algorithm

The codec offers uncompressed linear audio as well as aptX® Enhanced, LC-AAC, HE-AAC v.1 and HE-AAC v.2, AAC-LD, AAC-ELD, AAC-ELDv2, MPEG Layer 2, G.711 and G.722, Tieline Music and MusicPLUS algorithms. There is a range of pre-programmed connection profiles to simplify codec configuration. See [Choosing Dialing Profiles](#) for more details.

### Overview of Tieline Algorithms

---

1. The Tieline Music algorithm is optimized for audio bit rates as low as 19.2kbps with only a 20 millisecond encode delay. It offers 15 kHz mono from 24kbps to 48kbps.
2. Tieline MusicPLUS delivers up to 20 kHz mono from 48kbps upwards. It can also deliver up to 20 kHz stereo from 96kbps upwards, offering huge savings on your IP data bills and outstanding audio quality.

### Overview of AAC Algorithms

---

#### AAC-LC

LC-AAC is optimized for audio bit rates of 64kbps per channel or higher using a sample rate of 48kHz. Tieline recommends using LC-AAC instead of HE-AAC if bandwidth of 64kbps or higher per channel is available, to optimise audio quality. If lower bandwidth than 64kbps is available consider using HE-AAC, Tieline Music or Tieline MusicPLUS.

#### AAC-HE

Codecs include both HE-AAC v.1 and HE-AAC v.2, which are optimized for low bit rate connections. Selection of HE-AAC v.1 and v.2 is automatically managed within the codec, so only **AAC-HE** is displayed on the screen. When used for mono connections, HE-AAC v.1 performs best at bit rates of 24kbps per channel or higher. HE-AAC v.1 is also used for stereo connections when audio connection bandwidth is 48kbps or higher.

HE-AAC v.2 is used for stereo connections when audio connection bandwidth is below 48kbps and is capable of delivering 15kHz quality stereo audio at audio bit rates as low as 24kbps.

A sample rate of 32kHz is used in the codec's default profiles to achieve ultra-low bit-rate connections, but this is adjustable to 44.1kHz or 48kHz if required.

### AAC-LD

AAC-LD (Low Delay AAC), AAC-ELD (Enhanced Low Delay AAC) and AAC-ELDv 2 are optimized for low latency real-time communication. AAC-LD is suited to bit rates of 96kbps or higher for stereo audio.

### AAC-ELD

AAC-ELD is optimised for high quality stereo connections from 48 - 96kbps and performs better at these bit rates when compared with AAC-LD.

### AAC-ELD v 2

For stereo connections below 48kbps AAC-ELD v2 will deliver better performance than AAC-ELD down to 24kbps.

## Overview of aptX Enhanced Audio Coding

aptX® Enhanced audio coding is used by thousands of radio stations to deliver very low delay audio for IP broadcasts and is ideal for high quality studio-to-transmitter links and audio distribution. It delivers outstanding audio quality with exceptionally low delay across a range of IP networks.

32kHz or 48kHz sample rates are available at either 16 bit or 24 bits per sample. aptX Enhanced has a minimum connection bit rate of 128kbps per channel and offers 10Hz to 24kHz frequency response. 24 bit, 48kHz aptX Enhanced at the maximum bit rate of 576kbps delivers >120dB of dynamic range.

aptX® Enhanced is supported over ISDN at the following sample and bit rates:

Encoding	Bit rate Required	B Channels Required
aptX® Enhanced Mono 16 bit, 32 kHz	128 kbps	2
aptX® Enhanced Mono 16 bit, 48 kHz	192 kbps	3
aptX® Enhanced Mono 24 bit, 32 kHz	192 kbps	3
aptX® Enhanced Stereo 16 bit, 32 kHz	256 kbps	4

## Overview of Opus Algorithm

Opus is a highly versatile open source audio coding algorithm. It incorporates technology from the well-known SILK and CELT codecs to create a low latency speech and audio codec. It is a variable bit rate algorithm ideal for live broadcast situations because of its capacity to deliver high quality, real-time Audio over IP (AoIP) at low bit rates. Visit <http://www.opus-codec.org> for more info.

There are three Opus algorithm configurations available:

Algorithm	Recommended connection for on-air use
Opus Voice	High quality low bit rate remotes (9.6kbps -64kbps)
Opus Mono	Very high quality mono remotes, STLs and audio distribution (48kbps -128kbps)
Opus Stereo	Very high quality stereo remotes, STLs and audio distribution (64kbps -256kbps)

## Configuring an Algorithm in the Codec

1. Press the **HOME**  button to return to the **Home** screen.
2. Use the navigation buttons on the front panel to select **Connect** and press the  button.

3. Select **IP** and press the  button.
4. Select your preferred **IP Session** mode and press the  button.
5. Use the down  navigation button to select **Setup** and press the  button.
6. Navigate to **Algorithm** and press .
7. Navigate to **Manual** to configure all settings manually, or **Profile** to choose a pre-configured algorithm profile, then press .

## How do I choose the right algorithm?

The algorithm you select will not only affect the quality of the broadcast but it will also contribute to the amount of latency or delay introduced. For example, if MP2 algorithms are used, program delays will be much longer than when using Tieline Music or MusicPLUS algorithms. This is due to the additional inherent encoding delays involved when using MP2 algorithms. This can be a major consideration for live applications that integrate remotes into a broadcast. The algorithm you choose to connect with will also depend upon:

- The codecs you are connecting to (Tieline versus non-Tieline)
- Whether you are creating multi-unicast connections.
- Whether you are connecting using SIP or not.
- The uplink bandwidth capability of your broadband connection.



**Important Notes:** Music and MusicPLUS algorithms cannot be used over SIP connections. Use MP2 algorithms at 64kbps mono or 128kbps stereo for high quality connections when using SIP, or use G.711 and G.722 if required. Tieline G3 codecs do not support connections using AAC and will default to MPEG Layer 2 if an incoming connection is programmed to use this algorithm.

It can be a good idea to listen to the quality of your program signal using each algorithm and to see how it sounds when it is sent at different connection bit rates (as well as different FEC and jitter-buffer millisecond settings). This will assist you to determine which is the best algorithm setting for the connection you are setting up. Please see the following table for details on the connection requirements of the different algorithms available.

Algor-ithm	Audio Band-width	Algor-ithmic Delay	IP bit rate per channel	IP over-head per connectio-n	Audio Quality and Features	Recommended applications for on-air use
Linear/PCM (Uncompressed)	16/24 bit up to 45kHz	0ms	sample rate x bits per sample x no. channels; 512kbps minimum (16bit;32kHz) to 4.6 Mbps (24bit; 96 kHz)	80kbps	<ul style="list-style-type: none"> <li>• Full bandwidth, perfect audio quality for voice and music</li> <li>• No error concealment/correction or artefacts</li> </ul>	<ul style="list-style-type: none"> <li>• Extremely high quality uncompressed audio for STLs and audio distribution.</li> <li>• Ideal for fiber or high bandwidth links.</li> </ul>
Tieline Music	Up to 15kHz	20ms	24 kbps minimum	16kbps	<ul style="list-style-type: none"> <li>• High quality voice and music</li> <li>• Very low delay at low bit rates</li> </ul>	<ul style="list-style-type: none"> <li>• Great for live voice or music remotes as well as STLs and audio distribution with limited connection bandwidth (e.g. POTS or 3G wireless)</li> <li>• Suitable when bidirectional communication between announcers is required</li> <li>• Deliver 15kHz stereo over 1 x 64kbps ISDN B Channel.</li> </ul>
Tieline Music-PLUS	Up to 22kHz	20ms	48 kbps minimum (Optimised for 64kbps per audio channel)	16kbps	<ul style="list-style-type: none"> <li>• Very high quality voice and music</li> <li>• Very low delay at low to moderate bit-rates</li> </ul>	<ul style="list-style-type: none"> <li>• Very high quality, very low delay STLs and audio distribution</li> <li>• Remote connections able to achieve 48kbps for each audio channel</li> <li>• Suitable when bidirectional communication between announcers is required</li> </ul>
G.711	3kHz	1ms	64kbps minimum	80kbps	<ul style="list-style-type: none"> <li>• Low quality 3kHz POTS phone quality audio</li> <li>• Very low delay at moderate bit rates</li> </ul>	<ul style="list-style-type: none"> <li>• Highly compatible with other brands of audio codec</li> <li>• Low quality and used generally for compatibility</li> </ul>
G.722	7kHz	1ms	64kbps minimum	80kbps	<ul style="list-style-type: none"> <li>• Good quality 7kHz voice</li> <li>• Better quality than a standard POTS phone call</li> <li>• Very low delay at moderate bit rates</li> </ul>	<ul style="list-style-type: none"> <li>• Highly compatible with other brands of audio codec</li> <li>• Good voice quality audio for remotes and other voice quality applications</li> </ul>
MPEG Layer 2	Up to 22kHz	24 to 36ms	64kbps minimum	8.5 - 13.3kbps	<ul style="list-style-type: none"> <li>• Very high quality voice and music</li> <li>• Low to moderate delay at moderate to high bit rates</li> </ul>	<ul style="list-style-type: none"> <li>• Highly compatible with other brands of audio codec</li> <li>• Very high quality audio for remotes, STLs and audio distribution</li> </ul>

MPEG Layer 3	Up to 15kHz	100ms	64kbps	8.5 - 13.3kbps	<ul style="list-style-type: none"> <li>High quality voice and music</li> <li>Moderate bit rates</li> <li>High delay</li> </ul>	<ul style="list-style-type: none"> <li>High quality remotes, STLs and audio distribution</li> <li>Use when bidirectional communication between announcers is not required</li> </ul>
LC-AAC	Up to 15kHz	64ms	64kbps	15kbps	<ul style="list-style-type: none"> <li>High quality voice and music at lowest bit rate; better quality at higher bit rates</li> <li>Moderate delay at moderate to high bit rates</li> </ul>	<ul style="list-style-type: none"> <li>Voice or music remotes as well as STLs and audio distribution where some delay is tolerable</li> <li>Teline Music or MusicPLUS deliver lower delay</li> </ul>
HE-AAC v.1	Up to 15kHz	128ms	48kbps	7.4kbps	<ul style="list-style-type: none"> <li>High quality voice and music at the lowest bit rate; better quality at higher bit rates</li> <li>Low to Moderate bit rates</li> <li>High delay</li> </ul>	<ul style="list-style-type: none"> <li>Live voice or music remotes as well as STLs and audio distribution with limited connection bandwidth</li> <li>Use when bidirectional communication between announcers is not required</li> </ul>
HE-AAC v.2	Up to 15kHz	128ms	Minimum 16kbps (Mono); 24kbps (stereo)	7.4kbps	<ul style="list-style-type: none"> <li>High quality voice and music</li> <li>Low bit rates</li> <li>High delay</li> </ul>	<ul style="list-style-type: none"> <li>Used for DAB+ radio streaming</li> <li>Ideal for low bit rate remotes</li> <li>Use when bidirectional communication between announcers is not required</li> </ul>
AAC-LD	Up to 20kHz	20ms at 48kHz	48kbps minimum	30kbps	<ul style="list-style-type: none"> <li>Very high quality voice and music</li> <li>Very low delay at low to moderate bit rates</li> </ul>	<ul style="list-style-type: none"> <li>Very high quality, very low delay STLs and audio distribution</li> <li>Remote connections able to achieve 48kbps for each audio channel requiring</li> <li>Suitable when bidirectional communication between announcers is required</li> </ul>
AAC-ELD	Up to 20kHz	15-30ms	24 kbps minimum	15-30kbps	<ul style="list-style-type: none"> <li>Very high quality voice and music</li> <li>Very low delay at low bit rates</li> </ul>	<ul style="list-style-type: none"> <li>Great for live voice or music remotes</li> <li>Suitable when bidirectional communication between announcers is required</li> </ul>
AAC-ELdv.2	Up to 20kHz	35ms	Pending release	Pending release	<ul style="list-style-type: none"> <li>High quality voice and music</li> <li>Low delay at low bit rates</li> </ul>	<ul style="list-style-type: none"> <li>Great for live voice or music remotes where limited connection bandwidth is available</li> <li>Suitable when bidirectional communication between announcers is required</li> </ul>
aptX Enhanced	10Hz-24kHz	2.5ms at 48kHz	128kbps minimum (16bit; 32kHz) to 288kbps	80kbps	<ul style="list-style-type: none"> <li>Very high quality voice and music</li> <li>Extremely low delay at high bit</li> </ul>	<ul style="list-style-type: none"> <li>Ideal for STLs and audio distribution where high connection bandwidth</li> </ul>

			(24bit;48kHz)		rates <ul style="list-style-type: none"> <li>Highly cascade resilient</li> </ul>	is available and very low delay is highly desirable. <ul style="list-style-type: none"> <li>Resilient with multiple encodes/decodes when required</li> </ul>
Opus	4Hz-20kHz	20ms	9.6-256kbps	16kbps	<ul style="list-style-type: none"> <li>Very high quality voice and music</li> <li>Very low delay at low bit rates</li> </ul>	<ul style="list-style-type: none"> <li>"Opus Voice" is ideal for high quality, and low delay voice quality remotes at extremely low bit rates.</li> <li>"Opus Mono" and "Opus Stereo" are perfect for high fidelity remotes, STLs and audio distribution at higher bit rates</li> </ul>
TxTran / RxTran					NOT FOR BROADCAST USE	NOT FOR BROADCAST USE

### Algorithm Selection Guide

Algorithm	Very Low Delay	Moderate to High Delay	Excellent Performance at Low Bit rates	Preferred for Live Remotes	Preferred for STLs and Audio Distribution	Highly Compatible with other Codecs
Linear/PCM	✓				✓	✓
Opus	✓		✓	✓		
Tieline Music	✓		✓	✓		
Tieline MusicPLUS	✓		✓	✓	✓	
apt-X Enhanced	✓				✓	
LC-AAC		✓			✓	
HE-AACv1		✓			✓	
HE-AACv2		✓	✓	✓*		
AAC-LD	✓			✓	✓	
AAC-ELD	✓		✓	✓		
AAC-ELDv2	✓		✓	✓		
MPEG Layer 2	✓				✓	✓
MPEG Layer 3		✓				✓
G.722	✓					✓
G.711	✓					✓

\* Use with caution for remotes due to high delay; not suitable when bidirectional communications is required.

IP Connection Bit rates Supported

Algorithm	Sample Rate										Genie and Merlin Connection Bit Rates Supported									
	32kHz	44.1kHz	48kHz	16	20	24	32	40	48	56	64	96	112	128	160	192	256	320	384	
AAC HE Mono																				
AAC HE Mono																				
AAC HE Mono																				
AAC HE Stereo																				
AAC HE Stereo																				
AAC HE Stereo																				
AAC HE Stereo																				
AAC LD Mono																				
AAC LD Mono																				
AAC LD Mono																				
AAC LD Stereo																				
AAC LD Stereo																				
AAC LD Stereo																				
AAC ELD Mono																				
AAC ELD Mono																				
AAC ELD Mono																				
AAC ELD Stereo																				
AAC ELD Stereo																				
AAC ELD Stereo																				
AAC LC Mono																				
AAC LC Mono																				
AAC LC Mono																				
AAC LC Stereo																				
AAC LC Stereo																				
AAC LC Stereo																				
MP2 Mono																				
MP2 Mono																				
MP2 Mono																				
MP2 Stereo																				
MP2 Stereo																				
MP2 Stereo																				
MP2 J-Stereo																				
MP2 J-Stereo																				
MP2 J-Stereo																				
MP3 Mono																				
MP3 Mono																				
MP3 Mono																				
MP3 Stereo																				
MP3 Stereo																				
MP3 Stereo																				
aptX Enhanced Mono																				
aptX Enhanced Mono																				
aptX Enhanced Stereo																				
aptX Enhanced Stereo																				
Opus Voice																				
Opus Mono																				
Opus Stereo																				
Music Mono																				
Music Stereo																				
Music PLUS Mono																				
Music PLUS Stereo																				


## ISDN Encoding Options

The codec supports ISDN connections using the following algorithms and B Channel assignments.

ISDN Encoding	1B	2B	3B	4B
E-AptX Mono 16bit 32KHz		✓		
E-AptX Mono 16bit 48KHz			✓	
E-AptX Mono 24bit 32KHz			✓	
E-AptX Stereo 16bit 32KHz				✓
Music Mono	✓	✓	✓	✓
Music Stereo	✓	✓	✓	✓
Music Plus Mono	✓	✓	✓	✓
Music Plus Stereo	✓	✓	✓	✓
MP2 Mono 32KHz	✓	✓		
MP2 Stereo 32KHz		✓		
MP2 Mono 48KHz	✓	✓		
MP2 Stereo 48KHz		✓		
MP2 J-Stereo 32KHz		✓		
MP2 J-Stereo 48KHz		✓		
G.711	✓			
G.722	✓			

## 20.3 Configuring the Jitter Buffer

Jitter, (also known as latency or delay), is the amount of time it takes for a packet of data to get from one point to another. A jitter buffer is a temporary storage buffer used to capture incoming data packets. It is used in packet-based networks to ensure the continuity of audio streams by smoothing out packet arrival times during periods of network congestion. Data packets travel independently and arrival times can vary greatly depending on network congestion and the type of network used, i.e. LAN versus wireless networks. The concept of jitter buffering is displayed visually in the following image.

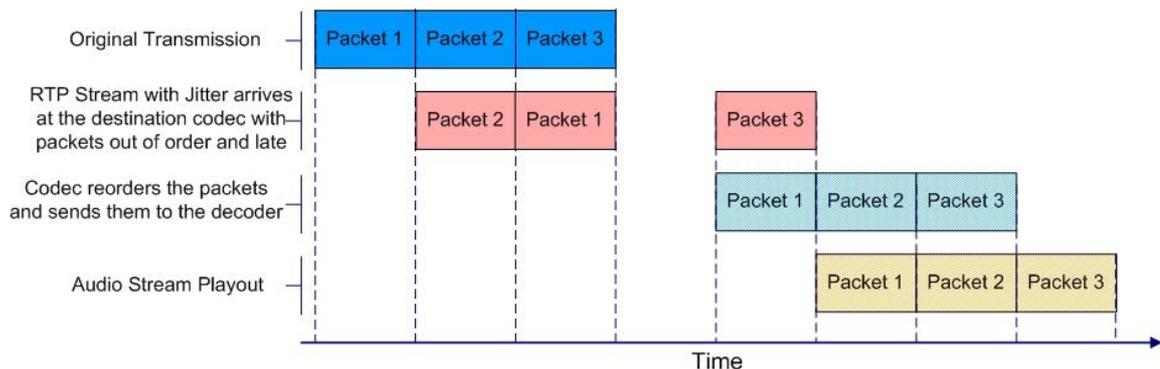

Jitter-buffer management is encompassed within Tieline's SmartStream IP technology which can:

- Remove duplicate packets.
- Re-order packets if they arrive out-of-order.
- Repair the stream in the event of packet loss (error concealment).
- Manage delay dynamically based on current network congestion.
- Manage forward error correction (FEC).

Tieline codecs can be used to program either a fixed or automatic jitter buffer and the setting you

use depends on the IP network you are connecting over. Over LANs, WANs and wireless networks the automatic jitter buffer generally works well. It adapts automatically to the prevailing IP network conditions to provide continuity of audio streaming and minimizes delay.

A fixed jitter buffer is preferable over satellite connections to ensure continuity of signals.



**CAUTION:** If a Tieline codec connects to a device that is using non-compliant RTP streams then the last fixed setting programmed into the codec will be enabled (default is 500ms). Non-compliant devices include some other brands of codec, web streams and other devices.

## Tieline 'Auto Jitter Buffer' Settings

---

**Least Delay:** This setting attempts to reduce the jitter buffer to the lowest possible point, while still trying to capture the majority of data packets and keep audio quality at a reasonable level. This setting is the most aggressive in its adaptation to prevailing conditions, so jitter buffer may vary more quickly than with the other settings. It is not recommended in situations where jitter variation is significant and/or peaky. (E.g. 3G/multi-user wireless networks). It is best for stable and reliable links such as dedicated or lightly-loaded WAN/LANs.

**Highest Quality:** This setting is the most conservative in terms of adapting down to reduce delay. The jitter-buffer setting will actually stay high for a longer period after a jitter spike is detected – just in case there are more spikes to follow. This setting is best used where audio quality is most highly desired and delay is not so critical. Unless delay is irrelevant, this setting is also not recommended over peaky jitter networks (such as 3G) and is best used on more stable networks where large jitter peaks are not as common.

**Best Compromise:** This (default) setting is literally the midpoint between the jitter buffer levels that would have been chosen for the Highest Quality and Least Delay settings. It is designed to provide the safest level of good audio quality without introducing too much extra delay.

**Good Quality and Less Delay:** These two settings lie between the mid-point setting of Best Compromise and two settings Highest Quality and Least Delay. They indicate a slight preference and may assist in achieving better performance from a connection without incurring extreme delays in transmission or packet loss.

## Which Algorithms can use Automatic Jitter Buffering?

---

The following table provides an overview of which algorithms are capable of using the automatic jitter buffer feature over SIP and non-SIP connections.

Algorithm	Non-SIP Connections	SIP Connections
Linear (Uncompressed)	✗	✗
Tieline Music	✓	✗
Tieline MusicPLUS	✓	✗
G.711	✗	✓
G.722	✗	✓
MPEG Layer 2	✓	✓
MPEG Layer 3	✓	✗
LC-AAC	✓	✓
HE-AAC v.1	✓	✓
HE-AAC v.2	✓	✓
AAC-LD	✓	✓
AAC-ELD	✓	✓
Opus	✓	✓
aptX Enhanced	✗	✗

## Configuring Automatic Jitter Buffering (Default Setting)

1. Press the **HOME**  button to return to the **Home** screen.
2. Use the navigation buttons on the front panel to select **Connect** and press the  button.
3. Select **IP** and press the  button.
4. Select your preferred **IP Session** mode and press the  button.
5. Use the down  navigation button to select **Setup** and press the  button.
6. Navigate to **Jitter Buffer** and press .
7. Select **Auto Jitter Adapt** and press .
8. Select your preferred jitter buffer setting and press .



### Important Notes:

- Automatic jitter buffering is disabled for a PCM (linear uncompressed) audio connection.
- There is no jitter buffer setting on a multicast server codec because it only sends and never receives audio packets.

## How to get the Best Jitter Buffer Results

When programming automatic jitter buffer settings, establish the IP connection for a while before 'going live', to let the codec evaluate the prevailing network conditions. The initial jitter buffer setting when a codec connects is 500ms and it is kept at this level for the first minute of connection (as long as observed delay values are lower than this point).

After the initial connection period the jitter buffer is adapted to suit the current network conditions and is usually reduced. Establish a connection for at least 5 minutes prior to broadcasting, so that the codec has been provided with enough jitter history to ensure a reliable connection.

There are five jitter buffer states. Jitter buffer and connection status statistics can be viewed via **HOME**  > **Cxns** and use the down  and up  navigation buttons to scroll through

connection statistics. The first four stages are observed in “auto” jitter buffer mode.

1. **Stabilization period (a1):** A few seconds at the start of a connection where no action is taken at all while the establishment of a stable connection means analysis of jitter data is not valid.
2. **Stage 2 (a2):** A compatibility check to ensure the RTP connection is compliant and RTP clocks are synchronized enough to perform jitter analysis.
3. **Stage 3 (a3):** If the compatibility check is successful, this is the analysis hold-off period. During a minute, the jitter buffer is held at a safe, fixed value of 500ms while enough history is recorded to start jitter buffer adaptation.
4. **Stage 4 “live” (A):** This is where the codec determines it is safe enough to start broadcasting using the auto-jitter buffer level. We recommend running the codec for a few more minutes to obtain a more comprehensive history of the connection’s characteristics.
5. **Fixed (F):** This state is displayed if the jitter buffer is fixed.

## Auto Jitter Buffer and Forward Error Correction (FEC)

If forward error correction is programmed then additional data packets are sent over a connection to replace any data packets lost. There is no need to modify jitter buffer settings if you are sending FEC data, only if you are receiving FEC data.

The jitter buffer depth on the receive codec needs to be increased if forward error correction is employed. We recommend you add 100ms to the jitter buffer on a codec receiving FEC at a setting of 20% and 20ms at a setting of 100%.

Tieline's auto jitter buffer detects the amount of FEC that is being used and automatically compensates to increase the codec jitter buffer if FEC is being used.

## Fixing Jitter Buffer Settings

The default jitter-buffer setting in Tieline codecs is 500 milliseconds. This is a very reliable setting that will work for just about all connections. However, this is quite a long delay and we recommend that when you set up an IP connection you test how low you can set the jitter-buffer in your codec.

1. Press the **HOME**  button to return to the **Home** screen.
2. Use the navigation buttons on the front panel to select **Connect** and press the  button.
3. Select **IP** and press the  button.
4. Select your preferred **IP Session** mode and press the  button.
5. Use the down  navigation button to select **Setup** and press the  button.
6. Navigate to **Jitter Buffer** and press .
7. Select **Fixed Buffer Level** and press .
8. Use the numeric **KEYPAD** to enter the fixed buffer value in milliseconds and press .

If you change the jitter buffer setting in a codec it will only adjust to the new level when link quality is high (e.g. above 70%). This is done to ensure audio quality is not compromised. When manually programming the jitter-buffer delay in a codec it is necessary to think carefully about the type of connection you will be using. Following is a table displaying rule of thumb settings for programming jitter-buffer delays into your codec.

Connection	Jitter-Buffer Recommendation
Private LAN	60 milliseconds
Local	100 - 200 milliseconds
National	100 - 300 milliseconds
International	100 – 400 milliseconds
Wireless Network	250 - 750 milliseconds
Satellite IP	500 - 999 milliseconds



**Important Note:** The preceding table assumes Tieline Music is the algorithm in use. Do not use PCM (uncompressed) audio over highly contended DSL/ADSL connections without enough bandwidth to support the high connection bit rates required.

## 20.4 Configuring Forward Error Correction

Forward Error Correction (FEC) is designed to increase the stability of UDP/IP connections in the event that data packets are lost. FEC works by sending a secondary stream of audio packets over a connection so that if your primary audio stream packets are lost or corrupted, then packets from the secondary stream can be substituted to replace them. The amount of FEC required depends on the number of data packets lost over the IP connection.

Both the local and remote codec FEC settings can be configured in your codec before dialing. These settings can also be changed 'on the run' while the codecs are connected. FEC should only be used if the Send/Return link quality percentage displayed on the codec is below 99, as it is of no benefit otherwise.

### Programming FEC into the Codec

1. Press the **HOME**  button to return to the **Home** screen.
2. Use the navigation buttons on the front panel to select **Connect** and press the  button.
3. Select **IP** and press the  button.
4. Select **Tieline** and press the  button.
5. Use the down  navigation button to select **Setup** and press the  button.
6. Navigate to **FEC** and press .
7. Select the local codec FEC setting in the **Local FEC** screen and press .
8. Select the remote codec FEC setting in the **Remote FEC** screen and press .

The four FEC settings in Tieline codecs are outlined in the following table with their bit rate ratios.

FEC Setting	Bit rate Ratios	Connection Use
<b>100% (Lowest delay)</b>	A simultaneous dual-redundant stream (1:1 ratio) is sent from the codec. Twice the connection bit rate is required to operate the codec using the 100% setting. E.g. if your connection is 14,400kbps, you will require an additional 14,400 kbps of bandwidth to allow for the FEC data stream.	Recommended to be used over wireless and international connections.
<b>50%</b>	Additional data is sent using FEC in a ratio of 2:1.	Recommended for international & national connections
<b>33%</b>	Additional data is sent using FEC in a ratio of 3:1.	Recommended for national and local connections.
<b>20% (Highest delay)</b>	Additional data is sent using FEC in a ratio of 5:1.	Recommended for local and LAN connections.
<b>Off</b>	FEC is off in the codec and the connection bandwidth is equal to the connection bit rate setting in the codec.	Recommended for wired LAN connections & managed T1 & E1 connections for STLs that have connections that aren't shared & have quality of service (QoS).



**Important Note:** FEC can only be programmed for use with the Music and MusicPLUS algorithms.

## How does FEC work?

If you program a FEC setting of 20% and you are losing one packet in every five sent, the lost packet will be replaced by FEC to maintain the quality of the connection. If you are losing more packets than this, say one in three, it will be necessary to increase the FEC setting to 33% to compensate.

**Note:** There is an inverse relationship between FEC settings and the jitter-buffer millisecond setting that you use for IP connections.

So why not use 100% FEC every time? The answer is because you need twice the bit rate to achieve full redundancy and depending on the link conditions, this could potentially cause more dropouts because of network congestion than it fixes. Here is a simple rule to remember: Your maximum uplink speed is all the bandwidth you have to play with. As a rule of thumb, try not to exceed more than 80% of your maximum bandwidth. If your link is shared, be even more conservative.

You should also consider the remote end too. What is their maximum upload speed? Is the connection shared at either end? Your bit rates, FEC settings and buffer rates must be pre-configured at both ends before you connect, so it's always better to set your connection speed and balance your FEC according to the available uplink bandwidth at each end for best performance.

As an example, if you want 15 kHz mono (using the Tieline Music Algorithm) you will need at least a 24kbps connection for audio. Adding 100% FEC will add another 24kbps making your bit rate 48kbps plus some overhead of around 10kbps is required. If you're on a 64kbps uplink, you should consider reducing your FEC to minimize the likelihood of exceeding your bandwidth capacity.

Here is another example, if you want 15 kHz stereo, you need at least 56kbps for the audio. 100% FEC requires at least 112kbps and 50% FEC requires at least 84kbps. If your uplink speed is 256kbps and you're on a shared connection, then choosing a lower FEC setting of 20%-33% may give you better results.

## Conserving Bandwidth with FEC

There is a trade-off between the quality and the reliability of an IP connection – particularly when FEC is activated on your codecs. However, it is possible in certain situations to set different FEC on each codec to match connection bandwidth requirements at either end of the link, conserve bandwidth and create more stable IP connections.

For example, if your broadcast is a one-way broadcast from a remote site, i.e. you are not using the return path from the studio, or only using it for communications purposes, it is possible to reduce or turn off FEC at the studio codec. This effectively reduces the bandwidth required over the return link (communications channel) and increases the overall bandwidth available for the incoming broadcast signal from the remote site.

## 20.5 Configuring Encode/Decode Direction

By default the codec by is configured to both encode and decode data. However, it is possible to configure the codec to either encode or decode audio data only. This is useful for:

- Conserving connection bandwidth when unidirectional data streaming is required.
- Lowering data costs.
- Increasing overall connection reliability.

Program the transmitting codec to encode only and program the receive codec to decode only when using this feature. To adjust this setting:

1. Press the **HOME**  button to return to the **Home** screen.
2. Use the navigation buttons on the front panel to select **Connect** and press the  button.
3. Select **IP** and press .
4. Select your preferred **IP Session** mode and press the .
5. Use the down  navigation button to select **Setup** and press .
6. Navigate to **Dir** and press .
7. Select **Encode Only** or **Decode Only** and press .

## 20.6 Enabling Relays & RS232 Data

Data must be enabled to activate contact **CONTROL PORT** closure operation and RS232 data. Please see [Appendix A for RS232 and Control Port Wiring](#) information.

1. Press the **HOME**  button to return to the **Home** screen.
2. Use the navigation buttons on the front panel to select **Connect** and press the .
3. Select **IP** and press the .
4. Select **Tieline** (or **Sessionless**) and press the .
5. Select **Peer-to-Peer** and press the .
6. Use the down  navigation button to select **Setup** and press the .
7. Navigate to **Data** and press  to toggle between **Enabled** and **Disabled** (Note: default setting is **Disabled**)



**Important Note:** Data transmission is disabled by default.

## Configuring Control Port Contact Closure Operation

The **Rules panel** in the Web-GUI can be used to configure switch inputs and relay outputs. See the section titled [Creating Rules](#) for more information.

## Configuring RS232 Data

Once **Data** is enabled, the codec can be connected to external devices and transport RS232-compatible data via the serial port on the rear panel of the codec.

1. Press the **SETTINGS**  button.
2. Navigate to **System** and press .
3. Select **RS232 Config** and press .
4. Use the navigation buttons to select the correct baud rate.
5. Select **Enable** for flow control and press  to save all settings.



### Important Notes:

- When connecting to G3 codecs over IP, ISDN or POTS only in-band data is available via the Music and MusicPLUS algorithms. See [RS232 Data Configuration](#) for more details.
- It is important that you enable serial port flow control within the codec. Flow control regulates the flow of data through the serial port. If disabled, data will flow unregulated and some may be lost.
- Ensure you match the serial port baud rate to match the rate of the external device you are connecting to. Ideally the settings on both codecs should match, or you could have data overflow issues.
- Only the dialing codec needs to be programmed to send RS232 data. Session data sent from the dialing codec will program all other compatible codecs (non-G3) when you connect.
- RS232 data can be sent from the dialing codec to all endpoints of a multi-unicast audio stream if your codec is capable of these connections. Note: Bidirectional RS232 data is only available on the first connection dialed when multi-unicasting.

## 20.7 Configuring TCP/UDP Ports

In TCP and UDP networks the codec port is the endpoint of your connection. Software network ports are doorways for systems to communicate with each other. For example, several codecs in your studio may use the same public static IP address. Unique port numbers can be used to route audio to each codec.

### Tieline Codec Default Port Settings

By default, the codec uses a TCP session port to send session data and a UDP port to send audio. The session port is programmed to use the TCP protocol because it is the most likely protocol to get through firewalls – ensuring critical session data (including dial, connect and hang-up data) will be received reliably.

The default session and audio port settings in Tieline codecs, for both TCP and UDP connections, are outlined in the [Installing the Codec at the Studio](#) section of the manual. This section also contains useful information for configuring port forwarding and troubleshooting IP connections.

## Changing Codec Port Numbers

---

Reasons for adjusting the port setting on your codec include:

- Creating a path through gateways and firewalls.
- Another IP device is already using a codec's port number.
- More than one studio codec is in use and each codec requires a different port number.

## Configuring the Session and Audio Port Numbers used when Dialing a Program

---

For two codecs to connect, they need to be configured with matching port numbers. If there is a need to change codec port settings, in most situations you should consult your organization's resident IT professional. To adjust either the session or audio port numbers for a particular connection within a program:

1. Press the **HOME**  button to return to the **Home** screen.
2. Use the navigation buttons on the front panel to select **Connect** and press the  button.
3. Select **IP** and press the  button.
4. Select your preferred **IP Session** mode and press the  button.
5. Use the down  navigation button to select **Setup** and press the  button.
6. Navigate to either **Session** (session protocol) or **Protocol** (audio protocols) and press .
7. Select the session or audio port you want and press .
8. Use the numeric **KEYPAD** to add a new port number and press .

## Changing the Tieline Session Ports when Answering

---

To adjust the local Tieline session data port used by your codec:

1. Press the **HOME**  button to return to the **Home** screen.
2. Use the navigation buttons on the front panel to select **Settings** and press the  button.
3. Select **Tieline Session** and press .
4. Navigate to **Session Port** or **Alternative Session Port** and press .
5. Adjust the setting and press the  button to store the new configuration.

## Audio Port Settings for Tieline Session Data and Sessionless IP Calls

---

The codec supports sessionless IP streaming, whereby the codec does not send Tieline session data when attempting to connect. When using this mode you need to configure the "send" audio port (codec port at the remote end of the link to which you are sending audio) and "return" audio port (port used by the local codec to receive audio from the remote codec).

It is also possible to configure the send and return audio ports for a codec using Tieline session data to establish IP connections. This may be required because some firewalls require symmetric port configuration.

### Sessionless Audio Port Configuration

When you select **Sessionless** as the **Session Protocol**:

- The default value for both the **Send** and **Return** (audio) **Ports** is 9000
- The range of values for the audio ports is 2000 to 65535
- The audio port values can be set independently
- Both audio ports can always be configured, i.e. there is no dependency on encode/decode direction

### "Tieline Codec" Port Configuration

If using the **Tieline Codec** setting for call establishment (i.e. Tieline session data is enabled), you can also change the default audio ports if required.

- The default value for the **Send** (audio) **Port** is 9000
- The range of values for the **Send Port** is 2000 to 65535
- The default port value for the **Return** (audio) **Port** is **Automatic**. Note: **Automatic** indicates that the codec will allocate the return port value and send this information to the codec to which you are dialing
- The range of values for the **Return Port** is 2000 to 65535

### Sessionless Multicast Connections

For a sessionless multicast server connection:

- Only the **Send Port** is available
- The default value for the port is 9000
- The range of values for the port is 2000 to 65535

For a sessionless multicast client connection:

- Only the **Return Port** is available
- The default value for the port is 9000
- The range of values for the port is 2000 to 65535

## 20.8 Configuring QoS for IP Packets

It is possible for IP networks to prioritize and differentiate between data packets transmitted through routers across networks. This is useful because in modern data networks many different IP services like email, voice, web pages, video and streaming music coexist within the same network infrastructure.

### Prioritizing IP Data Packets when Broadcasting

IP audio data packets can be programmed for expedited or assured forwarding (Quality of Service or QoS) when traversing different networks. Routers can also be programmed to ignore these forwarding priorities so they are not assured across all networks.

The codec can be programmed to tag IP data packets sent across a network by entering a value into the Differentiated Services Code Point (DSCP) field within the header of data packets transmitted over the network. Check with your IT administrator before changing this setting. By default the codec is programmed for Assured Forwarding and more details about DSCP are available on Wikipedia at <http://en.wikipedia.org/wiki/Dscp>.

### Configuring QoS

1. Press the **SETTINGS**  button.
2. Use the navigation buttons to select **QoS** and press the  button.



3. Press the button and use the **RETURN** button to delete numbers already entered, then use the numeric **KEYPAD** to enter the new setting recommended by your IT administrator.
4. Press the button to save the new setting.



**Important Note:** To ensure the continuous and regular flow of tagged data packets along the path from point to point, all routers and switching equipment must respect the QoS setting of the packets sent. Any bandwidth partitioning schemes should partition over a small interval to ensure the codec jitter buffer does not empty and audio remains continuous.

## 20.9 Reset and Restore Factory Default Settings

There are several options in the **Reset** menu which allow you to restore factory default settings within the codec.

	Function	Description
1	Reset Audio and 'Connect' Settings	Click to restore factory default settings for Audio and Connect menu settings
2	Restore Factory Defaults	Click to restore factory default settings, excluding user defined programs and call history
3	Delete Programs & Call History	Deletes custom programs and recent calls in the codec; speed dial contacts are retained
4	Reboot Codec	Click to restart the codec
5	Clear Logs	Deletes codec event and log history. Note: This should only be performed if instructed to by Teline support staff.



**Important Note:** After restoring factory defaults, always reboot the codec using the **Reboot Codec** function, not by removing power from the codec.

1. Press the **SETTINGS** button.
2. Use the navigation buttons to select **Reset** and press the button.



3. Navigate to the preferred option from those available and press the button.



4. Select **Yes** and press the  button to confirm the reset function.

## Reset and Restore Factory Defaults using the Web-GUI

The Web-GUI can also be used to reset and restore factory defaults. See [Reset Factory Default Settings](#) for more details.

## 20.10 Configuring SNMP Settings

The codec supports Simple Network Management Protocol (SNMP ) for managing devices on IP networks. To configure SNMP settings:

1. Press the **SETTINGS**  button.
2. Use the navigation buttons to select **SNMP** and press the  button.



3. Navigate to each setting in turn and press the  button to adjust and save each new setting.




**Important Note:** For more information on SNMP codec settings see [Configuring SNMP in the Codec](#).

## 20.11 Test Mode

Test mode is used by the codec to perform an input/output loopback test of audio. E.g. Input 1 is routed to Output 1, Input 2 is routed to Output 2 etc.

1. Press the **SETTINGS**  button.
2. Navigate to **Audio** and press .
3. Navigate to **Test Mode** and press .
4. Navigate to **Info** and press  to view the **Audio Loopback Test Mode** summary.

Loopback input/output test mode is enabled while the **Audio Loopback Test Mode** dialog appears on the screen. When you navigate out of this screen this test mode ceases.

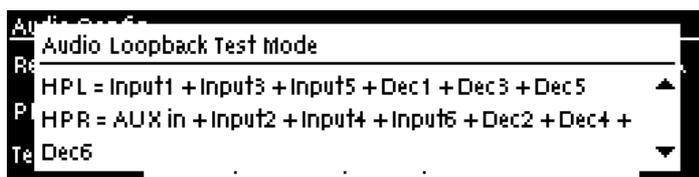

## 21 Reference

The following sections contain reference and troubleshooting information.

### 21.1 Regular Maintenance

Tieline recommends the codec undergoes regular maintenance to ensure operational efficiency and prolong its life.



**WARNINGS:** All work should be carried out by suitably qualified personnel. Remove both power leads from the codec before removing the cover. All parts are mounted on plugs and only a Philips screwdriver is required. Ensure that fan mounting lugs are not hooked out by the cover.

#### Maintenance Schedule

---

Tieline recommends a three year maintenance schedule which includes the following procedures to be completed:

1. Evacuate all dust from the unit and clean vents.
2. Replace both PSUs.
3. Replace the fan.

Controlled rack environments may allow a longer maintenance cycle. Uncontrolled environments, where temperatures are elevated, may require a shorter maintenance cycle.

Tieline recommends that the racks in which codecs are installed are thoroughly evacuated to ensure proper airflow from the bottom to the top. Where space is available, a 1RU gap between codecs will assist in minimizing internal temperature build up. Tieline has incorporated dual redundant PSUs and backup alarm features to assist in maintaining reliable operations. The fan has been carefully chosen for long life operation and should not be replaced by a cheaper equivalent. Fan speed control circuitry reduces the fan speed as internal rack temperatures fall below 25 degrees Celsius. This greatly extends the working life of the fan and the codec. If rack temperatures are elevated above 25 degrees Celsius, the fan speed will increase to reduce CPU temperature.

## 21.2 Installing the Codec at the Studio

### Studio IP Streaming Setup for Tieline Audio Codecs

The following instructions are intended to help you configure your internet connection and Tieline codecs at the studio to enable incoming calls over the internet from a remote Tieline codec. It is assumed that you have a basic understanding of your IP network and how to configure IP devices. If you have limited IT network knowledge, we recommend you engage the services of an IT professional to install the public IP address and perform the Network Address Translation (NAT) and port forwarding between the public internet and your private Local Area Network (LAN) at the studio.

### Prerequisites

The following procedures are valid for:

- All firmware versions in the Genie and Merlin codec families.
- All Bridge-IT Basic and Pro and Bridge-IT XTRA codecs with firmware release v.2.x or higher.
- All Commander G3 and i-Mix G3 codecs.

### Getting Started at the Studio

To perform a typical codec installation at the studio you will need to:

1. Contact your Internet Service Provider and organize a dedicated high speed broadband connection at the studio for your codec with a public static IP address. Do not share this connection with other devices.
2. Install your codec at the studio and attach an active RJ-45 LAN cable to the "LAN" or "Ethernet" port on the rear of the codec. Please note:
  - The green LED underneath the "LAN" or "Ethernet" port will illuminate and the orange LED will flash steadily if you are connected to an active LAN connection.
  - The Genie and Merlin families of IP codecs support two simultaneous Ethernet connections.
3. If you are connecting a single codec to a router without a firewall you can enter the public IP address, Subnet Mask and Gateway directly into the codec and your work is done. Note: your Telco should be able to provide this information.
4. Alternatively, if you are connected to a router with a firewall, configure Network Address Translation (NAT) in your router. NAT is performed between the public internet and your private Local Area Network (LAN) by your router. Your remote codec sends IP data packets to the studio router's public static IP address and the router performs NAT, which forwards these data packets to the private IP address allocated by the router to your codec. As part of this process we recommended you:
  - Connect to your router using a web-browser.
  - Configure it to allocate a static private IP address for each codec.




**Important Note:** The IP address may change if the codec is allocated a DHCP IP address by the router and it loses power or is temporarily disconnected from the LAN. This will cause problems for remote codecs attempting to dial and connect.

5. Ensure your router's firewall is configured with the relevant TCP and UDP IP ports open to allow data traffic between your codec and the remote codec. The process is fairly simple if you use the following procedure:
  - a. Connect to your router using a web-browser.
  - b. Navigate to [http://portforward.com/english/applications/port\\_forwarding/Tieline-G5/default.htm](http://portforward.com/english/applications/port_forwarding/Tieline-G5/default.htm) (Note: when configuring a Commander or i-Mix G3 codec at the studio use

[http://portforward.com/english/applications/port\\_forwarding/Tieline-G3/default.htm](http://portforward.com/english/applications/port_forwarding/Tieline-G3/default.htm) )

- c. Click to select your router manufacturer from the list.
- d. Next, click to select your router model from the list.
- e. Follow the instructions to complete port forwarding

6. Visit [www.portforward.com](http://www.portforward.com) and download the port checking application to verify your router's ports are open.
7. Configure the static IP address in your codec using the instructions in the next section. To allow multiple codecs to share a single public static IP address behind a firewall and route the calls correctly, your codecs and the firewall need to be configured similarly to the example diagram which follows. Ensure the port, IP address, Subnet Mask and Gateway settings in your codecs match those configured in your router.

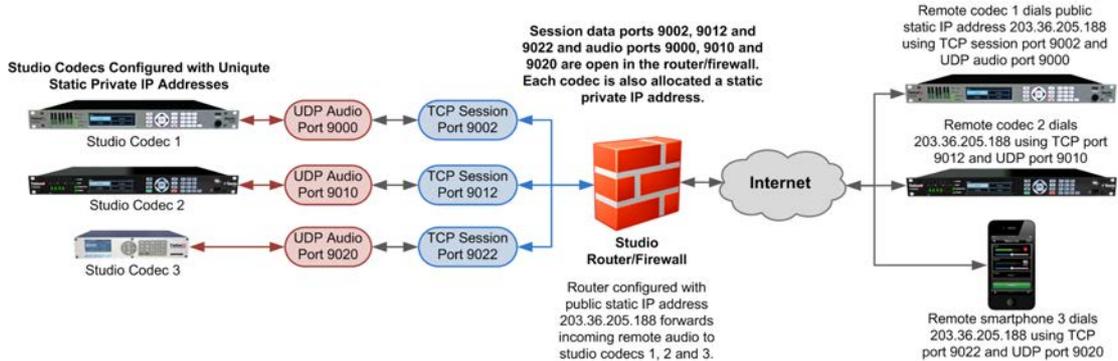

### Port Forwarding to 3 Studio Codecs Sharing a Public Static IP Address



#### Important Note:


- The most common studio configuration issue is a firewall which blocks the incoming and/or outgoing TCP and UDP ports, or not configuring NAT and port forwarding correctly. The following table lists the firewall ports you need to open for each model of Tieline codec if they are dialing your router at the studio. If the remote codec is also connected to a LAN with a firewall you may also need to open the ports at the remote end of the link to connect successfully.
- Some firewalls require symmetric port configuration. The codec supports configuration of the "send" audio port (codec port at the remote end of the link to which you are sending audio) and "return" audio port (port used by the local codec to receive audio from the remote codec).

Firewall Ports					
Commander G3/i-Mix G3		Bridge-IT/Bridge-IT XTRA		Merlin and Genie Codec Families	
TCP	UDP	TCP	UDP	TCP	UDP
IP1 Session Port: 9002	IP1 Audio Port: 9000	Session Port (Sess): 9002	Audio (Proto): 9000	Session Port: 9002	Audio Port Stream 1: 9000
IP2 Session Port: 9012	IP2 Audio Port: 9010	Web-GUI: 80	SIP Session: 5060	Alternative Session: 9012	Audio Port Stream 2: 9010
Toolbox Software: 5550	Toolbox Software: 5550	Alternative Session: 9012	SIP Audio: 5004	Web-GUI: 80	Audio Port Stream 3: 9020
	SIP Session: 5060	Alternative Web-GUI: 8080		Alternative Web-GUI: 8080	Audio Port Stream 4: 9030
	SIP Audio: 5004				Audio Port Stream 5: 9040
					Audio Port Stream 6: 9050
					SIP Session: 5060
					SIP Audio: 5004, 5006, 5008, 5010, 5012, 5014


## Configuring a Static Public or Private IP Address in Genie, Merlin and Bridge-IT (v.2.x firmware) Codecs

To enter a static IP Address into the codec for NAT:

1. Press the **HOME**  button to return to the **Home** screen.
2. Use the navigation buttons to select **Settings** and press .
3. Use the down navigation button to select **LAN** and press .
4. Select **Eth1** and navigate to IPv4 mode and press .

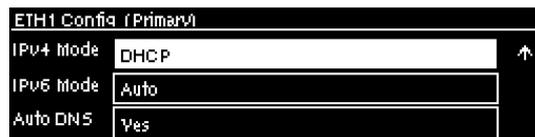

5. DHCP is enabled by default. Select **Static** and press .

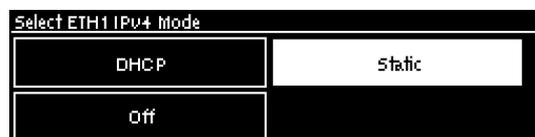

6. The Static IP address menu is revealed after DHCP is disabled. Use the navigation buttons to select **IPv4 Static IP** and press .



7. Use the numeric **KEYPAD** to enter the IP address and press **OK** to store the setting. Note: use the \* or # buttons to enter the periods in the IP address and use the **RETURN** button to delete any numbers already entered.



8. Enter changes to the **IPv4 Subnet** (Subnet Mask) or **IPv4 Gateway** (Default Gateway) in the same way if they are required (check with your network administrator for these settings).
9. After all changes have been made use the navigation buttons to scroll to the top of the menu and select **Apply Setting**, then press the OK button to save all changes.
10. From the **Home** screen select **Settings > Unit > Eth** in the codec menus to ensure the new static IP address has been entered correctly.

## Configuring a Static IP Address in Commander G3 and i-Mix G3 Codecs

To set up a static IP address in Commander G3 and i-Mix G3 codecs select **Menu > Configuration > Advanced > LAN settings > IP Setup > Setup > Static > IP Address > [enter IP address] > press OK > Subnet Mask [enter Subnet Mask] > press OK > Gateway [enter Gateway] > press OK > reboot the codec.**

### Record IP Address Details

<b>IPv4 Static IP Address</b>	
IP Address	. . .
Subnet Mask	. . .
Default Gateway	. . .
<b>IPv6 Mode: Manual</b>	<b>(Bridge-IT, Genie and Merlin codecs only)</b>
IP Address	: : : : : :
IPv6 Prefix Size	
IPv6 Gateway	: : : : : :

## Getting Connected

Once the studio codec is configured you are now ready to receive an incoming call from the remote codec over the internet. Always dial from the field codec to the studio codec over the internet unless the remote codec is assigned a public static IP address and you know this address.

If you dial the studio using a cell-phone data network at the remote site you will not normally experience any firewall or port blocking issues at the remote end of the link using default Tieline ports.

## Troubleshooting: How to Determine Where Firewall Port Blocking is Occurring

If you find you are unable to either send or receive audio between the studio and remote codecs you can use Tieline's Link Quality reading to diagnose where ports are being blocked. LQ can be displayed on the front LCD screen of Tieline's Bridge-IT, Merlin and Genie codecs by selecting

**Cxns**, then select the connection you want to view and press the **OK** button. LQ readings are also displayed on the home screen of all Commander and i-Mix G3 codecs.

## Link Quality (LQ) Readings

Send and Return LQ numbers help you to determine if a problem is occurring at either end of a connection. For example, on an IP connection the Return LQ reading represents the audio being downloaded from the network locally (i.e. audio data is being sent by the remote codec). Conversely, the Send LQ reading represents the audio data being sent by the local codec (i.e. being downloaded by the remote codec). To ensure a stable connection, try to maintain a reliable reading of 80 or higher for both the **Send** and **Return** LQ reading.




### Important Note:

- The **Return** link quality reading is the same as the Local (**L**) setting displayed on a G3 codec.
- The **Send** link quality reading is the same as the Remote (**R**) setting displayed on a G3 codec.

### Diagnosing Port Blocking via the Studio Codec LQ

If the studio codec **Return** LQ reading is **01** then incoming audio from the remote codec is being blocked by a firewall at either point A or B in the following diagram. If the studio codec **Send** LQ reading is **01** then outgoing audio from the studio is being blocked by a firewall at either point C or D in the following diagram.

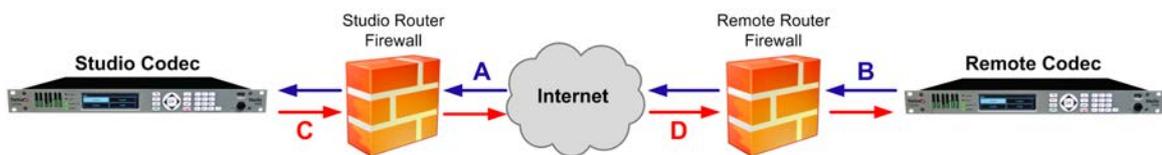

### Diagnosing Port Blocking via the Remote Codec LQ

If you attach your Tieline codec at the remote site to a LAN with access to the internet you can often dial and connect to the studio without any problem. It is less likely that a firewall will block outgoing TCP and UDP ports. However, if there is a firewall at the remote site it may block incoming data packets from the studio.

The principle is the same at the remote codec for diagnosing blocked ports. If the remote codec **Return** LQ reading is 01 then incoming audio from the studio codec is being blocked by a firewall at either point C or D in the preceding diagram. If the remote codec **Send** LQ reading is 01 then the outgoing audio from the remote codec is being blocked by a firewall at either point A or B in the preceding diagram.

## Troubleshooting TCP Port Blocking

Error messages on the codec screen can help to diagnose TCP port blocking.

1. **"Connection Refused"** usually means that the firewall is configured correctly but the codec is not using the expected port. For example, the firewall is set up to forward via port 9002 but codec is 'listening' to port 10,000. "Connection Refused" is not normally shown if the firewall is not configured correctly because a firewall will by design silently drop any forwarding requests to ports that it doesn't have open (see next point). Note: "Connection Refused" will also be displayed if the Commander G3 or i-Mix G3 codec you are calling is already connected.
2. **"Connection Timeout"** can mean one of two things:
  - The firewall is not configured correctly and the attempted codec connection is being

silently dropped, e.g. a remote codec is dialing to port 9002 but the studio firewall port forwarding is not configured.

- The UDP port is not port forwarded correctly. Tieline codecs send test data during connection establishment to make sure that the audio path is configured correctly; if this process fails then it will also result in a "Connection Timeout".

### **How do I determine which end is blocking data flow?**

Tieline test codec firewalls have the default Tieline TCP and UDP ports open. You can dial into these test codecs (or other codecs you know are configured correctly) from your recently configured studio and remote codecs and use the LQ readings to diagnose whether your studio or remote codec firewall is blocking your data packets. If one codec connects ok and the other one doesn't, then you will know which end is likely to be causing the problem. As an example:

1. Dial from site 1 to a Tieline test codec.
2. Dial from site 2 to Tieline test codec.

If both of these connect successfully then the "outbound" TCP path for session data is OK, and the inbound UDP audio path is OK.

3. Dial to site 1 from a codec you know is configured correctly.
4. Dial to site 2 from a codec you know is configured correctly.

If either of these calls fail then TCP and/or UDP inbound data is being blocked on the failed connection (see "Troubleshooting TCP Port Blocking" above).

### **Testing your Codec**

---

- Visit <http://www.tieline.com/Support/Test-lines> for a list of test IP codec addresses you can use to verify your codec is configured correctly.
- See [Testing IP Network Connections](#) for more IP test information.

### **Learning More About IP Networks**

---

For more IP network information please see the section titled [Understanding IP Networks](#) which discusses:

- Private versus public IP addresses.
- Static versus DHCP assigned IP addresses.
- Network Address Translation (NAT), port forwarding and firewalls.

## 21.3 Understanding IP Networks

### Types of IP Addresses Available

	Type of IP Address	How the IP Address is Allocated	Description
<b>Public</b>	Static Public IP Address	Internet Service Providers (ISPs)	ISP's allocate a static public IP address to allow network devices to communicate with each other over the internet. It works like a public telephone number and will allow your remote codec to call your studio codec over the Internet.
	Dynamically Assigned Public IP Address	Internet Service Providers (ISPs)	ISP's usually allocate dynamically (automatically) assigned public IP addresses to allow network devices to communicate with each other over the Internet. (Not recommended for studio installations because each time you connect to your ISP the IP address can change).
<b>Private</b>	Dynamically Assigned Private IP Address	DHCP Server/Router on your own private LAN network.	A DHCP server-allocated IP address that is automatically assigned to a device on a LAN to allow it to communicate with other devices and the internet. This address can change each time a device connects.
	Static Private IP Address	LAN Administrator	A network administrator-allocated static address which is programmed into a device to allow it to connect to a LAN. Often a security measure to only allow access to devices approved by a network administrator.

### Obtaining Public IP Addresses

To send audio streams over the public internet you need to use a public IP address assigned to you by your ISP (Internet Service Provider).

A public IP address is like your public telephone number and allows you to be contacted over the internet in much the same way people dial your public telephone number. They come in two forms; dynamic (DHCP) and static. Most ISPs assign a dynamic public IP address by default, which can often change without you knowing. This is suitable for a quick demo of your Tieline codec, but for a permanent installation you will need to request a permanent static public IP address.

Once the Static Public IP address is assigned to your internet connection (router) at the studio you need to create a link between the public IP address and your codec's private IP address on the LAN. This is called Network Address Translation.

Depending upon how your network is configured, it may also be possible to simply connect your Tieline codec directly into your ADSL modem/router and receive a public address from the router.

### Private LAN IP Addresses

By default your Tieline codec will normally be automatically assigned a private IP address when you connect it to a typical router over a LAN.

Private IP Addresses are associated with LANs and normally reside behind a firewall and are not visible to the internet. They are generally in the ranges: 10.0.0.1 – 10.255.255.255, 169.254.0.0 – 169.254.255.255, 172.16.0.0 – 172.31.255.255 and 192.168.0.0 – 192.168.255.255 and are assigned by network DHCP servers and routers.

These IP Addresses are generally assigned for a predefined period (known as a lease) by your network's DHCP server or router. This IP address will generally expire after the lease period. DHCP assigned IP Addresses may also change if the device is disconnected for lengthy periods or if power to the device is turned off and back on. As a result, it is advised that you make this IP address permanent by assigning it as a Static DHCP IP Address. This will ensure you are able to always forward incoming audio packets to your codec using the same private IP address at the studio using port forwarding (see the section on port forwarding for more details). Consult your Network Administrator if you are unsure how to do this.

## Network Address Translation (NAT)

---

Network Address Translation (NAT) is a method of connecting multiple devices to the internet using one public IP address.

The best way to explain NAT is to use the example of a phone system at an office that has one public telephone number and multiple extensions. This type of telephone system allows people to call you on a single public telephone number and performs the translation and routing of the public number to a particular private extension. Similarly, in order to receive an IP call from a remote codec over the public internet, the same network address translation principle applies. NAT and port forwarding allows a single device, such as a broadband router, to act as an agent between the public internet and a local private LAN.

The relationship between public and private IP addresses and NAT is displayed in the following diagram and the following section explains port forwarding configuration in more detail.

## Port Forwarding: Tieline TCP and UDP Port Settings

---

For your Tieline Codec to communicate over the public internet an IP Address alone is not sufficient. In TCP/IP and UDP networks the codec port is the endpoint of your connection. Ports are doorways for IP devices to communicate with each other. Picture a house and imagine the front door is the entry point represented by a public or private IP address. Then you want to get to several codecs in different rooms of the same house and ports represent the doors to each of those rooms. In principle this is how port addressing works.

For example, several codecs may dial into your studio using the same public static IP address. In this situation it is necessary to configure codec 'programs' with audio streams using different audio ports for discretely routing each incoming and outgoing audio stream. By doing this your studio's network routers know where IP packets for each audio stream should be routed, i.e. to which codec and respective audio outputs.

When data packets are received from remote codecs at a particular public IP address, port information is translated from data packets to ensure the correct packets are sent to the correct studio codecs. This process is performed by PAT (Port Address Translation), which is a feature of NAT (Network Address Translation) devices.

Tieline codecs use TCP ports for setting up the communication session and UDP ports for streaming audio. While TCP ports are generally open, UDP ports are generally blocked by network devices which contain firewalls and will stop you delivering your audio. Depending on the codecs you are using, you need to configure your firewall to allow TCP and UDP protocols to pass through the ports listed in the table below.

## 21.4 Tips for Creating Reliable IP Connections

The following 10 tips are provided to help obtain the best possible IP connection between two codecs, without paying for Quality of Service (QoS).

1. Always use the best quality Internet Service Provider (ISP). Tier 1 service providers are best as their infrastructure actually makes up the internet 'backbone'. Wikipedia lists the major service providers that make up the internet backbone at: [http://en.wikipedia.org/wiki/internet\\_backbone](http://en.wikipedia.org/wiki/internet_backbone). In Australia Telstra is equivalent to one of these service providers.
2. You will get the best quality connection if both the local (studio) and remote codecs use the same ISP. This can substantially increase reliability, audio bandwidth and reduce audio delay. Using the same service provider nationally can give better results than using different local service providers. This is especially true if one of the service providers is a cheap, low-end domestic service provider, which buys its bandwidth from other ISPs. Second and third tier providers sublease bandwidth from first tier providers and can result in connection reliability issues due to multiple switch hops. We also highly recommend using First Tier ISPs if connecting two codecs in different countries.
3. Sign up for a business plan that provides better performance than domestic or residential plans. Business plans typically have a fixed data limit per month with an additional cost for data beyond that limit. In addition, Service Level Agreements (SLA) will often provide better support and response times in the event of a connection failure. Domestic plans are often speed-limited or "shaped" when usage exceeds a predefined limit. These plans are cheap but they are dangerous for streaming broadcast audio.
4. Ensure that the speed of the connection for both codecs is adequate for the job. The minimum upload speed recommended is 256 kbps for a studio codec and 64 kbps for a field unit connection.
5. Use good quality equipment to connect your codecs to the internet. (Teline successfully uses Cisco® switching and routing equipment.):
  - If you are using a DSL or ADSL connection make sure you purchase a high quality modem that can easily meet your speed requirements. This is especially important if you are over 4 kms from an exchange.
  - If you have multiple codecs connected to a local area network (LAN) please ensure that your network infrastructure is designed for media streaming and not domestic usage. Teline has tested several cheap 8-port switches that lose more packets between local computers than an international IP connection between Australia and the USA!
  - If using a wireless connection ensure that the antenna signal strength received is strong. The type of antenna used and the amount of output gain also affects connection quality.



**Important Note:** You should be able to stream audio between two codecs on your LAN and get high percentage send/return 'link quality' readings of around 99. If you see anything less than this then you should get a network engineer to investigate the issue.

6. Once your internet connection is installed at the studio check that the connection performance is approximately what you ordered and are paying for. A connection can perform below advertised bit rates if:
  - There is an error in ISP configuration;
  - There is an error in modem configuration;
  - There is a poor quality line between the studio and the exchange;
  - There are too many phones or faxes connected to the phone line; or
  - Line filters have been connected incorrectly.

7. Use a dedicated DSL/ADSL line for your codecs. Do not share a link with PCs or company networks. The only exception to this rule is if an organization has network equipment and engineers that can implement and manage quality of service (QoS) on its network.
8. Use UDP as the preferred audio transport protocol.
9. When using UDP ensure the total bit rate (audio bit rate plus header bit rate) is no more than 80% of the ISP connection rate. IP headers require around 20 kbps in addition to the audio bit rate. For example, with a 64 kbps connection the audio bit rate should be  $(64-20) \times 0.8 = 31.2$  kbps or lower.
10. Wireless IP connections can easily become congested and result in packet loss and audio drop-outs. It is very difficult to guarantee connection quality when there is no way of knowing how many people are sharing the same wireless connection.



**Important Note:** Be careful when using cell-phone connections at special events where thousands of people have mobile phones. This can result in poor quality connections and audio drop-outs if cell-phone base stations are overloaded.

## IP Connection Checklist

Complete the following check list and aim for a score of at least 8 out of 10 before going live.

Number	Check	Result
1	Using a reputable Tier1 ISP that's part of internet backbone.	
2	The same ISP is being used for both codec connections.	
3	The ISP Plan is a Business Plan or equivalent.	
4	The ISP connection speed is adequate.	
5	Equipment is high quality and suitable for media streaming.	
6	The ISP connection speed has been tested and is suitable.	
7	The ISP connection is not shared with other PCs or devices.	
8	UDP is being used as the audio transport protocol.	
9	No more than 80% of ISP connection bandwidth is being used.	
10	There are no wireless connections being used.	

## 21.5 Testing IP Network Connections

There are a few very simple tools that you can use to test whether a codec can be reached over an IP network.

- Visit <http://www.speedtest.net/> to test the upload and download speed of your IP connections and identify your public IP address.
- Visit [www.portforward.com](http://www.portforward.com) and download the port checking application to verify your router's ports are open. Note: Using a port scanner to test a codec will be unsuccessful if you try to scan and the port is already in use, i.e. the codec is connected.
- Visit [www.subnetonline.com](http://www.subnetonline.com) and use an online port scanner to check for open and closed TCP ports. This site also has numerous other software tools, including an online ping webtool for IPv4, plus TraceRoute and TracePath software tools.


## Ping the Codec

A ping test can be used to test whether it is possible to reach a codec or any device over an IP network. A ping test measures:

- The round-trip time of packets.
- Any packet loss.

There are two types of ping tests:

1. **Short test:** sends 4 packets and delivers statistics.
  - i. Point to the **start** menu on your PC and click once.
  - ii. In the search text box type **Run** and press **Enter**.
  - iii. Type **CMD** in the **Run dialog** text box and click **OK**.
  - iv. Type **ping** and the IP address of the codec you are pinging (i.e. **ping 192.168.0.159**) and press the **Enter** key on your keyboard.
  - v. The round trip time of the packets is displayed, as well as any packet loss.

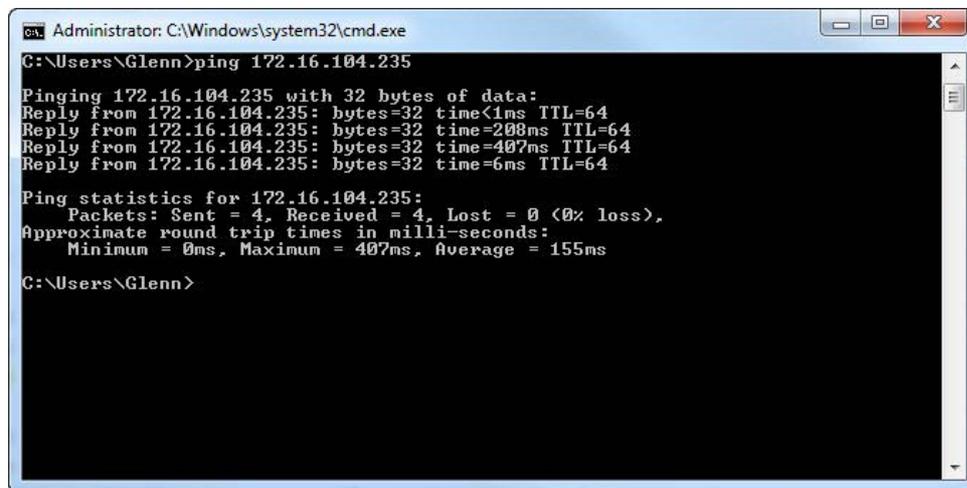

```
Administrator: C:\Windows\system32\cmd.exe
C:\Users\Glenn>ping 172.16.104.235

Pinging 172.16.104.235 with 32 bytes of data:
Reply from 172.16.104.235: bytes=32 time<1ms TTL=64
Reply from 172.16.104.235: bytes=32 time=208ms TTL=64
Reply from 172.16.104.235: bytes=32 time=407ms TTL=64
Reply from 172.16.104.235: bytes=32 time=6ms TTL=64

Ping statistics for 172.16.104.235:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 407ms, Average = 155ms

C:\Users\Glenn>
```

2. **Long test:** sends packets continuously until stopped.
  - i. Point to the **start** menu on your PC and click once.
  - ii. In the search text box type **Run** and press **Enter**.
  - iii. Type **CMD** in the **Run dialog** text box and click **OK**.
  - iv. Type **ping**, the IP address of the codec you are pinging, and then **-t** (i.e. **ping 203.36.205.163 -t**) and press the **Enter** key on your keyboard.
  - v. Let the test run for several minutes and then press **CTRL C**.
  - vi. The round trip time of the packets is displayed, as well as any packet loss for the period of time that the test occurred.

## Trace the Route of IP Packets

Another utility available on your PC is traceroute. This tool can be used to determine the route and number of hops that data packets are taking to their destination (codec). This is useful because the more routers that packets traverse, the more latency your connection will have, and the less reliable it will be.


- i. Point to the **start** menu on your PC and click once.
- ii. In the search text box type **Run** and press **Enter**.
- iii. Type **CMD** in the **Run dialog** text box and click **OK**.
- iv. Type **tracert**, the IP address of the codec you are contacting (i.e. **tracert 203.36.205.163**) and press the **Enter** key on your keyboard.

## 21.6 Testing ISDN Connections

To test your ISDN line is working you can dial a standard phone line or your cell-phone number. If the call is successful this verifies the line is active. To verify ISDN data is being sent you can:

- Dial a codec you know is connected to an active ISDN line, e.g. another codec in your network or a Tieline test codec.
- Dial the test ISDN data number provided by your Telco (when available).
- Create a program and perform a loopback test by dialing out on the main ISDN number and receive the call on the auxiliary ISDN number. (**Note:** To create a loopback program create a 2 x Mono or Stereo Peer-to-Peer program and configure a dial only audio stream using your main ISDN number. For the second audio stream create an answer only audio stream connection configured for ISDN. If you dial the connection and can hear the audio you are sending on the return B channel, you have confirmed ISDN data is being sent successfully.

If you dial using a loopback program and a "disconnect" error message similar to the following image appears, you may have the incorrect **Line Type** configured.

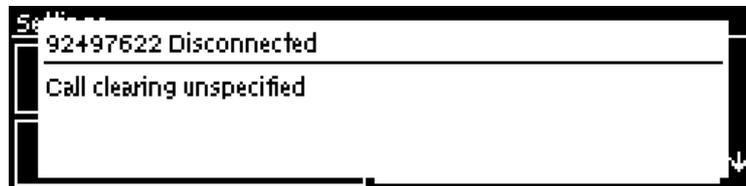

Change the **Line Type** setting and this should hopefully resolve the issue.

### On-Demand ISDN Services

If **Sync** appears for approximately 60 seconds when you connect an ISDN line to the codec and then disappears, or if **Sync** does not appear and you know you are connected to an active ISDN interface, then the line may have 'On-demand' enabled by your Telco. To test this you can dial a codec on an ISDN line known to be operational. Dial over ISDN and if **Sync** appears after connecting it indicates the service has now been activated. Disconnect and then dial again. If this dial is successful 'On Demand' is enabled. We recommend you contact your network service provider and get them to disable 'On Demand' to circumvent any possible connection issues.

## 21.7 Connecting Tieline ISDN to other Codecs

To dial from a Tieline codec to a non-Tieline codec it is necessary to disable 'Session Data' and use an algorithm like G.722 or MPEG Layer 2 for compatibility. The same settings must be configured at both ends for:

- Mono or stereo
  - Encoding (Algorithm)
  - Sample Rate
  - Other relevant settings on the non-Tieline codec
- Following are configuration instructions for dialing to several non-Tieline codec brands over ISDN.

### 21.7.1 Connecting to APT Wordcast Equinox ISDN

#### Configuring the WorldCast Equinox to Make an ISDN Call

1. Plug your ISDN line into the back of the codec and attach power.
2. Press the "Menu" button on the codec to access the codec menus.
3. Press the "Menu" button to select the "USER" menu.

4. Select "Primary Connection" and press the "Ent/Dial" button.
5. Next select "Codec - ISDN" > "Use Audio Profile" [No] > "Eapt-X16", or "Eapt-X24", "MPEG1-L2" or G.722.
6. Select the appropriate bit rate and whether you are dialing in mono, stereo or Joint Stereo, and then the sample rate.
7. For bonded "MPEG1-L2" connections select "CCS IMUX".
8. Complete the profile setup. The codec is now ready to dial or answer.

## Configuring the Tieline Codec to Dial the Equinox over ISDN

1. Press the **HOME**  button to return to the **Home** screen and select **Connect > ISDN**.
2. Navigate to **Setup** and press the  button.




3. Select **Session Type [Sessionless] > Select Dial Route [None] > Number of B Channels** [Choose the number of B-channels (between 1 and 4) required for your connection] > **Algorithm** [Choose **G.722**, **E apt-X Mono** or **Stereo**, **MP2 Mono** or **Stereo** or **MP2 J-Stereo** (Note: select **32kHz** or **48kHz** sample rate for **MP2** and **E apt-X** depending on available B-channels)].
4. Navigate to a Destination (e.g. **Dest 1** or **Dest 2**) and press the  button to select each one in turn. Enter the number for each B channel you want to dial and press the  button, then select which B channel will dial using that number and press the  button.
5. Navigate down to **Auto Reconnect** and press the  button to toggle between **Enabled** and **Disabled**. Note: This is normally enabled on the dialing codec only.



6. Navigate down to **Save as Program** and press the  button to save these settings as a program.
7. Navigate down to **Module Configuration** and press the  button.



8. Select the ISDN module you want to configure and press the  button.

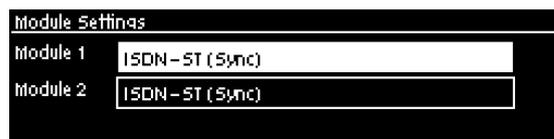

9. Configure the following settings:
  - **Accept > Voice and Data**
  - **Network >** Check with your Telco (**EU-ETSI** in Australia; Europe & most countries outside

North America; **[US Nat]** is the most common in the US, but check with your Telco).

- **Line Type** > Check with your Telco and select either **Point-to-Multi** (point-to-multipoint) or **Point-to-Point** (point-to-point).
- **DN/MSN** > Enter the "SPID" and "DN" numbers if required in your region, e.g. a SPID is normally required in the US.

10. Navigate up to **Apply Settings** and press the  button.

## Dialing from the Tieline Codec

### Program Dialing

1. If you have saved the ISDN program as previously instructed, press the **HOME**  button to return to the **Home** screen and select **Connect > Programs**.
2. Select the saved program you want to load and press the  button.
3. Select **Load** and press the  button to load the program.
4. Press the **CONNECT**  button to dial the ISDN program connections.

### Ad Hoc Dialing

1. If you haven't save the program but have entered the dialing numbers and other settings, press the **HOME**  button to return to the **Home** screen and select **Connect > ISDN > Connect**.
2. Press the  button to dial using the settings previously entered.



**Important Note:** If you select different algorithm settings on each codec and dial from the Tieline codec, the connection will be unsuccessful and the **CONNECTED LED** on the front panel of the Tieline codec will continuously flash. Adjust the algorithm settings and attempt to reconnect.

## Dialing from the WorldCast Equinox



**Important Note:** Configure **ISDN Answer Config** settings in the codec before attempting to dial from the Equinox to the Tieline codec. Select the following settings in the Tieline codec in one of the **Configs** (see [ISDN Answering Configuration](#) for more detail):

- **May bond.**
- **Sessionless.**
- Algorithm: **G.722, MP2 Mono, MP2 Stereo, MP2 J-Stereo** or **E apt-X Mono** or **Stereo.**
- Sample Rate: **32kHz** or **48kHz**

1. Navigate to the B-channel you want to dial over and press the "Ent/Dial" button.
2. Use the keypad to enter the number of the line you are dialing.
3. Press the "Ent/Dial" button again to make the outgoing call from the codec.
4. If dialing two B-channels, navigate to the second B-channel and use the keypad to enter the number, then press the "Ent/Dial" button. Note: the codec screen will display IMUX UNLOCKED until you dial additional connections when bonding multiple channels.



**Important Note:** When dialing a mono or stereo connection over two B-channels audio is not available until the second connection is successful.

## 21.7.2 Connecting to CDQ Prima ISDN

Use the following information to connect a Tieline codec to a Musicam CDQ Prima codec.

### Programming the CDQ Prima for a Mono Connection

---

Select a mono profile in the Prima codec for the connection:

1. Press the "SDIAL" button on the front panel of the codec.
2. When "ID NUM" is displayed press "8" and then press "Enter" using the down arrow.
3. "MPEG2/64K:QS" will be displayed briefly followed by "WORKING".
4. "OK" will be displayed momentarily and then the LCD screen will return to the default screen and be programmed for:
  - A Mono connection.
  - 64Kbps Bit-Rate.
  - 48K Sample Rate.
  - MPEG Layer 2 algorithm.
  - 1 ISDN B channel.
  - Decoder Independent – No.
5. Press the right arrow on the "Enter" button and navigate to "Interface". Push the down arrow on the "Enter" button to select this menu.
6. Use the "Enter" button and navigate to the type of interface you are using. Note: During Tieline tests we used an "Internal TA".
7. Select the actual terminal adapter connected to your codec. Note: During Tieline tests we used the internal "TA301".
8. Use the "Enter" button and select the switch type for the country you are in. Check with your Telco for the correct setting if you are unsure. Note: During Tieline tests we used the internal "NI1" setting for the USA.
9. Use the "Enter" button and keypad to enter the "SPID 1" and "SPID 2" numbers if required.
10. Use the "Enter" button and keypad to enter the "ID 1" and "ID 2" (Directory/MSN) numbers if required.
11. The codec should now be configured.

### Programming the CDQ Prima for a Stereo Connection

---

1. Press the "SDIAL" button on the front panel of the codec.
2. When "ID NUM" is displayed press "27" and then press "Enter" using the down arrow.
3. "Zephyr/128K:QS" will be displayed briefly followed by "WORKING".
4. "OK" will be displayed momentarily and then the LCD screen will return to the screen displayed prior to programming. The codec is now programmed for:
  - A Joint Stereo connection.
  - 128Kbps Bit-Rate.
  - 48K Sample Rate.
  - MPEG Layer 2 algorithm.
  - 2 ISDN B Channels
  - Decoder Independent – Yes
5. Press the right arrow on the "Enter" button and navigate to "Interface". Push the down arrow on the "Enter" button to select this menu.
6. Use the "Enter" button and navigate to the type of interface you are using. Note: During Tieline tests we used an "Internal TA".
7. Select the actual terminal adapter connected to your codec. Note: During Tieline tests we used the internal "TA301".
8. Use the "Enter" button and select the switch type for the country you are in. Check with your Telco for the correct setting if you are unsure. Note: During Tieline tests we used the internal "NI1" setting for the USA.
9. Use the "Enter" button and keypad to enter the "SPID 1" and "SPID 2" numbers if required.

10. Use the "Enter" button and keypad to enter the "ID 1" and "ID 2" (Directory/MSN) numbers if required.
11. The codec should now be configured.

### Configuring the Tieline Codec to Connect to the CDQ Prima

1. Press the **HOME**  button to return to the **Home** screen and select **Connect > ISDN**.
2. Navigate to **Setup** and press the  button.



3. Select **Session Type [Sessionless]** > **Select Dial Route [None]** > **Number of B Channels [Choose 1B (mono) or 2B (stereo)]** > **Algorithm [Choose MP2 Mono or MP2 J-Stereo (Note: select 48kHz sample rate for MP2 algorithms)]**.
4. Navigate to a Destination (e.g. **Dest 1** or **Dest 2**) and press the  button to select each one in turn. Enter the number for each B channel you want to dial and press the  button, then select which B channel will dial using that number and press the  button.
5. Navigate down to **Auto Reconnect** and press the  button to toggle between **Enabled** and **Disabled**. Note: This is normally enabled on the dialing codec only.



6. Navigate down to **Save as Program** and press the  button to save these settings as a program.
7. Navigate down to **Module Configuration** and press the  button.



8. Select the ISDN module you want to configure and press the  button.



**Important Note:** ISDN Sync should be displayed when an ISDN line is connected to the codec. This appears regardless of whether you have configured the 'ISDN Line Type' correctly.

9. Configure the following settings:
  - **Accept > Voice and Data**
  - **Network >** Check with your Telco (**EU-ETSI** in Australia; Europe & most countries outside North America; **[US Nat]** is the most common in the US, but check with your Telco).
  - **Line Type >** Check with your Telco and select either **Point-to-Multi** (point-to-multipoint) or

**Point-to-Point** (point-to-point).

- **DN/MSN >** Enter the "SPID" and "DN" numbers if required in your region, e.g. a SPID is normally required in the US.

10. Navigate up to **Apply Settings** and press the  button.

## Dialing from the Tieline Codec

### Program Dialing

1. If you have saved the ISDN program as previously instructed, press the **HOME**  button to return to the **Home** screen and select **Connect > Programs**.
2. Select the saved program you want to load and press the  button.
3. Select **Load** and press the  button to load the program.
4. Press the **CONNECT**  button to dial the ISDN program connections.

### Ad Hoc Dialing

1. If you haven't save the program but have entered the dialing numbers and other settings, press the **HOME**  button to return to the **Home** screen and select **Connect > ISDN > Connect**.
2. Press the  button to dial using the settings previously entered.

After dialing successfully "FRAMED" should illuminate on the CDQ Prima screen. Tieline codecs also support 32kHz sampling.



**Important Note:** Configure **ISDN Answer Config** settings in the codec before attempting to dial from the Equinox to the Tieline codec. Select the following settings in the Tieline codec in one of the **Configs** (see [ISDN Answering Configuration](#) for more detail):

- **May bond.**
- **Sessionless.**
- Algorithm: **MP2 Mono, MP2 J-Stereo.**
- Sample Rate: **48kHz**

## Making a Mono Call from the CDQ Prima Codec

1. Press the "Dial" button on the front panel of the codec.
2. Navigate right using the "Enter" button and select "1".
3. Enter the number to dial using the numeric keypad.
4. Press the "Enter" button (bottom arrow) and the screen will briefly display "Working", then "Connect" and then the green "Framed" light should illuminate on the front panel.

## Making a Stereo Call from the CDQ Prima Codec

1. Press the "Dial" button on the front panel of the codec.
2. Use the "Enter" button and select "Both".
3. Enter the first number to dial using the numeric keypad.
4. Press the "Enter" button (bottom arrow) and the screen will briefly display "Dialling line 1" and then "Connect".
5. Enter the second number to dial using the numeric keypad and press the "Enter" button (bottom arrow).
6. The screen will briefly display "Dialling line 2", then "Connect" and then the green "Framed" light should illuminate on the front panel.



**Important Note:** When connecting in stereo, the Prima expects both B channel dials to occur within 5 seconds. This can be performed by the Tieline codec.

It has also been noted that the CDQ Prima codec will not connect if no audio is present when dialing. It may connect Prima > Tieline, but not Tieline > Prima. If audio is present, the codec should connect and stay connected even if audio is removed subsequently. The J-Stereo light on the Prima may also flash when in this mode.

Ideally, have audio connected when dialing and the codec will frame immediately after the first dial and then dial the second B channel quickly afterwards.

### 21.7.3 Connecting to Mayah ISDN

#### Configuring the Mayah Sporty to Make an ISDN Call

1. Plug your ISDN line into the codec and attach power.
2. Press "F2 Codec".
3. Press "F3 Setup"
4. Press "F2 Quality"
5. Use the navigation buttons to select an algorithm setting from "G.722", "L2 Mono, Stereo or J-Stereo" or "E apt-X Mono or Stereo", then press the "OK" button to save the setting.
6. Press "F4 ESC" to return to the home screen.
7. Press "F2 Codec", then "F1 Connect", then "F3 Direct".
8. Navigate to "interface" and press "OK" to select ISDN.
9. Navigate to "number1" and press "OK" to enter the ISDN number using the keypad, then press "OK".
10. If you are bonding multiple channels navigate to "number2" and press "OK" to enter the ISDN number using the keypad, then press "OK".

#### Configuring the Tieline Codec to Dial the Mayah Sporty over ISDN

1. Press the **HOME**  button to return to the **Home** screen and select **Connect > ISDN**.
2. Navigate to **Setup** and press the  button.



3. Select **Session Type [Sessionless]** > **Select Dial Route [None]** > **Number of B Channels [Choose the number of B-channels (between 1 and 4) required for your connection]** > **Algorithm [Choose G.722, E apt-X Mono or Stereo, MP2 Mono or Stereo or MP2 J-Stereo (Note: select 32kHz or 48kHz sample rate for MP2 depending on available B-channels)]**.
4. Navigate to a Destination (e.g. **Dest 1** or **Dest 2**) and press the  button to select each one in turn. Enter the number for each B channel you want to dial and press the  button, then select which B channel will dial using that number and press the  button.
5. Navigate down to **Auto Reconnect** and press the  button to toggle between **Enabled** and **Disabled**. Note: This is normally enabled on the dialing codec only.



6. Navigate down to **Save as Program** and press the  button to save these settings as a program.

7. Navigate down to **Module Configuration** and press the  button.



8. Select the ISDN module you want to configure and press the  button.



9. Configure the following settings:
- **Accept > Voice and Data**
  - **Network >** Check with your Telco (**EU-ETSI** in Australia; Europe & most countries outside North America; **[US Nat]** is the most common in the US, but check with your Telco).
  - **Line Type >** Check with your Telco and select either **Point-to-Multi** (point-to-multipoint) or **Point-to-Point** (point-to-point).
  - **DN/MSN >** Enter the "SPID" and "DN" numbers if required in your region, e.g. a SPID is normally required in the US.
10. Navigate up to **Apply Settings** and press the  button.

## Dialing from the Tieline Codec

### Program Dialing

1. If you have saved the ISDN program as previously instructed, press the **HOME**  button to return to the **Home** screen and select **Connect > Programs**.
2. Select the saved program you want to load and press the  button.
3. Select **Load** and press the  button to load the program.
4. Press the **CONNECT**  button to dial the ISDN program connections.

### Ad Hoc Dialing

1. If you haven't save the program but have entered the dialing numbers and other settings, press the **HOME**  button to return to the **Home** screen and select **Connect > ISDN > Connect**.
2. Press the  button to dial using the settings previously entered.



**Important Note:** If you select different algorithm settings on each codec and dial from the Tieline codec, the connection will be unsuccessful and the **CONNECTED LED** on the front panel of the Tieline codec will continuously flash. Adjust the algorithm settings and attempt to reconnect.

## Dialing from the Mayah Sporty



**Important Note:** Configure **ISDN Answer Config** settings in the Tieline codec before attempting to dial from the Equinox to the Tieline codec. Select the following settings in the Tieline codec in one of the **Configs** (see [ISDN Answering Configuration](#) for more detail):

- **May bond.**

- **Sessionless.**
- Algorithm: **G.722, MP2 Mono, MP2 Stereo, MP2 J-Stereo or E apt-X Mono or Stereo.**
- Sample Rate: **32kHz or 48kHz**

1. Press "F4 ESC" to return to the home screen.
2. Press "F2 Codec", then "F1 Connect", then "F3 Direct".
3. Use the navigation buttons to select "dial" and press the "OK" button to dial all B-channels.

## 21.7.4 Connecting to Telos Zephyr Xstream ISDN

### Configuring the Xstream to Make an ISDN Call

1. Plug your ISDN line into the back of the codec and press the "Codec" button below the LCD screen on the Xstream.
2. "Transmit" should be highlighted and this lets you select your transmit algorithm of choice. If it is not selected use the arrow buttons on the right-hand side of the LCD screen to navigate to this menu item and press the "SEL" button to the right of the LCD screen to select the menu.
3. Use the arrow buttons to navigate to:
  - "G.722".
  - "L2 J-Stereo" (for an MPEG Layer 2 stereo connection), or
  - "L2 Mono 64" or "L2 Mono 128" (for a mono connection, depending on whether you have one or two B channels available).
4. Press the "SEL" button to store your setting and use the arrow down button to navigate to "Receive".
5. Press the "SEL" button and select the same algorithm that you selected for "Transmit" previously and then press the "SEL" button to store your setting.



**Important Note:** If you don't select the same algorithm for "Transmit" and "Receive" algorithms then it can take a long time to connect as the algorithms are scanned by the codec, or the wrong algorithm could be selected.

6. Use the arrow buttons to navigate to "Bitrate" and check that it displays "64kbps" - this is a per channel rate so both ISDN channels are programmed.
7. Use the arrow buttons to navigate to "Sample" and check that the sample rate is set at "48kHz". Press the "SEL" button and use the arrow buttons to make any adjustments to the current setting.
8. Press the "Tel" button below the codec LCD screen and press it again to display the "SPID" and "DN/MSN" screen. If these numbers need to be entered (check with your Telco), use the arrow buttons to navigate to each SPID and DN/MSN field in turn and when it is highlighted press the "SEL" button and enter the number using the keypad. Press "SEL" again to store each number once it has been entered.
9. Press the "Tel" button if you are not entering these SPID/DN/MSN numbers, or if you have already entered them, and check the local ISDN switch type setting is configured for your region.
10. Press the "SEL" button and use the arrow buttons to adjust the setting.
  - Select "ETS300" if you are connecting to a Euro ISDN service.
  - "Natl.I-1" is the most common in the US but check with your Telco.
11. Press the "SEL" button to store the ISDN switch type setting that you have selected.

Your codec should now be configured. Press the "Tel" button on the front panel until it displays the "ISDN Status" screen. "Ready" should be displayed next to any active lines. If this is not displayed, check your connections and settings to make sure they are correct.

## Configuring the Tieline Codec to Dial the Xstream over ISDN

1. Press the **HOME**  button to return to the **Home** screen and select **Connect > ISDN**.
2. Navigate to **Setup** and press the  button.




3. Select **Session Type [Sessionless] > Select Dial Route [None] > Number of B Channels [Choose 1B or 2B] > Algorithm [Choose G.722 , MP2 Mono or MP2 Stereo (Note: select 48kHz sample rate for MP2)]**.
4. Navigate to a Destination (e.g. **Dest 1** or **Dest 2**) and press the  button to select each one in turn. Enter the number for each B channel you want to dial and press the  button, then select which B channel will dial using that number and press the  button.
5. Navigate down to **Auto Reconnect** and press the  button to toggle between **Enabled** and **Disabled**. Note: This is normally enabled on the dialing codec only.



6. Navigate down to **Save as Program** and press the  button to save these settings as a program.
7. Navigate down to **Module Configuration** and press the  button.



8. Select the ISDN module you want to configure and press the  button.

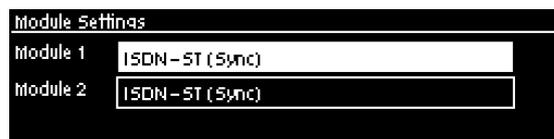

9. Configure the following settings:
  - **Accept > Voice and Data**
  - **Network >** Check with your Telco (**EU-ETSI** in Australia; Europe & most countries outside North America; **[US Nat]** is the most common in the US, but check with your Telco).
  - **Line Type >** Check with your Telco and select either **Point-to-Multi** (point-to-multipoint) or **Point-to-Point** (point-to-point).
  - **DN/MSN >** Enter the "SPID" and "DN" numbers if required in your region, e.g. a SPID is normally required in the US.
10. Navigate up to **Apply Settings** and press the  button.

## Dialing from the Tieline Codec

### Program Dialing

1. If you have saved the ISDN program as previously instructed, press the **HOME**  button to return to the **Home** screen and select **Connect > Programs**.
2. Select the saved program you want to load and press the  button.
3. Select **Load** and press the  button to load the program.
4. Press the **CONNECT**  button to dial the ISDN program connections.

### Ad Hoc Dialing

1. If you haven't save the program but have entered the dialing numbers and other settings, press the **HOME**  button to return to the **Home** screen and select **Connect > ISDN > Connect**.
2. Press the  button to dial using the settings previously entered.



**Important Note:** If you select different algorithm settings on each codec and dial from the Tieline codec, the connection will be unsuccessful and the **CONNECTED LED** on the front panel of the Tieline codec will continuously flash. Adjust the algorithm settings and attempt to reconnect.

## Dialing from the Zephyr Xstream



**Important Note:** Configure **ISDN Answer Config** settings in the codec before attempting to dial from the Xstream to the Tieline codec. Select the following settings in the Tieline codec in one of the **Configs** (see [ISDN Answering Configuration](#) for more detail):

- **May bond.**
- **Sessionless.**
- Algorithm: **G.722** or **MP2 Mono**, or **MP2 Stereo**.
- Sample Rate: **48kHz**

1. Press the "Dial" button once.
2. Use the keypad to enter the number of the line you are dialing.
3. Press the "Dial" button again to make the outgoing call from the Xstream.
4. The codec screen will briefly display "Outgoing Ring" and then "Conn" is displayed after a successful connection.
5. If you are making a stereo connection and need to dial the second line press the "Dial" button again and a screen for "Line 2" is displayed.
6. Use the keypad to enter the second number and press the "Dial" button again.
7. The "TEL" screen will briefly display "Outgoing Ring" and then "Conn" is displayed after a successful connection.



**Two ISDN B Channels Connected**



**Important Note:** When dialing a stereo connection over two ISDN B lines audio is not heard until the second connection is successful.

## 21.7.5 Connecting to Comrex Matrix ISDN

To connect your Tieline codec to a Comrex Matrix rack mount codec:

1. Use the G.722 algorithm.
2. Connect using only one 64Kbps ISDN B Channel (bonding of G.722 over two ISDN B channels is not possible).

### Configuring the Matrix to Make an ISDN Call

1. Connect an ISDN line to the Matrix codec and power up the unit.
2. Press "2" to select "ISDN Status".
3. Press "Enter" to configure the connection.
4. Press "4" to select the "Configure" menu.
5. Press "2" to select the "Network" menu.
7. Press "4" to select "Profiles" and then press "1" to select "Load Profile".
8. Press "2" to select "Store" and program a new profile using the codec wizard.
9. Press ""Enter" to enter a profile number between 1 and 10. Note: This will overwrite any previously stored profile.
10. Next select the number for the ISDN "Switch Type" setting that is appropriate for your region.
  - Press "4" to select "Euro" if you are connecting to a Euro ISDN service.
  - Press "1" to select "NI1", which is the most common in the US, but check this with your Telco.
11. If prompted by the menu, use the keypad to enter the "SPID" number the line being used if this is required in your region. Press "Enter" to store the new number. Note: Use the "Cancel" button to delete numbers.
12. Next use the keypad to enter the "LDN" (DN/MSN) number for the line being used. Press "Enter" to store the new number. Note: Use the "Cancel" button to delete numbers.
13. Enter a "Qdial" (Quick Dial) number.
14. Press "1" to select "G.722" as the algorithm.
15. Press "2" to select "64" as the bit rate.
16. The codec is now programmed to dial.

### Configuring the Tieline Codec to Connect to the Matrix over G.722

1. Press the **HOME**  button to return to the **Home** screen and select **Connect > ISDN**.
2. Navigate to **Setup** and press the  button.



3. Select **Session Type [Sessionless] > Select Dial Route [None] > Number of B Channels [Select 1B] > Algorithm [ Select G.722]**.
4. Navigate to a Destination (e.g. **Dest 1** or **Dest 2**) and press the  button to select it. Then enter the number you want to dial and press the  button, then select which B channel will dial using that number and press the  button.
5. Navigate down to **Auto Reconnect** and press the  button to toggle between **Enabled** and **Disabled**. Note: This is normally enabled on the dialing codec only.



6. Navigate down to **Save as Program** and press the button to save these settings as a program.
7. Navigate down to **Module Configuration** and press the button.



8. Select the ISDN module you want to configure and press the button.



**Important Note: ISDN Sync** should be displayed when an ISDN line is connected to the codec. This appears regardless of whether you have configured the 'ISDN Line Type' correctly.

9. Configure the following settings:
  - **Accept > Voice and Data**
  - **Network >** Check with your Telco (**EU-ETSI** in Australia; Europe & most countries outside North America; **[US Nat]** is the most common in the US, but check with your Telco).
  - **Line Type >** Check with your Telco and select either **Point-to-Multi** (point-to-multipoint) or **Point-to-Point** (point-to-point).
  - **DN/MSN >** Enter the "SPID" and "DN" numbers if required in your region, e.g. a SPID is normally required in the US.
10. Navigate up to **Apply Settings** and press the button.

## Dialing from the Tieline Codec

### Program Dialing

1. If you have saved the ISDN program as previously instructed, press the **HOME** button to return to the **Home** screen and select **Connect > Programs**.
2. Select the saved program you want to load and press the button.
3. Select **Load** and press the button to load the program.
4. Press the **CONNECT** button to dial the ISDN program connections.

### Ad Hoc Dialing

1. If you haven't save the program but have entered the dialing numbers and other settings, press the **HOME** button to return to the **Home** screen and select **Connect > ISDN > Connect**.
2. Press the button to dial using the settings previously entered.

## Dialing from the Comrex Matrix



**Important Note:** Configure **ISDN Answer Config** settings in the codec before attempting to dial from the Comrex Matrix to the Tieline codec. Select the following settings in the Tieline codec in one of the **Configs** (see [ISDN Answering Configuration](#) for more detail) :

- **May bond.**
- **Sessionless.**
- **G.722 Algorithm**

1. Use the "Cancel" button to return to the main LCD connection screen.
2. Press "Enter", then press "1" ("Dial") and use the numeric keypad to enter the number you wish to dial.
3. Press "Enter" to make the call.



**Matrix Codec Screen when Connected**

## 21.8 Using Answer Routes for Sessionless ISDN Calls

Tieline Genie Distribution and Merlin PLUS audio codecs support multiple connections using a variety of connection transports such as IP, ISDN and POTS. Tieline codecs support using Tieline session data, which assists with configuration and routing of multiple incoming calls to these codecs. In addition, audio ports can be used to successfully route IP calls to your preferred codec inputs/outputs.

If you are accepting calls from multiple non-Tieline ISDN codecs then you will be making "sessionless" connections which require the codecs at both ends to be configured with the same connection settings. In addition you can use "Answer Routes" and 'site-specific' module settings in Genie Distribution and Merlin PLUS to route incoming calls to specific codec outputs. (Note: Merlin codecs can also be configured to accept 2 ISDN calls from non-Tieline codecs and would use similar settings).


In the following example we will configure two incoming sessionless ISDN audio stream connections (Note: Genie Distribution and Merlin PLUS support up to 4 sessionless ISDN audio streams/connections using 2 ISDN modules and 4 B channels).

If you want 2 incoming mono ISDN calls to use input/outputs 1 and 2, then use answering audio stream connections 1 and 2 in your codec program. If you want to use other inputs/outputs then simply select the corresponding audio stream, e.g. answering audio streams 5 and 6 will route audio via inputs/outputs 5 and 6.

So let's get started. There are 2 or 3 steps to ensure this is configured correctly, depending on whether you want specific incoming calls to always use the same B channels and codec outputs or not.

### Step 1: Configure the Answer Route for the two ISDN Audio Stream answering connections in the codec program.

Setup two ISDN audio stream answering connections in your program and use the **Answer Route** setting in the program wizard (as displayed in the following image):

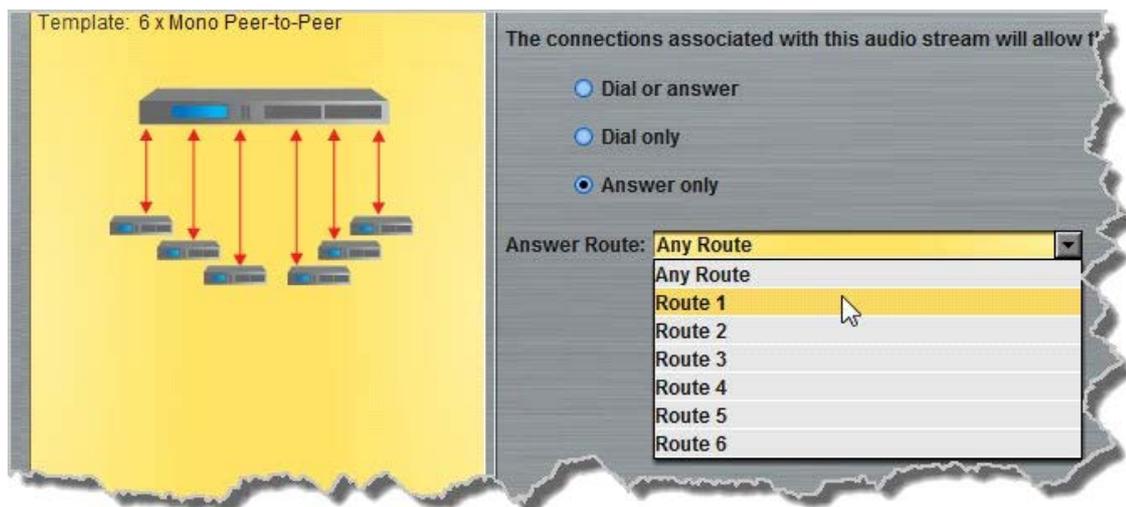


You can use any **Answer Route**, for example **Route 1** for ISDN Audio Stream 1 and **Route 2** for ISDN Audio Stream 2. The **Answer Route** number doesn't have to match the audio stream number because the route you select will be used by the incoming ISDN call. This is similar to how an "extension number" is used to route a phone call.


## Step 2: Configure the ISDN Module to accept two sessionless ISDN calls.

This can be configured via **Settings > Modules** or use the Toolbox Web-GUI via **Settings panel > Modules**.

1. Select **Config 1** and **Sessionless Only** and **Route 1**. Select your preferred algorithm, then click **Save Settings**. This means that Module 1 B channel 1 will answer a sessionless ISDN call using these settings.

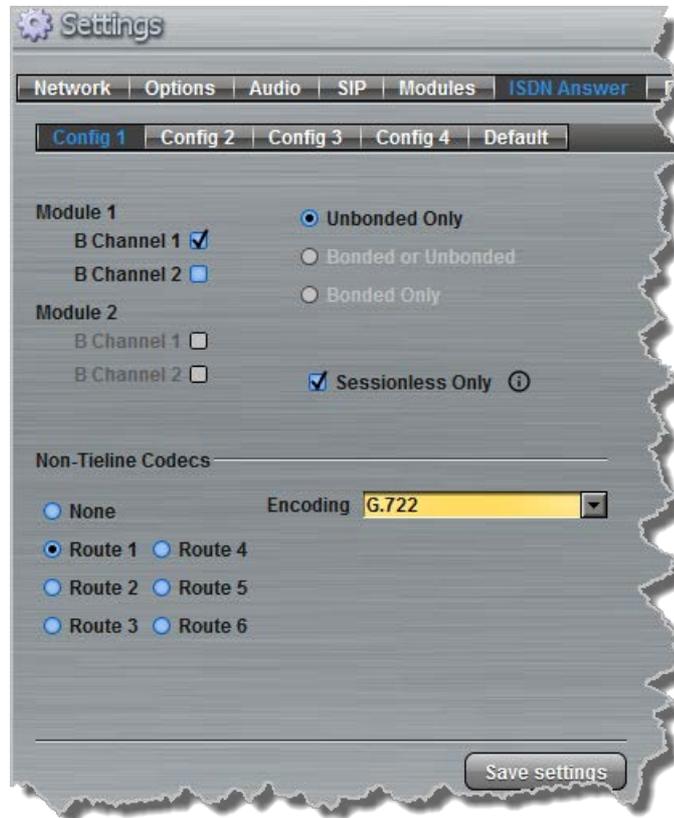

2. Next select **Config 2** and **Sessionless Only** and **Route 2**. Select your preferred algorithm, then click **Save Settings**. This means that Module 1 B channel 2 will answer a sessionless ISDN call using these settings.

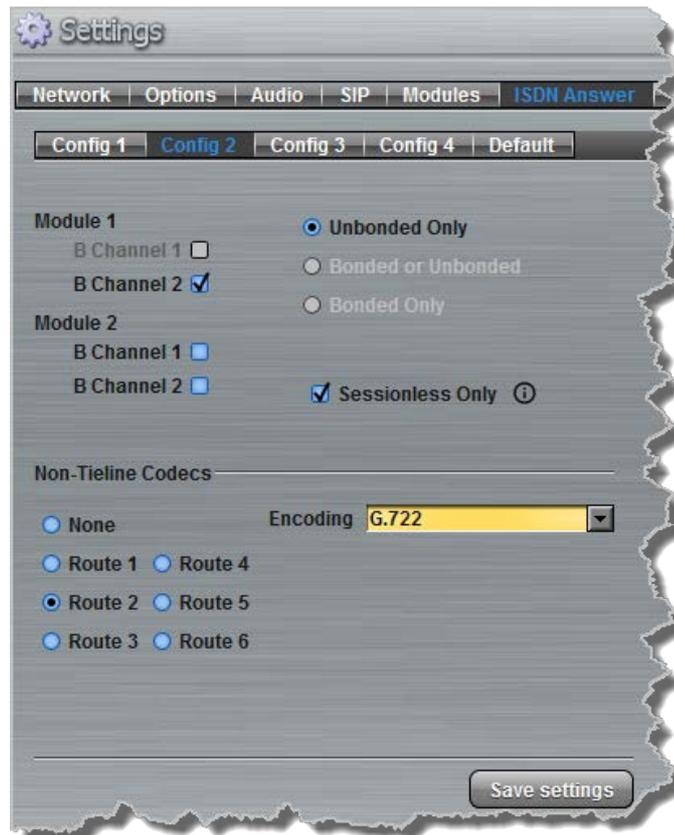


Both ISDN B channels can now answer incoming sessionless ISDN calls. If it doesn't matter which incoming codec call is answered by which B channel then that's all you need to do. If, however, you want each non-Tieline codec to use the same B channel and be routed to the same codec output consistently, you must configure this in the site config for the ISDN module via **Settings > Answering > ISDN Answer Configs**, or via the Web-GUI using the **Settings panel > Modules**.

### Step 3: Configuring the module to answer calls from a specific non-Tieline codec consistently.

If a Directory Number (DN) or MSN number is not entered in the codec and multiple B channels are available, the codec may use any channel to answer an incoming call. To ensure calls are routed consistently, enter a DN/MSN number (without the country or area code) as the DN/MSN for a B channel, then only that corresponding B channel will answer an incoming call to that number.

Enter the number for the first B channel into the field for **Directory Number/MSN1**. (This has been allocated **Route 1** previously.) Enter the number for the second B channel into the field for **Directory Number/MSN2**. (This has been allocated **Route 2** previously.) Next, click **Save Settings**.

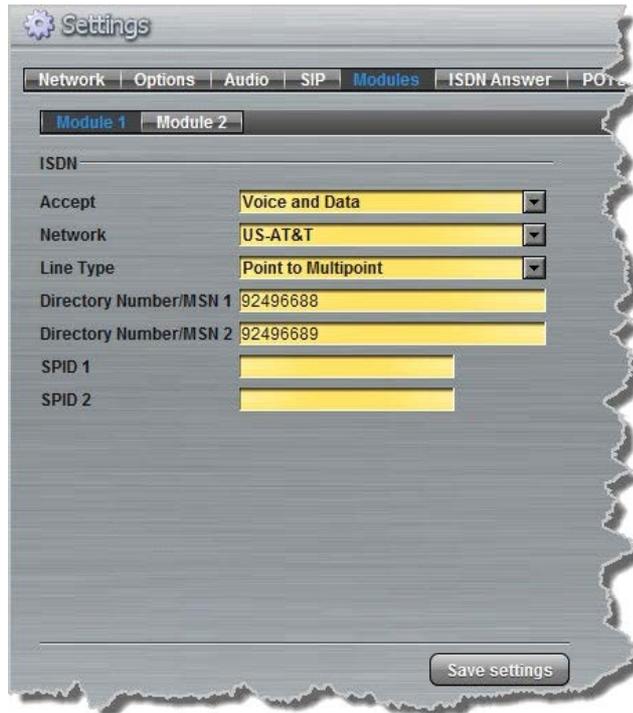

If codec 1 always uses the first directory number to call then it will always be routed via **Route 1** to the Answering Audio Stream Connection using **Answer Route 1** (configured in step 1). Codec 2 should always use the second directory number and then it will always be routed via **Route 2** to the Answering Audio Stream Connection configured with **Answer Route 2**.

## 21.9 POTS Connection Tips & Precautions

### POTS Operation Precautions

POTS performance is greatly affected by the quality of the line being used. Precautions must be taken to ensure the Tieline codec is not sharing the line with other devices. Please remove these possible sources of interference:

- DSL or ADSL Modems
- Other telephone handsets
- Portable phone base stations
- Unused parallel phone sockets
- Fax machines
- Computer modems
- Burglar alarm systems
- Extension bells
- Call waiting

### Call Waiting

Call waiting tones may cause the codec to malfunction. Most phone companies supply call waiting as a feature and you will need to turn it off. Your Telco should be able to provide a number you can dial to disabling the call waiting feature on the line.

### Private Branch Exchanges

Avoid connecting the codec to a digital PBX or PABX system, key station, business system or

any other local switchboard. It may sometimes be tricky to detect if you are connected to one of these systems, however, as a general guide, these devices require you to dial an additional digit to access the POTS network.



**WARNING:** Many of these systems are digital and have non standard telephone line operating voltages. If you attach your POTS module to a digital PABX or PBX system permanent damage may result from the high voltage pulses these systems generate. Even if the PBX is not digital, the performance of the codec is unlikely to be as good as a normal POTS line.

If you have no option other than to use a PBX or PABX System, search for a fax machine. The overwhelming majority of fax machines are designed for analog POTS line operation and are normally on an extension optimized for fax machines and data transmission. Substitute a normal phone for the fax machine to verify correct operation. Use a normal phone, not a venue-supplied phone, because this may have characteristics to match the existing PBX/PABX and not a POTS line. After confirming correct phone operation, you can unplug the phone and attach the phone line to the codec.

### Check the Length of the Line

It is desirable to have a local loop which is as short as possible, i.e. the line from your location to the local Central Office or Local Exchange. Optimum performance can be expected for lines up to about 2 miles (3 kilometers) in length. Line quality will be reduced over longer distances and the codec can be expected to perform at lower bit rates. Line quality will also be affected by the age, condition and type of cabling used, e.g. plastic insulation or paper insulation, water or moisture entering the cable, age and state of repair of joins.

### POTS Party Lines or Stubs

In some countries, it was the practice to have more than one phone service attached to one line - sometimes called a 'Party Line'. As more lines are installed, services are separated but the redundant cabling may remain connected across the line, causing problems with the operation of your codec.

### Leakage Problems on the Line

A good line should have an earth isolation of better than ten mega-ohms. If your line is located in an area where water is a problem, ask your Telco to check out the earth leakage.

### Equipment Problems at the CO or Local Exchange

Although there are many factors at the Telco end that can cause problems, a problem that does occasionally occur is that the clock on the interface codec to your line is not synchronized to the network. A drifting clock will cause instability and unreliable codec performance. If you suspect that this could be the problem, contact your local Telco.

### POTS Exchange Problems

On most good POTS lines, Tieline codecs can achieve a 28.8kbps connection at a line quality of approximately 50% or greater. If you are not able to achieve this level of operation, you may have a problem with your line, or the line at the other end of the connection.

### Tips for Successful POTS Operation

---

1. Take a phone when you are doing a remote broadcast. Connect it to the line you want to use and

- dial the number to check for any unusual noises. If present, these may be caused by other devices connected to the line.
2. Take an ADSL/DSL filter to all remote locations. ADSL/DSL modems can generate noise on a line which will degrade the performance of your codec. Simply place the ADSL/DSL filter between the POTS line and your codec to remove the interference.
  3. Tieline USA has a POTS test codec you can dial on +1-317-913 6911 to facilitate line tests at each end of your connection to diagnose line problems.
  4. Tieline recommends that you confirm your broadcast POTS line works well before you try to go live.

## 21.10 Genie Compliances and Certifications

### Declaration of Conformity

---

This Genie codec meets the requirements of directives for CE and C-Tick certifications. Technical documentation required by the conformity assessment procedure is kept at the head office of Tieline Technology; 1/25 Irvine Drive, Malaga, Western Australia 6090.

### EN 55 022 Statement

---

This is to certify that Tieline Genie is shielded against the generation of radio interference in accordance with the application of EN 55 022: 2006 Class A. Technical documentation required by the conformity assessment procedure is kept at the head office of Tieline Technology; 1/25 Irvine Drive, Malaga, Western Australia 6090.

### Canadian Department of Communications Radio Interference Regulations

---

This digital apparatus (Tieline Genie) does not exceed the Class A limits for radio-noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

### Règlement sur le brouillage radioélectrique du ministère des Communications

---

Cet appareil numérique (Tieline Genie) respecte les limites de bruits radioélectriques visant les appareils numériques de classe a prescrites dans le Règlement sur le brouillage radioélectrique du ministère des Communications du Canada.

## 21.11 FCC Compliance Statements

### FCC Part 15

---

Compliance: TIELINE PTY LTD, 25 Irvine Drive, Malaga. Western Australia 6090.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area may cause harmful interference, in which case the user will be required to correct the interference at his/her own expense. Changes or modifications not expressly approved by Tieline Pty Ltd could void the user's authority to operate the equipment.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the problem by one or more of the following measures:

1. Increase the separation between the equipment and the receiver;
2. Connect the equipment into an outlet on a circuit different to that used by the receiver;
3. Consult the dealer or an experienced radio/TV technician.

## **FCC Part 68**

---

FCC Registration Number: 6NAAUS-34641-MD-E

Ringer Equivalence Number (REN):0.5B

A label containing, among other information, the FCC registration and Ringer Equivalence Number (REN) for this equipment is prominently posted on the bottom, near the rear of the equipment. If requested, this information must be provided to your telephone company. USOC Jacks: This device uses RJ11C terminal jacks. The REN is used to determine the quantity of devices, which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of RENs should not exceed five (5). To be certain of the number of devices that may be connected to the line, as determined by the total RENs, contact the telephone company to obtain the maximum RENs for the calling area.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of the service may be required. If advance notice is not practical, the company will notify the customer as soon as possible. Also you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The Telephone Company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the Telephone Company will provide advance notice for you to make the necessary modifications in order to maintain uninterrupted service.

If you experience problems with this equipment, contact TIELINE Pty Ltd, 25 Irvine Drive, Malaga, Western Australia, 6090. Ph +61 8 9249 6688 Fax +61 8 9249 6858 email [info@tieline.com](mailto:info@tieline.com) (web page [www.tieline.com](http://www.tieline.com)) for repair and warranty information.

If the problem is causing harm to the telephone network, the Telephone Company may request you remove the equipment from the network until the problem is resolved.

No user serviceable parts are contained in this product. If damage or malfunction occurs, contact TIELINE Pty Ltd for instructions on repair or return. This equipment cannot be used on a telephone company provided coin service. Connection to Party Line service is subject to state tariffs.

## 21.12 Software Licences

This product uses a combination of proprietary and open-source software programs. Some of the software included in this product contains copyrighted software that is licensed under various open-source licenses (e.g. GNU General Public License v2, GNU Lesser GPL v2.1). A detailed list of open source licenses used in this product is included in the user manual. This can be downloaded from the Help Panel in the Web Browser Interface or from the Tieline website <<http://tieline.com>>. You may request a copy for the open source software on DVD by contacting our support team on +61 (0)8 9249 6688. Tieline Pty Ltd will charge a small handling fee for distribution of this software.

Some of the open source software of this product is based on the works of the Gentoo project and is not directed, managed, sold or supported by Gentoo Foundation, Inc. The Gentoo name is a trademark of Gentoo Foundation, Inc.

Open Source GPL compatible Licenses:

- o Some of the open-source software in the product is licensed under GPL version 3. A copy of the license can be obtained at <http://www.gnu.org/licenses/gpl.html>.
- o Some of the open-source software in the product is licensed under GPL version 2. A copy of the license can be obtained at <http://www.gnu.org/licenses/old-licenses/gpl-2.0.html>.
- o Some of the open-source software in the product is licensed under LGPL version 3. A copy of the license can be obtained at <http://www.gnu.org/licenses/lgpl.html>.
- o Some of the open-source software in the product is licensed under LGPL version 2.1. A copy of the license can be obtained at <http://www.gnu.org/licenses/old-licenses/lgpl-2.1.html>.

Open Source BSD style Licenses:

- bind:
  - o Portions: Copyright (c) 1987, 1990, 1993, 1994 The Regents of the University of California. All rights reserved. Additional clause - All advertising materials mentioning features or use of this software must display the following acknowledgment: This product includes software developed by the University of California, Berkeley and its contributors.
  - o Portions: Copyright (c) 2004 Masarykova universita (Masaryk University, Brno, Czech Republic) All rights reserved.
  - o Portions: Copyright (c) 1997 - 2003 Kungliga Tekniska Högskolan (Royal Institute of Technology, Stockholm, Sweden). All rights reserved.
  - o Portions (2 clause BSD license, 3rd clause removed): Copyright (c) 1998 Doug Rabson. All rights reserved.
  - o Portions: Copyright ((c)) 2002, Rice University. All rights reserved.
  - o Portions: Copyright 2000 Aaron D. Gifford. All rights reserved.
  - o Portions (2 clause BSD license, 3rd clause removed): Copyright (c) 1998 Doug Rabson. Copyright (c) 2001 Jake Burkholder. All rights reserved.
  - o Portions: Copyright (C) 1995, 1996, 1997, and 1998 WIDE Project. All rights reserved.
  - o Portions: Copyright (c) 2000-2002 Japan Network Information Center. All rights reserved.
  - o idnkit: Copyright (c) 2000-2002 Japan Network Information Center. All rights reserved.
  - o zkt: Copyright (c) 2005 - 2008, Holger Zuleger HZnet. All rights reserved.
    - dhcpcd - 2 clause BSD license, clause 3 removed
  - o Copyright (c) 2006-2011 Roy Marples <[roy@marples.name](mailto:roy@marples.name)>

- eventlog
- o Copyright (c) 2003 BalaBit IT Ltd.
  - file - 2 clause BSD license, clause 3 removed
- o Copyright (c) Ian F. Darwin 1986, 1987, 1989, 1990, 1991, 1992, 1994, 1995.
- o Software written by Ian F. Darwin and others;
- o maintained 1994- Christos Zoulas.
- o This software is not subject to any export provision of the United States Department of Commerce, and may be exported to any country or planet.
  - glibc
- o Code incorporated from 4.4 BSD: Copyright (C) 1991 Regents of the University of California. All rights reserved.
- o Sun RPC support (from rpcsrc-4.0): Copyright (c) 2010, Oracle America, Inc.
  - htop
- o Copyright (c) 2004-2006 The Trustees of Indiana University and Indiana University Research and Technology Corporation. All rights reserved.
- o Copyright (c) 2004-2005 The Regents of the University of California. All rights reserved.
- o Copyright (c) 2007 Cisco Systems, Inc. All rights reserved.
- o Portions: Copyright (c) 2004-2005 The University of Tennessee and The University of Tennessee Research Foundation. All rights reserved
- o Portions: Copyright (c) 2004-2005 High Performance Computing Center Stuttgart, University of Stuttgart. All rights reserved.
- o Portions: Copyright (c) 2006, 2007 Advanced Micro Devices, Inc. All rights reserved.
  - less - 2 clause BSD license, clause 3 removed
- o Copyright (C) 1984-2011 Mark Nudelman
  - libpcre
- o Basic Library Functions: Copyright (c) 1997-2010 University of Cambridge. All rights reserved.
- o C++ Wrapper Functions: Copyright (c) 2007-2010, Google Inc. All rights reserved
  - libuuid
- o Copyright (c) 1996, 1997, 1998, 1999, 2007. Theodore Ts'o.
  - lighttpd
- o Copyright (c) 2004, Jan Kneschke, incremental. All rights reserved.
  - net-snmp
- o Copyright 1989, 1991, 1992 by Carnegie Mellon University. All rights reserved.
- o Derivative Work - 1996, 1998-2000
- o Copyright 1996, 1998-2000 The Regents of the University of California. All rights reserved.
- o Copyright (c) 2001-2003, Networks Associates Technology, Inc. All rights reserved.
- o Portions of this code are copyright (c) 2001-2003, Cambridge Broadband Ltd. All rights reserved.
- o Copyright © 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

- o Copyright (c) 2003-2010, Sparta, Inc. All rights reserved.
  - o Copyright (c) 2004, Cisco, Inc and Information Network. Center of Beijing University of Posts and Telecommunications. All rights reserved.
  - o Copyright (c) Fabasoft R&D Software GmbH & Co KG, 2003. oss@fabasoft.com. Author: Bernhard Penz <bernhard.penz@fabasoft.com>
  - o Copyright (c) 2007 Apple Inc. All rights reserved.
  - o Copyright (c) 2009, ScienceLogic, LLC. All rights reserved.
    - openrc - 2 clause BSD license, clause 3 removed
  - o Copyright (c) 2007-2009 Roy Marples <roy@marples.name>
    - OpenSSH
  - o Copyright (c) 1995 Tatu Ylonen <ylo@cs.hut.fi>, Espoo, Finland. All rights reserved.
  - o 32-bit CRC compensation attack detector: Copyright (c) 1998 CORE SDI S.A., Buenos Aires, Argentina. All rights reserved.
  - o ssh-keyscan: Copyright 1995, 1996 by David Mazieres <dm@lcs.mit.edu>.
  - o One component of OpenSSH source code: Copyright (c) 1983, 1990, 1992, 1993, 1995. The Regents of the University of California. All rights reserved.
  - o Remaining components under 2 clause BSD (clause 3 removed) Copyright holders: Markus Friedl, Theo de Raadt, Niels Provos, Dug Song, Aaron Campbell, Damien Miller, Kevin Steves, Daniel Kouril, Wesley Griffin, Per Allansson, Nils Nordman, Simon Wilkinson
  - o Parts of portable version under 2 clause BSD (clause 3 removed) Copyright holders: Ben Lindstrom, Tim Rice, Andre Lucas, Chris Adams, Corinna Vinschen, Cray Inc., Denis Parker, Gert Doering, Jakob Schlyter, Jason Downs, Juha Yrjölä, Michael Stone, Networks Associates Technology, Inc., Solar Designer, Todd C. Miller, Wayne Schroeder, William Jones, Darren Tucker, Sun Microsystems, The SCO Group, Daniel Walsh, Red Hat, Inc.
  - o Parts of openbsd-compat: Copyright holders: Todd C. Miller, Theo de Raadt, Damien Miller, Eric P. Allman, The Regents of the University of California, Constantin S. Svintsoff.
    - OpenSSL: crypto/blowfish, crypto/des
  - o Copyright (C) 1995-1997 Eric Young (eay@cryptsoft.com).
  - o Clause 3: All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by Eric Young (eay@cryptsoft.com).
    - strace:
  - o Copyright (c) 1991, 1992 Paul Kranenburg <pk@cs.few.eur.nl>
  - o Copyright (c) 1993 Branko Lankester <branko@hacktic.nl>.
  - o Copyright (c) 1993 Ulrich Pegelow <pegelow@moorea.uni-muenster.de>.
  - o Copyright (c) 1995, 1996 Michael Elizabeth Chastain <mec@duracef.shout.net>.
  - o Copyright (c) 1993, 1994, 1995, 1996 Rick Sladkey <jrs@world.std.com>.
  - o Copyright (C) 1998-2001 Wichert Akkerman <wakkerma@deephackmode.org>..
  - o All rights reserved.
    - util-linux: text-utils
  - o Copyright (c) 2000-2001 Gunnar Ritter. All rights reserved.
- Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:
1. Redistributions of source code must retain the above copyright notice, this list

of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. Neither the name of the <ORGANIZATION> nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Open Source MIT style Licenses:

- glibc: DNS resolver taken from BIND 4.9.5
- o Portions Copyright (C) 1993 by Digital Equipment Corporation.
  - ncurses
- o Copyright (c) 1998-2010,2011 Free Software Foundation, Inc.
- o install-sh : 1994 X Consortium
  - OpenSSH
- o twbs / bootstrap: The MIT License (MIT) Copyright (c) 2011-2015 Twitter, Inc
- o mustache.js: The MIT License; Copyright (c) 2009 Chris Wanstrath (Ruby); Copyright (c) 2010-2014 Jan Lehnardt (JavaScript); Copyright (c) 2010-2015 The mustache.js community
- o gridster.js: Copyright (c) 2012 Ducksboard
- o LICENSE.txt: Copyright jQuery Foundation and other contributors, <https://jquery.org/>; This software consists of voluntary contributions made by many individuals. For exact contribution history, see the revision history available at <https://github.com/jquery/jquery>
- o Portions of code under MIT-style license to the copyright holders: Free Software Foundation, Inc.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Open Source ISC style Licenses:

- bind

- o Copyright (C) 2004-2011 Internet Systems Consortium, Inc. ("ISC")
- o Copyright (C) 1996-2003 Internet Software Consortium.
- o Portions: Copyright (C) 1996-2001 Nominum, Inc.
- o Portions: Copyright (C) 1995-2000 by Network Associates, Inc.
- o Portions: Copyright (C) 2002 Stichting NLnet, Netherlands, stichting@nlnet.nl.
- o Dynamically Loadable Zones (DLZ) contributor: Rob Butler.
- o Portions: Copyright (c) 1993 by Digital Equipment Corporation.
- o Portions: Copyright (c) 1999-2000 by Nortel Networks Corporation.
- o Portions: Copyright (C) 2004 Nominet, Ltd.
- o Portions: Copyright RSA Security Inc.
- o Portions: Copyright (c) 1996, David Mazieres <dm@uun.org>, Copyright (c) 2008, Damien Miller <djm@openbsd.org>
  - expat
- o Copyright (c) 1998, 1999, 2000 Thai Open Source Software Center Ltd and Clark Cooper.
- o Copyright (c) 2001, 2002, 2003, 2004, 2005, 2006 Expat maintainers.
  - libffi
- o Copyright (c) 1996-2011 Anthony Green, Red Hat, Inc and others.
  - OpenSSH
- o Portions of code under ISC-style license to the copyright holders: Internet Software Consortium, Todd C. Miller, Reyk Floeter, Chad Mynhier.
  - popt
- o Copyright (c) 1998 Red Hat Software.
  - vixie-cron
- o Copyright 1988,1990,1993 by Paul Vixie. All rights reserved.
- o Copyright (C) 2004-2011 Internet Systems Consortium, Inc. ("ISC")
- o Copyright (C) 1997,2000 by Internet Software Consortium, Inc.

THE SOFTWARE IS PROVIDED "AS IS" AND THE COPYRIGHT HOLDERS AND CONTRIBUTORS DISCLAIM ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL THE COPYRIGHT HOLDERS AND CONTRIBUTORS BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Open Source UCB License:

- util-linux

This product includes software developed by the University of California, Berkeley and its contributors.

Copyright (c) 1989 The Regents of the University of California.

All rights reserved.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL,

SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Open Source OpenSSL License:

- OpenSSL
- o "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"
- o "This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)"

Copyright (c) 1998-2011 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)"
4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact [openssl-core@openssl.org](mailto:openssl-core@openssl.org).
5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
6. Redistributions of any form whatsoever must retain the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT ``AS IS'' AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Original SSLeay License:

This product includes cryptographic software written by Eric Young (eay@cryptsoft.com). This product includes software written by Tim Hudson (tjh@cryptsoft.com).

Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com)

All rights reserved.

This package is an SSL implementation written by Eric Young (eay@cryptsoft.com).

The implementation was written so as to conform with Netscapes SSL.

This library is free for commercial and non-commercial use as long as the following conditions are adhered to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed.

If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: "This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)". The word 'cryptographic' can be left out if the routines from the library being used are not cryptographic related :-).
4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement: "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Open Source netperf License:

Copyright (C) 1993 Hewlett-Packard Company

ALL RIGHTS RESERVED.

THE SOFTWARE AND DOCUMENTATION IS PROVIDED "AS IS". HEWLETT-PACKARD COMPANY DOES NOT WARRANT THAT THE USE, REPRODUCTION, MODIFICATION OR DISTRIBUTION OF THE SOFTWARE OR DOCUMENTATION WILL NOT INFRINGE A THIRD PARTY'S INTELLECTUAL PROPERTY RIGHTS. HP DOES NOT WARRANT THAT THE SOFTWARE OR DOCUMENTATION IS ERROR FREE. HP DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, WITH REGARD TO THE SOFTWARE AND THE DOCUMENTATION. HP SPECIFICALLY DISCLAIMS ALL WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. HEWLETT-PACKARD COMPANY WILL NOT IN ANY EVENT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS) RELATED TO ANY USE, REPRODUCTION, MODIFICATION, OR DISTRIBUTION OF THE SOFTWARE OR DOCUMENTATION.

Open Source Info-ZIP license:

Copyright (c) 1990-2001 Info-ZIP. All rights reserved.

For the purposes of this copyright and license, "Info-ZIP" is defined as the following set of individuals:

Mark Adler, John Bush, Karl Davis, Harald Denker, Jean-Michel Dubois, Jean-loup Gailly, Hunter Goatley, Ian Gorman, Chris Herborth, Dirk Haase, Greg Hartwig, Robert Heath, Jonathan Hudson, Paul Kienitz, David Kirschbaum, Johnny Lee, Onno van der Linden, Igor Mandrichenko, Steve P. Miller, Sergio Monesi, Keith Owens, George Petrov, Greg Roelofs, Kai Uwe Rommel, Steve Salisbury, Dave Smith, Christian Spieler, Antoine Verheijen, Paul von Behren, Rich Wales, Mike White

This software is provided "as is," without warranty of any kind, express or implied. In no event shall Info-ZIP or its contributors be held liable for any direct, indirect, incidental, special or consequential damages arising out of the use of or inability to use this software.

Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the following restrictions:

1. Redistributions of source code must retain the above copyright notice, definition, disclaimer, and this list of conditions.
2. Redistributions in binary form must reproduce the above copyright notice, definition, disclaimer, and this list of conditions in documentation and/or other materials provided with the distribution.
3. Altered versions--including, but not limited to, ports to new operating systems, existing ports with new graphical interfaces, and dynamic, shared, or static library versions--must be plainly marked as such and must not be misrepresented as being the original source. Such altered versions also must not be misrepresented as being Info-ZIP releases--including, but not limited to, labeling of the altered versions with the names "Info-ZIP" (or any variation thereof, including, but not limited to, different capitalizations), "Pocket UnZip," "WiZ" or "MacZip" without the explicit permission of Info-ZIP. Such altered versions are further prohibited from is representative use of the Zip-Bugs or Info-ZIP e-mail addresses or of the Info-ZIP URL(s).
4. Info-ZIP retains the right to use the names "Info-ZIP," "Zip," "UnZip," "WiZ," "Pocket UnZip," "Pocket Zip," and "MacZip" for its own source and binary releases.

Copyright jQuery Foundation and other contributors, <https://jquery.org/>

This software consists of voluntary contributions made by many individuals. For exact contribution history, see the revision history available at <https://github.com/jquery/jquery>

The following license applies to all parts of this software except as documented below:

====

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish,

distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to

the following conditions:

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED,

INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

#### The MIT License

Copyright (c) 2009 Chris Wanstrath (Ruby)

Copyright (c) 2010-2014 Jan Lehnardt (JavaScript)

Copyright (c) 2010-2015 The mustache.js community

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

#### The MIT License (MIT)

Copyright (c) 2011-2015 Twitter, Inc

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Status API Training Shop Blog About Pricing

© 2015 GitHub, Inc. Terms Privacy Security Contact Help

#### Copyright (c) 2012 Ducksboard

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all

copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

## 21.13 Trademarks and Credit Notices

1. Windows is a registered trademark of Microsoft Corporation in the United States and/or other countries.
2. Windows XP, Windows Vista and Windows 7 are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
3. Firefox is a registered trademark of Mozilla Corporation in the United States and/or other countries.
4. Solaris is a trademark of Sun Microsystems Inc. in the United States and/or other countries.
5. Linux is the registered trademark of Linus Torvalds in the U.S. and other countries.
6. Java is a trade mark Sun Microsystems Inc. in the United States and/or other countries.
7. Comrex® Vector, Matrix® and BlueBox® are registered trademarks of Comrex Corporation in the United States and/or other countries.
8. APT is a registered trademark of Audemat group in the United States and/or other countries.
9. Mayah is a registered trademark of MAYAH Communications GmbH in the United States and/or other countries.
10. Telos, Zephyr and Xstream are registered trademarks of Telos Systems in the United States and/or other countries.
11. Other product names mentioned within this document may be trademarks or registered trademarks, or a trade name of their respective owner.
12. MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson Licensing.

## 22 Genie STL Specifications

Input/Output Specifications	
Analog Inputs	2 x Female XLR line inputs
Analog Outputs	2 x Male XLR
AES3 In	1 x female XLR (Channel 1 in; shared with Ch1 analog input)
AES3 Out	1 x male XLR
Auxiliary Input	1 x 6.35mm (1/4") Mic/Line level Jack on rear panel (15V phantom power available)
Headphones Out/Aux Out	1 x 6.35mm (1/4") Jack on rear panel and 1 x 6.35mm (1/4") Jack on the front panel
Control Port In/Out	Four relay inputs and four opto-isolated outputs for machine control via a DB15 connector.
Input Impedance	High Impedance > 5K ohm
Output Impedance	<50 ohm Balanced
Clipping Level	+22dBu (input and outputs)
A/D & D/A Converters	24 bit
Frequency Response at 48kHz	20Hz to 22kHz
Frequency Response at 96kHz	20Hz to 32kHz (Analog); 10Hz to 45kHz (AES3 Digital)
THD and Noise (Analog)	<0.0035% at +16dBu or -89dBu unweighted
THD and Noise (Digital)	<0.000056%
Analog Signal to Noise	>98.5dB at +22dBu, unweighted
Sample Frequencies	
IP Sample Frequencies	16kHz, 32kHz, 44.1kHz, 48kHz, 96kHz
Algorithms	
IP	Tieline Music, Tieline MusicPLUS, G.711, G.722, MPEG-1 Layer 2, MP3, LC-AAC, HE-AAC and HE-AACv2, AAC-LD, AAC-ELD, Opus, 16/24 bit aptX Enhanced
IP (uncompressed)	Linear PCM16/24 bit 48/96kHz sampling
Data and Control Interfaces	
USB	USB 2.0 Host port on the front panel
LAN	2 x 10/100/1000 RJ45 connectors
Advanced Networking	VLAN tagging (IEEE 802.1Q, 802.1p)
Serial	RS232 up to 115kbps with or without CTS/RTS flow control via female DB9 connector, can be used as a proprietary data channel
Protocols supported	Tieline, DHCP, SNMP, DNS, HTTP, IGMP, ICMP, VLAN, IPv4/v6, FEC, SIP/SDP (EBU N/ACIP Tech 3326 compliant), RTP
ISDN via module	Optional via module slot
POTS via module	Optional via module slot
Front Panel Interfaces	
Display	256 x 64 monochrome LCD
Keypad	21 button keypad
Navigation	5 button keypad
General	
Size	1U x 19" Rackmount

Dimensions	19" x 1.75" x 13.5" [482mm (W) x 44mm (H) x 343mm (D) including rear connectors]
Weight	6lb 7.7oz/2.94Kg
Power Consumption	Dual AC 100-240V IEC power inlets; 1A - 50-60Hz
Operating Temp.	0°C to 45°C (32°F to 113°F)
Humidity Operating Range	20% ≤RH ≤70% (0 to 35°C/32°F to 95°F), non-condensing

## 23 Appendix A: RS232 and Control Port Wiring

### Relays

The codec uses a DB15 connector to facilitate use of four CMOS solid state relays for the control of equipment, consisting of four relay closures and four opto-isolated outputs.

#### Inputs

The input signal is referenced to chassis ground, i.e. the ground reference terminal on the connector is connected the chassis. The input device is a high impedance CMOS device with a 330 ohm pull-up resistor to +5 volts.


Operation is as simple as joining the input pin to the ground terminal. This can be via a remote relay contact or the open circuit collector of a transistor or FET. DO NOT feed voltages into the inputs.

#### Outputs

CMOS field effect transistors switch a low impedance path between the two pins when activated. These are opto-isolated and floating above ground. It is important to current-limit the source as damage will result where the current exceeds 100mA peak-to-peak. No more than 48 volts peak-to-peak should be used as a safety precaution. The resistance of the CMOS element is approximately 25 ohms in the ON state.

### Control Port Pin-outs

A closing contact across Inputs 1-4 to Ground will provide a closing contact on the remote codec Outputs 1 to 4. If your codec supports multi-unicast connections to multiple codecs, a contact closure will appear on each of the compatible (non-G3) remote codecs' corresponding contacts. I.e. Input 1 shorted, Output 1 contacts on all connected codecs closed.

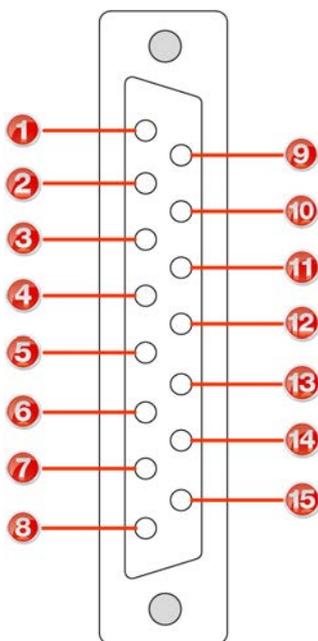

Female DB-15  
Codec Connector



Pins	Pin Function
1	Ground
2	Output 4
3	Output 3
4	Output 2
5	Output 1
6	Ground
7	Input 3
8	Input 1
9	Output 4
10	Output 3
11	Output 2
12	Output 1
13	Ground
14	Input 4
15	Input 2



**Important Note:** For more information about how to program relay operations with a PC using the Toolbox Web-GUI, please see [Creating Rules](#).

## RS232 Pin-outs and Data Connections

Pin	INTERFACE Female DB9 (RS232) DCE	DATA Male DB9 (RS232) DTE
1	No Connection	No connection
2	TX Data	RX Data
3	RX Data	TX Data
4	No connection	No connection
5	Signal Ground	Signal Ground
6	No Connection	No connection
7	CTS	RTS
8	RTS	CTS
9	No connection	No connection

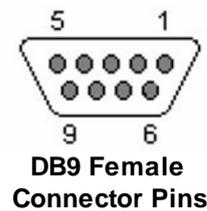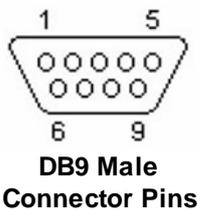

### Important Notes:

- The codec cannot send RS232 data to, or activate relays on Tieline G3 codecs.
- It is important that you enable serial port flow control within the codec. Flow control regulates the flow of data through the serial port. If disabled, data will flow unregulated and some may be lost.
- Ensure you match the serial port baud rate to match the rate of the external device you are connecting to. Ideally the settings on both codecs should match, or you could have data overflow issues.
- Only the dialing codec needs to be programmed to send RS232 data. Session data sent from the dialing codec will program all other compatible codecs (non-G3) when you connect.
- RS232 data can be sent from the dialing codec to all endpoints of a multi-unicast or multicast audio stream if your codec is capable of these connections. Note: Bidirectional RS232 data is only available on the first connection dialed when multi-unicasting.

# Index

## - A -

AAC 213

AES/EBU

audio levels 27

input and output 27

input audio settings 27

sample rate 27

sample rate conversion 27

web-GUI configuration 27

AES/EBU - HTML5 Toolbox

output sample rate 183

AES/EBU - Java Toolbox

output sample rate 106

AES3

audio levels 27

input and output 27

input audio settings 27

sample rate 27

sample rate conversion 27

web-GUI configuration 27

AES3 - HTML5 Toolbox

output sample rate 183

AES3 - Java Toolbox

output sample rate 106

AES3 in/out 12

Alarms - HTML5 Toolbox

acknowledging 201

AES input 198

AES reference signal 198

alerts 198

configuration 198

deactivating 201

enabling 198

fan failure 198

history 201

indications 201

input silence 198

lost connection 198

managing 201

PSU failure 198

purge history 201

severity levels 198

silence detection parameters 198

SNMP trap configuration 198

temperature 198

types of alarms 198

Alarms - Java Toolbox

acknowledging 139

AES input 134

AES reference signal 134

alerts 134

configuration 134

deactivating 139

enabling 134

fan failure 134

history 139

indications 139

input silence 134

lost connection 134

managing 139

PSU failure 134

purge history 139

severity levels 134

silence detection parameters 134

SNMP trap configuration 134

temperature 134

types of alarms 134

Algorithm

favorites 68

profiles 68

Algorithms

configuration 213

types 213

Answer routes 258

Applications 10

apt-X Enhanced audio coding 213

Audio levels

adjustment 23

ganging inputs 23

IGC 23

IGC Auto Level 23

intelligent gain control 23

metering 23

phantom power 23

quick adjustment of levels 23

Auto Reconnect

operation 61

programming of 61

Aux out, configure 29

Auxiliary input

Auxiliary input  
 audio levels 23  
 configuration 23  
 phantom power 23

Auxiliary output  
 configure and adjust 29

## - B -

Backup, how it works 70

## - C -

Certifications 263  
 Compliances 263  
 Configuration  
 check IP details 210  
 DHCP IP addresses 210  
 FEC 224  
 forward error correction 224  
 IP addresses 210  
 IPv4/IPv6 210  
 jitter buffer 220  
 static IP addresses 210  
 via front panel 210  
 web-GUI software 76

Configuration files  
 backup via HTML5 Toolbox 192  
 backup via Java Toolbox 129  
 restore via HTML5 Toolbox 192  
 restore via Java Toolbox 129

Connecting 48  
 default algorithm profiles 68  
 dialing 48  
 dialing ISDN 53  
 dialing POTS 57  
 disconnecting 60  
 first steps 48, 48  
 hanging up 60  
 how to connect 48  
 how to connect ISDN 53  
 how to connect POTS 57  
 speed dialing 61

Connection  
 IP link quality 51  
 IP statistics 51

Connections

AC power 12  
 AES3 12  
 analog 12  
 Ethernet 12  
 headphone output 12  
 opto-isolated outputs 12  
 rear panel 12  
 Rear Panel Connections 12  
 relay inputs 12  
 RS-232Auxiliary input 12

Control port wiring 278  
 Control ports 12, 226  
 wiring pin-outs 278

Control Ports - HTML5 Toolbox  
 configuration 205  
 opto-isolated inputs 205  
 relay outputs 205

Control Ports - Java Toolbox  
 configuration 141  
 opto-isolated inputs 141  
 relay outputs 141

Controls 14  
 Country settings 48  
 Credit notices 275

## - D -

Data  
 bidirectional encoding 226  
 unidirectional encoding 226

DB15 278  
 DB9 278

Default password  
 new Toolbox password 80

Default ports 227  
 Default profiles 70  
 DHCP IP addresses 210

Dial & disconnect - HTML5 Toolbox  
 dial a program or audio stream 188  
 disconnect a program or audio stream 188  
 unload a program 188

Dial & disconnect - Java Toolbox  
 dial an audio stream 126  
 disconnect an audio stream 126

Dialing  
 default algorithm profiles 68  
 disconnecting 60

Dialing  
 hanging up 60  
 how to connect 48  
 how to connect ISDN 53  
 POTS dialing 57  
 speed dialing 61  
 Disconnecting 60  
 DSCP 89, 166  
 configuration 229

## - E -

Encode/Decode Direction 226  
 Ethernet ports 12

## - F -

Factory default settings - HTML5 Toolbox  
 restore via web-GUI 191  
 Factory default settings - Java Toolbox  
 restore via web-GUI 128  
 Factory defaults  
 restore via front panel 230  
 Fail over, how it works 70  
 FCC compliance 263  
 Features 10  
 FEC  
 configuration 224  
 how it works 224  
 File playback -Java Toolbox  
 edit settings 128  
 Firmware upgrades - HTML5 Toolbox 209  
 Firmware upgrades - Java Toolbox 144  
 Forward error correction  
 configuration 224  
 FEC 224  
 how it works 224  
 Front panel controls 14

## - G -

G.711 213  
 G.722 213  
 Ganging inputs 23  
 Glossary 8  
 GPIOs - HTML5 Toolbox 205  
 GPIOs - Java Toolbox 141

Ground terminal 12  
 GUI ports 227

## - H -

Hanging up a connection 60  
 Headphone out 12  
 Headphones  
 monitoring audio 29  
 output levels 29  
 stereo connections 29  
 Help button 7  
 HTML5 Toolbox Quick Connect  
 dial & disconnect connections 159  
 IP setup 159  
 ISDN setup 159  
 launching 159  
 load & unload a program 159  
 POTS setup 159  
 PPM monitoring 159  
 HTML5 Toolbox Web-GUI  
 configure connections 166  
 configure Ethernet ports 166  
 configure QoS 166  
 configure VLANs 166  
 dial a program or audio stream 188  
 disconnect a program or audio stream 188  
 DNS settings 166  
 DSCP 166  
 IPv4 address configuration 166  
 IPv6 address configuration 166  
 ISDN configuration 170  
 QoS 166  
 unload a program 188

## - I -

IGC 23  
 Inputs  
 adjusting input levels 23  
 audio metering 23  
 ganging 23  
 IGC 23  
 IGC Auto Level 23  
 intelligent gain control 23  
 phantom power 23  
 quick adjustment of levels 23

- Inputs - HTML5 Toolbox
    - analog 183
    - digital AES3 183
    - ganging 183
    - lock settings 183
    - renaming 183
    - setting levels 183
  - Inputs - Java Toolbox
    - analog 106
    - digital AES3 106
    - ganging 106
    - lock settings 106
    - renaming 106
    - setting levels 106
  - Intelligent gain control 23
  - Introduction 10
  - Introduction to the HTML5 Toolbox 146
  - Introduction to the web-GUI 81
  - IP
    - testing 242
  - IP address
    - configuration 210
    - details 210
    - DHCP 210
    - IPv4/IPv6 210
    - static 210
  - IP addresses 210
  - IP and USB backup 70
  - IPv4/IPv6 210
  - ISDN
    - about modules 32
    - bonding 36
    - connect to non-Tieline codecs 244
    - connecting to APT 244
    - connecting to CDQ Prima 247
    - connecting to Comrex Matrix 255
    - connecting to Mayah 250
    - connecting to Zephyr Xstream 252
    - considerations 32
    - default answering settings 36
    - dial and answer route tags 36
    - front panel module config 33
    - module settings 33
    - monitoring connections 56
    - network types 33
    - non-Tieline codecs 36
    - sessionless calls 258
    - testing 244
    - U and S/T interfaces 32
    - using answer routes 258
  - ISDN - HTML5 Toolbox
    - answering config 172
    - bonding 172
    - default answering config 172
    - deterministic dialing 172
    - dial and answer route tags 172
    - Directory Numbers 170
    - DN 170
    - GUI module config 170
    - module config 170
    - MSN 170
    - Multiple Subscriber Number 170
    - non-Tieline codecs 172
    - SPID 170
  - ISDN - Java Toolbox
    - answering config 95
    - bonding 95
    - default answering config 95
    - deterministic dialing 95
    - dial and answer route tags 95
    - Directory Numbers 93
    - DN 93
    - GUI module config 93
    - module config 93
    - MSN 93
    - Multiple Subscriber Number 93
    - non-Tieline codecs 95
    - SPID 93
  - ISDN: HTML5 Toolbox configuration 170
  - ISDN: Java Toolbox configuration 93
- J -**
- Java Toolbox Web-GUI
    - alarms panel 81
    - configure connections 89
    - configure Ethernet ports 89
    - configure panel 81
    - configure peer-to-peer mono/stereo 109
    - configure QoS 89
    - configure VLANs 89
    - dial an audio stream 126
    - disconnect an audio stream 126
    - DNS settings 89

Java Toolbox Web-GUI  
 DSCP 89  
 help panel 81  
 inputs panel 81  
 IPv4 address configuration 89  
 IPv6 address configuration 89  
 ISDN configuration 93  
 master panel 81  
 programs panel 81  
 QoS 89  
 rules panel 81  
 VLAN Configuration 89

Jitter buffer  
 algorithms 220  
 automatic 220  
 configuration 220  
 fixed 220  
 SIP 220

## - K -

Keypad  
 button descriptions 14  
 function button descriptions 14

## - L -

Language selection 81  
 codec menus 45  
 Language selection - HTML5 Toolbox 146  
 Linear audio 213  
 Link quality  
 IP monitoring 51  
 IP return link quality 51  
 IP send link quality 51  
 Lock programs 74  
 Lock programs via HTML5 Toolbox 194  
 Lock programs via Java Toolbox 131  
 Logs - HTML5 Toolbox  
 send logs to Tieline 197  
 view event logs 197  
 Logs - Java Toolbox  
 send logs to Tieline 133  
 view event logs 133  
 Loopback audio 231  
 LQ 51

## - M -

Maintenance schedule 232  
 Manual  
 conventions 7  
 overview 7  
 Manual Conventions 7  
 Menus  
 codec menus 16  
 Meters  
 mono connection 23  
 stereo connection 23  
 Modules  
 inserting/removing 31  
 Monitoring  
 headphone outputs 29  
 headphones 29  
 IP connection statistics 51  
 IP link quality 51  
 IP packet reliability 51  
 ISDN 56  
 POTS 59  
 Mono connection metering 23  
 MP3 213  
 MPEG Layer 2 213  
 Multicast - Java Toolbox  
 about 118  
 Java Toolbox client config 118  
 Multicasting  
 front panel configuration 64  
 multicast client programs 64

## - N -

Navigating menus  
 how to 16  
 Navigation  
 how to 16  
 Navigation buttons 14

## - O -

Opto-isolated inputs 226  
 Overview  
 manual 7

## - P -

- Panel lock 75
- Peer-to-Peer Mono/Stereo
  - backup connections 109
  - configure SmartStream PLUS 109
  - connections 109
  - enable data 109
  - file playback 109
  - Java Toolbox configuration 109
- Phantom power 23
- Ports 227
- POTS
  - about modules 39
  - about POTS 39
  - connection tips 261
  - front panel config 43
  - front panel module config 40
  - G3 interoperability 39
  - how to configure 39
  - module settings 40
  - monitoring connections 59
  - network types 40
  - non-Timeline codecs 43
  - precautions 261
- POTS - HTML5 Toolbox
  - answer config 180
  - configuration 177
  - deterministic dialing 180
  - dial and answer routes 180
  - module config 178
  - module settings 178
- POTS - Java Toolbox
  - answer config 103
  - configuration 100
  - deterministic dialing 103
  - dial and answer routes 103
  - module config 100
  - module settings 100
- Power inputs 12
- Preparing to connect 48
- Profiles 70
- Programs
  - about multicasts 46
  - about multi-unicasts 46
  - about peer-to-peer calls 46
  - audio streams 46
  - deleting 67
  - dial multiple connections 62
  - dialing 60
  - disconnect multiple connections 62
  - how do they work 46
  - lock 74
  - session data 46
  - unlock 74
- Programs - HTML5 Toolbox
  - backup and restore 192
- Programs - Java Toolbox
  - backup and restore 129
  - configure peer-to-peer mono/stereo 109
  - delete 126
  - edit 126
  - view settings 126

## - Q -

- QoS
  - configuration 229
  - DSCP 229
- Quality of Service
  - configuration 166, 229
  - DSCP 166, 229
- Quality of Service - Java Toolbox
  - configuration 89
  - DSCP 89
  - QoS 89
- Quick start
  - dialing 48
  - dialing ISDN 53
  - dialing POTS 57
  - first steps 48
  - how to connect 48
  - how to connect ISDN 53
  - how to connect POTS 57

## - R -

- Rear panel connections 12
- Redialing 61
- Reference 232
- Relay closures 226
- Relays
  - configuration 226

Relays	
pin outs	226
Reset	
factory default settings	230
programs	230
user settings	230
Reset defaults - HTML5 Toolbox	
factory default settings	191
programs	191
user settings	191
Reset defaults - Java Toolbox	
factory default settings	128
programs	128
user settings	128
Restore factory defaults	
via front panel	230
RS232	
configuration via codec	226
RS232 - HTML5 Toolbox	
baud rates via web-GUI	204
flow control via web-GUI	204
RS232 - Java Toolbox	
baud rates via web-GUI	140
flow control via web-GUI	140
RS232 wiring	278
Rules - HTML5 Toolbox	
control port configuration	205
Rules - Java Toolbox	
control port configuration	141

## - S -

Sessionless ISDN	
Answer routes	258
SIP	
dialing SIP addresses	64
peer-to-peer connections	63
SIP - HTML5 Toolbox	
configure SIP settings	185
SDP	185
session description protocol	185
SIP server configuration	185
SIP - Java Toolbox	
configure SIP programs	123
configure SIP settings	121
SDP	121
session description protocol	121

SIP server configuration	121
SIP ports	227
Site port setting	227
SmartStream	70
SNMP	
front panel config	231
SNMP - HTML5 Toolbox	
configuring settings	195
downloading MIB files	195
setting descriptions	195
SNMP - Java Toolbox	
configuring settings	132
downloading MIB files	132
setting descriptions	132
Software Licences	265
Software upgrades - HTML5 Toolbox	209
Software upgrades - Java Toolbox	144
Specifications	276
Speed dialing	61
Static IP addresses	210
Stereo Connection metering	23
Studio Codec Installation	
installation procedures	233
port forwarding	233
testing	233
troubleshooting	233
Sync input	12

## - T -

TCP port settings	227
Test mode	231
Testing IP connections	242
Testing ISDN connections	244
Teline Music	213
Teline MusicPLUS	213
Teline session port	227
ToolBox Web-GUI options	
about HTML5 Quick Connect	76
about HTML5 Toolbox	76
about Java Toolbox	76
compatibility	76
connecting to a codec	76
internet connections	77
LAN troubleshooting	77
launching the HTML5 Toolbox	77
launching the Java Toolbox	77

ToolBox Web-GUI options  
  PC LAN settings 77  
  port selection 77  
  prerequisites 76  
Trademarks 275  
Transcriptor Rx 213  
Transcriptor Tx 213  
Troubleshooting  
  IP connection tips 241

## - U -

UDP port settings 227  
Understanding IP networks 239  
Unlock Programs 74  
Unlock programs via HTML5 Toolbox 194  
Unlock programs via Java Toolbox 131  
USB 2 host port 14  
USB file playback 73

## - V -

VLAN Configuration 166

## - W -

Warnings & safety information  
  digital phone systems 6  
  earth leakage 6  
  supplementary ground 6  
  thunderstorms and lightning 6  
Web Browser  
  Using the Java web-GUI 81  
Web-GUI - HTML5  
  alarm dissemination panel 146  
  alarm history panel 146  
  change theme 146  
  configure alarms panel 146  
  connections panel 146  
  current alarms panel 146  
  firmware panel 146  
  help panels 146  
  inputs panel 146  
  ISDN answer panel 146  
  licensing panel 146  
  master panels 146  
  modules panel 146

network panel 146  
opening panels 146  
options panel 146  
POTS answer panel 146  
PPMs panel 146  
program loader panel 146  
reset panel 146  
rules panel 146  
settings panels 146  
SIP panel 146  
skin selection 146  
statistics panel 146  
theme selection 146

## Wiring

  DB15 control port in/out 278  
  opto-isolated inputs 278  
  relay closures 278  
  RS232 using DB9 278

## - X -

XLR in/out 12