




**Small Products Technical Manual
for Powered and Passive Panels**


radio.
SYSTEMS

Table of Contents

	Part #	Page	Active (Powered) Panels	Part #	Page
StudioHub+ Standard Pinout & Power Consumptions	Illustration	3	4 Source Switcher Panel	SH-4SWSS	25
How to Power StudioHub+ - via PS-Cube		4	Mic Preamp Panel	SH-MIC	26
How to Power StudioHub+ - via a Hub or Wall-Wart		5	Mic Preamp w/PTT Panel	SH-MICPTT	27
			Headphone Amplifier Panel	SH-HPB	28
			Dual Headphone Amp. Panel	SH-HPDUAL	29
Active (Powered) MatchJacks			Monitor Level Control Panel	SH-LEVEL	30
MatchJack Preamp, Input	MJ-IN	6	Monitor Amp Panel	SH-AMP w/o Speaker	31
MatchJack Preamp, Output	MJ-OUT	7		SH-AMPSPKR w/Speaker	31
AES/EBU to S/PDIF Converter	MJ-SPDIFIN	8	Dual VU Meter Panel	SH-VUV(Vertical)	32
S/PDIF to AES/EBU Converter	MJ-SPDIFOUT	9		SH-VUH (Horizontal)	32
Analog to Digital Converter	MJ-AD	10	3 Mixer Panel (Input)	SH-MIXER	33
Digital to Analog Converter	MJ-DA	11	3 Mixer Panel (Output)	SH-MIXER	34
Digital Distribution Amplifier	MJ-DDA	12	LCD Display Panel	SH-LCDV(Vertical)	35
				SH-LCDH(Horizontal)	35
Passive Panels			In/Out Balanced MatchJack	SH-DUALMATCH	36
Dual XLR Female Adapter Mono/Stereo	SH-2XLRF	13	In/Out Balanced MatchJack	SH-MATCHPANEL	37
Dual XLR Male Adapter Mono/Stereo	SH-2XLRM	14			
Dual XLR Male-Female Panel	SH-2XLRFM	15			
Single XLR Female Panel	SH-1XLRF	16	Warranty/Repair Policy/Returns		
Single XLR Male Panel	SH-1XLRM	17			
Single XLR 5-Pin Female Panel	SH-1XLRF5PIN	18			
1/4" & Mini TRS Panel (Unbalanced)	SH-1/4UNBAL	19			
1/4" & Mini TRS Panel (Balanced)	SH-1/4BAL	20			
4 Source Switcher Panel	SH-4SW*	21			
Breakout Adapter	ADAPT-BO	22			
Breakout Adapter	ADAPT-GPI	23			
PS-CUBE "DC-Link" Power Inserter	PS-CUBE	24			
Mic Single XLR Female w/PTT Panel	SH-MICPTTPAS	27			

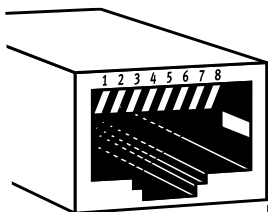

StudioHub+ Standard Pinout (T568B Standard)

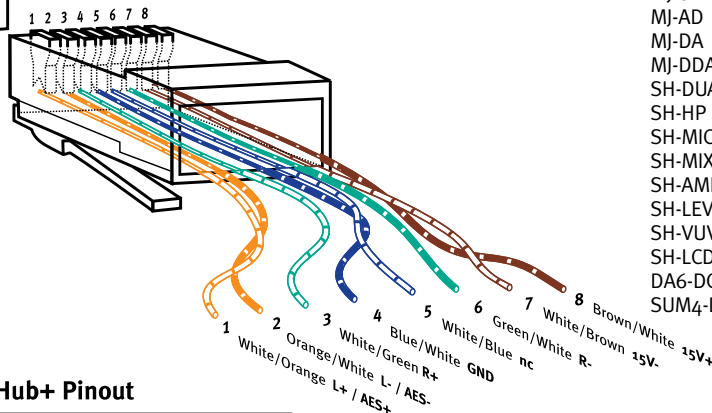

StudioHub+ Pinout

Channel	Color Pair	RJ-45 Pins	110 Pins	Ethernet
L+ / AES+	Wht/Org	1	3	TR+
L- / AES-	Org/Wht	2	4	TR-
R+	Wht/Grn	3	5	R+
R-	Grn/Wht	6	6	R-
nc	Wht/Blu	5	1	n/c
GND	Blu/Wht	4	2	n/c
15V-	Wht/Brn	7	7	n/c
15V+	Brn/Wht	8	8	n/c
Shield	Wht/Slr	Shield	9	x
Shield	Slr/Wht	Shield	10	x


Current consumption for each StudioHub+ active device. Refer to this list when calculating the total number of devices that can be run together on any individual power supply.

Part #	Description	Current
MJ-OUT	Analog MatchJack Out (IHF to Pro)	75ma
MJ-IN	Analog MatchJack In (Pro to IHF)	35ma
MJ-SPDIFOUT	SPDIF OUT (S/PDIF and Optical to AES)	100ma
MJ-SPDIFIN	SPDIF IN (AES to S/PDIF)	0 (passive)
MJ-AD	Digital MatchJack A to D	150ma
MJ-DA	Digital MatchJack D to A	150ma
MJ-DDA	Digital MatchJack Distribution Amplifier	165ma*
SH-DUALMATCH	Dual Match Panel	100ma
SH-HP	Headphone Panel	100ma
SH-MIC	Mic Pre-Amp Panel	55ma
SH-MIXER	3 Input Stereo Mixer with mix-minus	125ma
SH-AMPSPKR	Monitor Amp Panel (w/ Speaker)	1400ma
SH-LEVEL	Monitor Panel	145ma
SH-VUV	Dual VU Meter Panel	150ma
SH-LCDV	LCD Display Panel	75ma
DA6-DC	DA Hub (Single)	575ma
SUM4-DC	Combiner Hub (Single)	175ma

* Powered via 9v DC (single ended) wall wart or +/-15VDC StudioHub+ power supply

Stand-Alone Versions


Some active StudioHub+ products were previously available in "Stand-Alone" versions with barrier strip connectivity for audio I/O. The following illustrates the pinout for this barrier strip.

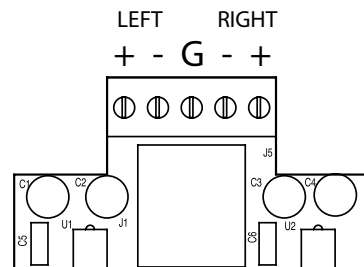


Powering StudioHub+ Active Devices

Many StudioHub+ devices are active and are powered by +/- 15vDC. Power can be supplied via the StudioHub+ "DC-Link" system that uses CAT-5 pair #4 (White/Brown) for power, or power can be supplied via a separate power supply. See the current consumption chart to determine how many devices can be powered with different systems.

I - Powering via PS-Cube (for up to 4 devices)

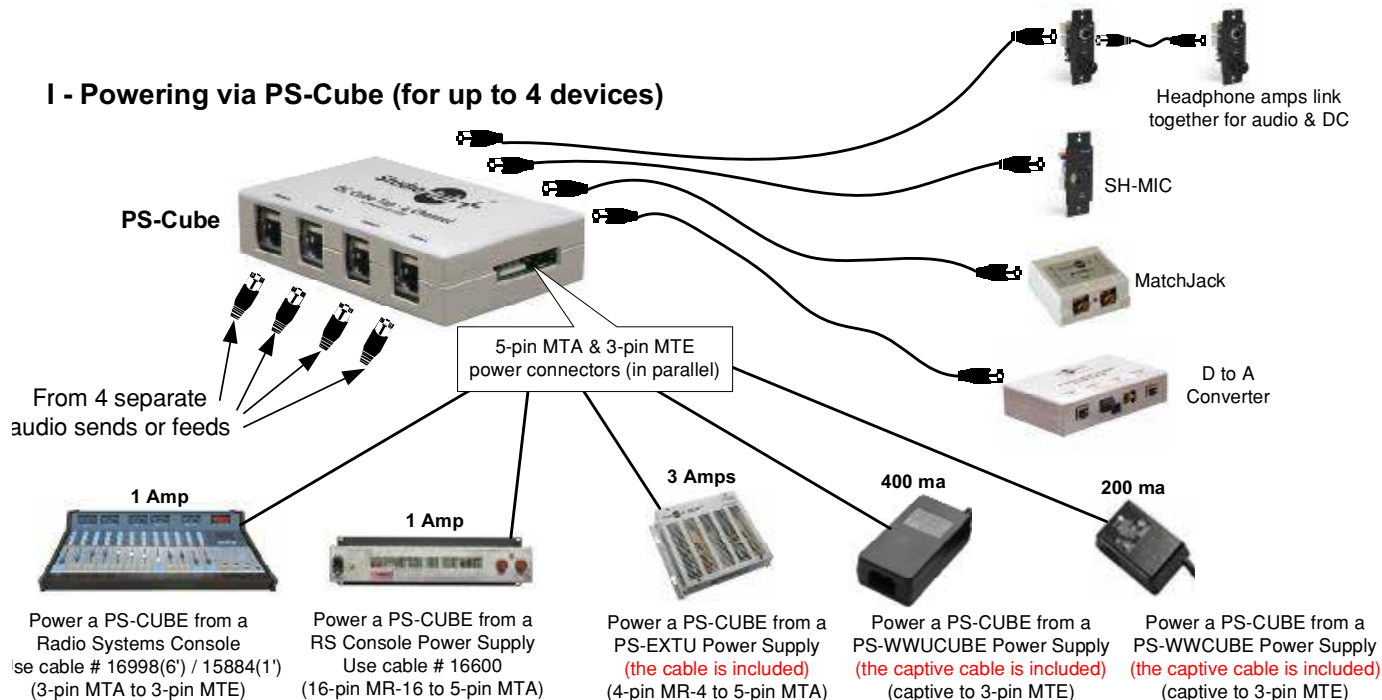

II - Powering Via a Hub (for up to 16 devices)

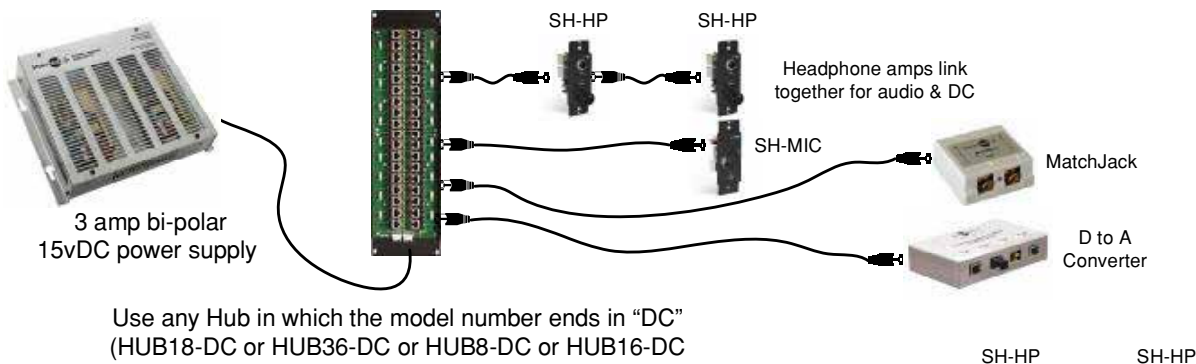


III - Powering via a "Wall Wart" or Desk-Top Power Supply

Power an individual MatchJack or Panel
from a PSWW-SH Power Supply
(the captive 3-pin to MTA cable
is included)



Power multiple Panels
from a PSWU-SH Power Supply
(the captive 3-pin to MTA cable
is included)

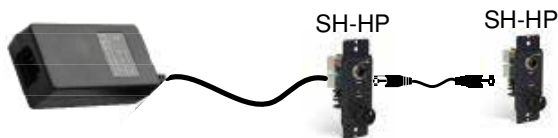

NOTE – All power supplies shown are Universal Voltage switching supplies and accept from 100 to 240VAC input power EXCEPT the "non Universal Wall-Wart" PS-WWCUBE and PS-WWSH supplies which are 110VAC input power only.

Headphone amps link together for audio & DC.
Power up to 4 headphone amps from one PS-WWU
and up to 2 headphone amps from 1 PSWW


JU1
Install to connect shield ground
to power ground


Left level adjust


Right level adjust

Audio and power input
provided on RJ-45

Direct power input
+/- 15 volts DC

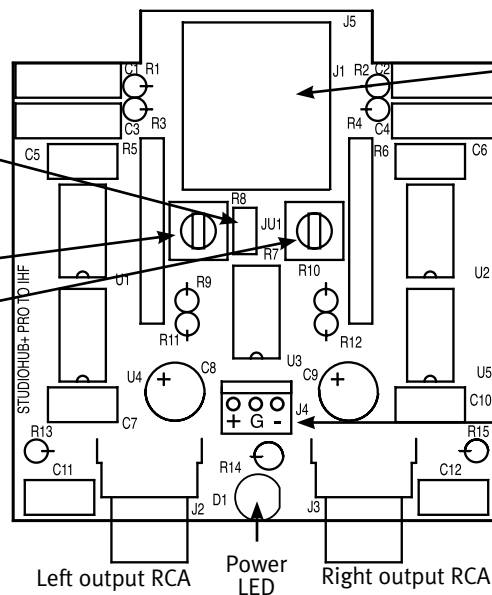

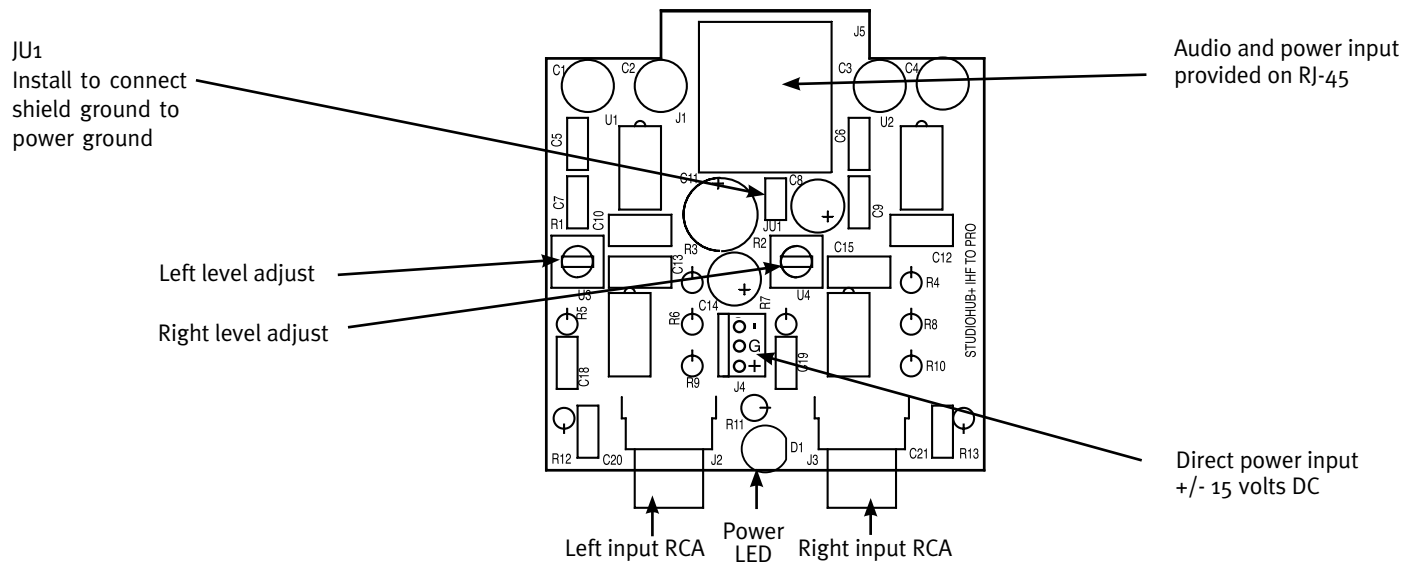


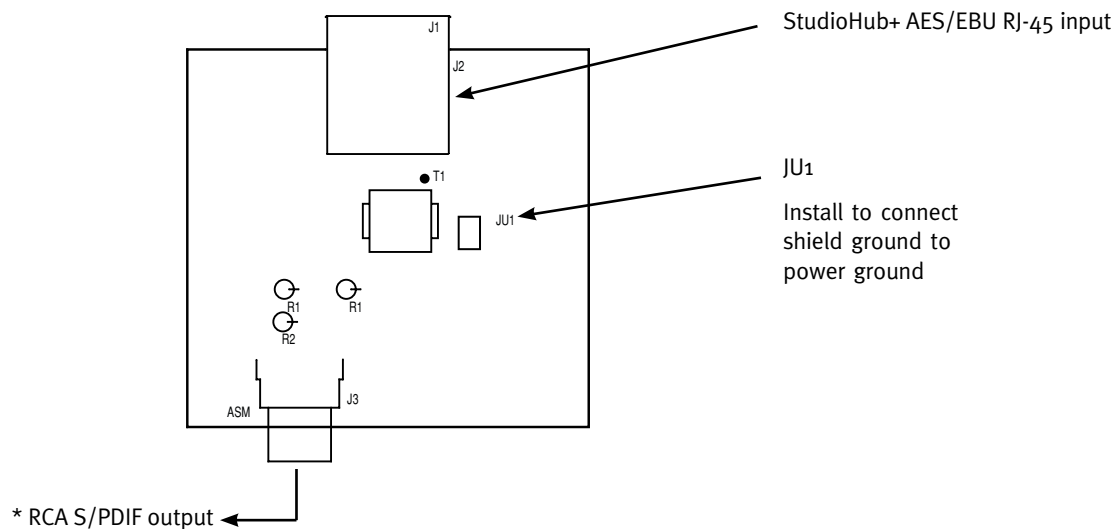




Pro Level Input

Set Input Level

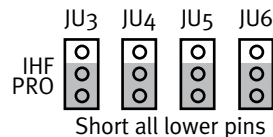


Set Nominal Input Sensitivity*

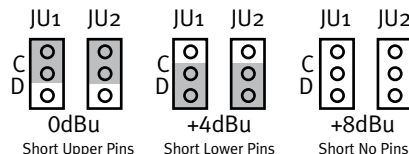


Consumer Level Input

Set Input Level

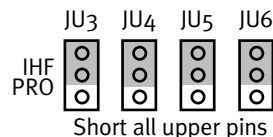


Set Nominal Input Sensitivity*

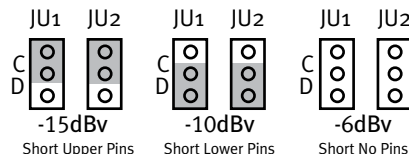


DC power in +/- 15 volts DC
(unit can also be powered by
StudioHub+ "DC-Link" via RJ-45's)


JU7, JU8

Install to connect RJ-45 shield
to ground to power ground

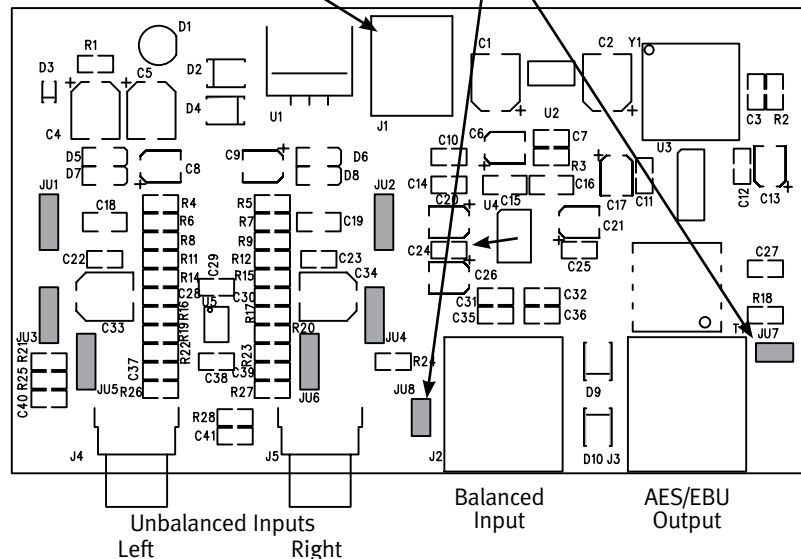


* Set for station standard
reference level to provide unit
output headroom of 20dB.

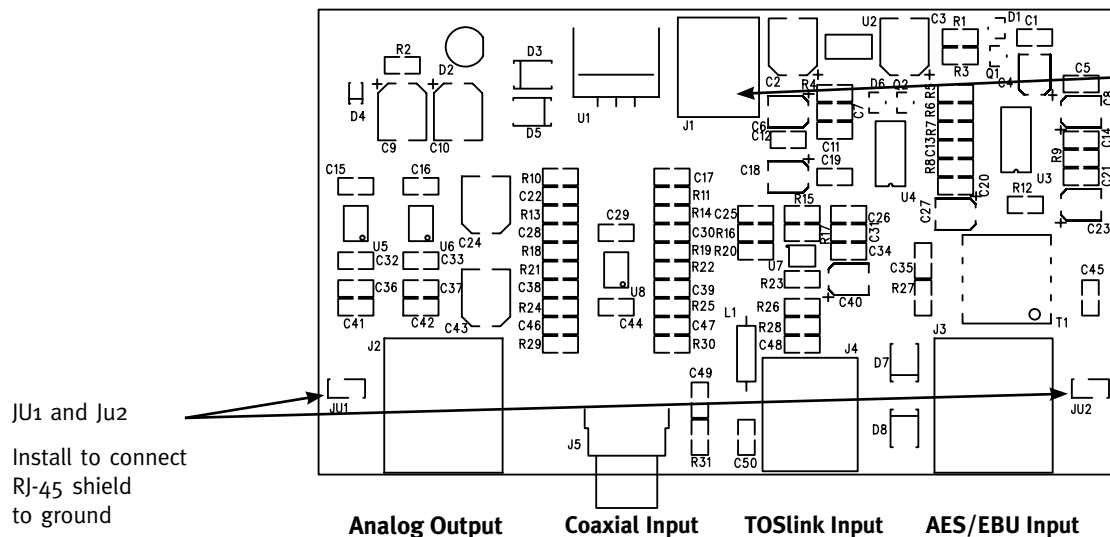

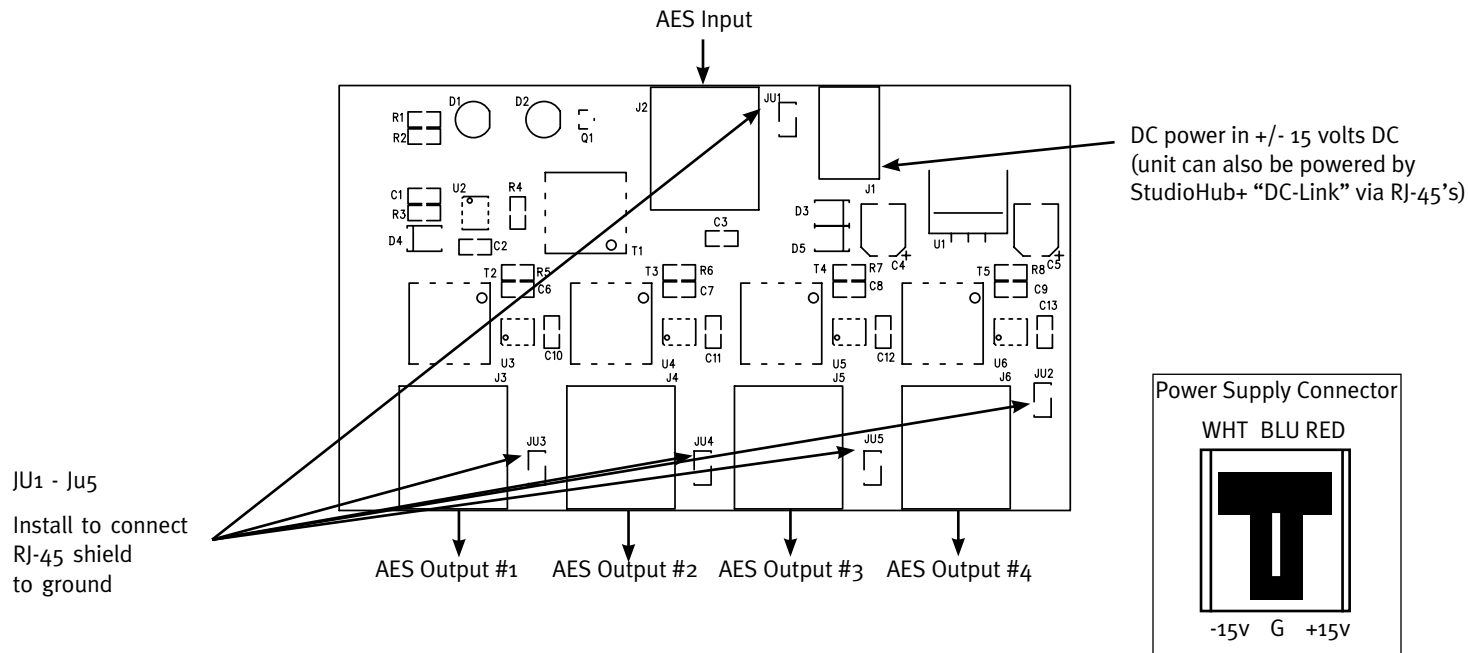


When programmed for stereo operation:

L & R XLR feed both RJ45's in stereo.

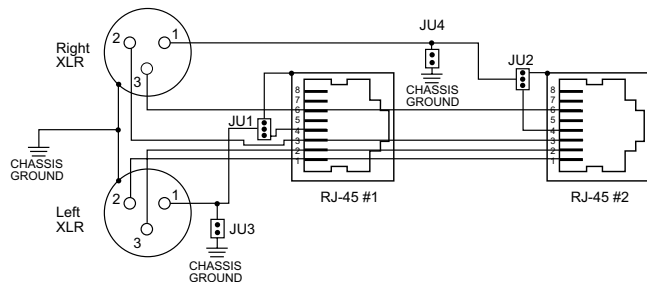**When programmed for Mono Operation:**

Left XLR feeds RJ45-1, pins 1 & 2 only.

Right XLR feeds RJ45-2, pins 1 & 2 only.

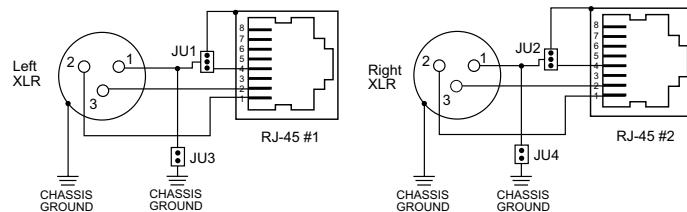**To configure for stereo operation**

JU5

JU6

JU7, JU8, JU9, JU10

XLR PIN1 select jumper

Install JU3 to connect
Left XLR pin 1 to chassis ground

Install JU4 to connect
Right XLR pin 1 to chassis ground



StudioHub+ RJ45 "A" for mono only
or stereo operation

StudioHub+ RJ45 "B"
for stereo operation

To configure for mono operation

JU5

JU6

JU7, JU8, JU9, JU10


RJ45 shield and ground select jumpers

Left	Right	
JU1	JU2	Install to connect XLR Pin 1 to RJ-45 shield
JU1	JU2	Install to connect XLR Pin 1 to RJ-45 power ground (RJ-45 pin 4)




When programmed for stereo operation:

L & R XLR feed both RJ45's in stereo.

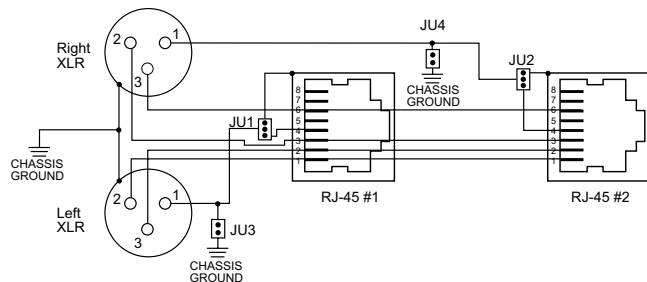**When programmed for mono operation:**

Left XLR feeds RJ45-1, pins 1 & 2 only.

Right XLR feeds RJ45-2, pins 1 & 2 only.

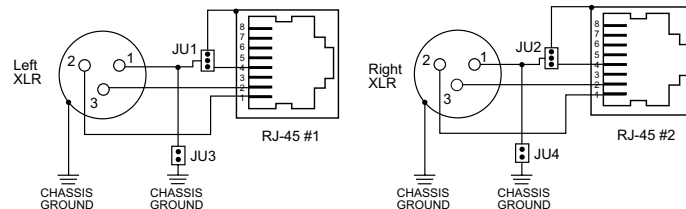**To configure for stereo operation**

JU5

JU6

JU7, JU8, JU9, JU10

XLR PIN1 select jumper

Install JU3 to connect
Left XLR pin 1 to chassis ground

Install JU4 to connect
Right XLR pin 1 to chassis ground

StudioHub+ RJ45 "A" for mono only
or stereo operation

StudioHub+ RJ45 "B" for stereo operation

To configure for mono operation

JU5

JU6

JU7, JU8, JU9, JU10



RJ45 shield and ground select jumpers

Left Right

JU1 JU2 Install to connect
XLR Pin 1 to RJ-45 shield

JU1 JU2 Install to connect XLR Pin 1
to RJ-45 power ground
(RJ-45 pin 4)



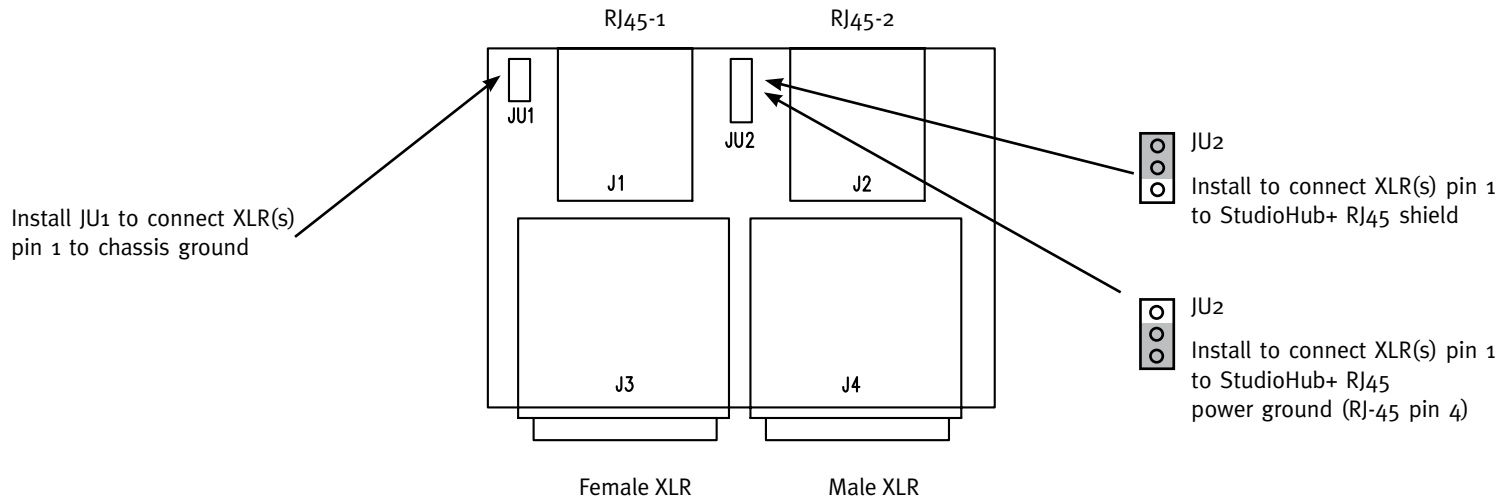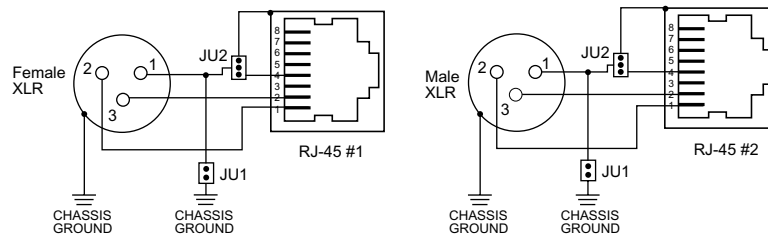

(Note - There is a stereo only version of this product.
See www.studiohub.com/legacyproducts)

JU1

Install to connect XLR pins to chassis ground


JU2



Install to connect XLR pins to
power ground



Install to connect XLR pin 1 to
shield ground

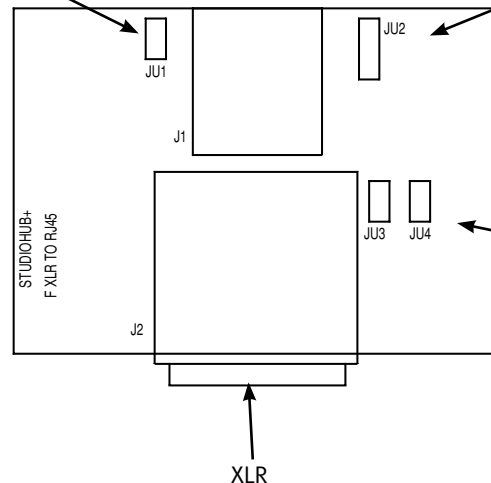

JU3, JU4

Install for left and right in parallel
Remove for left only

(Note - There is a stereo only version of this product.
See www.studiohub.com/legacyproducts)

JU1

Install to connect XLR pins to chassis ground


JU2



Install to connect XLR pins to
power ground



Install to connect XLR pin 1 to
shield ground

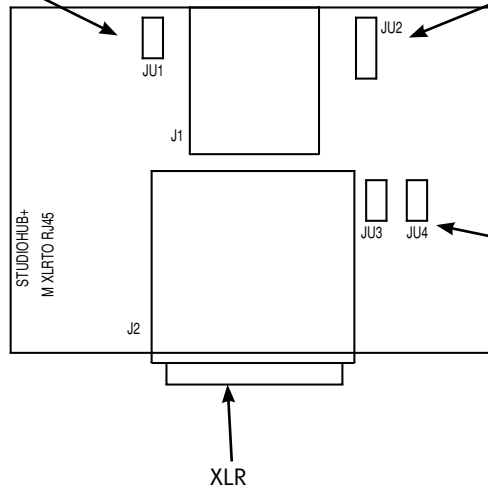

JU3, JU4

Install for left and right in parallel
Remove for left only




Install to connect external power to light mic boom LED (5-15VDC) via pins 3 & 4 on barrier strip connector

JU3



Install to connect external power to light mic boom LED (15VDC) via pin 8 of RJ-45 when connected to a standard StudioHub+ powered Cube or Hub.

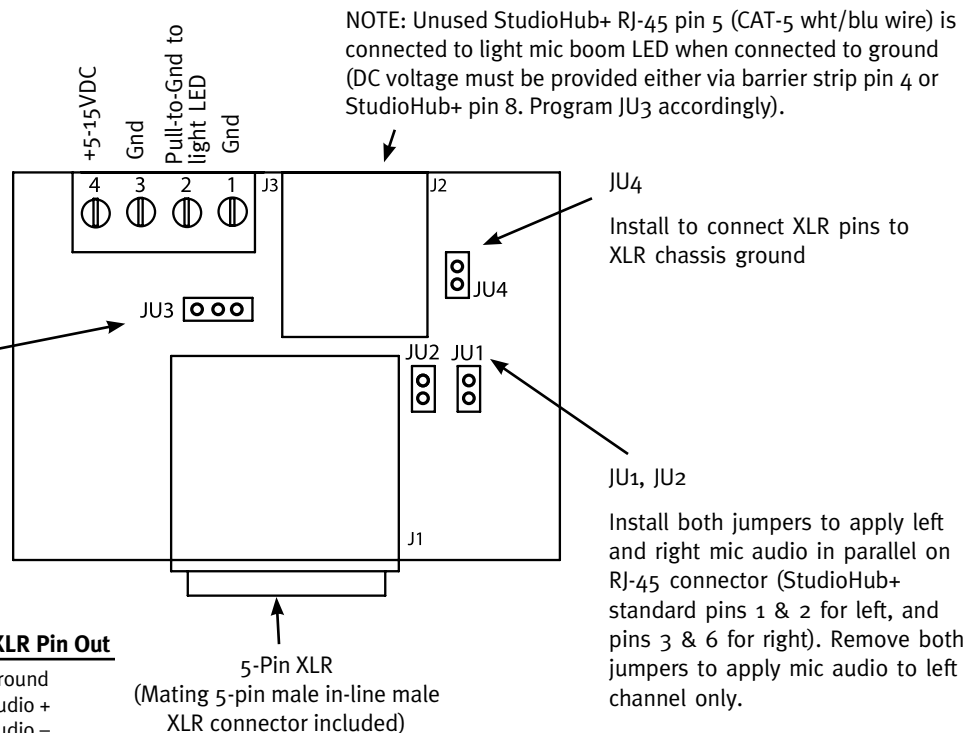

JU1 and JU2*



Install to tie StudioHub+ RJ45 right - connection to StudioHub+ shield.



Install to tie StudioHub+ RJ45 right - connection to StudioHub+ power ground.

JU3 and JU4*



Install to tie StudioHub+ RJ45 left - connection to StudioHub+ shield.



Install to tie StudioHub+ RJ45 left - connection to StudioHub+ power ground.

JU5 and JU6*



Install to tie 1/4" and mini TRS sleeve to StudioHub+ RJ45 shield.



Install to tie 1/4" and mini TRS sleeve to StudioHub+ RJ45 power ground.

***Improper use of JU1, JU2, JU3, JU4 may result in no output, excessive noise, crosstalk, oscillation, or circuit failure.**

1/4" and mini TRS wiring


Tip = Left + StudioHub+ RJ45 connection

Ring = Right StudioHub+ RJ45 connection

Sleeve = See JU5 and JU6

Stereo unbalanced StudioHub+ RJ45. Signal to/from J3 and J5

Stereo unbalanced StudioHub+ RJ45. Signal to/from J4 and J6

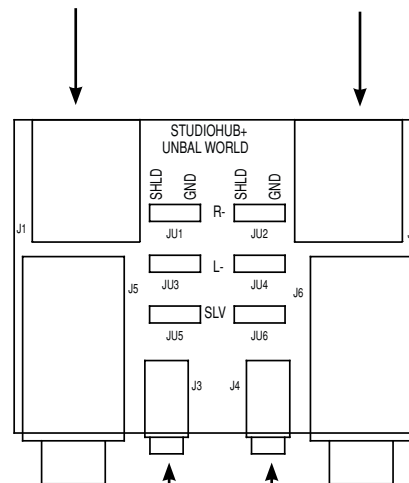

Stereo unbalanced 1/4"

Stereo unbalanced mini TRS

1/4" and mini TRS J3 and J5 are in parallel. Use only one at a time.

Stereo unbalanced 1/4"


Stereo unbalanced mini TRS

1/4" and mini TRS J4 and J6 are in parallel. Use only one at a time.


2 Stereo StudioHub+ RJ45(s) in parallel

1/4" TRS & mini TRS, (J3/J4 and J5/J6) are in parallel. Use only one at a time.

1/4" mini TRS
(J3, J4, J5, J6) wiring
Tip = +
Ring = -
Sleeve = See JU1 pinouts below

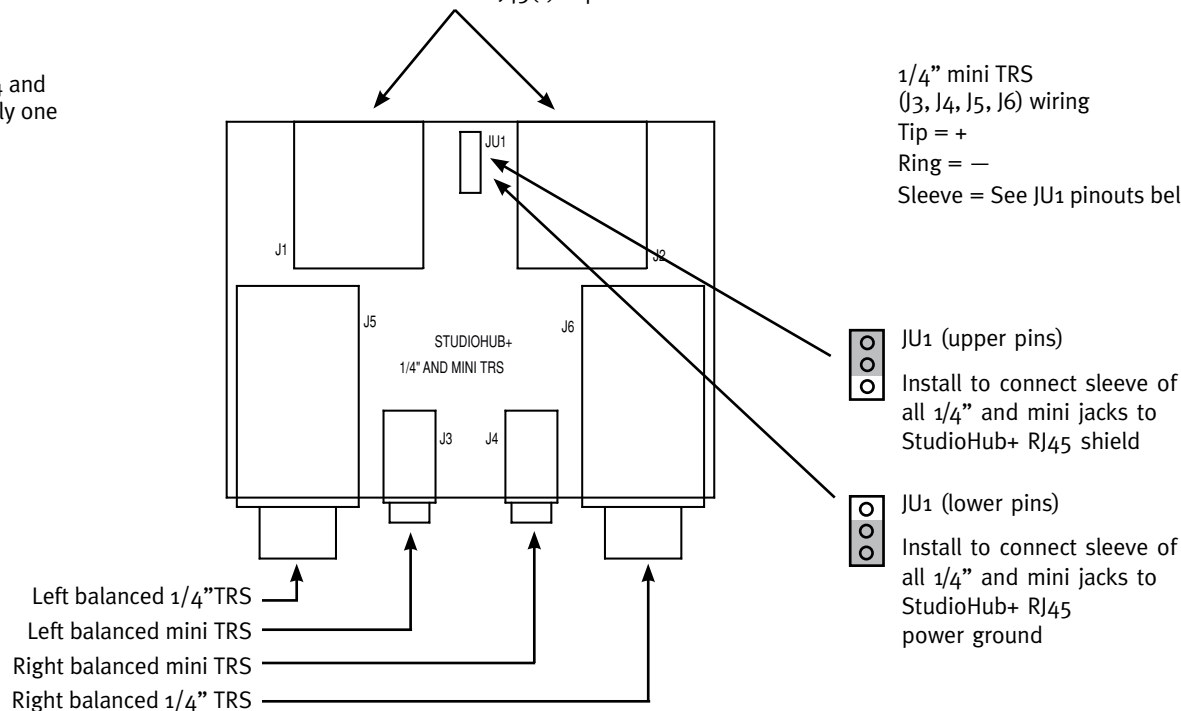

Note:

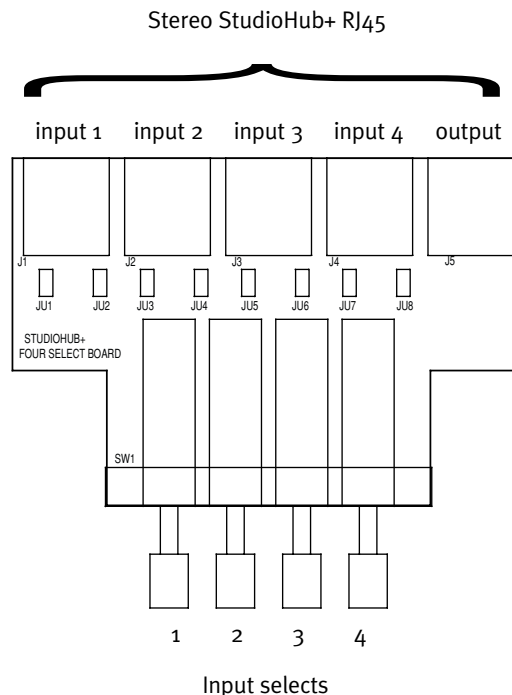This part obsolete as of
September 2012.Replaced by active model
SH-4SWA**Jumpers JU1-JU8 tie +15volt and -15volt
from input RJ45(s) to the output RJ45 J5****JU1** -15volts input 1**JU2** +15volts input 1**JU3** -15volts input 2**JU4** +15volts input 2**JU5** -15volts input 3**JU6** +15volts input 3**JU7** -15volts input 4**JU8** +15volts input 4

These internal buses and jumpers allow +15volts, -15volts and shield to be connected from the two studioHub+ RJ45(s) and the terminal block.

A circuit path requires at least two jumpers.

JU1 install to tie terminal block shield to internal shield bus.

JU2 install to tie terminal block -15volts to internal -15volt bus.

JU3 install to tie terminal block +15volts to internal +15volt bus.

JU4 install to tie StudioHub+ RJ45 J2 +15volts to internal +15volt bus.


JU5 install to tie StudioHub+ RJ45 J2 -15volts to internal -15volt bus.

JU6 install to tie StudioHub+ RJ45 J3 +15volts to internal +15volt bus.

JU7 install to tie StudioHub+ RJ45 J3 -15volts to internal -15volt bus.

JU8 install to tie StudioHub+ RJ45 J2 shield to internal shield bus.

JU9 install to tie StudioHub+ RJ45 J3 shield to internal shield bus.

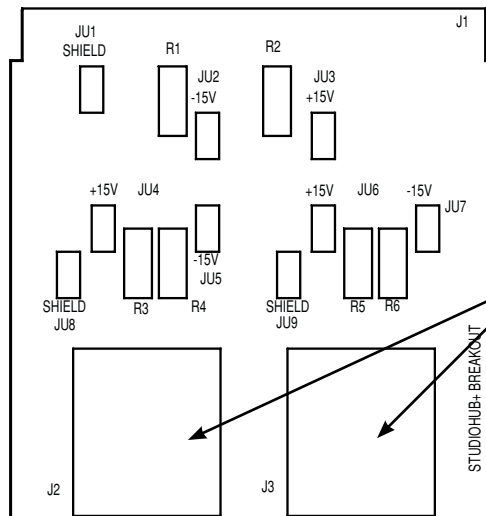


2 StudioHub+ RJ45 with pins below in parallel

1. Left + or AES/EBU+
2. Left - or AES/EBU-
3. Right +
4. Right -
5. Power Ground
6. Future

RJ-45 ADAPT-GPI Pin Out for Wheatstone BLade GPIO

RJ-45 Pin1- Audio Ground
 RJ-45 Pin2- Logic 7 In/Out
 RJ-45 Pin3- Logic 8 In/Out
 RJ-45 Pin4- Logic 9 In/Out
 RJ-45 Pin5- Logic 10 In/Out
 RJ-45 Pin6- Logic 11 In/Out
 RJ-45 Pin7- Logic 12 In/Out
 RJ-45 Pin8- +5V Digital

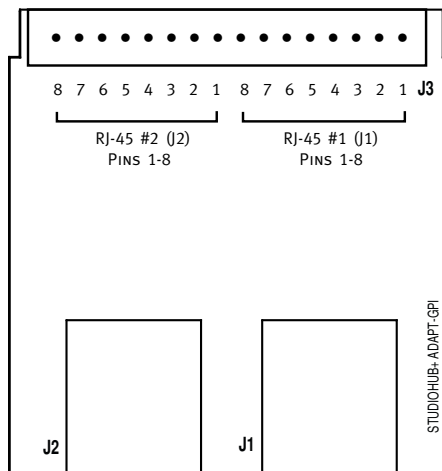

Notes:


Power is added to audio connections and available on the 4 output RJ-45's (J1-J4). The four stereo audio feeds are kept separated and isolated.

Channels are independent, isolated and independently fused with self resetting thermal fuses.

Power Supply
+/-15v In (or) Out
Max power provided 3 amps.

PS-EXTU Power Connector.

Allows P/N PS-EXTU wall-top power supply to provide power. Max power provided 3 amps.

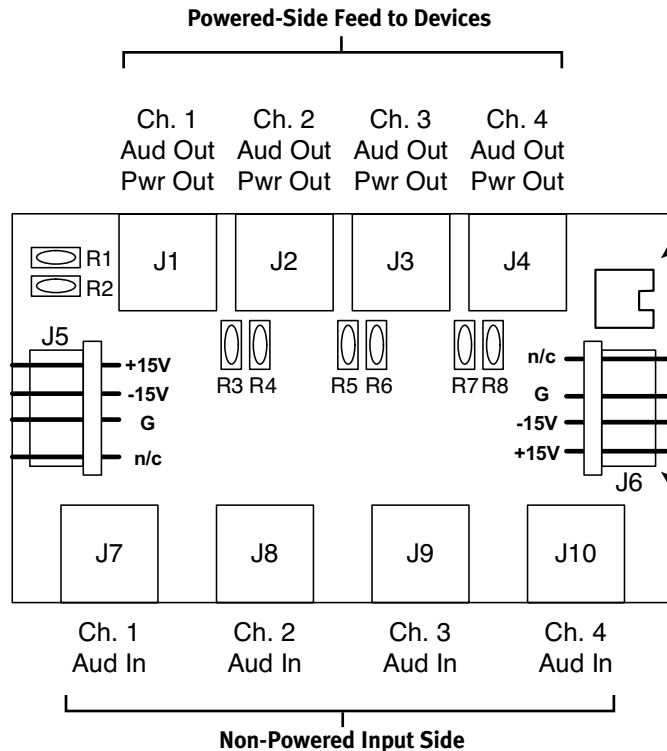**PS-WW Cube Power Connector.**

Allows P/N PS-WWCube or PS-WWUCube desktop power supply to provide power. Max power provided 400 ma.

Power Supply
+/-15v In (or) Out.
Max power provided 3 amps.

Loop-Thru Power Connector.

Power supply cable P/N 11516 (1 ft.) required. Contact the factory to acquire at no charge if needed.

(Note - There are older versions of this product.

See www.studiohub.com/legacyproducts)**StudioHub+ 4 Source Switcher**


The SH-4SHSS is an active device and must be powered via +/- 15VDC. Power flows via StudioHub+ "DC-Link" if connected to any Cat-5 cable with +/- 15VDC active on Pins 7&8. Or, utilize optional power supply is part # PS-WWUSH.

Input selects will be maintained in the event of a power failure.

Input select switches may be remote controlled via pins on connector J4.

The unit is fully bidirectional and may switch 4 inputs to 1 output or 1 input to 4 outputs

This circuit board is packaged alone for single 1x4 use, or up to 4 maybe interconnected for up to a 1x16 switching application.

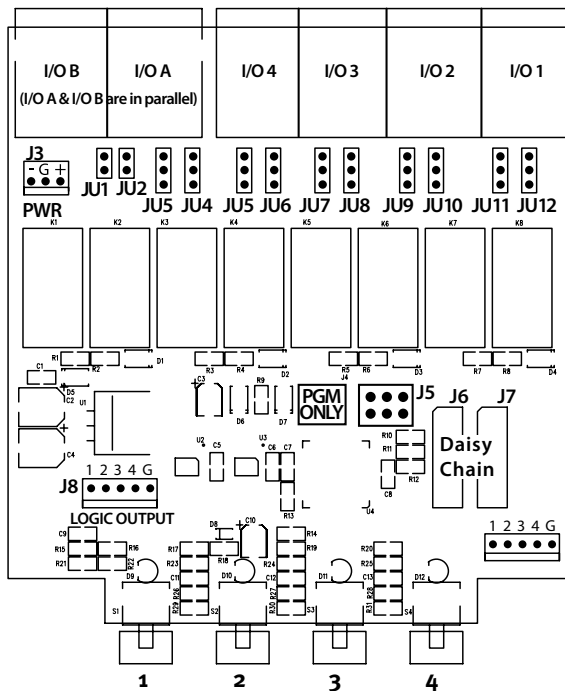

Special Purpose Logic Output J8
(Special PROM required)

- | | |
|---------------------|---------------------|
| 1 +5VDC | 4 Pull to Ground #2 |
| 2 NC | 5 GND |
| 3 Pull to Ground #1 | |

J5 – Programing

(Note- power must be cycled for mode change)

Install C for
momentary
operation
(default)



Remove C for
holding
operation



Supports
1 SH-4SHSS
board



4 switches
total

Supports
2 SH-4SHSS
boards



8 switches
total

Supports
3 SH-4SHSS
boards



12 switches
total

Supports
4 SH-4SHSS
boards



16 switches
total

Shielding Jumpers:

JU1 – insert to connect power ground to chassis ground

JU2 – insert to connect power ground to shield

Mono/Stereo Jumpers JU5-JU12:

To make inputs stereo set
both jumpers to upper position




To make inputs mono set
both jumpers to lower position




StudioHub+ RJ45 Output and power in.
Output appears on both left (1 & 2) and
right (3 & 6) connector pins

JU2

XLR pin 1 select


 Install to connect XLR pin 1
to RJ-45 shield.


 Install to connect XLR pin 1
to power ground & J1 pin 3


JU3

Phantom Power


 Off


 On (+15 Volts)

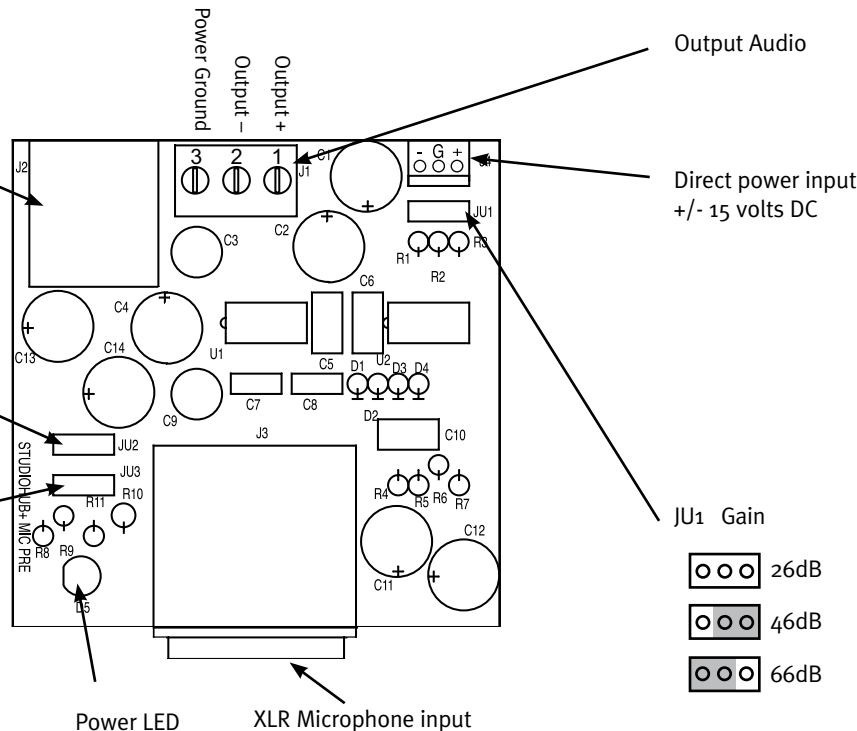

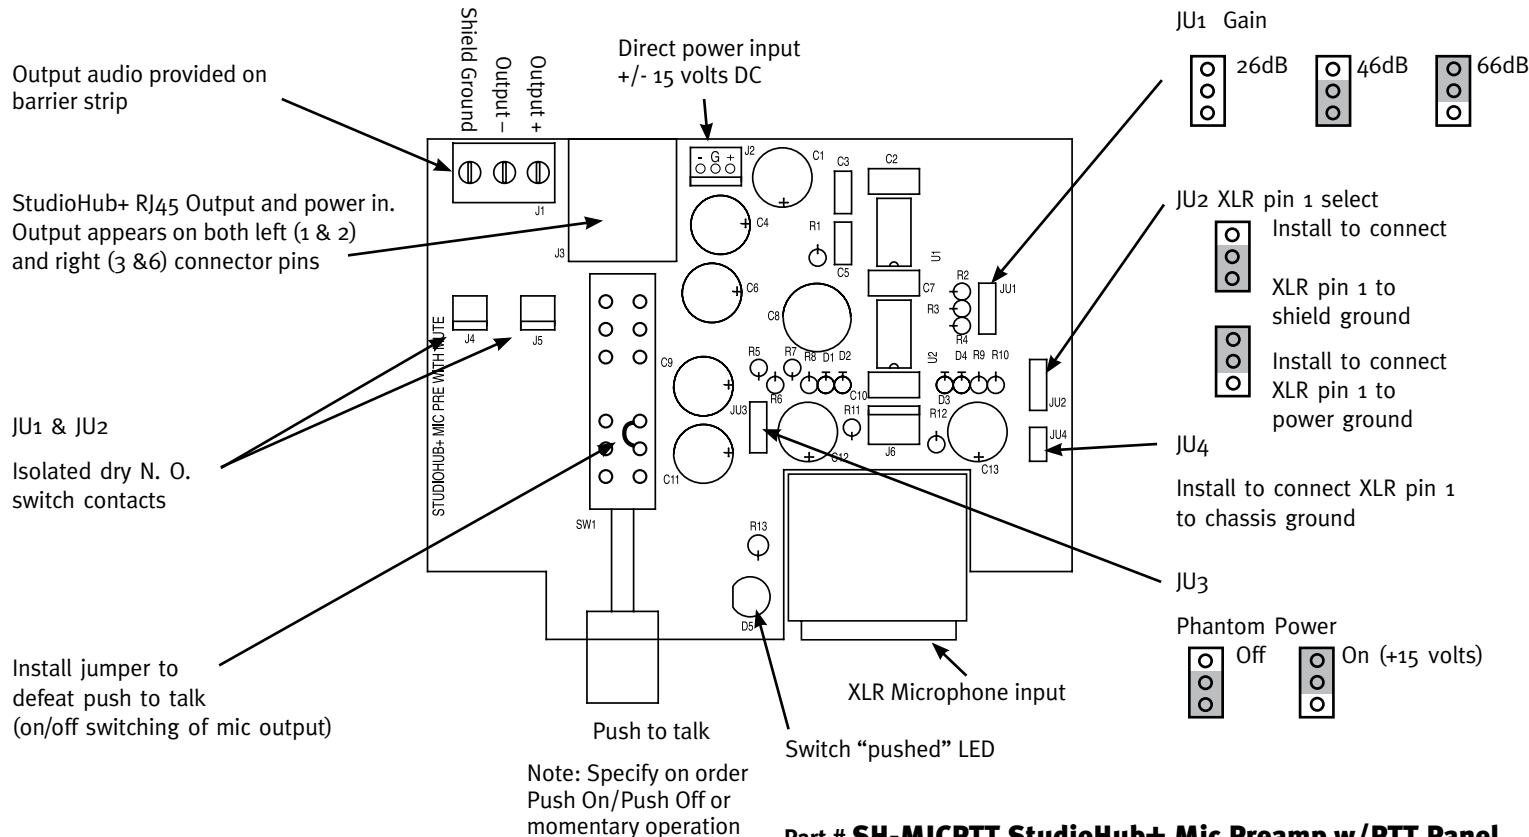

(Note - There are older versions of this product.
See www.studiohub.com/legacyproducts)

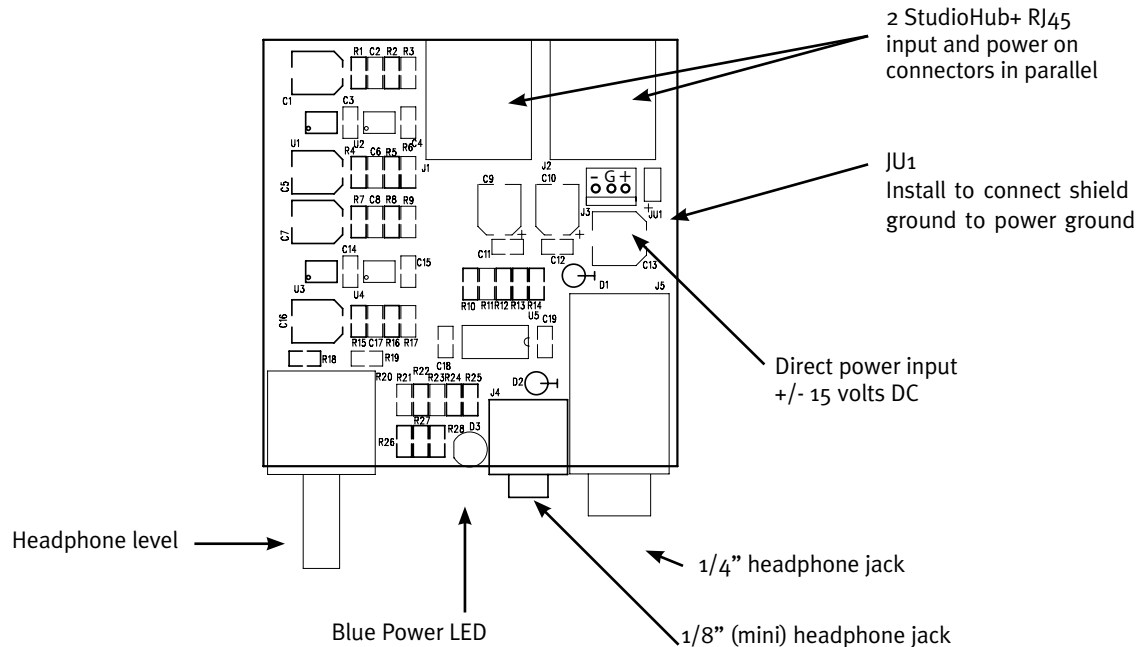

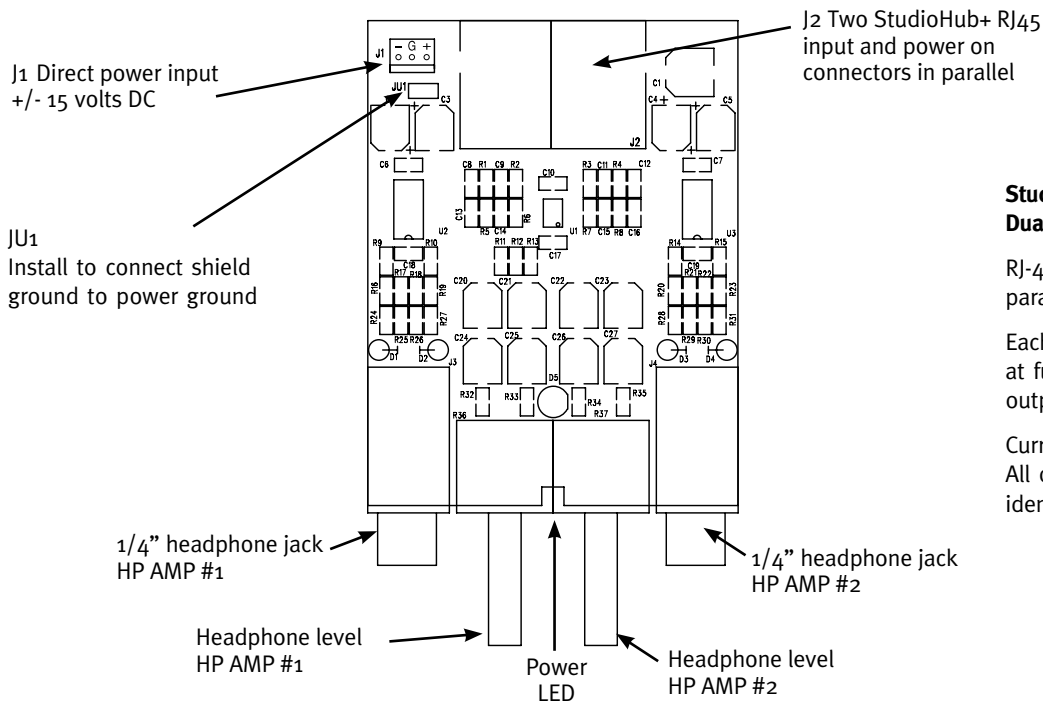

StudioHub+ Headphone Amplifier Dual Output Version

RJ-45 input jacks remain in parallel (there is only 1 input.)

Each output is isolated and at full power (with separate output amplifier chips.)

Current consumption is 100ma. All other specifications are identical to single (SH-HP) model.

Audio and power input
provided on barrier strip

Stereo StudioHub+ RJ45(s)
stereo output and power in

Stereo StudioHub+ RJ45(s)
mono output and power in

JU3, JU4 gain select



Unity -
no jumper



+10dB



+20dB

Power LED

Level

2 StudioHub+ RJ45
input and power in
connectors in parallel

Direct power input
+/- 15 volts DC

JU1


Install to connect shield ground
and power ground


JU2

Install to connect shield ground
and chassis ground


JU9, JU10

2 mute control connectors in
parallel. Short the pins on either
connector together for mute

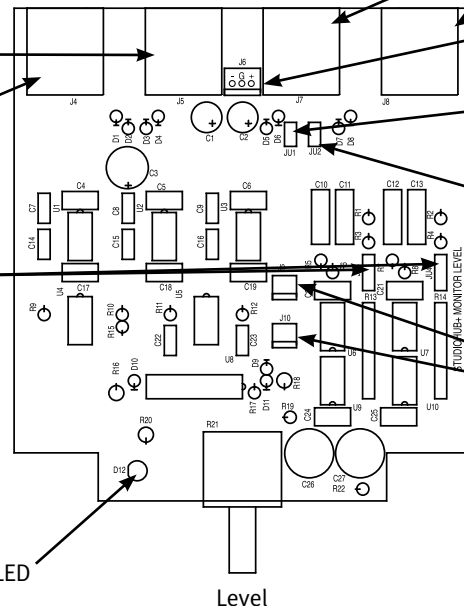

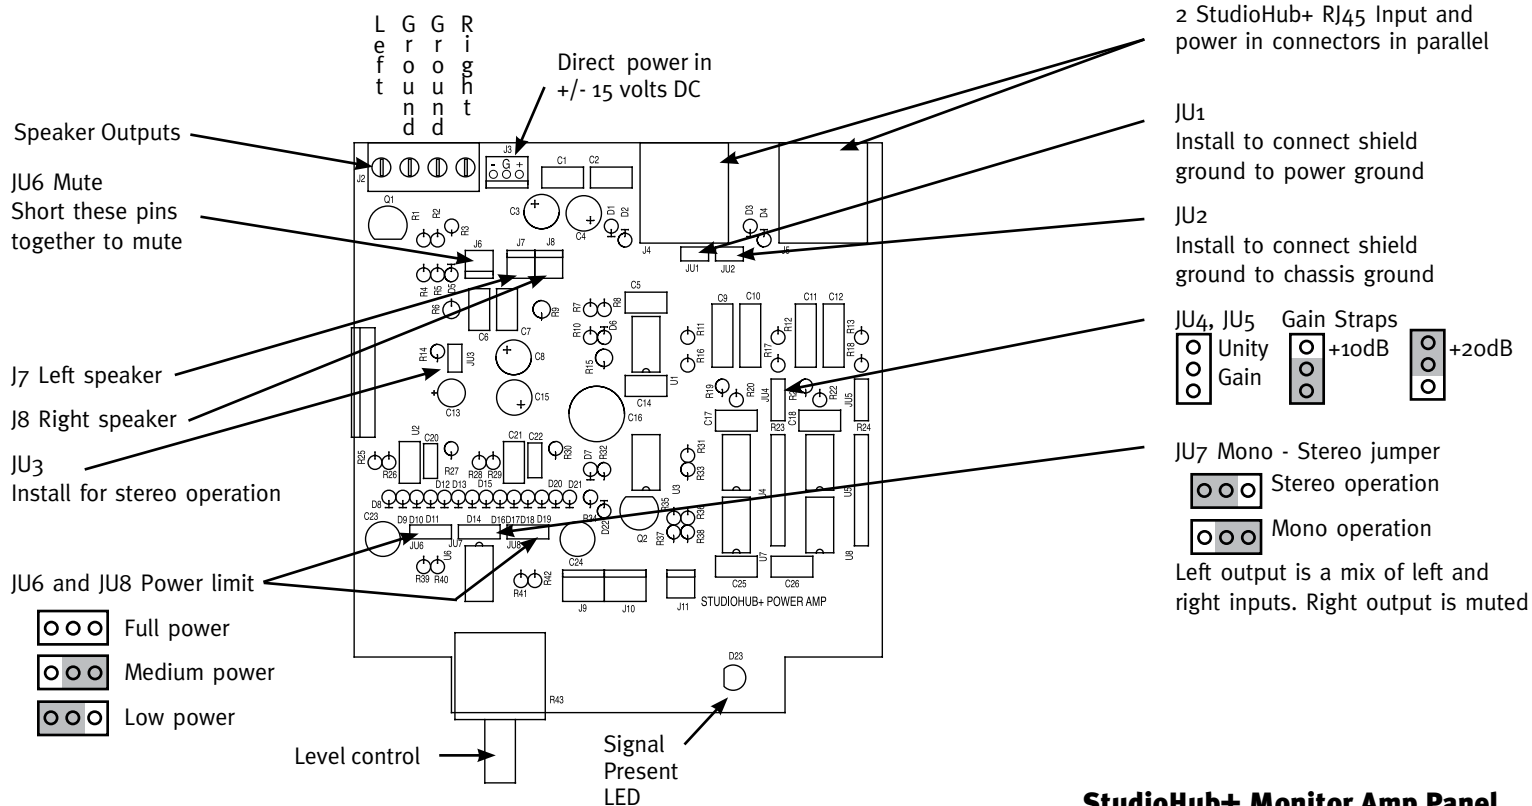**StudioHub+ Monitor Amp Panel****Part # SH-AMP w/o Speaker****Part # SH-AMPSPKR w/Speaker**

(856) 467-8000 • Fax (856) 467-3044 • www.studiohub.com

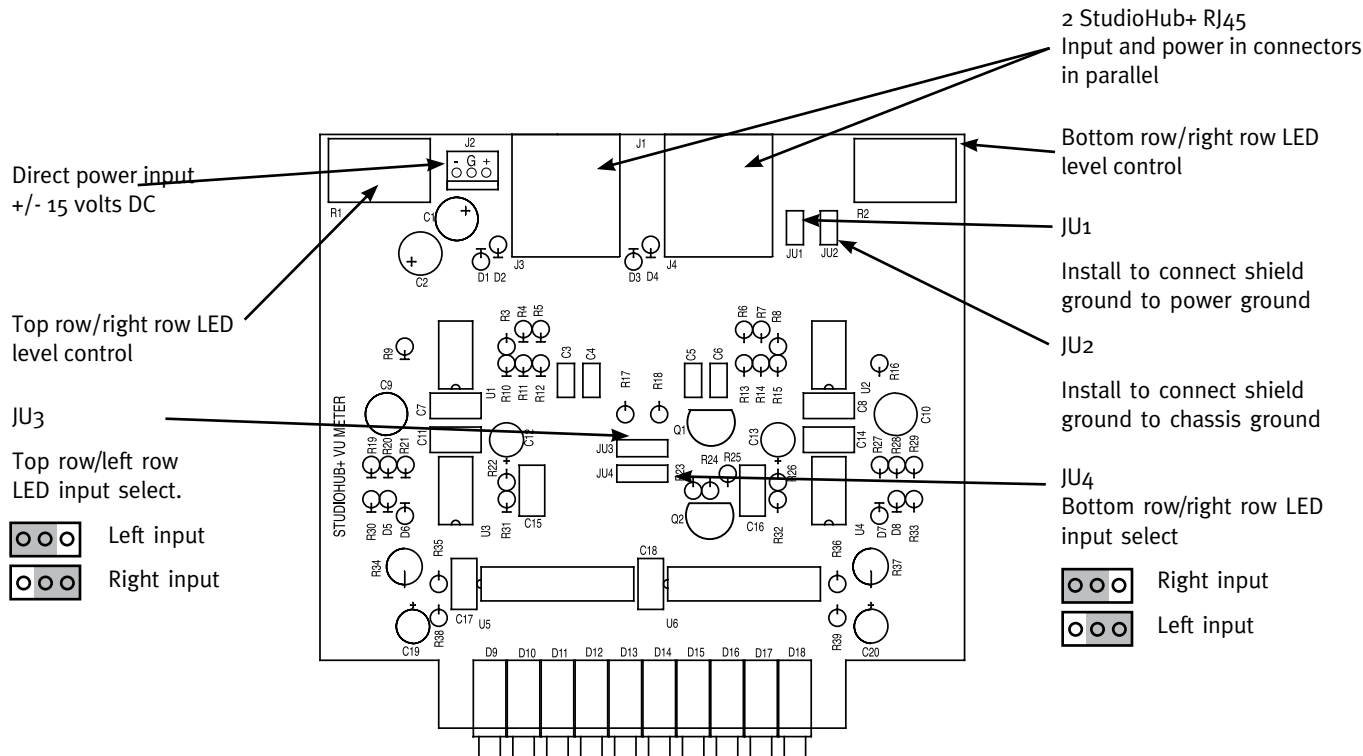

StudioHub+ RJ45
input 1 and power in

Stereo StudioHub+ RJ45
input 2 and power in

Gain Straps (pre-fader)

JU3, JU4 Input 1

JU5, JU6 Input 2

JU7, JU8 Input 3




No jumper for unity gain
normal for +4dBu applications



+10dB gain



+20dB gain

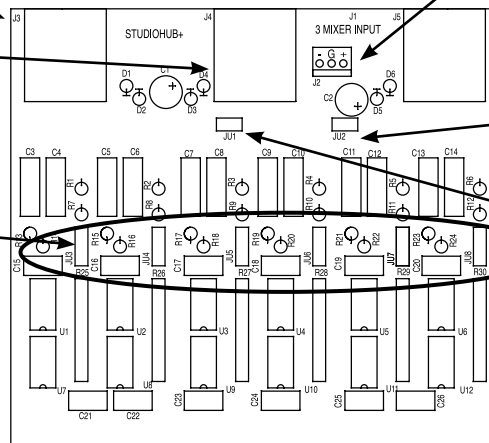

Direct power input
+/- 15 volts DC

StudioHub+ RJ45
Input 3 and power in

JU2


Install to connect shield
ground to chassis ground


JU1

Install to connect shield
ground to power ground

StudioHub+ RJ45 main output.
Mix of inputs 1, 2 and 3.
Also power in


StudioHub+ RJ45mix minus output.
Mix of inputs 1 and 2 only.
Also power in

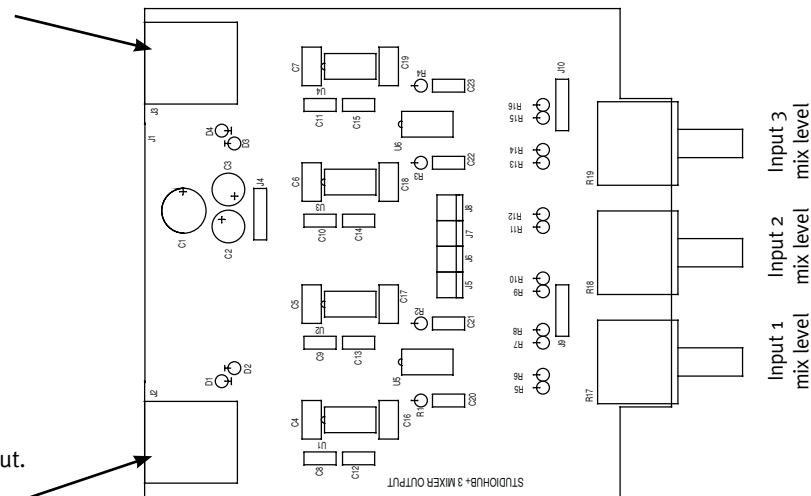

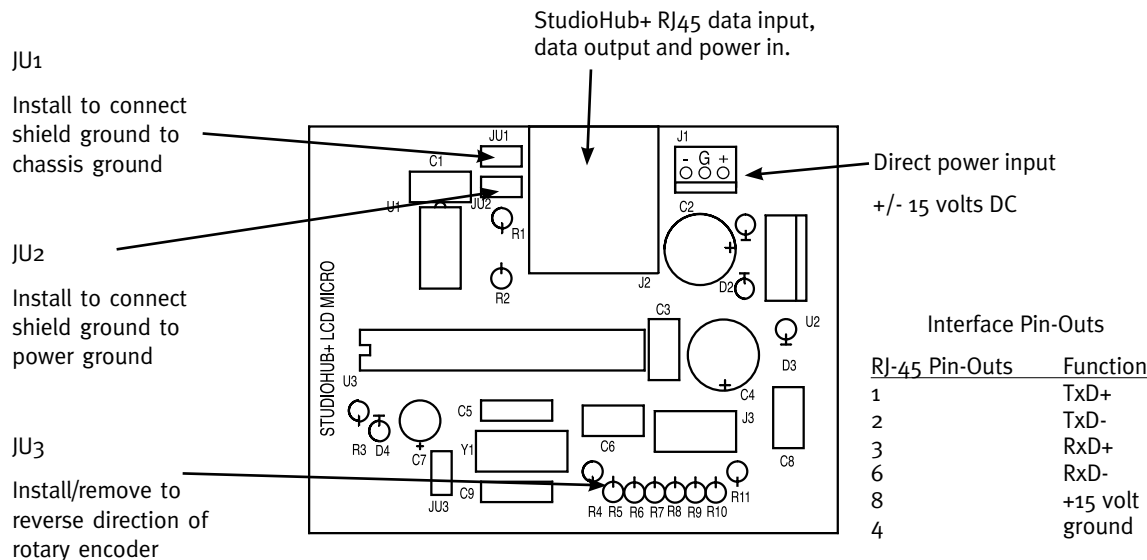

Interface Pin-Outs

RJ-45 Pin-Outs	Function
1	TxD+
2	TxD-
3	RxD+
6	RxD-
8	+15 volt ground
4	

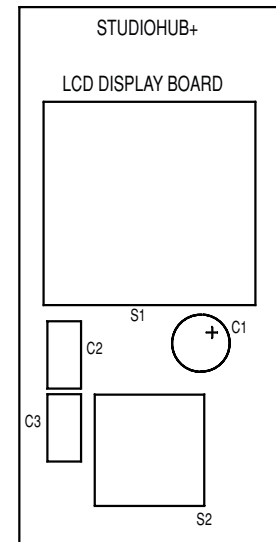


This board must be used in conjunction
with the LCD display board.

This board to be used in conjunction
with the LCD micro board

JU3

Install to connect shield
ground to chassis ground

Audio in/out and power input
provided on RJ-45's

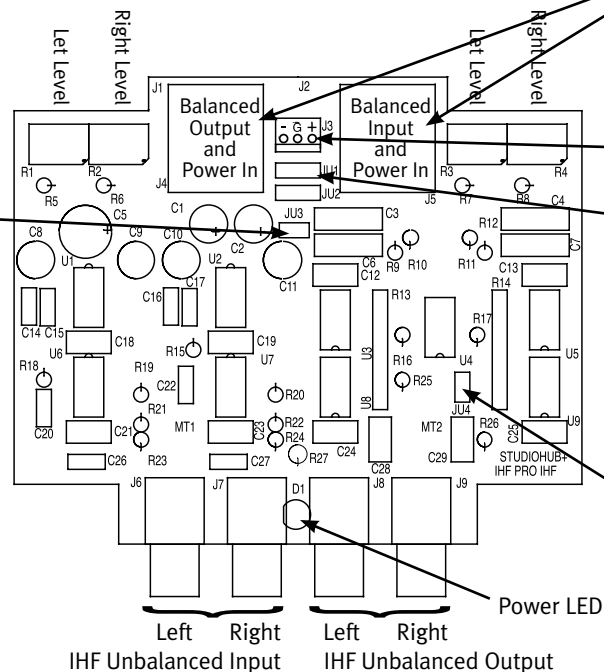

J3
Direct power input
+/- 15 volts DC

JU1 and JU2


(install both the same)

 Board power
from J5

 Board power
from J4

JU4

Install to connect shield
ground to power ground

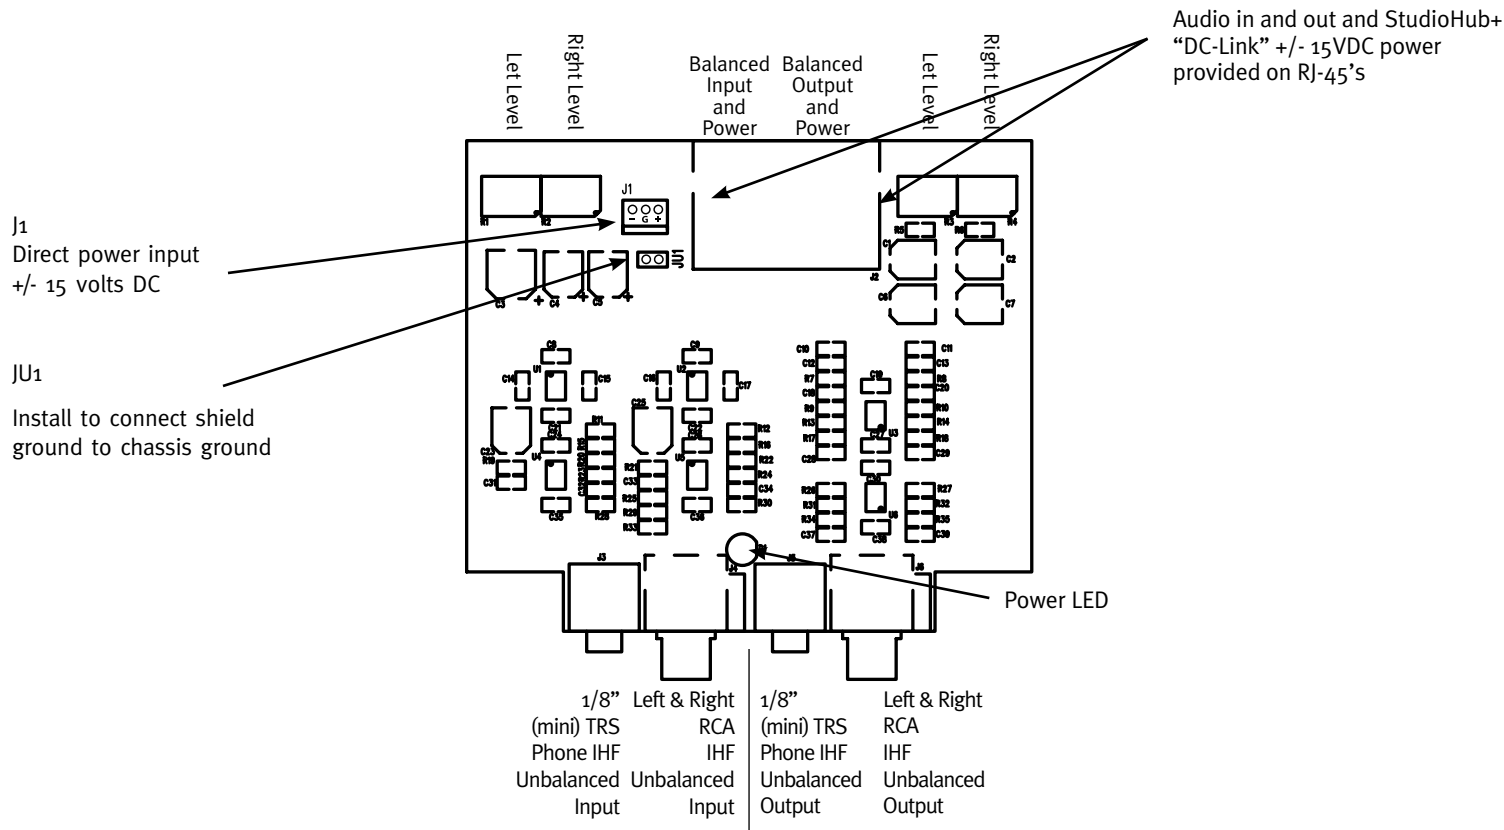

Warranty

Radio Systems, Inc., warrants this equipment to be free from defects in materials and workmanship for a period of one (1) year.

This warranty extends to first users of the product and future owners who purchase the product within the warranty period.

The terms of this warranty are null and void if this product is stored or operated in an environment not conducive to electronic equipment, or shows signs of misuse or modifications which affect the proper functioning of the product. This warranty does not apply to damage caused by fire, smoke, flood, lightning, or acts of nature and physical abuse.

Radio Systems, Inc., and its associated companies, authorized distributors, and personnel are not liable for loss of revenues or other damages, or effects to the broadcast signal quality or coverage which may result from the from the improper functioning of this product.

Repair Policy

Technical assistance is available at any time, at no charge, by phone or correspondence.

During the warranty period, there will be no charge for parts or service made to units which show no sign of misuse by customer or lightning caused damage. The customer is responsible for the cost of shipping their unit back to Radio Systems for repair.

During the warranty period, shipment of small parts and assemblies may also be made at a charge to the user. Emergency shipments of replacement parts and circuits will be made at the user's request for an extra shipping and service charge. Chargeable services will be made COD or on Net-30 day terms to users with established accounts.

During the warranty period, full credit or return of COD charges (less any service and expedited shipping charges) will be made to users who return the defective parts or circuits within 30 days, if the damage is covered under the terms of the warranty.

Return Instructions

Contact Radio Systems for a return authorization number.

Pack all items carefully and ship prepaid, via UPS insured, to:

Radio Systems, Inc.

Attn: R.A. # _____

601 Heron Drive

Logan Township, New Jersey 08085-1741

Enclose a note which includes your name, company, phone number, the serial number, return address (no box numbers), and a complete description of the problem.





601 Heron Drive • Logan Township, New Jersey 08085 • (856) 467-8000 • Fax (856) 467-3044

www.studiohub.com • www.radiosystems.com
