

# LBC-HDBT

## LINK BRIDGE™ HDbaseT HDMI TRANSMITTER SYSTEM



BCI reserves the right to make changes to the products described herein without prior notice or consent. No liability is assumed as a result of their use or application. All rights reserved.

©2013 Broadata Communications, Inc.



## **SAFETY INSTRUCTIONS AND COMPLIANCE DECLARATIONS**

PLEASE OBSERVE THE FOLLOWING SAFETY  
PRECAUTIONS

### **SURGE PROTECTION DEVICE RECOMMENDED**

This product contains sensitive electrical components that may be damaged by electrical spikes, surges, electric shock, lightning strikes, etc. Use of surge protection systems is highly recommended in order to protect and extend the life of your equipment.

## TABLE OF CONTENTS

1.0	PRODUCT DESCRIPTION .....	5
2.0	OPERATION CONTROLS AND FUNCTIONS .....	6
2.1	TRANSMITTER FRONT AND REAR PANELS .....	6
2.2	RECEIVER FRONT AND REAR PANELS .....	7
3.0	SERIAL CONTROL .....	8
3.1	D-SUB 9 PIN ASSIGNMENT .....	8
3.2	IR BLASTER CABLE PIN ASSIGNMENT .....	9
3.3	IR RECEIVER CABLE PIN ASSIGNMENT .....	9
4.0	MAINTENANCE AND TROUBLESHOOTING .....	10
4.1	MAINTENANCE .....	10
4.2	TROUBLESHOOTING .....	10
5.0	SPECIFICATIONS .....	12
6.0	SERVICE PROCEDURE .....	13
6.1	REPLACEMENT POLICY .....	13
6.2	RETURN AND REPAIR SERVICE .....	13
7.0	LIMITED WARRANTY .....	14

## 1.0 PRODUCT DESCRIPTION

The LBC-HBT-Tx/Rx with HDMI video and RS-232 over Single CAT5e/6 transmitter and receiver set can send uncompressed audio/video over a single run of CAT5e/6 cable up to 100 m with PoC (Power over cable) feature and the added benefit of control through the built-in RS-232 and IR ports and a bi-directional LAN connection.

### Features


- HDMI 1.4 with 3D, 4kx2k support, HDCP & DVI Compliant
- Supports CEC bypass
- Simultaneous transmission of uncompressed data over a single 100m/ 328 ft CAT5e/6 cable
- Uncompressed video 1080p, 60 Hz, 36-bit
- Audio support up to 7.1CH & Dolby TrueHD, DTS-HD
- 5Play™ convergence: HDMI, LAN, Bidirectional PoC and Control (IR & RS-232)
- Installation Friendly

### Package Contents

- 1xHDMI to CAT5e/6 (with LAN/IR/RS-232/Bidirectional PoC) Transmitter
- 1xCAT5e/6 to HDMI (with LAN/IR/RS-232/Bidirectional PoC) Receiver
- 1xIR Blaster
- 1xIR Receiver
- 1x24 V/1.25 A DC Power Adaptor
- Operation Manual

## 2.0 OPERATION CONTROLS AND FUNCTIONS


### 2.1 Transmitter Front and Rear Panels

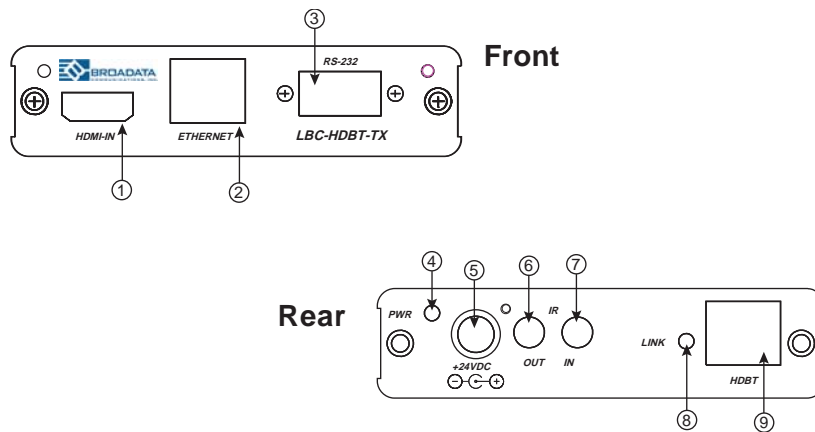

1. **HDMI In:** Connect to HDMI source equipment such as a DVD or Blu-ray player.
2. **LAN:** Connect to an internet or network connection.
3. **RS-232 In:** Connect to a PC or laptop with D-Sub 9 pin male cable for the transmission of RS-232 commands.
4. **Power LED:** This blue LED will illuminate when the device is connected to a power supply.
5. **DC 24V:** Plug the 24 V DC power supply into the unit and connect the adaptor to an AC outlet. Only one side of power needs to be connected to activate both transmitter and receiver.
6. **IR 1 Blaster:** Connect to the supplied IR blaster cable for IR signal transmission. Place the IR blaster in direct line-of-sight of the equipment to be controlled.
7. **IR 2 Extender:** Connect to the supplied IR receiver cables for IR signal reception. Ensure that remote being used is within the direct line-of-sight of the IR extender.

8. **Link LED:** The yellow LED will illuminate when both the input and output signals are connected.
9. **CAT5e/6 Out:** Connect to the receiver unit with a Single CAT5e/6 cable for transmission of all data signals.

## 2.2 Receiver Front and Rear Panels

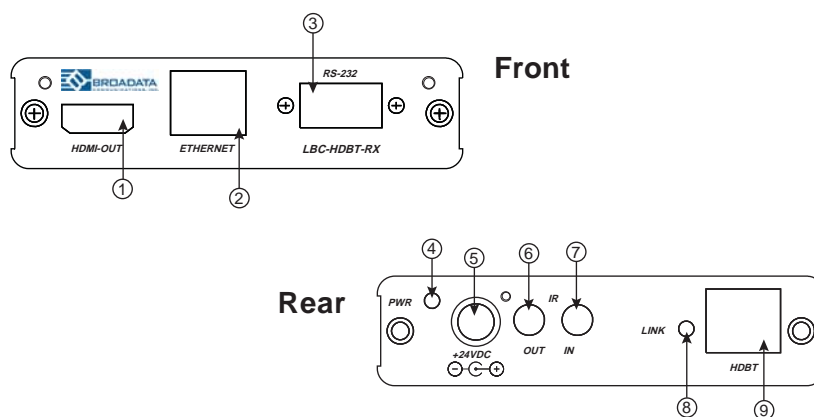

1. **HDMI Out:** Connect to a HDMI equipped TV/monitor for display of the HDMI input source signal.
2. **LAN:** Connect to a PC or Laptop to the Internet or network connection.
3. **RS-232 Out:** Connect to the device that is to be controlled (via D-Sub 9 pin female cable) by RS-232 commands.
4. **Power LED:** This blue LED will illuminate when the device is connected to a power supply.
5. **DC 24V:** Plug the 24 V DC power supply into the unit and connect the adaptor to an AC outlet. Only one side of power needs to be connected to activate both transmitter and receiver.
6. **IR 2 Blaster:** Connect to the supplied IR blaster cable for IR signal transmission. Place the IR blaster in direct line of sight of the equipment to be controlled.


7. **IR 1 Extender:** Connect to the supplied IR receiver cables for IR signal reception. Ensure that remote being used is within the direct line-of-sight of the IR extender.
8. **Link LED:** The yellow LED will illuminate when both the input and output signals are connected.
9. **CAT5e/6 In:** Connect to the transmitter unit with a Single CAT5e/6 cable for transmission of all data signals.

## 3.0 SERIAL CONTROL


### 3.1 D-Sub Pin Assignment

Pin	Define TX/RX
1	N/C
2	TxD/RxD
3	RxD/TxD
4	N/C
5	GND
6	N/C
7	N/C
8	N/C
9	N/C

### 3.2 IR Blaster Cable Pin Assignment

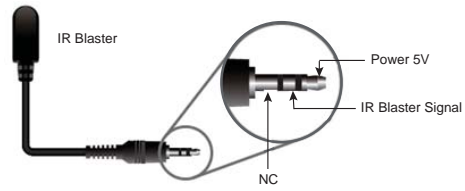

### 3.3 IR Receiver Cable Pin Assignment

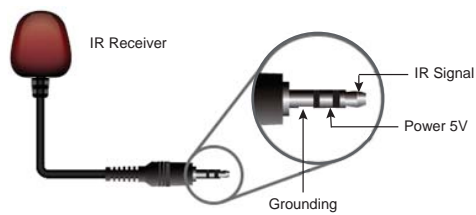



## 4.0 MAINTENANCE AND TROUBLESHOOTING

### 4.1 Maintenance

There is no operator maintenance other than keeping the units clean. However, observe the following light indicators to make sure that the unit is working properly:

### 4.2 Troubleshooting

If the LBC-HDBT units do not operate properly after installation, check for possible cable breaks, loose connections, and incorrect cable connections. If problems persist that may be fiber related, contact BCI at 1-800-214-0222 for further assistance.

For electrical problems, perform the following troubleshooting procedures:

1. **If the POWER indicator is OFF, check for the following:**
  - a. The line cord is plugged into the unit and your outlet has power.
2. **If the POWER indicator is ON, but the Link indicator is OFF, check for the following:**
  - a. Make sure the appropriate cables are being used.
  - b. Cable and cable connectors are not broken.
  - c. For each unit, the transmit (TX) cable is connected to the other unit's receiver (RX).

**3. If the POWER indicator and Link indicator are ON, but the channels are not operating, then:**

- a. Check to see that the attached user equipment is turned on.
- b. Both ends of the link are connected to the corresponding equipment and to the same corresponding channel port.
- c. Cable connections at both channels are securely fastened to each connector. Turn the power off, then back on to reset the link.

## 5.0 SPECIFICATIONS

### VIDEO/AUDIO SPECIFICATIONS

HDMI	Version 1.4 with 3D, 4kx2k support
Video Resolution	Up to 4K2K@30Hz
Protocol	DDC/EDID/HDCP Capable
Video Bandwidth	300MHz / 10.2Gbps
Audio Operating Mode	Stereo Audio
Audio Formats	Supports up to 7.1CH & Dolby TrueHD, DTS-HD Master Audio
Audio Sampling Rate	32KHz to 192KHz
HDMI/Audio Connector	HDMI Female plug

### DATA

Serial Control	RS232
Data Rate	Up to 57.6Kbaud
Connector	DB9 Serial
LAN Connector	RJ45
IR Control	Infrared
Data Rate	30 - 50KHz
In/Out Connectors	3.5mm Stereo
Ethernet Speed	100 Mbps

### HDBT TRANSMISSION

Cable Type	CAT 5e/6 or higher
Number of Cables	1
Connector/ Distance	RJ-45 / Up to 100m

### PHYSICAL

Dimensions Standalone	4.03"(W) x 3.95"(D) x 0.98"(H)
Power Consumption	+24VDC @ 1.25 Amps (Max.)
Operating Temperature	0 to +40°C
Humidity	20 to 90% RH, Non-Condensing

## 6.0 SERVICE PROCEDURE

### 6.1 Replacement Policy

Standard products found defective on arrival (DOA) will be replaced, based on availability, within 24 to 48 hours anywhere in the U.S. Please call Customer Service at **800-214-0222** for information.

### 6.2 Return/Repair Service

The LBC-HDBT System contains no user serviceable components. If you have a problem with your unit, please contact the Customer Service Department. To facilitate our return/repair processing please contact Broadata Communications, Inc. to obtain a Return Material Authorization (RMA). Please include the following information:

- Product model number
- Serial Number
- Complete description of problem
- Hardware installation description

Broadata Communications, Inc.  
2545 West 237th Street, Suite K  
Torrance, CA 90505  
**1-800-214-0222**  
(310) 530-1416  
(310) 530-5958 (Facsimile)  
e-mail: [CustomerService@Broadatacom.com](mailto:CustomerService@Broadatacom.com)  
Website: [www.broadatacom.com](http://www.broadatacom.com)

## **7.0 LIMITED WARRANTY**

Broaddata Communications, Inc. (BCI) warrants, for a period of one year from date of shipment, each product sold shall be free from defects in material and workmanship. BCI will correct, either by repair, or at BCI's election, by replacement, any said products that in our sole discretion prove to be defective and are returned to the manufacturing location within 30 days after such defect is ascertained. All warranties are limited to defects arising under normal use and do not include malfunctions or failure resulting from misuse, abuse, neglect, alterations, electrical power problems, usage not in accordance with product instructions, improper installation, or damage determined by BCI to have been caused by the Buyer or repair made by a third party. Limited warranties granted on products are to the initial customer end-user and are not transferable. OUR LIABILITY UNDER THIS WARRANTY SHALL IN ANY CASE BE LIMITED TO THE INVOICE VALUE OF THE PRODUCT SOLD AND BCI SHALL NOT BE LIABLE TO ANYONE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM THE USE OF ITS PRODUCTS OR THE SALE THEREOF. We make NO WARRANTY AS TO THE MERCHANTABILITY OF ANY GOODS, OR THAT THEY ARE FIT FOR ANY PARTICULAR PURPOSE OR END APPLICATION NOR DO WE MAKE ANY WARRANTY, EXPRESSED OR IMPLIED OTHER THAN AS STATED ABOVE.





Broadata Communications, Inc.  
2545 West 237th Street, Suite K  
Torrance, CA 90505  
**1-800-214-0222**  
(310) 530-1416  
(310) 530-5958 (Facsimile)  
e-mail: [CustomerService@Broadatacom.com](mailto:CustomerService@Broadatacom.com)  
Website: [www.broadatacom.com](http://www.broadatacom.com)



60000-LBC-HDBT